

electriciQ

USER MANUAL



OUTDOOR FLOOR STANDING AND WALL HANGING HEATER

EQODETALL

Thank you for choosing electriciQ
Please read the manual before using this heater
and keep it safe for future reference.
Visit our page www.electriQ.co.uk for our entire product range

CONTENTS

SAFETY INSTRUCTIONS	3
PARTS LIST	5
ASSEMBLY	5
INSTALLATION	6
OPERATION	7
TROUBLESHOOTING	7
CLEANING AND MAINTENANCE	8
TECHNICAL SPECIFICATIONS	8
SUPPORT	9

SAFETY INSTRUCTIONS

IMPORTANT

 
- Carefully read the instructions before operating this unit.
- This appliance is for outdoor use only.
- Rating: This unit must be only connected to a 220-240 V / 50 Hz earthed outlet.
- Installation must be in accordance with the regulations of the country where the unit is used.
- If you are in any doubt about the suitability of your electrical supply have it checked and, if necessary, modified by a qualified electrician.
- This heater has been tested and is safe to use. However, as with any electrical appliance - use it with care.
- Disconnect the power from the unit before dismantling, assembling or cleaning.
- Avoid touching the main body when in use.
- Never insert fingers, pencils or any other objects through the guard.
- This appliance can be used by Children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be carried out by children.
- Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate, or clean the appliance or perform user maintenance.
- Children under 3 years should be kept away unless continuously supervised.
- Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
- Do not clean the unit by spraying it or immersing it in water.
- Avoid connecting the unit to an electrical outlet using an extension cord. If an outlet is not available, one should be installed by a qualified electrician. If an extension cord is used, it should be fully unwound from its spool, and be suitable for the power of the unit.
- Never operate this appliance if the unit, cord or plug is damaged. Ensure the power cord is not stretched, exposed to sharp objects / edges, or routed under the unit.
- Any service other than regular cleaning should be performed by an authorised service representative. Failure to comply could result in a voided warranty.
- Never use the plug as a switch to start and turn off the heater. Use the provided power button on the unit.
- Do not use an external timer.
- Always ensure the unit is secure before operation. Do not use on unstable or uneven surfaces.
- Avoid keeping the unit in direct sunlight for long periods of time.
- The heater is designed to be used at temperatures above -20°C. If it is exposed to temperatures below this, it must be allowed to warm above this level before operation.
- Do not attempt to repair, disassemble or modify the appliance.
- This unit contains no user-serviceable parts.
- Always unplug or disconnect the appliance from the mains power supply when not in use,

- or when moving or cleaning it. Do not pull the cord to unplug the heater.
- Keep the heater clean. Do not allow any object to enter the ventilation or exhaust opening as this may cause electric shock, fire, or damage to the heater.
 - Do not use the appliance for anything other than its intended use.
 - There may be a trace of odour during the first few minutes of initial use, or after a period of storage. This is normal and will quickly disappear.
 - This appliance has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or any flammable liquids are used or stored.
 - Never locate this appliance where it may become exposed to water.
 - This appliance is IPX4 rated, and so although it resistant to water ingress, should not be allowed to be submerged, or subjected to overly wet conditions.
 - The unit must be sited in an area sheltered from adverse weather conditions such as rain, wind, snow and ice.
 - The appliance must be disconnected from the mains when not in use.
 - To prolong the life of the product, and to ensure its safety we advise the unit is stored in a secure dry location when not in use.
 - Minimum distances should always be complied with from top: 60 cm, from sides: 150 cm.
 - The heater should not face flammable substances or surfaces.
 - Heaters should not be installed in areas where hazardous vapours may be present. Defined in BS 5345.
 - Ensure that there is no possibility of flammable material coming into contact with the heater, or in the near vicinity of the heater.
 - The heaters are fitted with safety guards. These are intended only to stop large objects from hitting the emitters. On no account should the heater be operated with the guard removed.
 - Do not install or use immediately above or below a power socket.
 - The remote contains a lithium battery, keep out of reach of small children. Seek medical advice if swallowed.
 - Due to continual product development, there may be variations between the pictures and the specifications within the manual and the actual product.
 - **WARNING:** To reduce the risk of fire or electrical shock, DO NOT use this appliance with any solid-state Speed Control Device or any variable speed controllers.

ENERGY SAVING AND UNIT SAFETY PROTECTION TIP

- Do not cover or restrict the airflow. Do not use in a dusty environment.
- For safety and maximum performance, when used as a portable unit the minimum distance from a wall or objects should be 50cm.

PARTS LIST

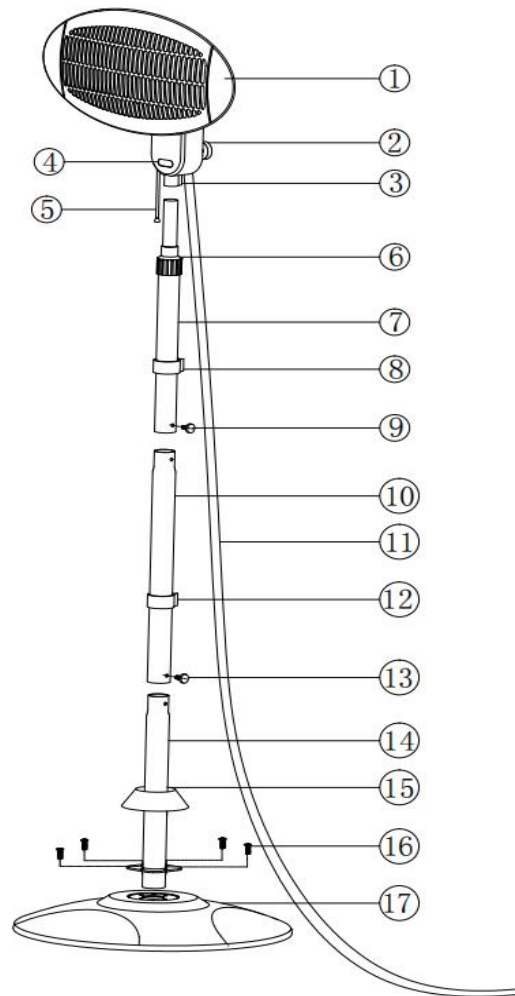

PART NUMBER	DESCRIPTION
1	Heater
2	Control dial
3	Main body
4	Position indication plate
5	Pull switch
6	Clips
7	Upper pole
8	Clamp
9	1 M6x6 bolt
10	Middle pole
11	Power cord
12	Clamp
13	1 M6x6 bolt
14	Base pole
15	Base cover
16	4 M6x30 bolts
17	Base

 
INSTALLATION

Check all the parts against the parts list. If parts are missing, please contact the supplier using the information located on page KIHHPHPIJHPI

This product **MUST NOT** be used if the power cable is damaged.

For ease of assembly only loosely tighten bolts and tighten fully when assembly is complete.


WARNING: Do not over tighten bolts; only tighten with moderate pressure to avoid damaging the bolts or components of the heater.

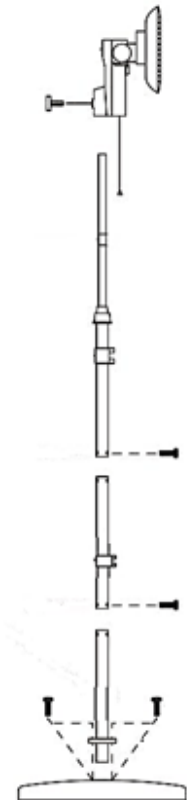

STANDING INSTALLATION

1. Attach the base pole (14) in to the base (17) with 4 M6x30 bolts (16).
2. Slide the base cover (15) over the base pole (14) until it rests over the top of the base (17).
3. Attach the middle pole (10) to the base pole (14) using the 1 M6x6 bolt (13).
4. Slide one of the cable clips (12) over the top of the middle pole (10).
5. Attach the upper pole (7) to the middle pole (10) using 1 M6x6 bolt (9). Slide onto the upper pole one cable clip (8).
6. Attach the heater (1) to the upper pole (7) using 1 M6x6 bolt and hand tighten
7. Clip the cable into the 2 cable clips.

 WALL MOUNTED INSTALLATION

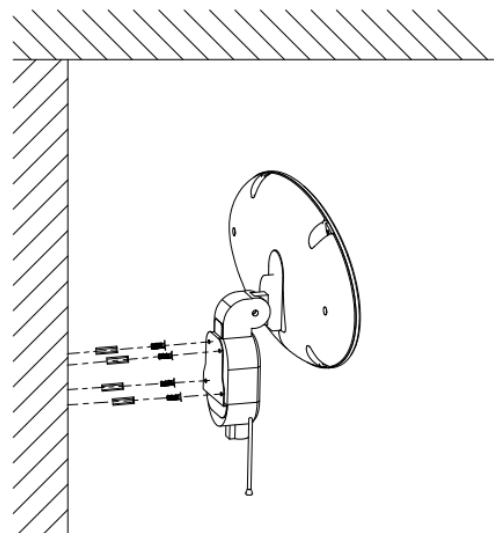


Using a tape measure, measure the distance between all 4 points on the back of the heater. Make a note of the measurements. Using these measurements, drill 4 corresponding holes into your chose installation location. Keep in mind the length of the cable, and ensure that once installed it can plug in safely.

Insert the 4 wall plugs provided and the 4 screws, leaving some of the screw head protruding from the wall for installation. Once complete, you can now hang your heater onto the screws. Ensure the unit is secure before proceeding with use.

OPERATION

1. Before plugging the heater into a power supply, please first adjust the height and angle of the heater.
 2. To adjust the height of your heater, turn the plastic adjustment fixing anticlockwise to unlock it. Lift up the heater to the desired height then turn the plastic adjustment fixing clockwise to secure the height of your heater.
 3. You can change the angle of your heater by up to 45°. You can adjust this by gently moving the heater to your desired angle. Only change the angle of your heater when it is not in use and it is completely cool.
1. Plug the unit into a plug socket, make sure the power supply is the same as rated.
 2. Pull down on the switch cord to turn the unit on.

 To control the heat output of the unit, use the dial located on the heater.

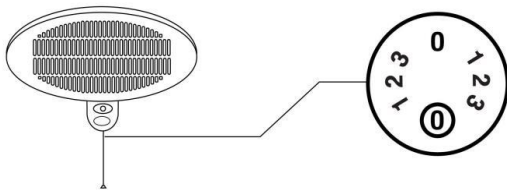

Value	Function
0	OFF
1	Low heat
2	Medium heat
3	High heat

TROUBLESHOOTING

Do not repair or disassemble the unit by yourself, unauthorized repair attempts will invalidate the warranty and may cause bodily harm.

Issue	Possible Reason	Solution
No power	<ol style="list-style-type: none"> 1. Power cord is unconnected 2. There is no power from socket 3. The power switch on the rear of the unit is turned off. 	<ol style="list-style-type: none"> 1. Connect the power cord 2. Check socket is turned on 3. Ensure the power switch on the rear of the unit is in the on position
Odour emission from unit	<ol style="list-style-type: none"> 1. New unit. When the unit is used for the first time the heater may produce an odour which will dissipate within a week of use 	<ol style="list-style-type: none"> 1. No action required
<p>If the unit fails, turn the heater off at the main switch and tilt the head up as far as possible and then bring back to facing forward and tighten. Once complete try switching on again.</p>		

CLEANING AND MAINTENANCE

ATTENTION: Please turn off the unit and unplug from the mains and allow to fully cool before cleaning or performing any maintenance.

CLEANING THE SURFACE

- Clean the heater with a duster or a soft wet cloth.
- Do not use chemical solvents (such as benzene, alcohol or gasoline) as they may cause irreversible damage. Make sure no water enters the control panel or gaps in the casing.
- Do not run the unit until completely dry.
- Place the heater in its original box or cover to protect it from dust when not in use.

TECHNICAL SPECIFICATIONS

Model	EQODETALL
Voltage(V)	220-240V AC
Wattage(W)	650W/1300W/2000W
Hertz (Hz)	50
Dimensions – Height (cm)	177-210
Dimensions – Heater W x L (cm)	49.5 x 23
N.W (KG)	1.8
G.W (KG)	2.3

electriQ UK SUPPORT

www.electriQ.co.uk/support

Please, for your own convenience, make these simple checks before calling the service line.

If the unit still fails to operate call: 0330 390 3061 or complete the online form

1. Is the unit plugged into the mains?
2. Is the fuse OK?
3. Switch the unit off and wait three minutes to see if the issue is resolved. Restart the unit.

Office hours: 9AM - 5PM Monday to Friday

www.electriQ.co.uk
Unit J6, Lowfields Business Park
Lowfields Way, Elland
West Yorkshire, HX5 9DA

Disposal: Do not dispose this product as unsorted municipal waste. Collection of such waste must be handled separately as special treatment is necessary.



Recycling facilities are now available for all customers at which you can deposit your old electrical products. Customers will be able to take any old electrical equipment to participating civic amenity sites run by their local councils. Please remember that this equipment will be further handled during the recycling process, so please be considerate when depositing your equipment. Please contact the local council for details of your local household waste recycling centres.