 


electriQ

USER MANUAL

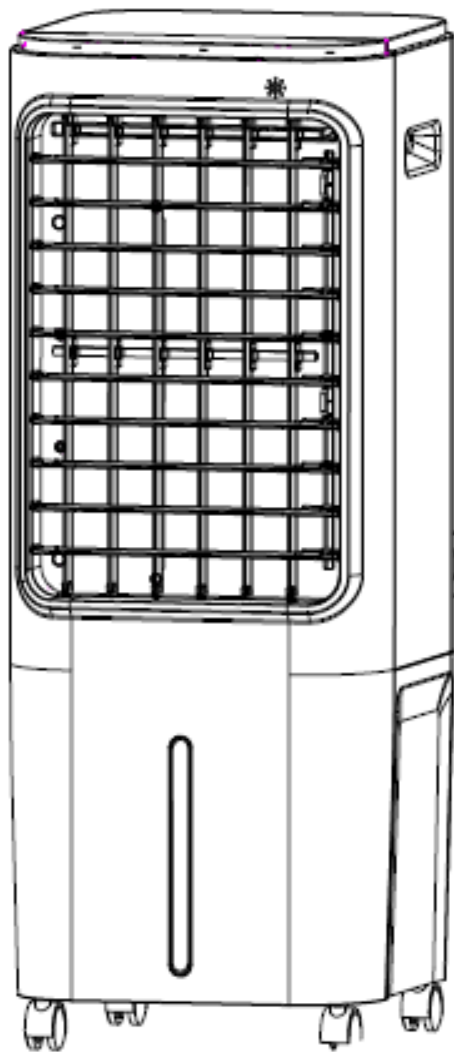

ECOCOOL12i **EVAPORATIVE COOLER**

Thank you for choosing electriQ
Please read this user manual before using this innovative Air Cooler and keep it safe
for future reference.

SETTLING IN OK?

We hope this has been helpful to you.

We would love to see how you're getting on with your new purchase, so please share any snaps you have on the platform of your choice below.

Our community awaits your uploads - Snap, tag and hashtag away!



@electriQUK

#electriQUK

WE'RE HERE TO HELP

Should you have any problems or questions with your purchase, please contact a member of our customer service team.

☎ 0330 390 3061

✉ support@electriQ.co.uk

Mon-Fri | 9am to 5pm

Unit J6, Lowfields Business Park,
Lowfields Way, Elland
West Yorkshire, HX5 9DA

CONTENTS

SAFETY INSTRUCTIONS	4
FEATURES	5
HOW EVAPORATIVE AIR COOLERS WORK	6
DIAGRAM	7
INSTALLATION	7
CONTROL PANEL	8
OPERATION	8
REMOTE CONTROL	9
FILLING THE WATER TANK	9
MAINTENANCE	10
TROUBLE SHOOTING	11
APPENDIX	11
TECHNICAL DATA	12
SUPPORT	12

SAFETY INSTRUCTIONS

IMPORTANT!

- Carefully read the instructions before operating the unit.
- This appliance is for indoor use only. Any outdoor use must be supervised and the unit must not be exposed to wet conditions such as rain.
- Rating: This unit must be only connected to a 220-240 V / 50 Hz earthed outlet.
- Installation must be in accordance with regulations of the country where the unit is used.
- If you are in any doubt about the suitability of your electrical supply have it checked and, if necessary, modified by a qualified electrician.
- This air cooler has been tested and is safe to use. However, as with any electrical appliance - use it with care.
- Disconnect the power from the appliance before changing filters, dismantling, assembling or cleaning.
- Avoid touching any moving parts within the appliance.
- Never insert fingers, pencils or any other objects through the guard
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities. It is also not intended for use by those with a lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Do not leave children unsupervised with this appliance.
- Do not clean the unit by spraying it or immersing it in water.
- Never connect the unit to an electrical outlet using an extension cord. If an outlet is not available, one should be installed by a qualified electrician.
- Never operate this appliance if the cord or plug is damaged. Ensure the power cord is not stretched or exposed to sharp objects / edges.
- A damaged supply cord should be replaced by the manufacturer or a qualified electrician in order to avoid a hazard.
- This appliance is designed for personal comfort and so should not be left unattended for extended periods.
- Any service other than regular cleaning or filter replacement should be performed by an authorised service representative. Failure to comply could result in a voided warranty.
- Do not use the appliance for any purpose other than its intended use.
- Never use the plug as a switch to start and turn off the air unit. Use the provided ON/OFF button located on the control panel.
- Always place the unit on a dry and stable surface. Do not move or tilt the unit while the water tank is full.
- The appliance should not be installed in laundry or wet rooms.
- Do not use this unit in environments with flammable and explosive gases.
- Avoid keeping the unit in direct sunlight for a long period of time.

ENERGY SAVING AND UNIT SAFETY PROTECTION TIPS

 
 
 
 
- Do not cover or restrict the airflow from the outlet or inlet grills.
- For maximum performance the minimum distance from a wall or objects should be 50cm.
- Please make sure, while in operation, the water in the water tank does not exceed the **MAX** level and does not fall below **MIN**.
- Keep the filter clean. Under normal conditions, filters should only need cleaning once every three weeks (approximately). Since the filters remove airborne particles, more frequent cleaning may be necessary, depending on the air quality.
- In order to achieve maximum efficiency please place the unit near an open door or window. Evaporative Air Coolers work with an evaporative cooling mechanism which requires cross ventilation
- This unit will lose efficiency if the relative humidity in the room exceeds 60%
- The ambient operating temperature range is from 5°C to 40°C.
If used in low temperatures (as a humidifier) it is recommended to fill the water tank with warm (but not hot) water.
- Never leave water in the reservoir when the appliance is not in use.
- Empty and clean the humidifier before storage. Clean the humidifier before next use.

FEATURES

- Air Cooler, humidifier and air cleaner great in well ventilated rooms.
- Easy to fill 12 Litre water tank
- Powerful air throw, perfect for spot cooling
- Alternative spot cooling solution for rooms and spaces which cannot be sealed or traditionally air conditioned
- 3 fan speeds and oscillation setting for improved air flow: low, medium and high speed allowing adjustment between maximum cooling and quiet operation
- Honeycomb Filters for improved cooling and air cleaning
- Easy to use digital controls with remote control.
- Handle and wheels for great mobility
- Powerful air throw with directional swing for faster cooling
- Built in ioniser for air purification.


HOW EVAPORATIVE AIR COOLERS WORK

The air cooler cools the air by means of evaporation. When water evaporates into the air, the result is a mixture of air and water molecules. This chemical change requires heat which is taken from the water molecules, resulting in a spot cooling effect.

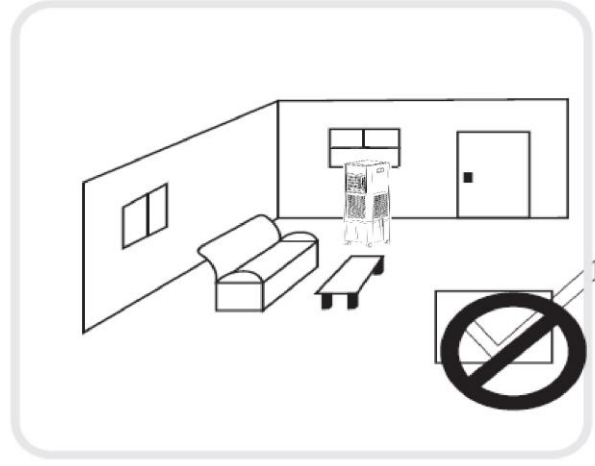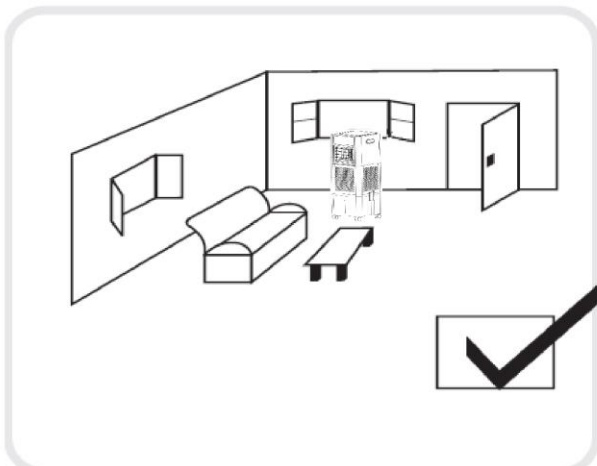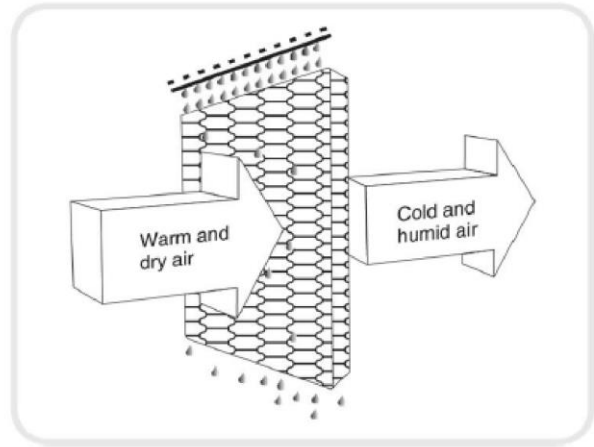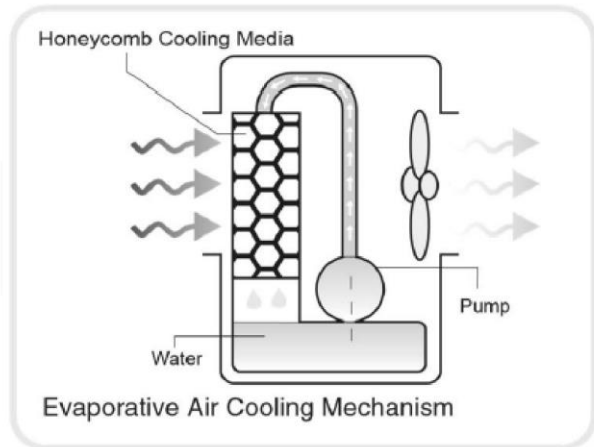

- The recommended relative humidity for optimum operation is 60% or lower. A drier climate makes for more noticeable cooling.
- The evaporative air cooler should not be used in enclosed or sealed spaces. It must be kept level and there must always be water in the water tank. Doors and windows should be open to allow free air flow. The evaporative air cooler works best when placed near an open window/air current.
- When the product is used for the first time the Honeycomb cooling media will have an odour, this should dissipate within a week of use.
- Be aware that high humidity levels may encourage the growth of biological organisms in the environment.

 DIAGRAM

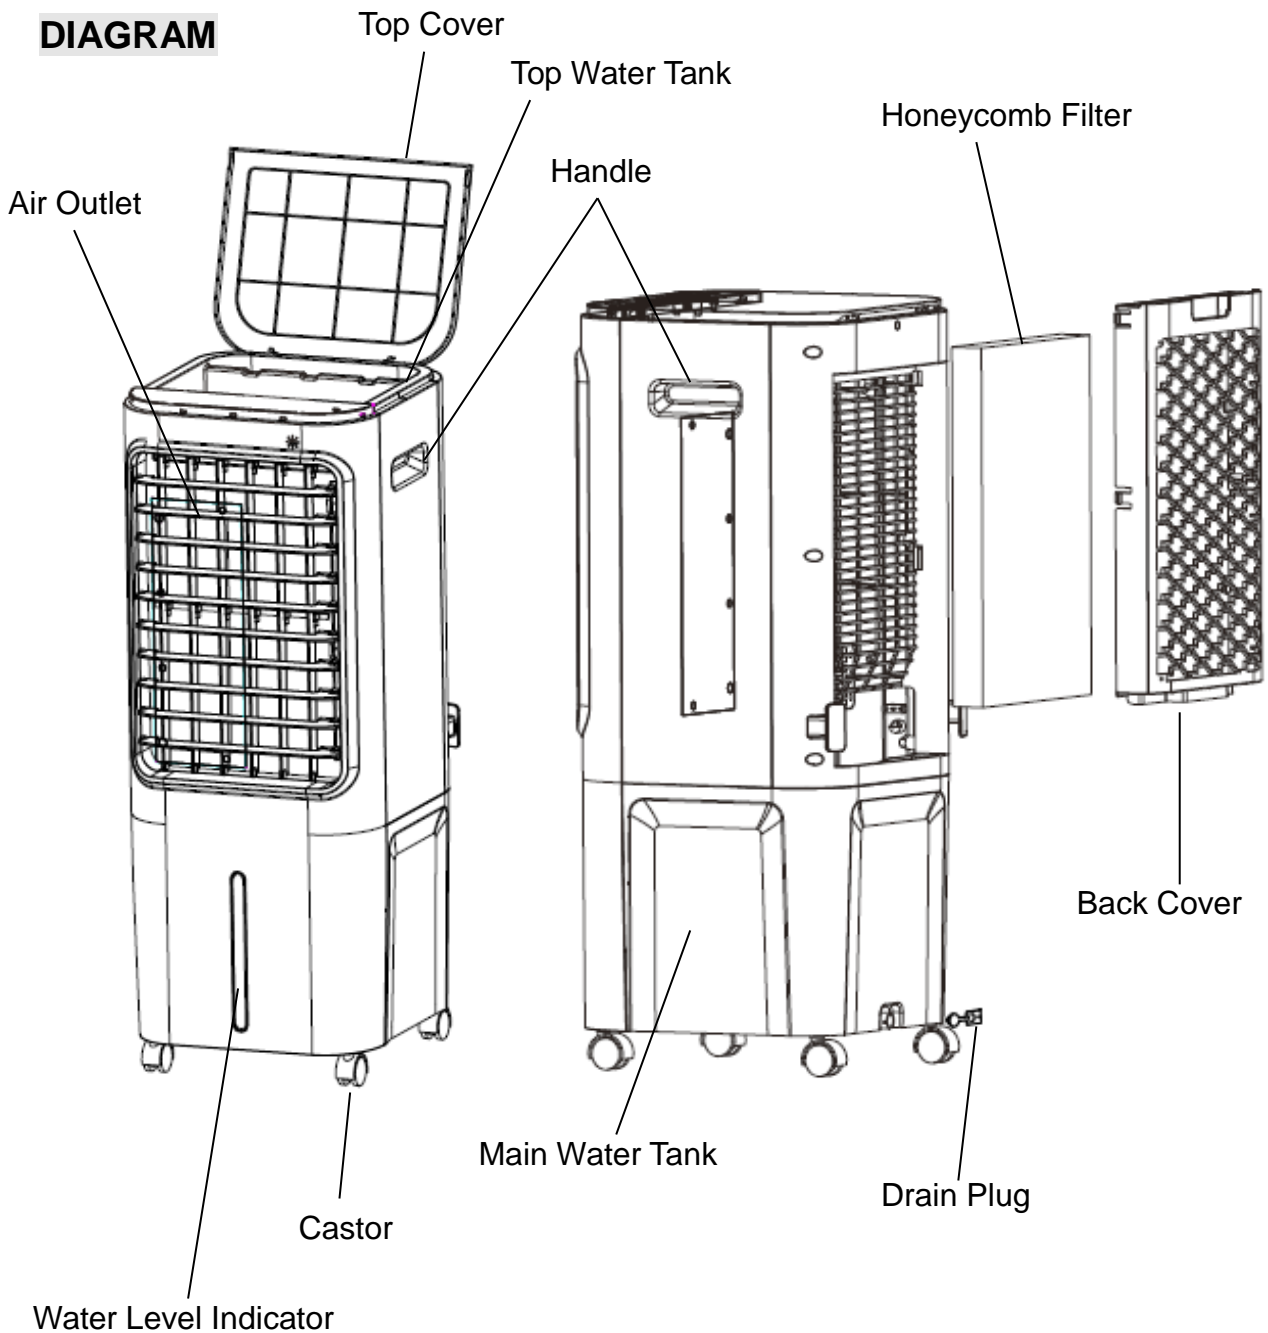

INSTALLATION

 
This unit can easily be moved from one room to another. While moving the unit please note that it must always be kept upright and then placed on an even surface.

- Remove any packaging - keeping the air cooler in a vertical position.
- Make sure all parts are present and the unit is assembled correctly
- **WATER TANK:** Fill the appliance through the top water tank with water or ice, ensuring the main water tank does not go above the **MAX** level shown through the window on the front of the tank.
- Make sure that the honeycomb filter is properly inserted.
- Connect the power plug to a working socket, and then press the power button.

CONTROL PANEL




TIMER



IONISER



 SWING



MODE



COOL



SPEED



POWER

DISPLAY PANEL

0.5h








 






1h

2h

4h



 OPERATION

 POWER	<p>Press to turn the air cooler On and Off</p>
 SPEED	<p>Press to change the fan speed between low , medium  and high  . The LED indicators will show the currently selected fan speed.</p>
 COOL	<p>Press to activate the evaporative cooling, The COOL symbol  will illuminate to show the mode is activated. Ensure that the water level is sufficient for operation. When this function is turned off the unit will operate as a fan / air purifier.</p>
 MODE	<p>Press to change between STANDARD , BREEZE  and SLEEP  modes. STANDARD: Fan runs at a constant speed. BREEZE: Fan speed fluctuates to imitate natural breeze. SLEEP: The fan speed will reduce every 30 minutes until low speed is reached.</p>
 SWING	<p>Press to activate the swing mode. The airflow will gently swing from left to right. The vertical direction of the airflow can be adjusted manually. The SWING led will be illuminated when the function is active. Press again to turn it off.</p>
 IONISER	<p>Press to activate the IONISER. The ioniser will be used to help purify the air using negative ions.</p>
 TIMER	<p>The timer can be used as a shutdown timer with a duration between 30 minutes and 7.5 hours. Repeatedly press the TIMER button to select the duration of the timer. The duration is calculated by adding up the lights illuminated. So, if the 1H, 2H and 4H LEDs are all lit then 7 hours is selected. If the timer lights are off, the timer is not activated. Please note: These are single use timers, and cannot be combined or automatically repeated.</p>

 
REMOTE CONTROL

The remote control enables you to control all the same functions as the control panel from a distance of up to 6 metres. The remote control should be pointed towards the receiver on the front of the air cooler.

ATTENTION:

- If not in use for a prolonged period the batteries should be removed.

Please note: Design of the remote may vary.

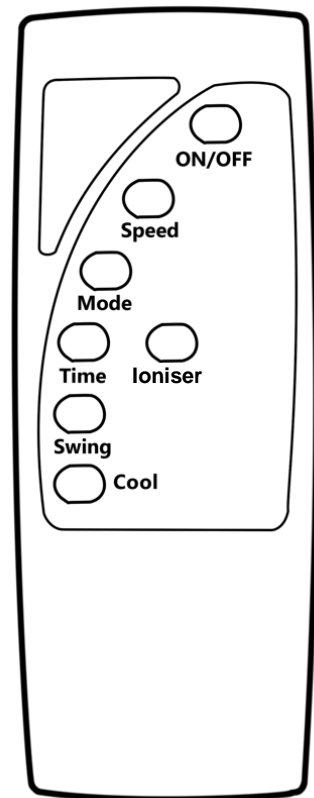

FILLING THE WATER TANK

ATTENTION: Please turn off the appliance and disconnect from the mains before filling the water tank.

Before turning on the cooling function, please add water to the tank. The appliance can be used without water in air cleaner mode.

Before filling with water, open the cover on the top of the appliance and fill the water tank slowly before closing the cover. Only use clean tap water and do not fill the water beyond the maximum water level shown through the window on the side of the water tank.

Frozen ice packs can also be inserted into the top tank to cool the water as it circulates.

Note: It is completely normal and in no way dangerous if the device has a slight odour or the water tank has slight discolouration when used for the first time.

MAINTENANCE

CLEANING

ATTENTION: Please turn off the appliance and disconnect from the mains before cleaning or performing any maintenance.

CLEANING THE SURFACE

- Clean the plastic housing with a duster or a soft wet cloth.
- Do not use chemical solvents (such as benzene, alcohol or gasoline) as they may cause irreversible damage.
- Make sure no water enters the control panel.
- Do not permit the area around the humidifier to become damp or wet. If dampness occurs, turn the output of the humidifier down. If the humidifier output volume cannot be turned down, use the humidifier intermittently. Do not allow absorbent materials, such as carpeting, curtains, drapes, or tablecloths, to be damp.

CLEANING THE WATER TANK

- Unplug the appliance then remove the screws securing the rear filter frame.
- Lift the filter frames to remove from the unit.
- Drain the tank by removing the bung on the underside of the tank.
- With a cloth (dipped in a mild detergent), wipe the water tank, rinse it with water.
- Cleaning the water tank at least once a week will help reduce any mineral deposits and keep the filters clean.
- Do not run the unit in cooling mode with stale water in the tank.
- We recommend emptying the tank and refilling it with fresh water if water has been standing in the tank for an extended period of time.

MAINTAINING AND CHANGING THE HONEYCOMB FILTER PAD

The appliance is supplied with a honeycomb cooling / filters pad. The cleaning frequency for the honeycomb filters depend on local air and water conditions. In areas where the mineral content of the water is high (hard water), mineral deposits may build up on the honeycomb filter and restrict air flow. If mineral deposits remain on the honeycomb pads, the filter should be removed and washed under fresh water. We recommend cleaning the honeycomb filter at least every two months, depending on your needs.

For best results, allow the honeycomb filter to dry after each use by turning off the cooling function and running as a fan for 15 minutes (with empty water tank) before turning the unit off.

Unplug the power cord, then unscrew the screws holding the filter frames in position. Remove the filter frames from the appliance and take the honeycomb filter out of the frame. With a mild detergent and a soft brush, scrub the honeycomb filter, clean with water and dry. Do not dip in water.

END OF SEASON MAINTENANCE

1. Empty the tank and wipe it with warm soapy water.
2. Dry the tank and clean the Honeycomb pads
3. Store any Icepack you may use in the water tank
4. Cover the unit and keep it in a dry place.

TROUBLESHOOTING

Do not repair or disassemble the unit by yourself, unauthorized repair attempts will invalidate the warranty and may cause bodily harm.

Issue	Possible Reason	Solution
No power	<ol style="list-style-type: none"> 1. Power cord is not plugged in 2. No power from the socket. 3. Honeycomb filter support is not installed correctly 4. The power button has not been pressed. 	<ol style="list-style-type: none"> 1. Connect the power cord 2. Check socket is switched on – test with a different appliance. 3. Install the honeycomb filter correctly. 4. Press the power button
No dust elimination	<ol style="list-style-type: none"> 1. The honeycomb filter is blocked. 2. The air inlet is blocked 	<ol style="list-style-type: none"> 1. Remove the honeycomb filter and clean it. 2. Remove the obstruction
Odour emission from unit	<ol style="list-style-type: none"> 1. New unit. When the unit is used for the first time, the Honeycomb cooling media will have an odour, which will dissipate within a week of use 2. Honeycomb filter may have developed mould or bacterial growth 	<ol style="list-style-type: none"> 1. No action required 2. Clean the filter pads with mild antibacterial solution. Dry before use.

If the above solutions do not resolve the problem please contact the service centre.

APPENDIX



Disposal: Do not dispose this product as unsorted waste. Collection of such waste must be handled separately as special treatment is necessary.

Recycling facilities are now available for all customers at which you can deposit your old electrical products. Customers will be able to take any old electrical equipment to participating civic amenity sites run by their local councils. Please remember that this equipment will be further handled during the recycling process, so please be considerate when depositing your equipment. Please contact the local council for details of your local household waste recycling centres.

TECHNICAL DATA

Model Number: ECOCOOL12i			
Description	Symbol	Value	Unit
Water Tank		12	Litres
Voltage		220-240	V
Frequency		50	Hz
Maximum fan flow rate	F	3.6	m ³ /min
Maximum Power		65	W
Fan Power input	P	60.3	W
Service Value	SV	0.06	(m ³ /min)/W
Standby Power Consumption	P _{SB}	<0.5	W
Fan sound power level	L _{WA}	57	dB(A)
Maximum air velocity	c	5.6	Meters/sec
Size (LxWxH)	280 x 290 x 730		mm
Net weight		5.2	kg
Measurement standard for service value	EN IEC 60879:2019		
Contact details for obtaining more information	electriQ, Unit J6, Lowfields Way Elland, West Yorkshire, HX5 9DA. BuyItDirect, The Black Church, St Mary's Place, Dublin 7.		

electriQ UK SUPPORT

www.electriQ.co.uk/support

Please, for your own convenience, make these simple checks before calling the service line.

If the unit still fails to operate call: 0330 390 3061 or complete the online form

1. Is the unit plugged into the mains?
2. Is the fuse OK?
3. Switch the unit off and wait three minutes to see if the issue is resolved. Restart the unit.

Office hours: 9AM - 5PM Monday to Friday

www.electriQ.co.uk
Unit J6, Lowfields Way
Elland, West Yorkshire
HX5 9DA