


GB

- A. Programme selector**
B. “Start delay” button
C. Programme sequence indicator (over the line)
Start delay indicator (under the line)
D. “Spin” button
E. “Start/Pause” button
F. “Reset” button
G. “Lid open” indication

PROGRAMME CHART

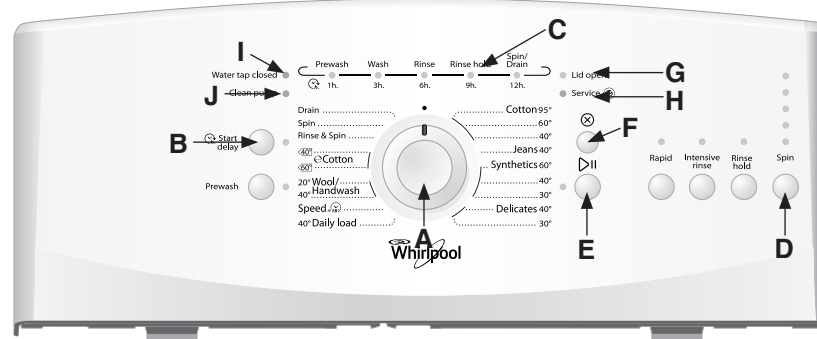

This washing machine is equipped with automatic safety functions which detect and diagnose faults at an early stage and react appropriately:

- H. “Service” indication**
I. “Water tap closed” indication
J. “Clean pump” indication

1) Do not use liquid detergent.

Programme	Care Labels	Max. Load kg	Type of wash / Notes - respect the manufacturer's recommendations on the care label	Detergents and Additives			Special options						Max. Spin Speed rpm
				Pre-wash	Main Wash	Softener	Start delay	Pre-wash	Rapid	Intensive rinse	Rinse hold	Spin	
Cotton 40 - 60 - 95°C		6.0	Normally to heavily soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen. Selecting “Cotton 95°”, this programme eliminates bacteria, ensuring sanitization of your laundry. The bacterial removal efficiency has been tested following a similar methodology to the NF EN 13697 standard of Nov. 2001	*	Yes	*	* ¹⁾	*	*	*	*	*	max.
Jeans 40°C		4.0	Normally soiled cotton jeanswear and garments made of jeanslike material such as trousers and jackets.	*	Yes	*	* ¹⁾	*	—	*	*	*	max.
Synthetics 30 - 40 - 60°C		3.0	Normally soiled blouses, shirts, overalls etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon).	*	Yes	*	* ¹⁾	*	*	*	*	*	max.
Delicates 30 - 40°C		1.5	Curtains and delicate clothing, dresses, skirts, shirts and blouses.	*	Yes	*	* ¹⁾	*	—	—	*	*	max.
Daily load 40°C		3.0	Slightly to normally soiled textiles made of cotton and/or synthetics.	—	Yes	*	* ¹⁾	—	—	*	*	*	max.
Speed 15' 30 °C		3.0	Refreshes briefly worn outer clothing made of cotton, artificial fibers and blends with cotton. Use lowest recommended detergent amount.	—	Yes	*	* ¹⁾	—	—	—	*	*	max.
Wool/Handwash Cold - 40°C		1.0	Woollens, labelled with the Woolmark and identified as machine washable, as well as textiles made of silk (keep to care label!), linen, wool and viscose marked as handwashable	—	Yes	*	* ¹⁾	—	—	—	*	*	max.
eCotton 40 - 60°C		6.0	Normally soiled cotton laundry. Most favourable programme in terms of combined water and energy consumption for washing cotton laundry. - Reference programme for the Energy Label.	—	Yes	*	* ¹⁾	—	—	*	*	*	max.
Rinse & Spin	—	6.0	Same as the last rinse and the final spin in the “Cotton” programme.	—	—	*	*	—	—	*	*	*	max.
Spin	—	6.0	In this programme spinning is intensive. Same as the spin cycle in the “Cotton” programme.	—	—	—	*	—	—	—	—	*	max.
Drain	—	—	Drain only - no spinning. Alternative method of terminating programme after “Rinse hold”.	—	—	—	*	—	—	—	—	—	—

Yes = dosing required / * = optional

CONSUMPTION DATA

Power consumption in off-mode 0.11 W / in left-on mode 0.11 W

Programme	Temperature (°C)	Load (kg)	Water (l)	Energy without "Rapid" (kWh)	Approx. Programme Duration ☹ (hrs : min)	
					without "Rapid"	with "Rapid"
Cotton	95	6.0	53*	1.91	2:05	1:55
Cotton	60	6.0	48	1.14	2:30	1:45
Cotton	40	6.0	48	0.64	2:15	1:30
Jeans	40	4.0	41	0.58	1:44	–
Synthetics	60	3.0	50*	0.90	2:05	1:14
Synthetics	40	3.0	40	0.50	1:50	0:59
Delicates	40	1.5	50	0.55	0:45	–
Delicates	30	1.5	50	0.50	0:41	–
Daily load	40	3.0	40	0.45	1:00	–
Quick wash 15'	30	3.0	30	0.15	0:15	–
Wool/Handwash	40	1.0	40	0.55	0:35	–
Wool/Handwash	Cold	1.0	40	0.40	0:30	–
eCotton ☹**	60	6.0	48	1.02	4:00	–
eCotton ☹**	60	3.0	35	0.76	2:10	–
eCotton	40	6.0	48	0.65	2:50	–
eCotton ☹**	40	3.0	35	0.57	2:00	–

Consumption values were measured in normalized conditions in compliance with standard IEC/EN 60 456. Consumption data in the home may vary with respect to the values in the table in relation to the water supply pressure and temperature, the load and the type of wash. Water and energy consumption refer to the default setting of the programmes; selecting special options or modifying spin speed or temperature will change the consumption data.

☹ The programme duration may differ from the values indicated above as it depends on the operation conditions applicable at that time (see also "Troubleshooting Guide" in your Instructions for Use).

** To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out.

* Standard Cotton programme and basis for Energy Label. For reasons of energy saving, the real water temperature may deviate from the declared cycle temperature.

PREPARATION OF THE WASH CYCLE

1. Load the machine, close the drum doors and check that they are properly locked.
2. Add detergent and eventual additives as described on the front page and in your Instructions for Use.
3. Close the lid.
4. Turn the **programme selector** to the desired programme and temperature. The lamp next to the **"Start/Pause"** button blinks. The indication lamp of the predefined spin speed lights up. If you do not start the programme soon after having made your choice, the washing machine will switch off automatically after about a quarter of an hour. Switch on the washing machine again by turning the programme selector back to „Off/O“ and then to the desired programme.

SELECT ANY DESIRED OPTION

When the combination of programme and additional option(s) is not possible, the indication lights switch off automatically. Unsuitable combinations of options are deselected automatically.

"Prewash" button

- Only for heavily soiled loads (for example sand, granular dirt). Increases the cycle time by approximately 15 min.

- Do not use liquid detergent for the main wash when activating the Prewash option.

"Rapid" button

- Enables quicker washing by shortening the programme duration.
- Recommendable for small loads or only lightly soiled laundry.

"Intensive rinse" button

- More water is added and rinse cycle is prolonged.
- This option is particularly suitable for areas with very soft water, washing baby linen and helping people with allergies.

"Rinse hold" button

- The laundry remains in the last rinse water without progressing to the final spin cycle to avoid creasing and prevent colours from changing.
- It is particularly useful if you want to postpone spinning to a later time, or if you want to drain only.
- If you select "Rinse hold", do not leave items to soak for too long.

Note: The programme stops to "Rinse hold" at the time the "Rinse hold" light in the programme sequence indicator is on. The indication lamp next to the **"Start/Pause"** button blinks.

Terminate the "Rinse hold" option:

- Press the **"Start/Pause"** button; the programme will terminate automatically with the final spin cycle for the present wash programme.
- If you do not wish to spin the clothes, turn and hold the **"Reset"** button for a few seconds to start the Drain programme.

"Spin" button

- Every programme has a predefined spin speed.
- Press the button to set another spin speed.
- If spin speed "0" is selected, the final spinning is cancelled but intermediate spin peaks remain during the rinse. The water is drained out only.

START DELAY ☹

The "Start delay" button allows the user to run the machine at his convenience, for example at night when electricity is cheaper.

- Select programme, spin speed and options.
- Press the "Start delay" button several times to select a delay time of 1, 3, 6, 9 or 12 hours. The corresponding indicator lamp lights up.
- Start the countdown of the "Start delay" by pressing **"Start/Pause"**. the lamp over the "Start delay" button blinks, and it goes off when the programme starts.
- Once having pressed the **"Start/Pause"** button, the countdown of the time delay begins. When the programme starts, the start delay indicator light goes off and is replaced by the programme sequence indication.
- After the **"Start/Pause"** button has been pressed, the number of hours preselected can be reduced by pressing again the "Start delay" button.

To cancel the "Start delay"

..before you press the "Start/Pause" button:

- Turn the programme selector to another position or press the **"Reset"** button.

..after having pressed the "Start/Pause" button:

- Press the **"Reset"** button for at least 3 second. The start delay indicator light goes off.

PROGRAMME START

Open the tap and press the **"Start/Pause"** button. The indication lamp next to the **"Start/Pause"** button lights up. The programme sequence indicator shows the current programme phase, running from left to right through Wash, Rinse, Spin/Drain. When the programme phase is finished, the corresponding indication goes out.

- **Note:** If there is a power interruption or if the appliance is disconnected during the cycle, the programme will run again from the point where it was interrupted.

"LID OPEN" INDICATION

Before starting and after end of a programme, the lamp lights to show the the lid can be opened. As long as a wash programme is running, the lid remains locked and must on no account be forced open. In case you have an urgent need to open it during a running programme, refer to "Cancel a running programme before the end".

FAILURE INDICATIONS

In case of any failures or irregularities, consult the "Troubleshooting Guide" in your Instructions for use.

"Water tap closed"

No or not sufficient inlet water.

"Service" ⚙

Failure or malfunction of an electrical component.

"Clean pump"

Waste water is not pumped out.

Spin speed on programme sequence indicator blinks:

Unbalance during spinning

PROGRAMME END

- The "Lid open" indicator lights up. After about a quarter of an hour, the washing machine will switch off completely to save energy.
 1. Turn the programme selector to the "Off/O" position.
 2. Close the water tap.
 3. Open lid and drum and unload the machine.
 4. Leave the lid open for some time to allow the interior of the machine to dry.

CHANGE PROGRAMME AND/OR OPTIONS AFTER PROGRAMME START

1. Press the **"Start/Pause"** button to pause the programme. The light blinks.
2. Select the new programme, temperature, any options and another spin speed if you want.
3. Press the **"Start/Pause"** button again. The new programme continues at the same position where the previous programme was interrupted. Do not add detergent for this programme.

CANCEL A RUNNING PROGRAMME BEFORE THE END

The **"Reset"** button cancels a programme before the end. Press the **"Reset"** button for at least 3 seconds. Any existing water is drained out before the door can be opened.