



T12022

Safety and Instruction Manual

PLEASE READ CAREFULLY



Ultra Xtreme Nutrient Extraction System

TOWER®

over 100 years of quality

1912 Midland Metal Spinners was founded by George Cadman, who was then 65 years old, as a metal holloware manufacturing company, in St. Mark's Street, Wolverhampton. They later moved into the Tower and Fort Works in Pelham Street, which ultimately gave rise to the famous Tower brand name.

1937 Tower exhibited some of their latest holloware designs at the British Industries Fair. As you can see from the original poster, their stand No. A410 must have been a great sight as it promoted their "Beautiful, inexpensive, untarnishable Plate, at prices all can afford to pay".



The Easiest Way to a Healthy Diet

The Tower Ultra Xtreme Nutrient Extraction System not only extracts all the goodness in fruit and veg, but also in seeds, skins and stems. The powerful slow start motor and stainless steel diamond cut blades burst open seeds and crack through stems.

It breaks up the parts so fine that you won't even know that they're there, giving you every bit of nutrition possible from your ingredients.

1961 Tower became one of the largest manufacturers of aluminium holloware, electric kettles, tea pots and other household articles with over 1,000 employees.

1974 Russell Hobbs took ownership of the expanding Tower brand.



Towerbrand

The manual speed dial means you are always in control, allowing you to make smoothies, juices, soups and dips as smooth as you wish. The nonslip rubber feet mean that even when the blender is on power, it will stand firm.

The generous two litre container means you can blend everything in one go, and the high strength jug is heat-proof, shatter-proof and dishwasher safe.

CONTENTS:

Please read this Manual carefully BEFORE using the blender for your own safety.

Thank you for purchasing this Tower Ultra Xtreme Nutrient Extraction System from the Tower range of products. It has been designed to provide many years of trouble-free easy blending. There are many benefits to using a Tower Xtreme Pro:

- Achieve the highest level of flavour and precision in your cooking with the Tower Ultra Xtreme Nutrient Extraction System.
- Power 20,000 RPM blades effortlessly cut through ice and frozen fruits.
- With a speed dial and pulse function for perfect texture control and consistency.
- Including a safety overload switch.
- Large heavy-duty jug with handle and pouring lip.
- Serve smoothies, soups, drinks and sauces straight from the jug for a quick and tasty snack.
- Vibration reduction pads ensure stable and quiet operation.

Contents:

1. Specifications

Components and structure

Technical information

2. Important Safety Information

3. Using your Tower Appliance

4. Trouble Shooting & Faq's

5. Cleaning & Care

6. Recycling

7. Wiring Safety

8. Warranty Information

9. Your Receipt

See back page for Customer Service Information

1 SPECIFICATIONS:

Components

Instruction Manual

- | | |
|-------------------------|------------------------|
| 1. Removable Filler Cap | 6. Pulse Switch |
| 2. Lid | 7. Speed Selector Dial |
| 3. Jug | 8. Non Slip Feet |
| 4. Blade Assembly | 9. On/Off Switch |
| 5. Rubber Base | |



Technical Data

Description:	Ultra Xtreme Nutrient Extraction System
Model:	T12022
Rated Voltage:	220V-240V ~50/60Hz
Power Consumption:	1200 Watts

Documentation

We declare that this product conforms to the following product legislation in accordance with the following directive(s):

2004/108/EC	Electromagnetic Compatibility Directive.
2006/95/EC	Low Voltage Directive.
2011/65/EU	Restriction of Hazardous Substances Directive.
1935/2004/EC	Materials & Articles in Contact With Food (LFGB section 30 & 31).

RKW Quality Assurance, United Kingdom.

Guarantee

The spares and accessories are guaranteed for 1 year from date of purchase.

The main body and housing are guaranteed for the extended free warranty subject to registration.

If any defect arises due to faulty materials of workmanship, the faulty products must be returned to the place of purchase.

Refund or replacement is at the discretion of the retailer.

The stainless steel blades are guaranteed for the lifetime of the appliance.

Should you encounter problems or require a replacement part, contact The Tower Customer Service Department on: +44 (0) 333 220 6066.

Any necessary spare parts may be ordered from the Tower website.

Your warranty becomes void should you decide to use non Tower spare parts. Spare parts can be purchased from www.towerhousewares.co.uk

2 IMPORTANT SAFETY INFORMATION

Please read these notes carefully **BEFORE** using your Tower appliance

- Check that the voltage of the main circuit corresponds with the rating of the appliance before operating.
- If the supply cord or appliance is damaged, stop using the appliance immediately and seek advice from the manufacturer, its service agent or a similarly qualified person.
- Do not let the cord hang over the edge of a table or counter or let it come into contact with any hot surfaces.
- Do not carry the appliance by the power cord.
- Do not use any extension cord with this appliance.
- Do not pull the plug out by the cord as this may damage the plug and/or the cable.
- Switch off at the wall socket then remove the plug from the socket when not in use or before cleaning.
- Switch off and unplug before fitting or removing tools/attachments, after use and before cleaning.
- Close supervision is necessary when any appliance is used by or near children.
- Children should not play with the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Cleaning and user maintenance should not be undertaken by children without supervision.
- Take care when any appliance is used near pets.
- Do not use this product for anything other than its intended use.
- This appliance is for household use only.
- Please ensure that the appliance is used on a stable, level, and heat resistant surface.
- Do not immerse cords, plugs or any part of the appliance in water or any other liquid.
- Do not use the appliance outdoors.
- **WARNING:** The blade is sharp. Handle with care.
- Never let the power unit, cord or plug get wet.

- To reduce the risk of injury, never place cutter-assembly blades on base without blender jug properly attached.
- Never exceed the maximum capacity.
- Do not attempt to bypass the interlock system that powers the unit on.
- Always operate on a flat surface.
- Unplug the blender when not in use, before taking off or putting on parts and before cleaning.
- Warning: Do not use if the blending cup is cracked or broken. Do not operate the Blender when the blending cup is empty.
- If the blade assembly blades are loose, discontinue use immediately and replace the blade assembly. Do not attempt to repair or tighten blade assembly.
- Inspect container and cutter assembly daily. Do not use broken, chipped or cracked container. Check blade assembly for wear, nicks, or broken blades. Do not use broken or cracked blades.
- To prevent damage to blender, container, or blade assembly.
- DO NOT move or shake blender while in operation.
- When removing the jug from the blender base you must wait until the blades have stopped spinning. Removing the jug whilst the blades are spinning can cause damage to the blender.
- In the unlikely event the appliance develops a fault, stop using it immediately and seek advice from the service department:
+44 (0) 333 220 6066

3 USING YOUR APPLIANCE

1. Place the blender on a dry, level surface.
2. Ensure the On/Off switch and the speed selector dial are in the off position.
3. Fill the jug with your ingredients and attach the lid before fitting the jug onto the base of the blender.
4. The jug will push into place. If it is not fitted correctly, the blender will not work.
5. Set the speed selector dial to your required speed.
6. Plug the blender into an electrical outlet and switch on.
7. Turn the On/Off switch the On position.
8. You can use the manual speed selector dial to control the speed during use.
9. To stop blending, turn the On/Off Switch to the Off position.

Speed adjust:

The blender has an analogue speed dial, working from left to right. Due to the slow start motor, the blender will begin slowly and speed up to the selected speed

Pulse:

The pulse switch must be held down for use. When the pulse switch is released the blender will automatically stop pulsing. If you are blending on a low speed, pressing the pulse switch down will speed up the blender.

Reset Button:

There is a red reset button situated on the underside of the base. If the safety cut out is activated due to overloading or overheating press the reset button.

Blending hot liquids:

When blending hot liquids do not fill the blender jug beyond the 1 litre level.

Completely remove the centre portion of the two-piece container lid before starting the blender. This allows the rapidly heated air from the blender to vent whilst it's running.

Hot liquids may push the lid off the jar during blending.

To prevent this and any possible burns, place one hand on top of the lid to hold it down, with the protection of an oven mitt or thick towel.

Keep any exposed skin away from the lid.

Begin blending any hot liquids at the lowest speed.

Tips:

When you are using many ingredients, always ensure the liquid ingredients go into the jug first, followed by the solids.

Make sure all ingredients are cut into even sized pieces for good consistency.

When blending liquids, do not fill the blender past the 1 litre mark.

4 TROUBLE SHOOTING & FAQ'S

Blender fails to start or stops whilst it is running and cannot be restarted.	<p>Check to see if unit is securely plugged into an electrical outlet.</p> <p>The motor stops during operation due to overheating press the red reset button on the underside of the base, Once 10 minutes has passed, plug the blender back in and resume normal operation. Allow further cooling.</p> <p>Check the reset button under the base of the blender.</p>
My blender will not switch on.	Make sure the blade assembly is properly assembled to the jar and that it is not misaligned.
Blender doesn't turn off.	Unplug the power cord from the electrical outlet and call customer service for support.
Ingredients are not mixing properly.	<p>Ensure you have added enough liquid to the ingredients. Your mixture should be fluid at all times.</p> <p>You may have exceeded the max fill line on the jug. Do not fill past the highest graduation marking.</p>
How big is the jug?	The jug is 2 litres.
How small do I need to chop my ingredients?	Make sure all ingredients are cut into 1" cubes for optimum results.
Do I need to peel my ingredients?	It is recommended to peel any fruit with a fibrous, thick skin, such as bananas and oranges. Depending on personal taste you can leave skins
Food is unevenly chopped.	<p>Either you are chopping too much food at once, or not pulsing properly.</p> <p>Reduce the amount of food in the jar.</p>
You cannot achieve crushed ice from ice cubes.	For best results, use ice straight from the freezer. Attempt a shorter operating time.
Hot smell emitting from unit	The blender might have overheated, allow to cool before reusing.

5 CLEANING & CARE

IMPORTANT!

- The jug and lid are dishwasher safe. Do not wash the blade assembly in the dishwasher as this can damage the silicone gasket seal. Do not immerse the Ultra Xtreme Nutrient Extraction System in water or any liquids.
- Remove plug from the mains socket and allow the appliance to cool down before cleaning.
- Do not immerse the base unit of the appliance in water and ensure no water enters the appliance.
- Clean the base unit by wiping it with a damp cloth. A little detergent can be added needed.
- Do not use scouring pads, steel wool, any form of strong solvents or abrasive cleaning agents to clean the appliance; they may damage the outside surfaces of the appliance.
- Clean blade assembly in warm soapy water.
- Do not use any scouring pads, steel wool, any strong solvents or abrasive cleaning agents when cleaning accessories.
- To clean the blades connect the blade assembly and fill the jug half way with warm soapy water, and function for 30 seconds. Empty the waste water and rinse with fresh hot water. Repeat if necessary.
- **IMPORTANT!** Allow to dry fully after cleaning before using again. Do not use the appliance if damp. Ensure the appliance is completely clean and dry before storing.

To store your appliance:

1. Unplug power cord from the power outlet and clean as above.
2. Allow the appliance to dry fully.
3. It's good practice that the blades are each attached to a cup. This will prevent the blades from being misplaced and reduce cutting hazards.
4. Store on a flat, dry level surface out of reach of children.

6 RECYCLING

DISPOSAL OF THE UNIT

Appliances bearing the symbol shown here may not be disposed of in domestic rubbish. You are required to dispose of old electrical and electronic appliances like this separately.

Please visit www.recycle-more.co.uk or www.recyclenow.co.uk for access to information about the recycling of electrical items.

Please visit www.weeeireland.ie for access to information about the recycling of electrical items purchased in Ireland.

The WEEE directive, introduced in August 2006, states that all electrical items must be recycled, rather than taken to landfill.


Please arrange to take this appliance to your local Civic Amenity site for recycling, once it has reached the end of its life.



7 WIRING SAFETY FOR UK USE ONLY

IMPORTANT

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

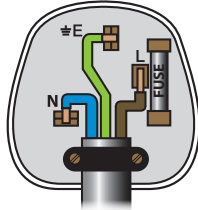

The wires in the mains lead are coloured in accordance with the following code:

Blue neutral [N] Brown live [L]
Green/Yellow [EARTH] ≡

Plug Fitting Details (Where Applicable).

The wire coloured blue is the neutral and must be connected to the terminal marked [N] or coloured black.

The wire coloured brown is the live wire and must be connected to the terminal marked [L] or coloured red.

The wire coloured green/yellow must be connected to the terminal marked with the letter [E] or marked ≡.

On no account must either the brown or the blue wire be connected to the [EARTH] terminal ≡.

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you

Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - disconnect it from the mains - and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

WARNING:
This Appliance **MUST** be Earthed

8 WARRANTY



**We hope that you will enjoy
your Tower Ultra Xtreme
Nutrient Extraction System
for many years.**

**As a thank you for
purchasing one of our
fantastic products,
we are giving you 3 years
peace of mind.**

To receive your 3 year
guarantee, simply register
your appliance
online by visiting

www.towerhousewares.co.uk



This product is guaranteed for 12 months from the date of original purchase.

If any defect arises due to faulty materials of workmanship, the faulty products must be returned to the place of purchase.

Refund or replacement is at the discretion of the retailer.

The Following Conditions Apply:

- The product must be returned to the retailer with proof of purchase.
- The product must be installed and used in accordance with the instructions contained in this instruction guide.
- It must be used only for domestic purposes.
- It does not cover wear and tear, damage, misuse or consumable parts.
- Tower has limited liability for incidental or consequential loss or damage.

This guarantee is valid in the UK and Eire Only.

The standard one year guarantee is only extended to the maximum available for each particular product upon registration of the product within 28 days of purchase. If you do not register the product with us within the 28 day period, your product is guaranteed for 1 year only.

To validate your extended warranty, please visit www.towerhousewares.co.uk and register with us online. Alternatively, call our customer registration line on +44 (0) 333 220 6066.

Please note that length of extended warranty offered is dependent on product type and that each qualifying product needs to be registered individually in order to extend its warranty past the standard 1 year. Extended warranty is only valid with proof of purchase.

9 YOUR RECEIPT

Affix your store receipt to this page for safe keeping.

NOTES

NOTES



TOWER®

thank you!

We hope you enjoy your appliance for many years. As a thank you for purchasing one of our fantastic products, we are giving you an extra 2 years peace of mind.

***To receive your extra 2 years guarantee, register your appliance online by visiting:**

www.towerhousewares.co.uk

Should you have a problem with your appliance, or need any spare parts, please call our Service Department on:
+44 (0) 333 220 6066

Your warranty becomes void should you decide to use non Tower spare parts. Spare parts can be purchased from www.towerhousewares.co.uk



great british design, innovation and excellence since 1912