 


Doro 6040 Quick Start Guide




English

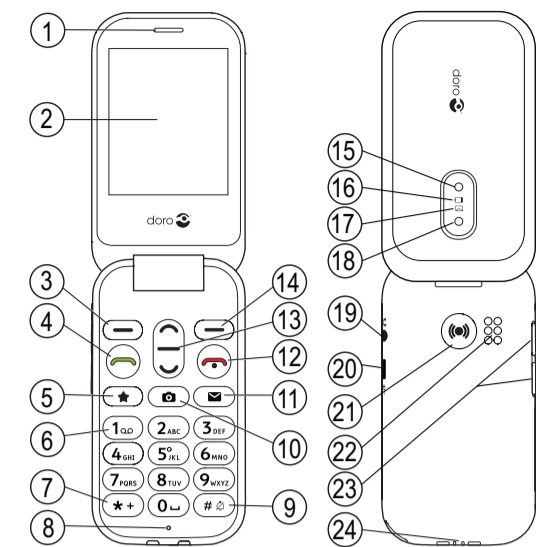

www.doro.com

- | | |
|-----------------------------------|--|
| 1. Earpiece | 12. End call / Power on/off |
| 2. Display | 13. Arrow buttons |
| 3. Left selection button | 14. Right selection button |
| 4. Call button | 15. Camera flash/torch |
| 5. Top 10 shortcut | 16. Red light = Battery level low/Charging |
| 6. Voice mail | 17. Green light = New message/Missed call |
| 7. * International prefix/Symbols | 18. Camera lens |
| 8. Microphone | 19. Headset socket |
| 9. # Input method/Silent | 20. Charging socket |
| 10. Camera shortcut | 21. Assistance button |
| 11. Message shortcut | 22. Loudspeaker |
| | 23. Volume control |
| | 24. Lanyard hold (lanyard optional) |
| | 25. Charging stand (optional) |

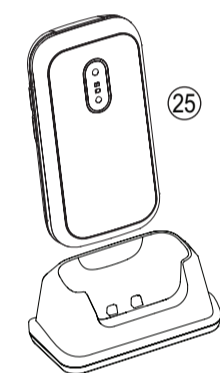 

Note! All illustrations are for illustrative purposes only and may not accurately depict the actual device. The items supplied with your phone might vary depending on the software and accessories available in your region or offered by your service provider. You can obtain additional accessories from your local Doro dealer. The supplied accessories provide the best performance with your phone.

Full user manual
For the full user manual, useful links and more information please visit www.doro.com/support/ or contact our Helpline.

 
IMPORTANT!
Your device may use data services and you may incur additional charges for data services, such as messaging or using location services depending on your data plan. We recommend that you check your data rates for your subscription with your service provider.

1. GET STARTED

SIM card, memory card and battery

Remove the battery cover.

Be careful not to damage your fingernails when you remove the battery cover. Do not bend or twist the battery cover excessively as it may be damaged.

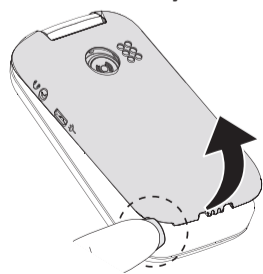


Insert the SIM cards (required)

Remove the battery if it is already installed.


- Insert the first SIM card by gently sliding it into the SIM1 card slot.
- Insert the second SIM card by gently sliding it into the SIM2 card slot.

 Note! If you are using only one SIM card, we recommend using SIM1 card slot. This device accepts micro SIM or 3FF SIM card.

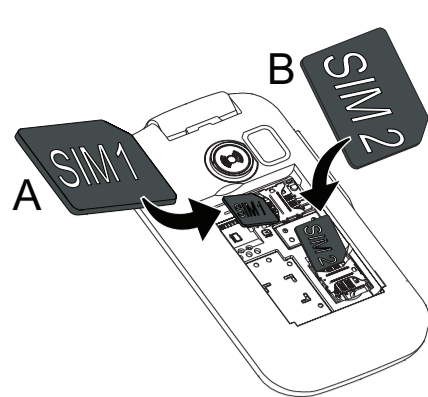


Insert the SD card (optional)

 Locate the SD card holder and gently slide the card in the holder. The device works with or without a SD card installed. Compatible card type: microSD, microSDHC.

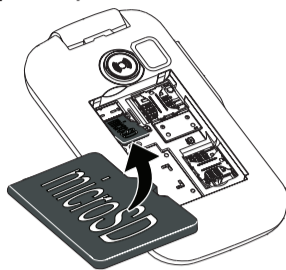

Insert the battery and replace the cover

 Insert the battery by sliding it into the battery compartment with the contacts facing downwards to the right. Replace the battery cover.

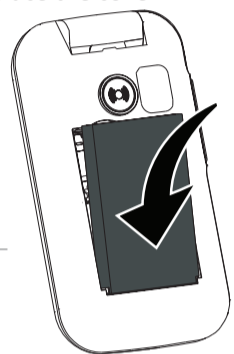

Charge the phone

CAUTION
Only use batteries, charger and accessories that have been approved for use with this particular model. Connecting other accessories may be dangerous and may invalidate the phone's type approval and guarantee.

When the battery is running low, is displayed and a warning signal is heard.

- Connect the mains adapter to the wall socket and to the charging socket .

Tip: It is recommended to remove the protective plastic film from the display to enhance the visibility.

2. GET TO KNOW YOUR PHONE

Turn the phone on and off

- Press and hold the red button on the phone to turn it on/off. Confirm with **Yes** to power off.
- If the SIM card is valid but protected with a PIN code (Personal Identification Number), PIN is displayed. Enter the PIN code and press **OK**. Delete with **Clear**.

Note! If PIN and PUK codes were not provided with your SIM card, please contact your service provider.

Attempts: # shows the number of PIN attempts left. When no more attempts remain, **PIN blocked** is displayed. The SIM card must now be unlocked with the PUK code (Personal Unblocking Key).

- Enter the PUK code and confirm with **OK**.
- Enter a new PIN code and confirm with **OK**.
- Re-enter the new PIN code and confirm with **OK**.

Start-up wizard

When starting the telephone for the first time, you can use the start-up wizard to set some basic settings.

Tip: You can run the start-up wizard later if you want.

Step-by-step instructions

The arrow () indicates next action in step-by-step instructions. To confirm an action, press **OK**. To select an item, scroll or highlight the item using and then press **OK**.

Enter text

- Press a numerical key repeatedly until the desired character is shown. Wait a few seconds before entering the next character.
- Press ***** for a list of special characters. Select the desired character with and press **OK** to enter it.
- Use +/- or to move the cursor within the text.
- Press **#** to cycle upper case, lower case and numerals.
- Press and hold **#** to change writing language.

Predictive text

In some languages you can use the input method which uses a dictionary to suggest words.

- Press **Menu** → **Settings** → **Messages** → **Predictive text**.
- Select **On** to enable, or **Off** to disable.
- Press **OK** to confirm.

Change language, time and date

The default language is determined by the SIM card.

3. CALLS

Make a call

- Enter the phone number including the area code. Delete with **Clear**.
- Press to dial. Press **Abort** to cancel the call.
- Press to end the call.

Note! For international calls, always use + before the country code for best operation. Press ***** twice for the international prefix +.

Call from the phonebook

- Press **Name** to open the phonebook.
- Use to scroll through the phonebook, or quick search by pressing the key corresponding to the first letter of the name.

- Press **Options** → **Call**, alternatively, press to dial the selected entry, or press **Back** to return to standby.

Receive a call

- Open the flip and press to answer. Alternatively press **Silent** to switch off the ringsignal or press /close the flip to reject directly (busy signal).
- Press to end the call.

Volume control

Use +/- to adjust the sound volume during a call. The volume level is indicated on the display.

Silent

Silent is a fixed profile with keypad tone, message tone and ring tone disabled, while vibration, tasks and alarm are unchanged.

- Press and hold **#** to activate and to deactivate silent.

Call options

During a call the soft keys () give access to additional functions.

Speed dial

Use **0** and **2-9** to speed dial an entry from standby.

- Press and hold the corresponding button to dial.

Add speed dial numbers

- Press **Menu** → **Settings** → **Phonebook** → **Speed dial**.
- Select **0** → **Add** and select an entry from the phonebook.
- Press **OK** to confirm.
- Repeat to add speed dial entries for buttons **2-9**.

SOS calls

As long as the phone is switched on, it is always possible to place an SOS call by entering the main local emergency number for your present location followed by .

Call log

Received, missed, and dialled calls are saved in a combined call log. 20 calls of each type can be stored in the log. For multiple calls related to the same number, only the most recent call is saved.

- Press .
- Use to scroll through the call log.
 - = Received call
 - = Dialled call
 - = Missed call
- Press to dial, or **Options**.

4. PHONEBOOK

The Phonebook can store 500 entries with 3 phone numbers in each entry.

Add contact

- Press **Menu** → **Phonebook** → **-New contact-** → **Add**.
- Enter a **Name** for the contact, see **Enter text**. Delete with **Clear**.
- Use to select **Mobile**, **Home** or **Office**, and enter the phone number(s) including the area code.
- When done, press **Save**.

ICE (In Case of Emergency)

In the event of a trauma, it is critical to have this information as early as possible to increase the chances of survival. Add ICE contact to improve your own safety. First responders can access additional information such as medication and next of kin from your phone in case of an emergency. All fields are optional, but the more information provided the better.

Press **Menu** → **Phonebook** → **ICE**.

- Use to scroll the list of entries.
- Press **Edit** to add or edit information in each entry. Delete with **Clear**.
- Press **Save** when done.

5. ASSISTANCE BUTTON

The assistance button allows easy access to contact your predefined help numbers should you need help. Make sure that the assistance function is activated before use. See the full manual on how to activate, how to enter recipients in the numbers list, and how to edit the text message.

Make an assistance call

- When help is needed, press and hold the assistance button for 3 seconds, or press it twice within 1 second. The assistance call begins after a delay of 5 seconds. In this time you can prevent a possible false alarm by pressing .
- An assistance text message (SMS) is sent to all recipients. The first **recipient** in the list is dialled. If the call is not answered within 25 seconds, the next number is dialled. Dialling is repeated 3 times or until the call is answered, or until is pressed.

CAUTION

When an assistance call is activated the phone is pre-set to handsfree mode. Do not hold the device near your ear when the handsfree mode is in use, because the volume may be extremely loud.

Settings

- Press **Menu** → **Settings** → **Assistance**.

See also "[9. Response by Doro](#)".

6. MESSAGES

Create and send text messages

- Press shortcut button , or press **Menu** → **Messages** → **Create new** → **SMS**.
- Write your message, see **Enter text**, then press **To**.
- Select a recipient from **Phonebook**. Alternatively, select **Enter number** to add recipient manually and press **Done**.
- Select **Add** to add more recipients. You can modify the recipients by selecting one and press **Options** → **Edit/Delete/Delete all**.
- When done, press **Send**.

Create and send picture messages

Both you and the recipient must have subscriptions that support picture message. The settings for picture message are supplied by your service provider and can be sent to you automatically via text message.

- Press shortcut button , or press **Menu** → **Messages** → **Create new** → **MMS**.
- Write your message, see **Enter text**.
- Press **Options** → **Add picture**:
 - My pictures** to select a file.
 - Take picture** to use the camera to take a picture.

Note! To keep best picture quality, send only one picture per message.

You can also **Add sound**, **Add video**, and **Preview MMS** using the **Options** menu.

- Press **Options** → **Add subject** and enter your subject, then press **Done**.
- Press **Options** → **To** and select recipient from **Phonebook**. Alternatively, select **Enter number** to add recipient manually and press **Done**.
- Press **Add** to add more recipients.
- Press **Send** to send.

Settings

- Press **Menu** → **Settings** → **Messages**.

