



USER GUIDE

Read the manual carefully and ensure you have fully understood its contents before operating this device for the first time.

English

Deutsch

Español

Italiano

Português

Français

Hisense

USER GUIDE

Read the manual carefully and ensure you have fully understood its contents before operating this device for the first time.

English

Contents

Welcome	2
Important Notice	3
Safety Instructions	4
Getting Started	8
Shortcuts instructions	8
First Time Installatioon.....	9
Basic Features	11
DTV.....	11
Picture Menu	11
Sound Menu	12
Channel Menu	14
Option Menu	16
Lock Menu	18
EPG Menu	19
VGA.....	20
Screen.....	20
MEDIA	20
Media Operation	20
Moive Menu	21
Music Menu	22
Photo Menu.....	23
File Menu	23
Other Information	25
Trouble Shooting.....	25
Recycling/Licenses.....	26

Welcome

Thank you for purchasing a Hisense TV.

This device lives up to the highest standards, innovative technology and high user comfort.

Home

With this Hisense TV you can do it fast and simple, whilst in the comfort of your living room.

Media Player

Media player — access your music, pictures and videos from your network or USB storage media and play them directly on your TV.

PVR/ T.Shift

Connect a hard disk to your TV and use the PVR function to record your favorite shows and movies. With the T.Shift function, you can watch a live broadcast while recording it, enabling you to pause the viewing at any time, skip commercials and replay important scenes.

Digital Tuner

Everything works with one remote control now. Connect your TV directly to your terrestrial or cable and enjoy contents in high quality without loss.

Important Notice

This guide only contains detailed information about the menus and the explanation of different settings, how to use the functions of this TV, etc. For detailed instructions on how to install this TV, please refer to the USER MANUAL.

Paragraphs beginning with the symbol  indicate important instructions, tips or conditions for the following settings.

 **For your own safety and the optimal performance of your TV, ensure to read the safety instructions before performing any installation.**

Hisense does not guarantee operation and performance of peripheral devices made by other manufacturers. We disclaim any liability or damage that may arise from operation and/or performance from usage of such other maker's peripheral devices.

The recording and playback of content on this or any other device may require permission from the owner of the copyright or other such rights in that content. It is your responsibility to ensure that your use of this or any other device complies with applicable copyright legislation in your country. Please refer to that legislation for more information on the relevant laws and regulations involved or contact the owner of the rights of the content you wish to record or playback.

The Index/Glossary explains certain terms used in this user manual and in the TV menu.

Declaration of Conformity (DoC)

This TV is CE marked and complies with EU directives. The complete declaration of conformity is included in this manual, and can also be downloaded from the Hisense homepage.

Hisense declares that this TV is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EG. It may be operated in all countries in the EU and also Iceland, Norway and Switzerland. In France and Italy it may only be used indoors.

Read these instructions
Follow all instructions
Heed all warnings
Keep these instructions

All rights reserved.



Important Safety Instructions

Safety Instructions

To ensure safe and correct use of this product, always comply with the following precautions to avoid dangerous situations and damage to your unit:

	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN	
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.		



The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

The intended use and ambient conditions for this TV

This TV is intended for the rendering of video and audio signals, on a table-top or wall-mounted, in a home or office environment. It must not be used in rooms with a high level of humidity or dust concentration. The warranty is only valid if used as intended by the manufacturer.



WARNING

High humidity and dust concentration may lead to current leaks in the device. To reduce the risk of fire or electrical shock:

- Do not expose this unit to rain, moisture, dripping or splashing water, and do not place objects filled with liquids, such as vases, cups, etc. on or over the unit.
- Do not touch the TV with wet hands.
- Do not expose to direct air-conditioning and keep candles or other naked flames away from the TV at all times.

If the TV is moved from a cold environment to a hot environment, leave it switched off for at least an hour to avoid condensation. If used outside, make sure it is protected from moisture.

If you notice anything unusual, immediately turn off the main power supply switch and remove the power plug.

In case of fire, use preferably a CO₂ gas or powder fire extinguisher. If such extinguishers are not accessible, try to isolate the electrical supply before using a water fire extinguisher.

The plastic cabinet, internal transformer insulating paint and rubber parts etc., of your new TV will emit a certain level of odors, like newly purchased furniture, when the temperature rises, the odors will be more obvious. The smell is determined by the nature of the material. The materials program which we use for our products can fully meet the environmental requirements and regulations in the sales region, so consumers can be assured. With the passage of time to watch TV, the odor will gradually decrease and eventually disappear, consumers are required to pay attention to the environment ventilation.

■ Moving/Transportation

Before moving this TV, disconnect all cables and move in the vertical position only. Grasp the device on the upper and lower edges of the frame.

- Do not press or put stress on the front panel of the TV. It may take two or more people to carry larger TVs.

If you have to briefly lay down the TV, place the unit with its entire front surface lying flat on soft material. The LED screen is made of glass and can break if is not handled properly. Always wear rubber gloves to carry the unit. If the LED screen is damaged, liquid crystal might leak out. In case of skin contact, immediately rinse thoroughly with water.

■ Power Supply

Incorrect voltages can damage the TV. Only connect this unit to a power supply with the correct voltage and frequency noted on the type plate, using the supplied power cable.

The power plug must be easily accessible so that the device can be disconnected at all time. The unit is live, even if in standby mode, as long as the unit is connected to a power outlet.

It is recommended that this unit is placed on a dedicated circuit.

- Do not overload the power outlets by connect too many appliances to the same outlet. Overloaded wall outlets, extension cords, etc. are dangerous and can result in electric shock and fire.

After power off, don't turn it on again in 5 seconds. Frequent switching power supply in a short period of time can cause abnormal TV.

■ Power plug and power cable

- Do not touch the power plug with wet hands.
- Do not place heavy objects on the power cable. Route the cable so that it is not kinked or laid over sharp edges, walked on or exposed to chemicals. A power cable with damaged insulation can cause electric shock and fire.
- Pull the power plug, NOT on the cable when disconnecting. The cable can become damaged and cause a short circuit if pulled on.
- Do not place the power cable near a high temperature object.
- Do not move the TV with the power cable plugged into a socket.
- Do not use a damaged or loose power cable, or a damaged socket outlet.
- Do not use any power cords other than the one supplied with this unit.

■ Set-up

Check that the location is suitable to bear the load of the TV. Place on a level, sturdy and horizontal base. Ensure that the unit does not hang over the edge of the base when placed in or on furniture. If placed on a cart, use caution when moving to avoid the unit from tipping over.

- Place the unit in a normal upright horizontal position. It must never be operated vertically, lying flat or hanging overhead from the ceiling.
- Place the unit where it is not exposed to direct sunlight or other sources of heat

When mounting the TV on a wall, follow the instructions supplied with the wall-mount, make sure not to install the TV by hanging the power and signal cables on the back of the TV.


■ Air ventilation and high temperatures

Install your TV only where there is proper ventilation, and ensure that there is at least 10 cm free space on the sides and 20 cm above the unit for air circulation. Excessive heat and obstruction of ventilation could lead to fire or early failure of some electric components.

- Do not block any ventilation openings with newspapers, tablecloths, curtains, etc.
- Do not dry clothing etc. on top of the unit.
- Take care not to touch the ventilation openings since they may become hot.
- Do not insert foreign objects into the TV through the vents.

■ The Stand

- Do not use any stand other than the one supplied with this unit.
- Do not modify or use the stand if it becomes warped or physically damaged.
- During setup, make sure that all the screws are securely tightened.
- Ensure that the TV does not suffer any impact during the attachment of the stand.
- Ensure that children do not climb onto the stand.
- Attach or remove the stand with at least two people.
- Install the TV following the specific procedure in the Quick Setup Guide.

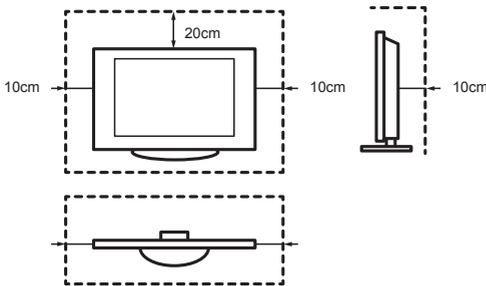

Prevent small items from getting into the interior of the device through the ventilation slots. Such objects may cause short circuits, which may cause fire.

If something should get inside the unit, immediately unplug the power plug of the device and contact service support.

■ The LED screen

Despite thorough care when manufacturing this display, it cannot be 100% guaranteed that no sub-pixel defects will occur due to technical reasons. These cannot be considered as a device defect in terms of the guarantee. They will not affect the performance and reliability of the TV.

To prevent “image burn”, avoid displaying still images for long periods of time, there is a possibility that a copy of the image may remain. If the aspect ratio is set to 4:3 for a long period of time, image burn may occur on the black areas. Image burn is not covered by the warranty.

- Do not apply strong force or impact on the display panel.

Avoid touching the LED screen or touching it for long periods of time. Doing so may produce some temporary distortion effects on the screen.

■ Radio waves

- Do not use the TV in any medical institutions or locations with medical equipment. Radio waves may interfere with medical equipment and cause malfunction.
- Do not use the TV near any automatic control equipment such as automatic doors or fire alarms. Radio waves may interfere with automatic control equipment and cause malfunction.

If you have a cardiac pacemaker, keep a distance of at least 22 cm from the TV. Radio waves may interfere with the operation of a pacemaker.

■ Supervision

- Do not let children play unsupervised close to the TV. It could tip over, be pushed off or pulled down from the stand surface and injure someone.
- Do not allow a switched-on TV to run unattended.

■ Volume

Loud music and noises can lead to irreversible damage to your ears. Avoid extreme volume, especially over long periods and when using headphones.

If you hear a drumming noise in your ears, turn down the volume or temporarily stop using headphones.

■ Thunder Storms

Pull out the power plug and all connected antenna cables from the TV during a thunderstorm. Overvoltage caused by lightning strikes can damage the TV via the antenna system, as well as the wall socket.

■ Long periods of absence

As long as the power plug is connected to a live socket outlet, the TV will consume power even in "STANDBY" mode. The power plug and all connected antenna cables should be disconnected during long idle periods.

■ Cleaning and care

CAUTION:

Unplug the power cord prior to cleaning the TV.

Clean the TV, the screen, and the remote control with a soft, moist, clean and color-natural cloth only. Do not use any chemicals.

- Do not subject the surfaces to insect repellent, solvent, thinner or other volatile substances. This may degrade the surface quality.
- Do not spray water or other liquids directly on the TV. Liquid inside the TV could lead to product failure.
- The surface of the display panel is treated and may be easily damaged. Take care not to scratch it with fingernails or other hard objects.
- Also wipe the power plug with a dry cloth at regular intervals

■ Service/Repair

Never remove the cover/back of the TV; there are no user serviceable parts inside. Refer all service to qualified service personnel.

■ Packaging

Keep the anti-moisture materials and plastic bags out of reach of children.

Plastic bags can cause suffocation and the anti-moisture material is harmful if swallowed. If swallowed by mistake, force the patient to vomit and visit the nearest hospital.

■ Modification

Do not attempt to modify this product in any way. Unauthorized modification could void the warranty of this unit, cause electric shock and fires.

■ Remote Control batteries

- Incorrect installation may cause battery leakage, corrosion and explosion.
- Replace only with the same or equivalent type.
- Do not mix old and new batteries.
- Do not mix different battery types
- Do not use rechargeable batteries
- Do not burn or break up batteries.
- Do not expose batteries to excessive heat
- Be sure to dispose of batteries correctly

■ Outdoor Antenna Grounding

If an outdoor antenna used, be sure the antenna system is protected against voltage surges and built-up static charges.

■ Disposal

Refer to the recycling section of this manual.

Shortcuts Instructions

Turning your TV on and off

1. To turn your TV on: Connect the TV to an AC power outlet and turn on the Power button. A few seconds later an image will appear on the screen.

NOTE

- Turn the [Power] button off when you do not intend to use the TV for long periods, for example overnight. Remove the connection from the wall power outlet if you do not intend to use the unit for longer period, for example, if you plan to be away for a few days. Wait at least 5 seconds after turning off if you want to turn on the TV again.

Selecting the video source

1. Select the video source depending on the video device you have connected to the TV set. DTV, ATV, AV, VGA, SCART, Component, HDMI and Media can be chosen as the video source.
2. Press [Source] to select the video source. When the list of video source appears, press [▼ / ▲] to select the source, then press [OK] to enter.

Adjusting the volume

Press [VOL+/VOL-] to increase or decrease the volume. Press [Mute] to turn off the Audio. Press [Mute] again to turn on the Audio.

Changing channels

Press [CH+/CH-] to go to the previous or next channel. Either, Press the number buttons to select a channel. For example, to select channel 12, press 1, then 2 within 3 seconds.

Selecting the sound mode

Press [Sound] one or more times to select the sound mode which you want. Standard, Music, Movie, Sports, User (a mode that you set) mode can be selected.

Selecting the picture mode

Press [Picture] one or more times to select the picture mode which you want. You can select Standard, Mild, Dynamic, and User (a mode that you defined) mode.

Selecting the aspect ratio

1. Press [Zoom] to display the aspect ratio. Press this key several times to switch this mode.
2. You can select 16:9, Zoom 1, Zoom 2, 4:3, Auto.

NOTE

- The option of aspect is vary with different source.

Setting the sleep timer

1. You can specify the time you want your TV to wait before it automatically turns off. Press [Sleep] one or more times until the remaining time which you want appears.
2. You can select Off, 10 minutes, 20 minutes, 30 minutes, 60 minutes, 90 minutes,..... 240 minutes.

NOTE

- If there are no input signal, the TV set will turn to standby mode automatically after about 15 minutes.

First Time Installation

Connect an RF cable from the Tv's input called "RF-In" and to your TV Aerial socket.

OSD Language

Press [◀ / ▶] button to select the language to be used for menus and message.



Country

Press [◀ / ▶] button on the remote control to select the country you want to.

Tuning Type


Press [◀ / ▶] button to select the Tuning Type:DTV+ATV or DTV or ATV.

Digital Type



Press [◀ / ▶] button to select the Digital Type:DVBC or DVBT.

Auto Tuning Status

First tuning DTV, press [Menu] and [◀] button on the remote control to skip digital tuning, Second tuning ATV, press [Menu] and [◀] button on the remote control to skip analogue tuning.

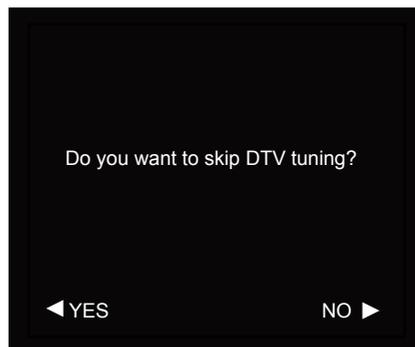

Getting Started

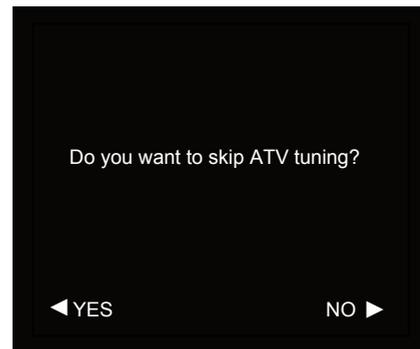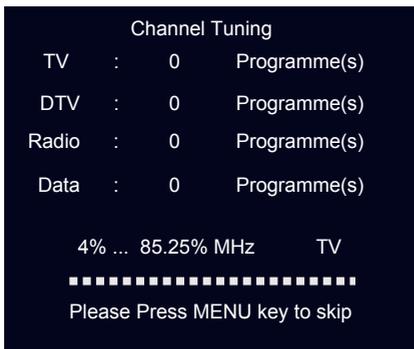

SELECT INPUT SOURCE

Press [Source] button to display the input source list.

Press [▼ / ▲] or [Source] button to select the input source you want to.

Press [OK] button to enter the input source.


Press [Exit] button to quit.



DTV

Picture Menu

Press [MENU] button to display the main menu. Press [▼ / ▲] and [▶] button to select PICTURE in the main menu.

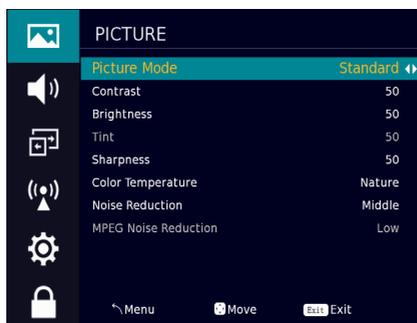

1. Press [▼ / ▲] button to select the option that you want to adjust in the PICTURE menu.
2. Press [◀ / ▶] button to adjust.
3. After finishing your adjustment, Press [MENU] button to save and return back to the previous menu.

Picture Mode

Press [▼ / ▲] button to select Picture Mode. Press [◀ / ▶] button to select. (Available Picture mode: Dynamic, Standard, Mild, User). You can change the value of contrast, brightness, color, sharpness, tint and backlight when the picture is in user mode.

TIPS: You can press [Picture] button on the remote control to change the Picture Mode directly.

Contrast/ Brightness/ Tint/ Sharpness

Press [▼ / ▲] button to select option, then press [◀ / ▶] button to adjust.

Contrast Adjust the highlight intensity of the picture, but the shadow of the picture is invariable.

Brightness Adjust the optical fiber output of the entire picture, it will effect the dark region of the picture.

Tint Use in compensating color changed with the transmission in the NTSC code.

Sharpness Adjust the peaking in the detail of the picture.

Color Temperature


Press [▼ / ▲] button to select Color Temperature .

Press [◀ / ▶] button to select. (Available Picture mode: Cool, Nature, Warm).

Cool Increase the blue tone for the white.

Nature Increase the sex-linked colors for the white.

Warm Increase the red color for the white.

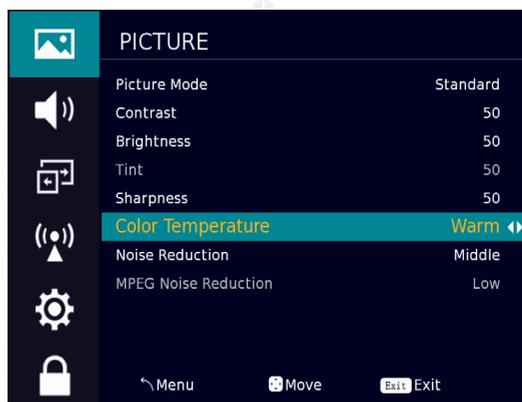


Basic Features

Noise Reduction

Press [▼ / ▲] button to select Noise Reduction .

Press [◀ / ▶] button to set options to reduce video noise.

Off	Select to turn off video noise detection.
Low	Detect and reduce low video noise.
Middle	Detect and reduce moderate video noise.
High	Detect and reduce enhanced video noise.
Auto	Detect and reduce video noise automatically.

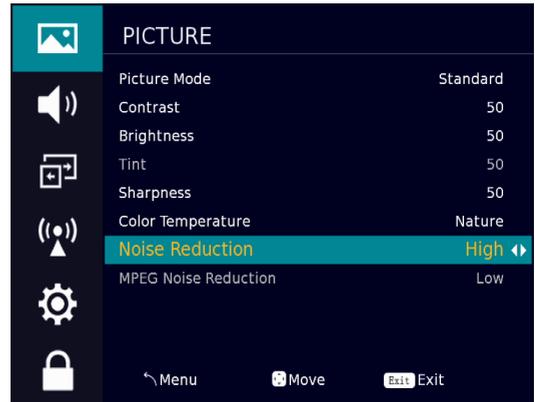


MPEG Noise Reduction

Press [▼ / ▲] button to select MPEG Noise Reduction.

Press [◀ / ▶] button to set options to reduce MPEG noise.

Off	Select to turn off MPEG noise detection.
Low	Detect and reduce low MPEG noise.
Middle	Detect and reduce moderate MPEG noise.
High	Detect and reduce enhanced MPEG noise.

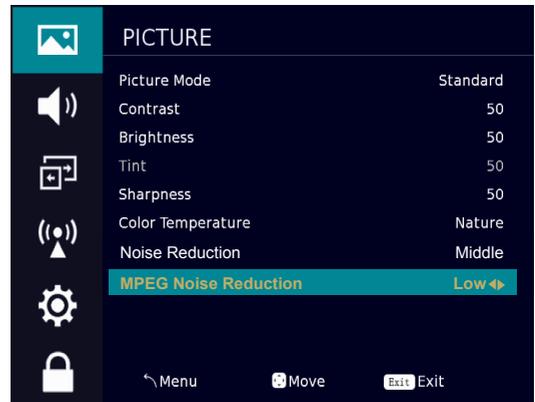


Sound Menu

Press [MENU] button to display the main menu.

Press [▼ / ▲] and [▶] button to select SOUND in the main menu.

1. Press [▼ / ▲] button to select the option that you want to adjust in the SOUND menu.
2. Press [◀ / ▶] button to adjust.
3. After finishing your adjustment, Press [MENU] button to save and return back to the previous menu.

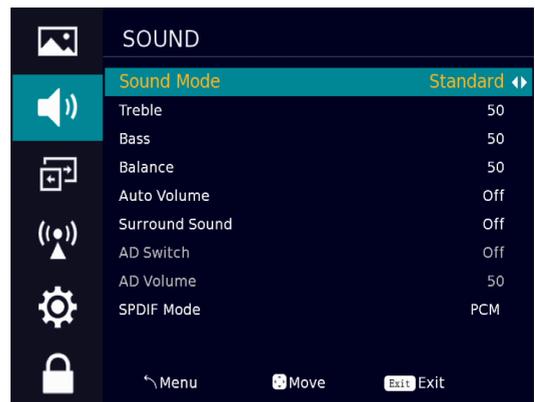


Sound Mode

Press [▼ / ▲] button to select Sound Mode.

Press [◀ / ▶] button to select. (Available Sound mode: Standard, Music, Movie, Sports, User).

TIPS: You can press [Sound] button to change the Sound Mode directly.

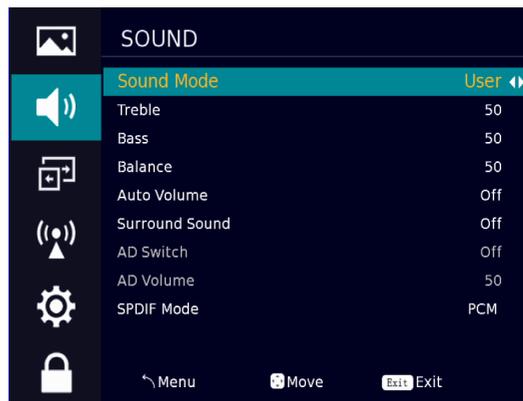

Treble

Press [▼ / ▲] button to select Treble.

Press [◀ / ▶] to adjust.

Bass

Press [▼ / ▲] button to select Bass .

Press [◀ / ▶] to adjust.

Balance

Press [▼ / ▲] button to select Balance.

Press [◀ / ▶] to adjust.

Auto Volume

Press [▼ / ▲] button to select Auto Volume, then press [◀ / ▶] button to select On or Off.

Surround Sound

Press [▼ / ▲] button to select Surround Sound, then press [◀ / ▶] button to select On or Off.

AD Switch

Press [▼ / ▲] button to select AD Switc,then press [◀ / ▶] button to select On or Off.

AD Volume

Press [▼ / ▲] button to select AD Volinme.

Press [◀ / ▶] to adjust.

SPDIF Mode

Press [▼ / ▲] button to select SPDIF Mode, then press [◀ / ▶] button to select off, Auto or PCM.

NOTES

Balance: This item can adjust the speaker's output, it enables you to listen to best at your position.

Auto Volume: This item uses for reducing the difference between channel and program's volume automatically. It made the overall water to be even. This function will also reduce the fluctuation of the sound.

Channel Menu

Press [MENU] button to display the main menu.

Press [▼ / ▲] and [▶] button to select CHANNEL in the main menu.

1. Press [▼ / ▲] button to select the option that you want to adjust in the CHANNEL menu.
2. Press [MENU] button to return back to the previous menu.


NOTE

The channel menu is available only at DTV and ATV source.



Antenna Type


Press [▼/▲] button to select Antenna Type then Press [◀/▶] button to select AIR or CABLE in the main menu.

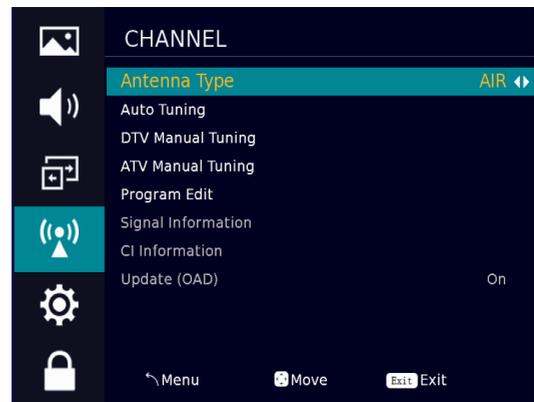

Auto Tuning

Press [▼/▲] button to select Auto Tuning, then press [OK] to enter sub-menu.


Press [◀/▶] button to select Channel Tuning and Country. (Available channel tuning type: DTV+ATV, DTV, ATV.)

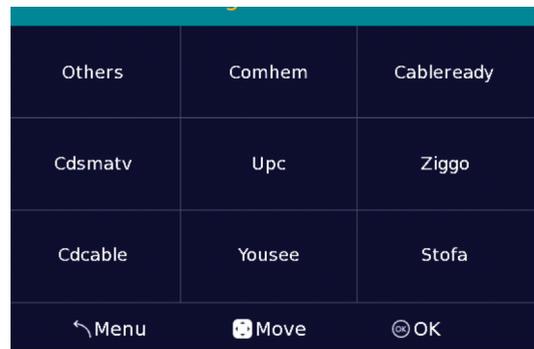

DTV Manual Tuning

Press [▼/▲] button to select DTV Manual Tuning, then press [OK] to enter sub-menu.

Press [OK] button to start searching.

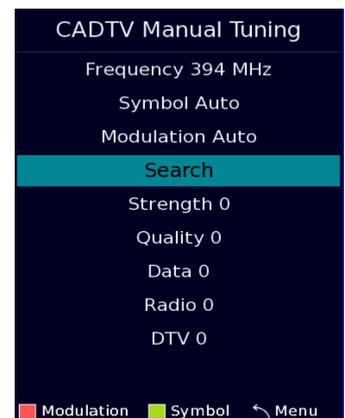

ATV Manual Tuning

Press [▼/▲] button to select ATV Manual Tuning, then press [OK] to enter sub-menu.

Press [▼/▲] button to select Search button to start searching, and press Red button to save.



Program Edit

Press [▼ / ▲] button to select Program Edit, then press [OK] button to enter sub-menu.

■ ■ ■ ■ The four colored key is the shortcut key for programming the channel.


First press [▼ / ▲] to highlight the channel you want to select then:

Press the Red button to delete the channel in the list.

Press the Yellow button to move the channel in the list.

Press the Blue button to skip the select channel. (Your TV set will skip the channel automatically when using CH+/- to view the channels.)

Press the [FAV] button to add the channel to your favorite list

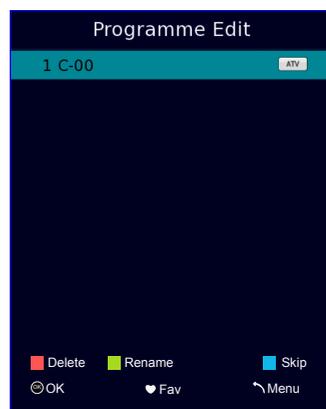


Favorite List

Press [FAV] button to select Favorite List, then press [OK] button on to view.

Signal Information

Press [▼/▲] button to select Signal Information, then press [OK] to view the Information.

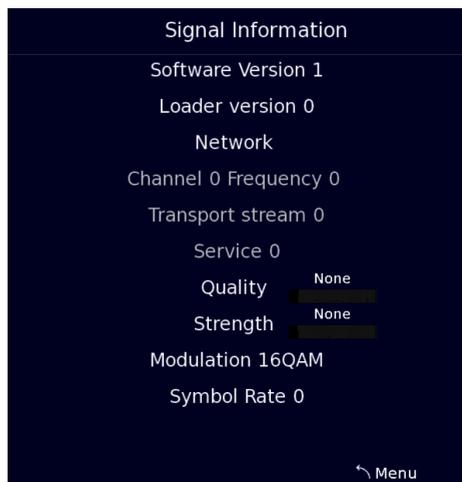

Basic Features

CI Information

Press [▼ / ▲] button to select CI Information, then press [OK] button to view.


Software Update(OAD)

Press [▼ / ▲] button to select Software Update(OAD), then press[◀ / ▶] button to select On or Off.

Option Menu

Press [MENU] button to display the main menu.
Press [▼ / ▲] and [▶] button to select OPTION in the main menu.

1. Press [▼ / ▲] button select the option that you want to adjust in the OPTION menu.
2. Press [◀ / ▶] button to adjust.
3. After finishing your adjustment, Press [MENU] button to save and return back to the previous menu.

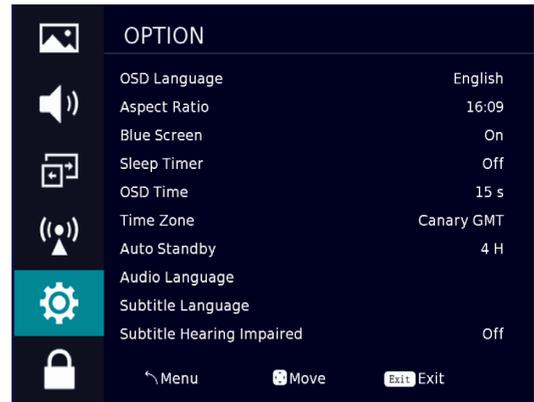


OSD Language

Press [▼ / ▲] button to select OSD Language, then press [OK] button to enter sub-menu.
Press [◀ / ▶] button to select OSD Language, the default setting is English.

Aspect Ratio

Press [▼ / ▲] button to select Aspect Ratio,
Press [◀ / ▶] button to select.

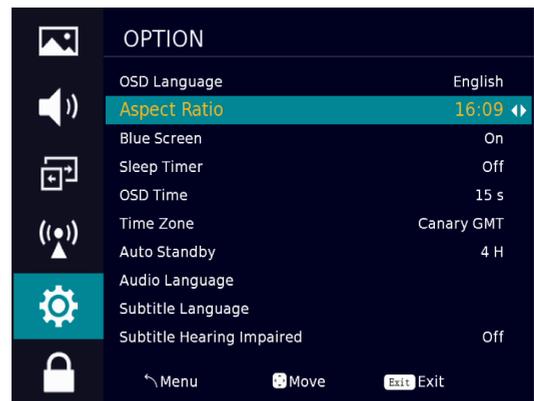

Blue Screen

Press [▼ / ▲] button to select Blue Screen, then press [◀ / ▶] button to select On or Off.

Sleep Timer

Press [▼ / ▲] button to select Sleep Timer.
Press [◀ / ▶] button to select. (Available options are:Off,10min,20min,30min,60min,90min,120min , 180min,240min, 360min,480min).

Tips: The remote control does not make any operation in the hypothesis time, it will close down automatically.If you do any operation, it will reset the time.

OSD Timer

Press [▼ / ▲] button to select OSD Timer.
 Press [◀ / ▶] button to select.
 (Available options are:5s,15s,30s,60s).

Time Zone

Press [▼ / ▲] button to select Time Zone.
 Press [◀ / ▶] button to select time zone.
 (Only available when Auto Sync is On.)

Auto Standby

Press [▼ / ▲] button to select Auto Sleep.

Audio Language

Press [▼ / ▲] button to select Audio Language, then press [OK] button to enter sub-menu.
 Press [◀ / ▶] button to select Primary or Secondary, and Press [▼ / ▲ / ▶] button to select language.

Subtitle Language


Press [▼ / ▲] button to select Subtitle Language, then press [OK] button to enter sub-menu.
 Press [◀ / ▶] button to select Primary or Secondary, and Press [▼ / ▲ / ▶] button to select language.

Subtitle Hearing Impaired

Press [▼ / ▲] button to select Subtitle Hearing Impaired, then press [◀ / ▶] button to select On or Off.

First Time Installation

Press [▼ / ▲] button to select First Time Installation, then press [OK] button to start.

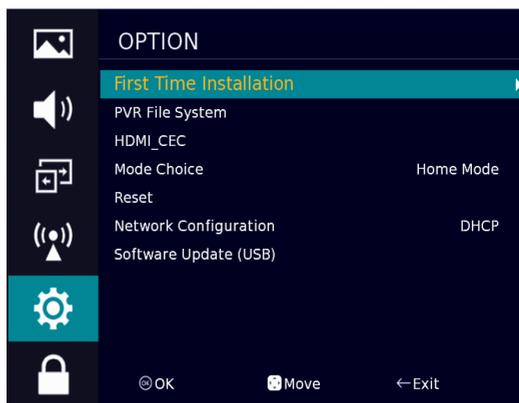

PVR File System

Press [▼ / ▲] button to select PVR File System, then press [▶] button to enter sub-menu.

HDMI_CEC

Press [▼ / ▲] button to select HDMI_CEC, then press [OK] button to enter sub-menu.
 Press [▼ / ▲] button to select.



Mode Choice

Press [▼ / ▲] button to select Mode Choice, then press [◀ / ▶] button to select home mode or store mode.


Reset

Press [▼ / ▲] button to select Reset, then press [OK] button to enter sub-menu.

Press [◀] to reset the setting to factory default, press [▶] to exit.

Network Configuration

Press [▼ / ▲] button to select Network Configuration, then press [OK] button to enter sub-menu.

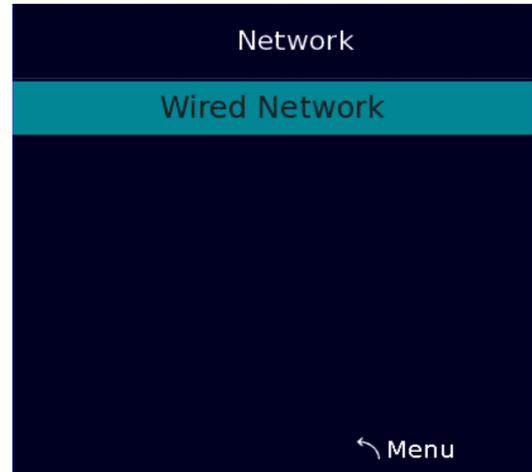**Network**

- Step 1 Use network cable to connect RJ45 on main board,
- Step 2 Go to the main Menu and choose Option,
- Step 3 Choose Network Configuration under OPTION menu,
- Step 4 Choose Wired Network under Network menu,
- Step 5 Choose Configuration under Wired Network menu,
- Step 6 Choose Network Configuration DHCP and confirm it by choosing OK,
- Step 7 After confirming, it will be connecting internet and show Success.

**Software Update(USB)**

Press [▼ / ▲] button to select Software Update(USB), plug your USB device in the USB slot, then press [OK] button to update the right software.

Lock Menu

Press [MENU] button to display the main menu.
Press [▼ / ▲] and [▶] button to select LOCK in the main menu.

1. Press [▼ / ▲] button to select the option that you want to adjust in the LOCK menu.
2. Press [◀ / ▶] button to adjust.
3. After finishing your adjustment, Press [MENU] button to save and return back to the previous menu.



Basic Features


Lock System

Press [▼ / ▲] button to select Lock System, then press [OK] button.
(Default password is '0000').




Set Password

Press [▼ / ▲] button to select Set Password, then press [OK] button to enter sub-menu to set new password.

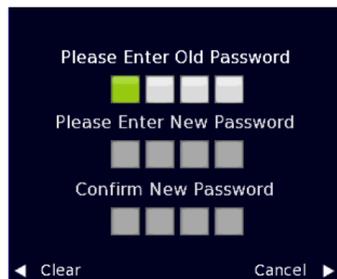

Block Program

Press [▼ / ▲] button to select Block Program, then press [OK] button to enter sub-menu to select.

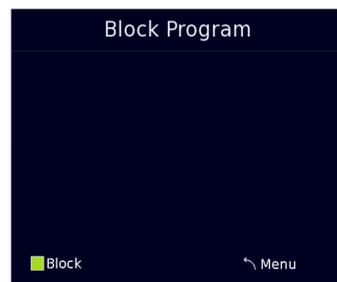

Parental Guidance

Press [▼ / ▲] button to select Parental Guidance.

Press [◀ / ▶] button to select

EPG Menu

Press the button EPG to enter EPG menu. Press the Red button to switch to PVR mode.

You can choose the time of the appointment to record you want. Press the Green button to see the pre-day EPG information. Press the Yellow button to see the next-day EPG information. Press the Blue button to set the remind time.




Basic Features

VGA

Screen

Press [Source] button to select VGA. Press [MENU] button to display the main menu. Press [▼ / ▲] and [▶] button to select SCREEN in the main menu.

1. Press [▼ / ▲] button to select the option that you want to adjust in the SCREEN menu.
2. Press [◀ / ▶] button to adjust.
3. After finishing your adjustment, Press [MENU] button to save and return back to the previous menu.

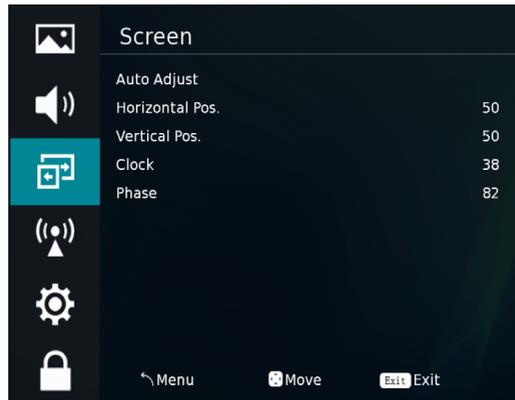

Auto Adjust

Press [▼ / ▲] button to select **Auto Adjust**. Press [◀ / ▶] button to select..

Horizontal Pos.

Press [▼ / ▲] button to select **Horizontal Pos**. Press [◀ / ▶] button to select.

Vertical Pos.

Press [▼ / ▲] button to select **Vertical Pos**. Press [◀ / ▶] button to select.

Clock

Press [▼ / ▲] button to select **Clock**. Press [◀ / ▶] button to select.

Phase

Press [▼ / ▲] button to select **Phase** . Press [◀ / ▶] button to select.

NOTES


1. Noise Reduction in PICTURE menu is invalid.
2. VGA mode has no CHANNEL menu.
3. TIME ,OPTION and APPLICAT menu and description are the same as that for TV mode.

MEDIA

Media Operation

NOTES


Before operating Media menu, Plug in USB device, then press [Source] button to set the Input Source to Media . Press [▲ / ▼] button to select Media in the Source menu, then press [OK] button to enter. Press [◀ / ▶] button to select the option in the main Media menu, then press [OK] button to enter.

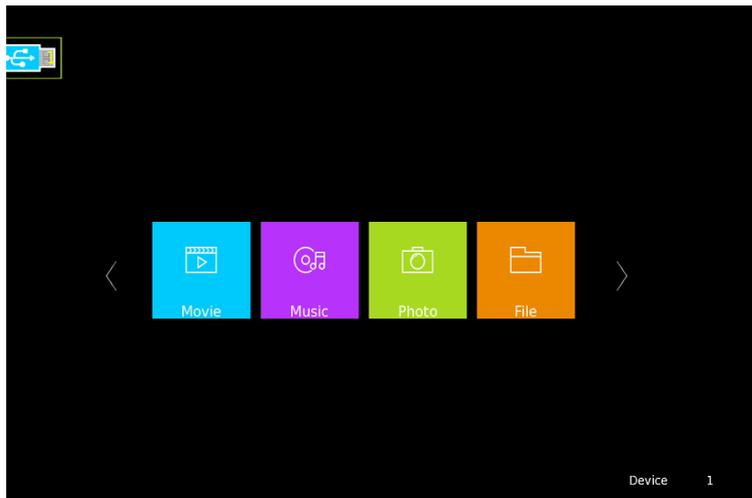

Movie Menu

Press [**▲**/**▼**] button to select MOVIE in the main menu, then press [OK] button to enter.

Press [Menu] button to control the Tool Bar and [Exit] button to return back to the previous menu.

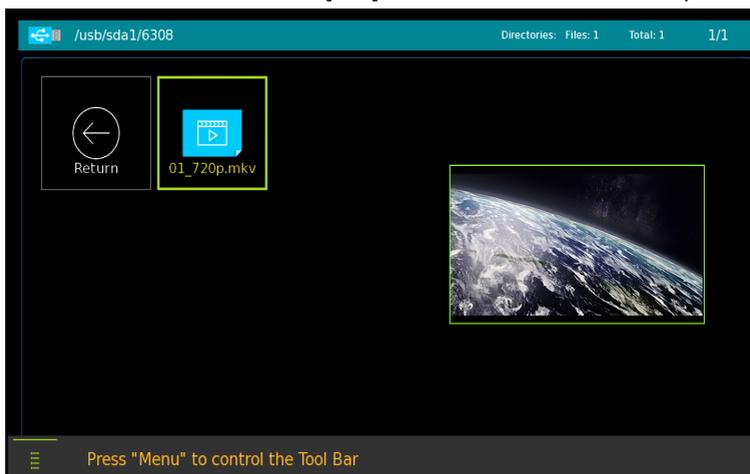

Press [**◀**/**▶**] button to select drive disk you want to watch, then press [OK] button to enter.

Press [**◀**/**▶**] button to select return option to back to the previous menu.

When highlighting the option you select, the file information will appear on the right and movie will be previewed in the center.

Press [OK] button to play the selected movie.

Press [Menu] button to select menu in the bottom you want to run, then press [OK] button to operate.

Press [Exit] button to back to the previous menu and exit button to quit the entire menu.

Basic Features



Music Menu

Press [◀ / ▶] button to select MUSIC in the main menu, then press [OK] button to enter.
Press [Exit] button to return back to the previous menu and exit menu to quit.



Press [◀ / ▶] button to select drive disk you want to watch, then press [OK] button to enter.
Press [◀ / ▶] button to select return option to back to the previous menu.

When highlighting the option you select, the file information will appear on the right and music will be previewed in the center.


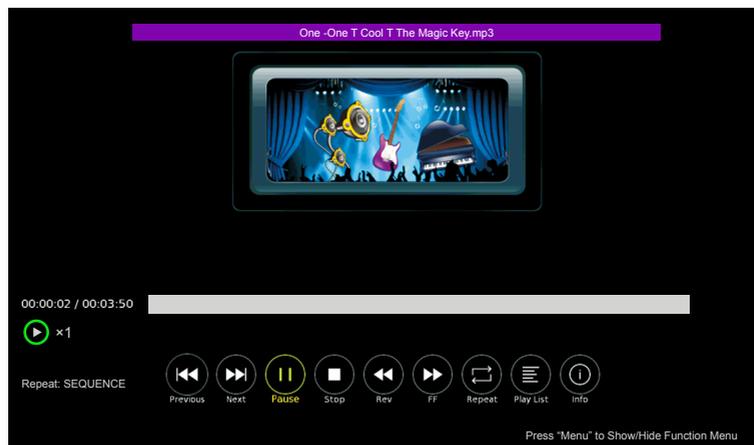


Photo Menu

Press [◀ / ▶] button to select PHOTO in the main menu, then press [OK] button to enter.
Press [Exit] button to return back to the previous menu and exit menu to quit.



Press [◀ / ▶] button to select drive disk you want to watch, then press [OK] button to enter.
Press [◀ / ▶] button to select return option to back to the previous menu.
When highlighting the option you select, the file information will appear on the right and the picture will be previewed in the center.

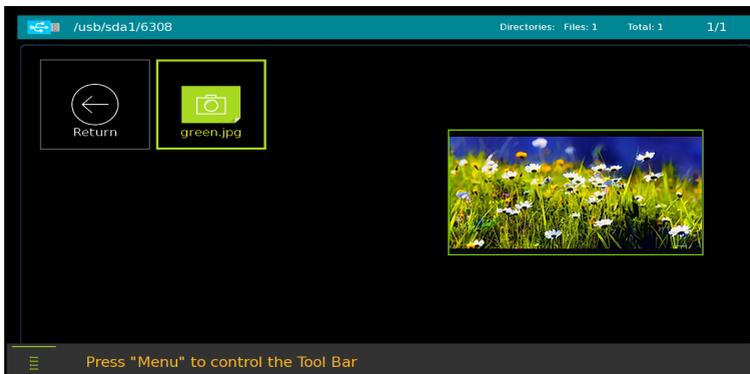

File Menu

Press [◀ / ▶] button to select the file you want to watch in the file selecting menu, then press [OK] button to diplay and operate file details.



Basic Features

Press [◀ / ▶] button to select drive disk you want to watch, then press [OK] button to enter.
Press [◀ / ▶] button to select return option to back to the previous menu.
When highlighting the option you select, the file information will appear on the right and the file will be previewed in the center.



Trouble Shooting

When there is something wrong with your TV, you can try turning off the TV and then restart it. You can also operate according to the following chart. If the problem still cannot be solved, please contact the professional technicians.

<i>SYMPTOMS</i>	<i>POSSIBLE SOLUTIONS</i>
No sound or picture.	Check if the power line is in the outlet and if it has electricity. Check if you have pressed Power button on the TV or Power button on the remote control. Check the setting of picture brightness and contrast. Check the volume. Check if Mute mode is set.
The picture is normal but there is no sound.	Check the volume. Check if Mute mode is set.
No picture and white or black picture.	Adjust Picture Setting. Check Color System.
The sound and picture are interfered.	Try to find the appliance affecting TV set, and move it far away from the TV set. Try to insert the power plug of the TV set into another outlet.
Unclear picture or picture with snow.	Check the direction, position and connection of your antenna. Adjust the direction of your antenna or reset or fine tune the channel.
The remote control does not work.	Change the batteries in the remote control. Clean the upper side of the remote control.(radiating window) Check the contacting points of the batteries. Check if there is obstruction between the remote control and the monitor. Check if the batteries are correctly installed.
H/V strip or the picture shaking.	Check if there is interfering source nearby, such as appliance or electric tools.
The cabinet of the TV makes "Click" sound.	Sometimes the room temperature change can cause the television cabinet to inflate or contract, which makes the sound. This does not mean the TV breaks down.

Recycling/Licenses

WEEE (Waste Electronic Electric Equipment) European Directive 2012/19/EU



This symbol on the product or on its packaging indicates that this product must not be disposed of with your household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

Batteries



In accordance with the Battery Directive, used batteries should not be disposed of in the domestic waste. Dispose your batteries in the collection containers specific for this purpose in retail stores.

RoHS (Restriction of Hazardous Substances) European Directive 2011/65/EU



This European directive limits the use of dangerous and hazardous substances which are difficult to recycle.

This allows recycling easily the EEE and contributes to the safeguard of the environment.

Substances included in this product match to the RoHS directive.



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.