


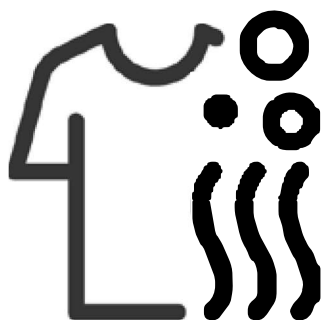

Washer-Dryer

User Manual



IDMA 8564 MY TIME UK 869991734270
IDMA 8564S MY TIME UK 869991734620

CE

TABLE OF CONTENTS

1 Safety Instructions.....4

1.1 Intended Use	4
1.2 Safety of Children, Vulnerable Persons and Pets	4
1.3 Electrical Safety	5
1.4 Handling Safety	6
1.5 Installation Safety	6
1.6 Operational Safety	8
1.7 Drying Safety	9
1.8 Maintenance And Cleaning Safety	11

2 Important Instructions for Environment..12

2.1 Compliance with WEEE Directive	12
2.2 Package Information.....	12

3 Technical Specifications .. 13

4 Installation .. 14

4.1 Appropriate Installation Location.....	14
4.2 Removing Transportation Safety Bolts.....	15
4.3 Connecting to Water Supply.....	15
4.4 Connecting the Drain Hose to the Drain.....	16
4.5 Adjusting the Stands.....	16
4.6 Electrical Connection.....	17
4.7 Handling the Product.....	17

5 Preliminary Preparation.....18

5.1 Sorting the Laundry.....	18
5.2 Preparing Laundry for Washing.....	18
5.3 Tips for Energy and Water Saving.....	18
5.4 Start Up.....	19
5.5 Loading the Laundry.....	19
5.6 Correct Load Capacity.....	19
5.7 Using Detergent and Softener.....	20
5.8 Tips for Efficient Washing.....	22
5.9 Tips for Efficient Drying.....	23
5.10 Displayed Programme Duration.....	23

6 Operating the Product.....24

6.1 Control Panel.....	24
6.2 Symbols on the Display.....	25
6.3 Preparing the laundry.....	26
6.4 Preparing the laundry for drying.....	26
6.5 Sorting the laundry according to colour and degree of soiling.....	27
6.6 Degree of soiling.....	27
6.7 Sorting laundry according to their care label specifications.....	28
6.8 Table of wash cycle.....	29
6.9 Programmes.....	29
6.10 Various cycles.....	30
6.11 Special wash cycles.....	31

6.12 Various functions.....	31
-----------------------------	----

6.13 How to use the appliance.....	32
------------------------------------	----

6.14 Cancelling the Programme.....	35
------------------------------------	----

6.15 Ending of Programme.....	35
-------------------------------	----

7 Maintenance and Cleaning.....36

7.1 Cleaning the Detergent Drawer.....	36
----------------------------------------	----

7.2 Cleaning the Loading Door and the Drum..	36
----------------------------------------------	----

7.3 Cleaning the Body and Control Panel.....	36
----------------------------------------------	----

7.4 Cleaning the Water Intake Filters.....	36
--------------------------------------------	----

7.5 Draining Remaining Water and Cleaning the Pump Filter.....	36
----------------------------------------------------------------	----

8 Troubleshooting.....38

9 DISCLAIMER/ WARNING44

PLEASE READ THIS USER MANUAL FIRST!

Dear Customer,







Thank you for choosing Indesit product. We hope that you get the best results from your product which has been manufactured with high quality and state-of-the-art technology. Therefore, please read this entire user manual and all other accompanying documents carefully before using the product.

Follow all warnings and information in the user manual. Thus, you protect yourself and your Product against possible dangers.

Keep the user manual. If you hand over the product to someone else, provide the user manual as well. Warranty terms, usage and troubleshooting methods of your product are in user guide.

Symbols and Definitions

The following symbols are used in the user guide:

	Danger that could result in death or injury.
	Important information or useful hints about usage.
	Read the user manual.
	Recyclable materials.
 	Hot surface warning.
WARNING	Danger that may result in property damage to the product or its environment



1 SAFETY INSTRUCTIONS

This section includes the safety instructions necessary to prevent the risk of personal injury or material damage.

Our company shall not be held responsible for damages that may occur if these instructions are not observed.

- Installation and repair operations shall always be performed by Authorised Service.
- Use original spare parts and accessories only.
- Do not repair or replace any component of the product unless it is clearly specified in the operation manual.
- Do not modify the product.



1.1 INTENDED USE

- The service life of your product is 10 years. During this period, original spare parts will be available to operate the appliance properly.
- This product has been designed for domestic use. It is not for commercial purposes or it should not be used out of its intended use.
- Use only for washing and drying textile products that are marked accordingly.
- The manufacturer assumes no responsibility for any damage due to misuse or mishandling.

- This appliance is intended to be used in household and similar applications. For example;
 - Personnel kitchens of stores, offices and other work environments;
 - Ranches,
 - By customers of hotels, motels and other accommodation facilities
 - Bed and breakfasts, hostel like environments
 - Common areas of apartment blocks or laundries.



1.2 SAFETY OF CHILDREN, VULNERABLE PERSONS AND PETS

- This product may be used by children aged 8 years and older and persons with underdeveloped physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a the product safe way and the hazards involved.
- Children under the age of 3 should be kept away unless continuously supervised.
- Electrical products are dangerous for children and pets. Children or pets should not play with, climb on top or inside the product. Check inside the product before use.

- Use child lock to prevent children from intervening with the product.
- Do not forget to close the loading door when leaving the room where the product is location. Children and pets may get locked inside and drown.
- Children should not perform cleaning and user maintenance works without an adult's supervision.
- Keep the packaging materials away from children. Risk of injury and suffocation.
- Keep all detergents and additives used for the product away from children's reach.
- Cut the power cable and break and deactivate the locking mechanism of the loading door before disposing of the product far children's safety.
- Do not tuck the power cord under the product or to the rear of the product. Do not put heavy items on the power cord. Do not over bend, crush and touch the power cable to sources of heat.
- Do not use an extension cord, multi-plug or adaptor to operate your product.
- The plug shall be easily accessible. If this is not possible, a mechanism that meets the electrical legislation and that disconnects all terminals from the mains (fuse, switch, main switch, etc.) shall be available on the electrical installation.
- Do not touch the plug with wet hands.
- When unplugging the appliance, don't hold the power cord, but the plug.
- Make sure the plug is not wet, dirty or dusty.



1.3 ELECTRICAL SAFETY

- Product should be unplugged during installation, maintenance, cleaning and repair procedures.
- Damaged power cables should be replaced by the authorised service in order to prevent possible danger.
- The product should not be fed via an external switching device such as a timer or connected to a circuit that is regularly switched on and off by a device.



1.4 HANDLING SAFETY

- Unplug the product before moving, remove the water outlet and water main connections. Drain any water left inside the product.
- This product is heavy, do not handle it by yourself. Do not hold extruding parts such as the laundry loading door to lift and move the product. The upper tray should be tightly fixed for moving.
- Your product is heavy; it should be carried carefully by two people if a staircase is involved. It may cause injuries if your product falls on you. Do not hit and drop the product while carrying.
- Carry the product in an upright position.
- Make sure that the hoses as well as the power cable are not folded, pinched or crushed after the product is fitted into its place after installation or cleaning procedures.



1.5 INSTALLATION SAFETY

- Check the information on the manual and installation instructions to prepare the product for installation and make sure the electrical mains and clean water mains and water outlet are suitable. If not, call a qualified electrician and plumber to have them make the necessary arrangements. These operations are the responsibility of the customer.
- Check for any damage on the product before installing it. Do not have the product installed if it is damaged.
- Injuries may occur if hands are put into uncovered slots. Close the holes of the transportation safety bolts with plastic plugs.
- Do not install or leave the product at locations where it may be exposed to external environment conditions.
- Do not install the product at locations where the temperature drops below 0 °C.
- Do not place the product on a carpet or similar surface. It would create fire hazard since it cannot receive air from underneath.
- Place the product on a level and hard surface and balance with the adjustable legs.

- Connect the product to a grounding plug protected by a fuse suitable to the current values on the type label. Make sure the grounding is carried out by an expert electrician. Do not use the product without suitable grounding to local/national regulations.
- Plug the product in a socket with voltage and frequency values suitable to those indicated on the type label.
- Do not plug the product to loose, broken, dirty, greasy sockets or sockets that has come out their seats or sockets with a risk of water contact.
- Use the new hose set provided with the product. Do not re-use old hose sets. Do not make additions to the hoses.
- Connect the water inlet hose directly to the water tap. The pressure from the tap should be minimum 0.1 MPa (1 bar) and maximum 1 MPa (10 bars). 10 to 80 litres of water should be running from the tap in a minute in order for the product to function properly. If the water pressure is above 1 MPa (10 Bars), a pressure-reducing valve should be fitted. The maximum allowed temperature is 25° C.
- Fit the end of the water discharge hose to the dirty water discharge drain, the sink or the bathtub.
- Place the power cable and hoses in locations without risk of tripping.
- Do not install the product behind a door, a sliding door or at another location that will prevent the door from opening completely.
- If a drier is to be placed on the product, fix with a suitable connection apparatus obtained from the authorised service.
- There is a risk of contact with electrical pieces when the upper trays is removed. Do not dismantle the upper tray of the product.
- Place the product at least 1 cm away from the edges of furniture.
- Make sure the room in which the installation performed is adequately ventilated, as there may be a risk of undesirable gases coming out of the device igniting other fuels in the room or interacting with an open flame.



1.6 OPERATIONAL SAFETY

- When you are using the appliances, use only detergents, softeners and supplements suitable for washing machines.
- Do not use chemical solvents on the product. These materials contain an explosion risk.
- Do not operate defective or damaged products. Unplug the product (or turn off the fuse it is connected to), turn off the water tap and call an authorised service.
- Do not place sources of ignition (burning candle, cigarettes, etc.) or sources of heat (irons, furnaces, ovens, etc.) on top of or near the product. Do not put inflammable/explosive materials near the product.
- Do not get on the product.
- Unplug the product and turn off the tap if you will not be using the product for long periods.
- Detergent/maintenance materials may splash out of the detergent drawer if it is opened while the machine is working. Contact of the detergent with your skin and eyes is dangerous.
- Make sure pets do not climb inside the product. Check inside the product before use.
- Do not force open the locked loading door. The door will open once the washing is completed. If the door does not open, use the solutions for “loading door does not open” error in the Troubleshooting section.
- Do not wash elements contaminated with gasoline, kerosene, benzene, reducers, alcohol or other inflammable or explosive materials and industrial chemicals.
- Do not directly use dry cleaning detergent and do not wash, rinse, spin or dry laundry contaminated with dry cleaning detergent.
- Do not place your hands into the rotating drum. Wait until the drum no longer rotates.
- Do not place your hand or a metal object under the washing machine.
- If washing laundry at high temperatures, the discharged washing water would burn your skin if in contact with your skin, for ex. when the draining hose is connected to the tap. Do not touch the discharge water.
- Take the following precautions to prevent formation of biofilm and malodours:
 - Make sure the room where the washing machine is placed is well ventilated.
 - Wipe the door gasket and loading door glass with a dry and clean cloth at the end of the programme.
- The glass of the loading door will heat up when washing or drying at high temperatures. Therefore, do not allow especially children to touch the loading door glass while washing or drying.



1.7 DRYING SAFETY

- Laundry that has been previously washed, cleaned, contaminated or stained with gas oil/gas, dry cleaning solvents or other inflammable/explosive materials should not be dried in the machine because they give off inflammable or explosive vapours. Otherwise, fire hazard arises.
- Laundry contaminated with materials such as vegetable or mineral oil, acetone, alcohol, gasoline, gas oil, stain removers, naphtha, turpentine, paraffin or paraffin removers should be washed separately in hot water by adding extra detergent before being dried in the washing machine with dryer. Otherwise, fire hazard arises.
- Do not dry textile products that contain predominantly foam, rubber or rubber-like parts (e.g. shower caps, waterproof textile products, rubber products and clothes) or the ones that are filled and damaged (e.g. Pillows or coats). There is a risk of burns.
- If you use a laundry ball, detergent scale, laundry cage or ball in your machine, these products may melt during drying. If you are going to choose the drying feature, do not use these products. Otherwise, fire hazard arises.
- If you use industrial chemicals for cleaning, do not use the drying function. Otherwise, fire hazard arises.
- The door becomes very hot after drying process. After drying is over, open the door of the device completely. Do not touch the metal door located inside of the door glass. There is a risk of burns due to high temperatures.
- During Drying programmes, a cooling step is performed as the last step to ensure that the laundry remains at a temperature where it will not be damaged. You may be exposed to hot steam if you open the cover without completing the cooling step. Risk of scalding.
- If the drying programmes are interrupted (as a result of programme cancellation or power failure), the laundry in the machine may be hot. Be careful.
- Do not stop the machine before the drying programme is completed. If you have to stop the machine, take out all the laundry inside of it and place them in a suitable place and wait for them to cool.
- Your product is suitable to operate between the temperatures of 0° C and +35° C.
- Ambient temperatures between 15° C and +25° C are ideal for your product.
- Do not overload the machine for drying. Observe the specified maximum load levels for drying.

- If the laundry has been washed with a stain remover, run an additional rinsing speed before starting the drying speed.
- Do not dry leather laundry and laundry containing leather (such as leather tags on jeans) in the machine. The colour left by the leather parts may smear on other textiles.
- If there is a problem that you cannot solve using the information given in the safety instructions section, turn off and unplug the machine and call an Authorized Service.
- In your washer-dryer, you can only wash laundry, only dry laundry or do both of these processes. The machine should not be used for a long period of time only for drying wet laundry. While the machine is only used for drying, it should be run empty in a short washing programme every 15 starts.
- Before putting laundry in the machine, check all of them and make sure that there is no object such as lighter, coin, metal object and pin, etc. in their pockets or inside of them.
- Lingerie that has metal parts should not be dried in the machine. Metal parts may come off during drying and cause damage to the machine. Put them in a bag or pillow case.
- Do not dry large laundry such as tulle curtains, curtains, sheets/beddings, blankets, rugs in the machine. Laundry may get damaged.
- Do not dry unwashed laundry in the machine.
- Do not use softener or antistatic agent unless recommended by the manufacturer.
- Products such as softener should be used in accordance with the manufacturer's instructions.
- Do not dry silk, wool and similar delicate clothes in the machine. Otherwise, wool clothes can shrink and damage may be caused in other delicate clothes.
- Check the symbols on laundry label before washing and drying processes.
- The machine automatically cleans the lint itself that comes out of the laundry during drying. The machine performs automatic water intakes for cleaning. For this reason, the water tap of the machine should also be open during drying programmes.
- Prevent the lint from accumulating around the product.

 


1.8 MAINTENANCE AND CLEANING SAFETY

- Do not wash the product with pressure washers, by spraying vapour, water or pouring water.
- Do not use sharp or abrasive tools to clean the product. Do not use household cleaners, soap, detergent, gas, gasoline, thinner, alcohol, varnish, etc. while cleaning.
- Cleaning agents containing solvents might reek poisonous fumes(for ex. cleaning solvent. Do not use cleaning products containing solvents.
- There may be detergent residues in the detergent drawer when you open it for cleaning.
- Do not dismantle the filter of the discharge pump while the product is running.
- The temperature in the machine may rise up to 90° C. Clean the filter after the water in the machine cools down in order to avoid risk of getting burnt.

2 IMPORTANT INSTRUCTIONS FOR ENVIRONMENT

2.1 Compliance with WEEE Directive



This product complies with EU WEEE Directive (2012/19/EU). This product bears a classification symbol for waste electrical and electronic equipment (WEEE).

This product has been manufactured with high quality parts and materials which can be reused and are suitable for recycling. Do not dispose of the waste product with normal domestic and other wastes at the end of its service life. Take it to the collection center for the recycling of electrical and electronic equipment. Please consult your local authorities to learn about these collection centers.

Compliance with RoHS Directive:


The product you have purchased complies with EU RoHS Directive (2011/65/EU). It does not contain harmful and prohibited materials specified in the Directive.


2.2 Package Information

Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.





 




 
 



 






 

 





 



 

 





3 TECHNICAL SPECIFICATIONS

Supplier's name or commercial brand	Indesit
Model name	IDMA 8564 MY TIME UK IDMA 8564S MY TIME UK
Washing capacity (cotton) (kg)	8 Kg
Drying capacity (cotton) (kg)	5 Kg
Maximum spin speed (cycle/min)	1400
Built-In	No
Height (cm)	85
Width (cm)	60
Depth (cm)	52
Single Water inlet/ Double Water inlet	+ / -
Electrical connection (y/Hz)	220-240V~/50Hz
Total current (A)	10
Total power (W)	2000
Main model code	F173427 F173462

 SUPPLIER'S NAME: A (green arrow) MODEL IDENTIFIER → (*): A (black arrow)	The model information as stored in the product database can be reached by entering following website and searching for your model identifier (*) found on energy label. https://eprel.ec.europa.eu/
---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

 The consumption values apply when wireless network connection is turned off.

Symbols Table

											
Prewash	Fast	Fast +	Extra Rinse	Extra Water	Anti Crease	Pet Hair Removal	Steam	Night	Soaking	Rinse Hold	Steeping
											
Autodose	Liquid Detergent Selection	Softener Selection	Rinse	Spin + Drain	Drain	Temperature	Spin	No Spin	Tap Water (Cold)	No Water	Time Delay
											
Door Lock	Child Lock	On / Off	Start/ Pause	Soil Level	Add Garment	Downloaded Program	Wash	Ok (End)	Cancel	Anti Crease+	Drying
											
Extra Dry	Cupboard Dry	Iron Dry	Full Time	Clean& Wear							

4 INSTALLATION



Please read the "Safety Instructions" section first!



Your washing machine automatically detects the amount of laundry placed inside when selecting a program. While installing the product, before the first use, calibration should be done to ensure that the laundry amount is detected in the most accurate way. To do this, select the Drum Cleaning* program and cancel the spin function. Start the program without laundry. Wait for the program to finish, which will take about 15 minutes. *The program name may vary depending on the model. For the appropriate program selection, review the program descriptions section.

- Please contact the nearest Authorised Service for the installation of the appliance.
- Make sure that the installation and electrical connections of the product are performed by authorised service agent. Manufacturer shall not be held responsible for damages caused by operations performed by unauthorised persons.
- Preparation of the location and electrical, tap water and waste water installations at the place of installation is under customer's responsibility.
- Make sure that the water inlet and discharge hoses as well as the power cable are not folded, pinched or crushed while pushing the product into its place after installation or cleaning procedures.
- Prior to installation, visually check if the product has any defects on it. Do not have the product installed if it is damaged. Damaged products cause risks for your safety.

4.1 Appropriate Installation Location



Before carrying out any work on the machine, equip yourself with work gloves.

- Place the product on a hard and level floor. Do not place it onto a carpet with high pile or other similar surfaces. Placing on an improper floor shall cause noise and vibration problems.
- Do not place the product on the power cable.
- Do not install the product at places where temperature may fall below 0 °C. Freezing might damage your product.
- Leave a minimum space of 1 cm between the product and the furniture.
- If you will install the product on a surface with steps, never place it close to the edge.
- Do not place the product on any platform.
- There shall not be any locked, sliding or hinged doors that may prevent the loading door from opening completely in the installation location of this product.
- Do not place heat sources such as cooker, irons, ovens, heater etc. on the appliance and do not use them on the product.

4. 2 Removing Transportation Safety Bolts

1. Loosen all transportation safety bolts with an appropriate wrench until they turn freely.
2. Bend the inner part by pressing it at the grip areas and pull the part out.
3. Attach the plastic covers supplied in the User Manual bag into the holes on the rear panel.



WARNING

Remove the transportation safety bolts before operating the product. Otherwise, the product will get damaged.



WARNING

Keep the transportation safety bolts in a safe place to reuse when the product needs to be moved again in the future. Install the transportation safety bolts in reverse order of the disassembly procedure. Never move the product without the transportation safety bolts properly fixed in place.

4. 3 Connecting to Water Supply



WARNING

The water pressure required for the operation of the product is between 1-10 bars (0.1-1 MPa). To ensure a smooth operation of the machine, 10 - 80 liters of water shall be supplied in a minute from a fully opened tap. If the water pressure is higher, install a pressure reducing valve.



WARNING

Models with a single water inlet shall not be connected to the hot water tap. In such a case the laundry will get damaged or the product will switch to protection mode and will not operate. Do not use old or used water inlet hoses on a new product. It may cause water leakage from your machine and stain your laundry.

1. Connect the special hose supplied with the product to the water inlet on the product.



WARNING

Make sure that the cold water connection is performed correctly during the installation of the product. Otherwise, your laundry may come out as hot at the end of the washing cycle and thus they may be worn.

2. Tighten all hose nuts by hand. Never use a tool when tightening the nuts.
3. Open the taps completely after making the hose connection to check for water leaks at the connection points. If any leak occurs, turn off the tap and remove the nut. Check the gasket and tighten the nut carefully again. In order to prevent the water leaks and resultant damages, keep the taps closed when you do not use the product.




4. 4 Connecting the Drain Hose to the Drain

1. Attach the end of the drain hose directly to waste water drain, washbasin or bathtub.



Your house will be flooded if the water draining hose is dislocated during water draining. There is also a risk of burning due to the high washing temperatures. In order to prevent such situations and make sure that the product performs water intake and drain processes without any problem, fix the drain hose securely.

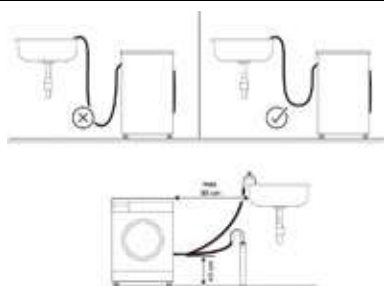

2. Connect the hose to a minimum height of 40 cm and a maximum height of 90 cm.
3. If the hose is placed on the floor (or at a maximum height of 40 cm from the floor) and then its height is increased, discharging of water becomes difficult, and laundry may come out very wet from the machine. Thus, follow the heights provided in the figure.
4. To prevent the waste water to go back into the product again and to ensure easy drainage, do not immerse the end of the hose into the waste water or do not insert it into the drain for more than 15 cm. If it is too long, cut it short.
5. The end of the hose should not be bent, it should not be stepped on and the hose must not be pinched between the drain and the product. Otherwise, water discharge issues may emerge.
6. If the length of the hose is too short, use it by adding an original extension hose. The overall length of the hose shall not be longer than 3.2 m. To prevent water leaks, always secure the connection between the extension hose


and the draining hose of the product with a suitable clamp so that it does not come off and cause leaks.

Notice: Appliance damage/damage to textiles.

If the end of the drain hose touches the discharged water (water drained from washer), it (the discharged water) can be sucked back into the washer and may damage the appliance or textiles.

Make sure that:

- There is no stopper in the sink drain.
- The end of the drain hose does not touch the discharge water.
- The sink drain is free flowing and not partially clogged.
- Attach the drain hose securely to the wash basin.

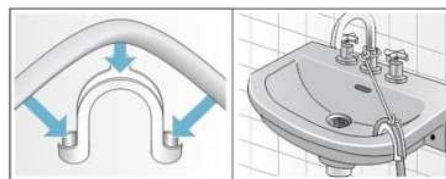

1. Do not twist, pull out or bend the drain hose.
2. Secure the drain hose with the cable tie to the drain pipe, wash basin, etc., so the hose does not pull out from the force of the water.

4. 5 Adjusting the Stands




WARNING

In order to ensure that the product operates more silently and vibration-free, it must stand level and balanced on its feet. Ensure that the product is balanced by adjusting the feet. Otherwise, the product may move from its place and cause crushing, noise and vibration problems.

1. Loosen the nuts on the feet in the direction of the arrow with the tool in the user manual bag.
2. Adjust the feet until the product stands level and balanced. You can move the feet up by turning them counter-clockwise and down by turning them clockwise.


3. Re-tighten all lock nuts with the tool in the direction of the arrow. You can move the nuts down by turning them counter-clockwise and up by turning them clockwise.

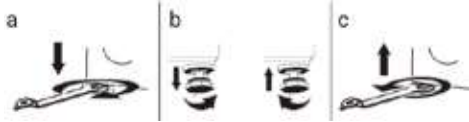

4.6 Electrical Connection

Connect the product to a grounded outlet protected by a 13 A fuse. Our company shall not be responsible for the damages that shall be incurred due to using the product without grounding according to local regulations.

- Connection must comply with national regulations.
- The electrical connection cable infrastructure of the product must be adequate and suitable for product requirements. It is recommended to use a Ground Fault Circuit Breaker (GFCI).
- Power cable plug must be within easy reach after installation.
- If the current supply to the fuse or breaker in the house is less than 13 Amps, have a qualified electrician install a 13 amp supply.
- The voltage specified in the "Technical specifications" section must be equal to your mains voltage.
- Do not make connections via extension cables or multi-plugs. Overheating and burning may occur due to the connecting cable.

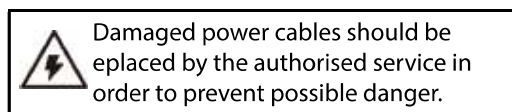


Important

Fitting a different plug:

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals on your plug, proceed as follows:

1. Connect the green - yellow or green (earth) wire to the terminal in the plug marked 'E' or with the symbol f or coloured green and yellow or green.
2. Connect the blue (neutral) wire to the terminal in the plug marked 'N' or coloured black.
3. Connect the brown (live) wire to the terminal in the plug marked 'L' or coloured red.

With the alternative plugs a 13 A fuse must be fitted either in the plug or adaptor or in the main fuse box. If in doubt contact a qualified electrician.

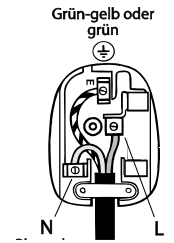

4.7 Handling the Product

1. Unplug the product before handling it.
2. Disconnect the water outlet and water main connections. 3 Drain all the water that remains in the product. See Draining Remaining Water and Cleaning the Pump Filter.
3. Install the shipping bolts in reverse order of the disassembly procedure. See Removing the Shipping Bolts.



Never carry the product without the shipping bolts properly attached! Your product is so heavy that it shall not be carried by one person. Your product shall be carried by two people and more care shall be taken on the stairs as it is a heavy product. If the product falls on you, it may cause injury. The packaging materials are dangerous for children. Keep packaging materials at a safe place away from the reach of children.

5 PRELIMINARY PREPARATION



Please read the "Safety Instructions" section first.

5.1 Sorting the Laundry

- Sort laundry according to type of fabric, colour, and degree of soiling and allowable water temperature.
- Always observe the instructions given on the garment care labels.

5.2 Preparing Laundry for Washing

- Laundry items with metal attachments such as, underwiring, belt buckles or metal buttons will damage the product. Remove the metal pieces or wash such clothes by putting them in a laundry bag or pillow case.
- Take out all substances in the pockets such as coins, pens and paper clips, and turn pockets inside out and brush. Such objects may damage the product or cause noise problem.
- Put small size clothes such as infant's socks and nylon stockings in a laundry bag or pillow case.
- Place curtains in without compressing them. Remove curtain attachment items. Curtain attachment items may cause pulling and tearing on the curtain.
- Fasten zippers, sew loose buttons and mend rips and tears.
- Wash "Machine washable" or "Hand washable" labelled products only with an appropriate programme. Dry these types of clothes by hanging them or laying them flat. Do not dry them in the machine.
- Do not wash colours and whites together. New, dark coloured cottons release a lot of dye. Wash them separately.
- Only use paints / colour changing agents and descalers suitable for use in machines. Always observe the instructions on the packaging.

- Tough stains must be treated properly before washing. If you are not sure, check with a dry cleaner.
- Wash trousers and delicate laundry turned inside out.
- Laundry that are subjected to materials such as flour, lime dust, milk powder, etc. intensely must be shaken off before placing into the product. Such dusts and powders on the laundry may build up on the inner parts of the product in time and can cause damage.
- Before washing laundry made of angora wool, keep them in the freezer section of the refrigerator for a few hours. This will reduce pilling.

5.3 Tips for Energy and Water Saving

Following information will help you use the product in an ecological and energy/water-efficient manner.


- Operate the product in the highest load capacity allowed for the programme you have selected, but do not overload. See "Programme and consumption table"
- Observe the temperature instructions on the detergent packaging.
- Wash slightly soiled laundry at low temperatures.
- Use faster programmes for small quantities of lightly soiled laundry.
- Do not use prewash and high temperatures for laundry that is not heavily soiled or stained.
- If you plan to dry your laundry in a dryer, select the highest spin speed recommended during washing process.
- Do not use more detergent than the recommended on the detergent packaging.

5.4 Start Up

Before starting to use the product make sure that the preparations described in section "Environmental Instructions" and "Installation". To prepare the product for washing laundry, perform first operation in Drum Cleaning programme.

If this programme is not available in your product, apply the method which is described in section "Cleaning the loading door and the drum".



 Use an anti-limescale product suitable for the washing machines. Some water has remained in the product due to the quality control processes in the production. It is not harmful for the product.

5.5 Loading the Laundry

1. Open the loading door.
2. Put the laundry items into the product in a loose manner.
3. Push the loading door to close until you hear a locking sound. Ensure that no items are caught in the door. The loading door is locked while a programme is running. The door lock will open a few minutes after the washing programme has ended. Then you can open the loading door. If the door does not open, apply the solutions provided for "Loading door cannot be opened" error in the Troubleshooting section.

5.6 Correct Load Capacity

The maximum load capacity depends on the type of laundry, the degree of soiling and the desired washing programme. The product automatically adjusts the water amount according to the weight of the laundry put inside it.



Follow the instructions in "Programme and consumption table".

When the appliance is overloaded product's washing performance will drop. Moreover, noise and vibration problems may occur.

Bathrobe: 1200 g
Bedding: 700 g
Sheet: 500 g
Pillow Case: 200 g
Table Cloth: 250 g
Negligee/Pyjamas: 200 g
Lingerie: 100 g
Shirts: 200 g
Blouse: 100 g
Towel: 200 g



The loading door is locked while a programme is running. The door lock will open once the programme is completed. If the inner part of the machine is very hot at the end of the program, the loading door will not open until the temperature drops. If the door does not open, apply the solutions provided for "Loading Door Cannot Be Opened" error in the Troubleshooting section.



WARNING


If the laundry is placed incorrectly, noise and vibration problems may occur in the machine.

5.7 Using Detergent and Softener



WARNING

Read the manufacturer instructions on the package while using detergents, softeners, starch, bleach and decolorants, anti-limescale and follow the dosage information provided. Use a measuring cup, if any.

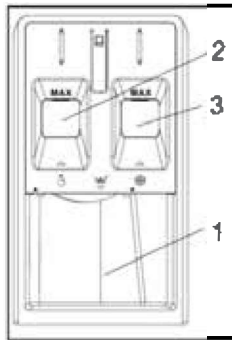

The detergent drawer comprises of three compartments:

(1) Powder washing detergent

(2) Liquid washing detergent

The liquid detergent must not exceed the "MAX" level.

(3) Additives (Softener, etc.)

The fabric softener must not exceed the "MAX" level.

Detergent, Softener and Other Cleaning Agents

- Add detergent and softener before starting the washing programme.
- Do not leave the detergent drawer open when the washing programme is on.
- If you are using a liquid detergent, follow the directions under "Liquid detergent use" and do not forget to bring the liquid detergent apparatus to the correct position.
- Do not add washing chemicals (Liquid detergent, Softener, etc.) while the machine is during Drying step.

Choosing the Detergent type

Detergent type to be used depends on the washing programme, fabric type and colour.

- Use different detergents for coloured and white laundry.
- Wash your delicate clothes only with special detergents (liquid detergent, wool shampoo, etc.) intended solely for delicate clothes and at suggested programmes.
- When washing dark coloured clothes and quilts, it is recommended to use liquid detergent.
- Wash woollens at suggested programme with special detergent made specifically for woollens.
- Please review the programme descriptions part for suggested programme for different textiles.
- All recommendations about detergents are valid for selectable temperature range of programmes.



Only detergents, softeners and additives suitable for washing machines should be used. Do not use soap powder.

Adjusting the Detergent Amount

The amount of detergent depends on the amount of laundry, how soiled they are and the water hardness.

- Do not exceed the recommended dosage values on the detergent packaging in order to eliminate excessive foam and poor rinsing problems, to save money and protect the environment.
- Use less amounts of detergent for fewer or less soiled laundry.

Using Softeners

Put the softener in the softener compartment of the detergent drawer.

- Do not exceed the (>max<) level sign in the softener compartment.
- If the softener is not fluid, dilute with water before placing in the softener compartment.

**WARNING**

Do not use liquid detergents or other materials with cleaning properties unless they are intended for use in washing machines for softening the laundry.

Use of Gel and Tablet Detergents

- If the detergent is fluid and there is no liquid detergent compartment in your product, place the gel detergent in the main washing detergent compartment in first water intake. If your product has a liquid detergent compartment, fill the compartment with detergent before starting the programme.
- If the gel detergent is not fluid or is in a capsule liquid tablet, place directly inside the drum before washing.
- Use tablet or gel detergent without selecting the pre-wash function.
- Do not forget to remove elements such as plastic detergent compartment from the drum before drying.

Using Starch

- Put in the liquid starch, powder starch or fabric dye in the softener compartment.
- Do not use softener and starch in the same washing programme simultaneously.
- Wipe the inside of the product with a damp and clean cloth after using starch.

Using Anti-Limescale

- When necessary, only use anti-limescale produced for washing machines.

Using Bleach and Decolourants

- Select a programme with pre-washing and add bleach at the start of pre-washing. Do not put detergent in the pre-wash compartment. As an alternative application, select a programme with additional rinsing and add the bleach while the product is receiving water to the detergent compartment in the first rinsing step.

- Do not mix and use bleach and detergent together.
- As bleach may cause skin irritation use only small amounts (1 /2 tea cups - approximately 50 ml and rinse the laundry well.
- Do not pour bleach directly onto the laundry.
- Do not use bleach for coloured clothes.
- Select a programme with low temperature washing while using oxygen-based decolourants.
- Oxygen-based decolourants can be used together with detergents. However, if it does not have the same viscosity as the detergent, first place the detergent in compartment no. "2" in the detergent drawer and wait for the product to rinse away the detergent during water intake. Add the decolourant to the same compartment while the machine continues taking in water.

5. 8 Tips for Efficient Washing

		Clothes			
		Light Colours and Whites	Colours	Black/ Dark Colours	Delicates/ Woollens/Silks
		(Recommended temperature range based on soil level: 40-90 °C)	(Recommended temperature range based on soil level: cool - 40°C)	(Recommended temperature range based on soil level: cool - 40°C)	(Recommended temperature range based on soil level: cool - 30°C)
Soiling Level	Heavily Soiled (difficult stains such as grass, coffee, fruits and blood.)	It may be necessary to pre-treat the stains or perform prewash. Powder and liquid detergents recommended for whites can be used at dosages recommended for heavily soiled clothes. It is recommended to use powder detergents to clean clay and soil stains and the stains that are sensitive to bleaches.	Powder and liquid detergents recommended for colours can be used at dosages recommended for heavily soiled clothes. It is recommended to use powder detergents to clean clay and soil stains and the stains that are sensitive to bleaches. Detergents which do not contain de-colourant should be used.	Liquid detergents suitable for colours and black/ dark colours can be used at doses recommended for heavily soiled clothes.	Prefer liquid detergents produced for delicate clothes. Woollen and silk clothes must be washed with special woollen detergents.
	Normally Soiled (For example, stains caused by body on collars and cuffs)	Powder and liquid detergents recommended for whites can be used at dosages recommended for normally soiled clothes.	Powder and liquid detergents recommended for colours can be used at dosages recommended for normally soiled clothes. Detergents which do not contain decolourant should be used.	Liquid detergents suitable for colours and black/dark colours can be used at doses recommended for moderately soiled clothes.	Prefer liquid detergents produced for delicate clothes. Woollen and silk clothes must be washed with special woollen detergents.
	Lightly Soiled (No visible stains exist.)	Powder and liquid detergents recommended for whites can be used at dosages recommended for lightly soiled clothes.	Powder and liquid detergents recommended for colours can be used at dosages recommended for lightly soiled clothes. Detergents which do not contain decolourant should be used.	Liquid detergents suitable for colours and black/ dark colours can be used at doses recommended for lightly soiled clothes.	Prefer liquid detergents produced for delicate clothes. Woollen and silk clothes must be washed with special woollen detergents.

5.9 Tips for Efficient Drying

		Programmes				
		Cotton Dry	Synthetic Dry	Babyprotect+	Washing and Drying	Wash & Wear
Types of Clothing	Durable clothes Containing Cotton	Sheets, beddings, baby clothes, t-shirts, sweat-shirts, durable knitted clothes, jeans, canvas pants, shirts, cotton socks etc.	Not Recommended!	It washes and dries consecutively! Sheets, beddings, baby clothes, sweat-shirts, durable knitted clothes, jeans, canvas pants, shirts, cotton socks etc.	It washes and dries consecutively! Sheets, beddings, baby clothes, sweat-shirts, durable knitted clothes, jeans, canvas pants, shirts, cotton socks etc.	Clothes such as shirts, t-shirts, sweatshirts etc. that have been worn for a short time and are unstained. A very small amount of laundry should be loaded.
	Synthetic Clothes (Polyester, nylon etc.)	Not Recommended	It is recommended for clothes containing polyester, nylon, polyacetate, acrylic. Drying is not recommended for clothes containing viscose. Attention should be paid to the drying instructions on the maintenance label.	It is recommended for clothes containing polyester, nylon, polyacetate and acrylic at low temperatures, taking into account the washing and drying warnings indicated on the maintenance label.	It is recommended for clothes containing polyester, nylon, polyacetate and acrylic at low temperatures, taking into account the washing and drying warnings indicated on the maintenance label.	Lightly soiled and unstained shirts, t-shirts and synthetic laundry. A very small amount of laundry should be loaded.
	Delicate (Containing Silk, Woolen, Cashmere Angora wool etc.) laundry.	Not Recommended!	Not Recommended!	Not Recommended!	Not Recommended!	Not Recommended!
	Bulky laundry such as blankets, coats, curtains etc.	Not Recommended! It is not suitable to dry bulky laundry in the washing machine. Dry these laundry by hanging them or laying them flat.	Not Recommended! It is not suitable to dry bulky laundry in the washing machine. Dry these laundry by hanging them or laying them flat.	Not Recommended! It is not suitable to dry bulky laundry in the washing machine. Dry these laundry by hanging them or laying them flat.	Not Recommended! It is not suitable to dry bulky laundry in the washing machine. Dry these laundry by hanging them or laying them flat.	Not Recommended! It is not suitable to dry bulky laundry in the washing machine. Dry these laundry by hanging them or laying them flat.

5.10 Displayed Programme Duration

You can view the programme duration on the display of your machine while selecting a programme. Depending on the amount of laundry you have loaded into your machine, foaming, unbalanced load conditions, fluctuations in power supply, water pressure and programme settings, the programme duration is automatically adjusted while the programme is running.


SPECIAL CASE: At programme start of Cottons and Cotton Eco programmes, display shows the duration of half load. It is the most common use case. After programme starts, in 20-25 minutes actual load is detected by the machine. And if detected load is higher than half load; washing programme will be adjusted accordingly and programme duration increased automatically. You can follow this change on the display.

6 OPERATING THE PRODUCT



Please read the "Safety Instructions" section first!

6.1 Control Panel

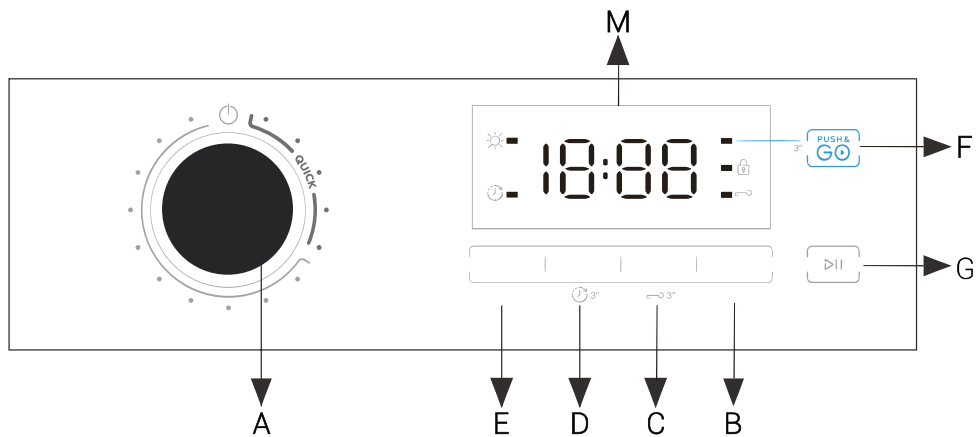

A---WASH CYCLE SELECTOR knob: Used to set the desired wash cycle (see "Table of wash cycles").

• **OFF** position : Turn the Linear mark on the wash cycle selector knob under the symbol " " to switch the machine off. If the machine is switched off during a wash cycle, this wash cycle will be cancelled.

B---TEMPERATURE button: Press to change the water temperature for the current cycle. There are five temperature values on the display. When a temperature value is selected, the corresponding temperature value appears on digital display.

C---SPIN button: Press to change the spinning speed for the current cycle. There are five spinning speed values on display. When a spinning speed value is selected, the corresponding spinning speed value appears on digital display.

• **CHILD LOCK** function : When the cycle is running, long press the **SPIN** button for 3 seconds to set or cancel the **Child lock** function.

For a detailed description, see → Various cycles and functions.

• **labelling="canceling the buzzer:"**

Press and hold the **SPIN** button and **PUSH & GO** button together at the same time for at least 3 seconds, you can turn off the buzzer that sounds during the washing cycle running. For a detailed description, see → Various functions.

D---RINSE button: Press to change the rinse count for the current cycle, the changed rinse count appears on digital display.

DELAY END function: Press and hold RINSE button for 3 seconds before the program runs to set the "DELAY END" function. The "DELAY END" function of some programs is limited. For a detailed description, see → Various cycles and functions.

E---DRYING button: Press to set the drying type or drying time as needed, and the drying type or drying time appears on digital display.

Some programs have no drying function.

Drying channel deaning program: Long press this button for 3 seconds, the machine will enters the "Drying channel cleaning" program. For a detailed description, see-> Various cycles and functions.

F---PUSH & GO button: Press to set the PUSH & GO wash cycle.


For a detailed description, see-> Various cycles and functions.

G-START/PAUSE button: Long press the button to start or pause a wash cycle.

• Add clothes during the program is running:

Once the cycle has begun, if you want to pause the wash cycle, please long press the button again. If the **DOOR LOCK** indicator light is off, the door may be opened, you can add or take out laundry. To start the wash cycle from the point at which it was interrupted, press the button again. For a detailed description, see → Various cycles and functions.

6.2 Symbols on the Display

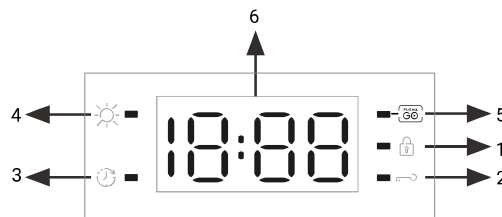

1-DOOR LOCK indicator The lit indicator light indicates that the door is locked. To prevent any damage, wait until the indicator light turns off before opening the door. To open the door while a cycle is in progress, press the START/PAUSE II button, if the DOOR LOCK indicator light is off, the door may be opened.

2-CHILD LOCK indicator The lit indicator light indicates the CHILD LOCK function is activated, the control panel is locked.

 
3---DELAY END indicator The lit indicator light indicates the DELAY END function is activated. The count-down to the end of the selected wash cycle will appear on the digital display.

4 DRYING FUNCTION Indicator When the indicator light is lit, it means that drying function has been set or carrying the drying cycle.


5. PUSH & GO indicator The lit indicator light indicates the PUSH & GO wash program is selected, There are three ways to set the PUSH & GO wash program.

6-DIGITAL DISPLAY


1) Remaining time of the wash cycle



 
2) Delay end time



 
3) Wash temperature



 4) Rinse count



 
5) Fault code



6.3 Preparing the laundry


i Damage to the appliance/fabric Foreign objects (e.g. coins, paper-clips, needles, nails) may damage the laundry or components in the appliance. Therefore, note the following tips when preparing your laundry.

- Remove any loose items or metal objects such as safety pins, paper clips, etc. from the laundry.

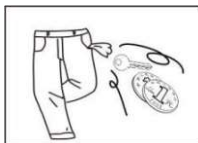


- Brush sand, coins, etc. out of pocket and cuffs.

- Close zips and button up cushion covers, duvet covers, etc.

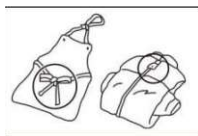


- Remove curtain runners, or secure them in a net bag.

- Particularly delicate items, or smaller items, such as tiny Socks or handkerchiefs should only be washed in a net bag or pillow case.

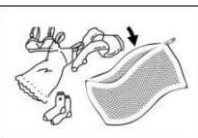

- Some items are best turned inside out. These included knitwear, trousers, T-shirts and sweat-shirts.

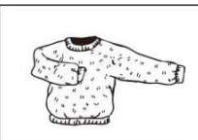


- Make sure that the wire-Cup bras are machine washable.

i Make sure that wire-Cup bras in a pillow case which can be securely closed with a zip or button. If the wire works it self out of the Cup it may fall through the holes of the drum and cause extensive damage.

6.4 Preparing the laundry for drying


- Only tumble-dry textiles which have been washed, rinsed and spin.
- Remove as much water as possible from the laundry. Do not press the SPIN button for reducing the spin speed.
- In order to ensure uniform drying, sort the items according to fabric type and degree of drying required.
- Items which require ironing do not have to be ironed immediately after being tumble-dried. It is a good idea to fold or roll them together for a while, So that any remaining moisture is evenly distributed.
- When washing laundry to be tumble-dried, use the correct amount of detergent and textile care products as specified in the manufacturer's instructions.

i The following textiles should not be tumble-dried: Laundry marked with the care symbol:
 Do not tumble-dry

- Wollens or items containing wool. Risk of shrinking!
- Delicate fabric (silk, synthetic net curtains) Risk of creasing!
- Items containing foam rubber or similar material.
- Items which have been treated with inflammable solvents, such as stain removes, petrol, paint thinners. Explosion hazard!
- Items still containing hair lacquer or similar substances. Dangerous vapors! Dripping-wet laundry, waste of energy!

6.5 Sorting the laundry according to colour and degree of soiling.

sort laundry items according to color, degree of soiling and recommended wash temperature range.

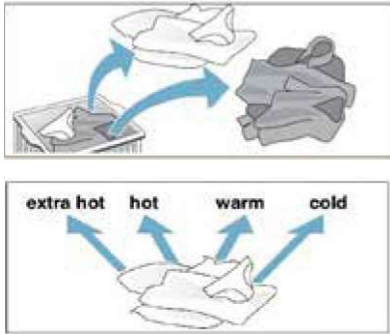

 











































- Items of clothing can become discoloured.
- Never wash new multi-coloured items together with other items.
- wash white items separately from colored items. otherwise, white items may tend to become grey.

6.6 Degree of soiling.

- Light soiling
No visible soiling or stains, but may have absorbed some odor. This could include light weight summer clothes such as T-shirts, shirts, or blouses worn only once. Also to freshen bed linen or guest towels
- Normal soiling
visible soiling and/or a few light stains. This could include clothing such as T-shirts, shirts, or blouses that have been sweated in or worn several times. Also tea towels, hand towels or bed linen used for up to one week or more curtains without stains that have not been washed for up to a half year.
- Heavy soiling
visible soiling and stains. This could include kitchen towels, fabric napkins, baby bibs, children's outer clothing or football jerseys and shirts stained with grass or dirt. It could also include working clothes such as overalls and jeans and other clothing worn for outside work and activities.

6.7 Sorting laundry according to their care label specifications

The symbols on labels of your garments will help you in choosing the suitable wash program, the right temperature, wash cycles, and ironing methods. Don't forget to give a glance to these useful indications!

 Washing Type	 Machine Wash Normal	 Machine Wash Permanent Press	 Machine Wash Gentle	 Do not Wash	 Hand Wash	 Do Not Wring
 Water Temperature	 Water Temperature 30°C	 Water Temperature 40°C	 Water Temperature 50°C	 Water Temperature 60°C	 Water Temperature 70°C	 Water Temperature 95°C
 Bleaching	 Bleach	 Non Chlorine Bleach	 Chlorine-Containing Bleaches	 Do Not Bleach		
 Drying Types	 Tumble Dry Normal	 Tumble Dry Permanent Press	 Tumble Dry Gentle	 Do Not Tumble Dry		
 Drying Temperature	 Tumble Dry High Heat	 Tumble Dry Medium Heat	 Tumble Dry Low Heat	 Tumble Dry Not Heat		
 Dry	 Line Dry	 Drip Dry	 Dry Flat	 Dry in the Shade		
 Iron Any Temp Steam	 High Temperature	 Medium Temperature	 Low Temperature	 Do Not Iron		
 Dry Clean	 Dry Clean Any Solvent	 Any Solvent except Tetrachlorethylene	 Petroleum Solvent Only	 Do Not Dry Clean		

6.8 Table of wash cycle

Maximum load 8 kg Power input in off mode 0.5 W / in left-on mode 8 W						Detergents and Additives		Recommended detergent		Residual dampness % (***)	Energy consumption kWh	Total water lt	Laundry temperature °C			
Wash cycle	Temperature		Max. spin speed (rpm)	Max. load for washing (kg)	Duration (h : m)	Drying	Max. load for drying (kg)	Wash	Fabric softener					Powder	Liquid	
	Setting	Range						2	3							
Cotton Full Load	60 °C	☼ -60 °C	1400	8.0	00:57	○	5.0	●	○	✓	✓	---	---	---	---	
Mixed Full Load	60 °C	☼ -60 °C	1400	8.0	00:52	○	5.0	●	○	✓	✓	---	---	---	---	
Shirts	60 °C	☼ -60 °C	900	3.0	00:55	---	---	●	○	✓	✓	---	---	---	---	
20 °C	30 °C	☼ -30 °C	900	2.0	00:39	---	---	●	○	✓	✓	---	---	---	---	
Express 15'	40 °C	☼ -40 °C	900	1.0	00:15	○	1.0	●	○	✓	✓	---	---	---	---	
Rinse	---	---	1200	8.0	00:13	○	5.0	---	○	---	✓	---	---	---	---	
Spin+Drain *	---	---	1200	8.0	00:08	○	5.0	---	---	---	---	---	---	---	---	
Drum Clean	85 °C	85 °C	700	---	02:54	○	---	○	○	✓	✓	---	---	---	---	
Wool	40 °C	☼ -40 °C	700	1.0	00:50	---	---	●	○	✓	✓	---	---	---	---	
Eco 40-60 (Wash)	40 °C	40 °C	1400	8.0	03:12	○	5.0	●	○	✓	✓	62	0,801	65,3	35	
			1400	4.0	02:30	○		●	○	✓	✓		0,4	40,2	25	
			1400	2.0	02:19	○		●	○	✓	✓		0,171	31,3	20	
Down Jacket	40 °C	☼ -40 °C	900	2.0	01:43	○	2.0	●	○	✓	✓	---	---	---	---	
Intensive	85 °C	60 °C-85 °C	1200	3.0	02:07	○	3.0	●	○	✓	✓	---	---	---	---	
Bed Linen	60 °C	☼ -60 °C	1200	6.0	01:19	○	3.0	●	○	✓	✓	---	---	---	---	
Baby	85 °C	☼ -85 °C	1200	5.0	01:23	○	5.0	●	○	✓	✓	---	---	---	---	
Dry	---	---	1400	---	**	●	5.0	---	---	---	---	---	---	---	---	
✓ = gel-/liquid detergent ✓ = powder detergent ○ = Dosing optional --- = NO ● = Dosing required																
Eco 40-60 (Wash&Drying)	40 °C	40 °C	1400	5.0	04:32	●	5.0	●	○	✓	✓	3,0	3,201	90,5	25	
			1400	2.5	04:21	●	2.5	●	○	✓	✓		1,776	60	20	

• If using liquid detergent, it is not recommended to activate the time delay.

• We recommend by using: Laundry powder 20 °C to 80 °C
Wool detergent 20 °C to 40 °C

• Please follow the dosage recommendation on the powder or liquid detergent package.

The cycle duration indicated on the display or instruction manual is an estimate based on standard conditions. The actual duration may vary in relation to several factors, such as the temperature and pressure of the incoming water, ambient temperature, amount of detergent, load quantity and type, load balancing and any additional options selected. The values given for programmes other than the Eco 40-60 programme are indicative only.

Eco 40-60 (Wash) - Test wash cycle in compliance with EU Ecodesign regulation 2019/2014. The most efficient programme in terms of energy and water consumption for washing normally soiled cotton laundry.

Note: spin speed values shown on the display can slightly differ from the values stated in the table.

Eco 40-60 (Wash & Drying)- Test wash and drying cycle in compliance with EU Ecodesign regulation 2019/2014. To access "wash and dry" cycle select "Eco 40-60" wash programme and set "Drying" option. The most efficient programme in terms of energy and water consumption for washing and drying normally soiled cotton laundry. At the end of cycle the garments can be immediately stored to the cupboard.

For all testing institutes:

Long cotton cycle: set programme "Cotton Full Load" at temperature 40 °C.

* By selecting the "Spin+Drying" cycle and excluding the spin cycle, the washer-dryer will drain only.

** The duration of the wash cycles can be checked on the display.

*** After programme end and spinning with maximum selectable spin speed, in default programme setting.

6.9 Programmes

Cotton Full Load

For daily items of cotton, linen and cotton blends.

Mixed Full Load

For washing lightly to normally soiled mixed load of cotton and synthetic fabrics, white and colored items together.

Shirts

For shirts and women's blouses.

20 °C

For washing lightly soiled cotton garments, at a temperature of 20 °C.

Express 15'

For small amount or lightly soiled garments that you want to finish washing quickly.

Rinse

Combines a rinse and spin for loads requiring an additional rinse cycle. Also use for loads that require rinsing only.

Spin+Drain

This cycle uses a spin to shorten drying times for heavy fabrics or special-care items washed by hand.

Drum Clean

Clean the drum by removing dirt and bacteria from the drum. Make sure the drum is empty.

Wool

For machine washable wool and wool blend clothes.

Eco 40-60

For washing normally soiled cotton garments declared to be washable at 40 °C or 60 °C, together in the same cycle.

This is the standard cotton programme and the most efficient in terms of water and energy consumption. ! As specified, this wash cycle only runs at 40 °C.

Down Jacket

For down jacket which can be washed by unit.

Intensive

For clothes that need to remove mites and allergens.

Bed Linen

For large items such as blankets, curtains and bedspreads.

Baby

A cycle designed for dirt typical of children's garments in that it effectively removes any traces of residual detergent.

Dry

For drying wet cotton fabric.

6.10 Various cycles

Drying program

How to set the drying program?

1. To set the program of "washing + Drying" only part of the washing program can add drying function First, load the laundry into the drum, close the door, turn the wash cycle selector knob to select the desired wash program (except for the Drying program), and press the Dry button to select two drying modes as follows:

---Automatic drying: press the Drying button continuously to adjust the drying time that is displayed on the panel, and when "Auto" is displayed, the automatic drying mode is activated, the drying time can be automatically adjusted according to the amount and humidity of clothes

---Timed drying: press the Dry button to set the drying time. press the Drying button, the digital display screen will display the timing drying time (30-60-90 120 150 180-210-240), select an appropriate the timing drying time and enter the timing drying mode. Then, press the START/PAUSE ►|| button, the machine starts running the washing + Drying program, with the drying program automatically activated at the end of the washing program.

2. To set the Drying only program

The Drying only program is Suitable for drying clothes of cotton. Do not dry clothes that are prone to deformation or shrinkage. when the Drying only program is set, before drying, it is recommended to run a single spin cycle for the clothes to be dried.

• First, load the laundry in the drum, close the door, turn wash cycle selector knob to select the Drying program only, and then press the Drying button continuously, So as to select the mode of Auto drying or Time drying (as described above).

Then, press the START/PAUSE ►|| button to start the Drying only program.

3 To set the down jacket drying program "washing+Drying" program should be used to dry down jackets, please select Down Jacket" program + "Automatic Drying (Auto)" mode : please do down jacket drying. In order to achieve better drying effect, it is recommended to dry single down jacket once.

Precautions for drying program

1. If there is too much moisture in the clothes, the machine will automatically extend the dryingtime, and it is normal to display "0:20" for too long.

2. When the drying program is running, the faucet must be turned on, because the water is required for cooling and dehumidification during drying program.

3. The longest drying time is set according to different models.

4. In order to prevent the wrinkle of laundry caused by excessive drying, the drying time can be set a little less at first, and then the drying time can be added according to the drying effect.

5. Before running the Drying only program, it is recommended to run a spinning cycle firstly. If necessary, please untie the nodules of clothes after spinnings and then put them into the drum for drying.

6. For larger or thicker clothes, drying may be uneven in some positions of clothes. please add drying time according to drying effect after finishing drying cycle.

7. Wool fabrics are not suitable for drying.

8. Do not dry clothes that are liable to deformation or shrinkage.

9. Some programs have no drying function.

Drying channel cleaning

After setting the wash cycle and option, before start, long press this button for 3 seconds, the machine will enter the "Drying channel cleaning" program, the digital display shows the running time of the "Drying channel cleaning" program (0:05), and then run the Drying channel cleaning program after pressing "START/PAUSE ►||" button.

The Drying channel cleaning program can automatically remove the lint gathered in the drying channel and improve the drying efficiency. This program is only used to remove the lint in the drying channel. Do not add any clothes in the drum.

6.11 Special wash cycles


Baby care: a cycle designed for dirt typical of children's garments in that it effectively removes any traces of residual detergent.

Down Jacket: a cycle to wash single downs (the weight of which should not exceed 2.0kg), cushions or clothes padded with goose down such as puffer jacket, use this special wash cycle we recommend that down are placed in the drum with their edges folded inwards (see figure) and that no more than 3/4 of the total volume of the drum is used. To achieve the best results, we recommend that a liquid detergent is used and placed inside the detergent dispenser drawer.



6.12 Various functions

Child lock


1. Setting the child lock function can avoid children's mis-operation and external interference to the washing procedure.
2. During operation, long press the SPIN button for 3 seconds to set or cancel the child lock function.
3. After the child lock function is set, the child lock indicator light  is lit, the door cannot be opened, the control panel is locked, all buttons on control panel do not respond, and wash cycle selector knob on control panel (except the Linear mark on the wash cycle selector knob under the symbol "Ⓢ") do not respond too. You can only turn off the machine by turning the wash cycle selector knob, when the Linear mark on the wash cycle selector knob under the symbol "Ⓢ", the machine will be turned off and stop running. If the machine is turned off, the child lock function will be cancelled.
4. After the child lock function is set, you can turn off the machine by turning the wash cycle selector knob. when the machine is turned on again, the machine directly run the program before turning off the machine.

Push&Go




The operation of PUSH&GO :

1. In the shutdown state, long press the PUSH&GO button for 3 seconds to directly run the program, and the area M will light up. In Shutdown state, PUSH&GO can be activated only within a certain period of time after switching off, depending on the previous conditions
2. In the startup state, long press the PUSH&GO button for 3 seconds to directly run the program, and the area M will light up. Push&Go start always with a sensing routine: at the beginning of the program the machine calculates the weight of the clothes to warranty the right performance.

How does it work?

1. Load the laundry (cotton and/or synthetic garments) and close the door.
2. Pour the detergent and additives.
3. Start the cycle by pressing and holding the PUSH & GO button for 3 seconds. The relevant indicator light will turn green and the door will lock (the  symbol lights up).

N.B.: starting the wash cycle through the PUSH & GO button activates an automatic non-customisable cycle recommended for cotton and synthetic fabrics. This cycle does not allow for setting any additional options.

To open the door while an automatic cycle is under way, press the START/PAUSE  button; if the locked door symbol  is off, the door may be opened. Press the START/PAUSE  button again to restart the cycle from the point at which it was interrupted.


4. At the end of the wash cycle the word END will appear on the display.

Add clothes during the program is running

When the program is running, long press the START/PAUSE ►|| button to pause the machine, if the DOOR lock indicator light & goes out, the door may be opened, you can add or take out laundry. After the operation is completed, close the door, long press the START/PAUSE ►|| button again, and the machine continues to run from the point at which it was interrupted.



NOTICE

If the water level or water temperature in the drum is too high, the door lock indicator light  is lit, the door cannot be opened and cannot add or take out clothes during the program is running.

Cancelling the buzzer

Press and hold the SPIN button and PUSH&GO button together at the same time for at least 3 seconds, you can turn off the buzzer that sounds during the washing cycle running.

- To activate the buzzer setting Do the same operation as you did for cancelling. The buzzer setting is activated after one beep

Load balancing system

The appliance has an automatic detection system for eccentric load. In the process of spinning, if the clothes are unevenly distributed, the appliance will level and adjust the clothes until the clothes are evenly distributed before spinning. If the clothes cannot be evenly distributed within the specified time, the appliance will not spin to avoid severe vibration of the machine. At this time, you need to check whether the clothes are knotted or entangled, and select the "spin" program after reorganizing the clothes. when washing less clothes, such as a pair of jeans, a sweater, a bath towel, etc., the machine may not complete the spinning process due to balance protection. please wash the large and small clothes together as much as possible to make the clothes easier to release evenly and complete the spinning process smoothly.



NOTICE

Due to the different types and materials of the laundry, the automatic adjustment and balance and adjust the clothes for many times to prolong the spinning time. This is a normal phenomenon, not a machine failure.

Downlight

- Downlight is always on during program or function setting.
- When the program is suspended, the downlight can be lit by opening the machine door.
- When the program is running, the downlight will automatically light up with the change of washing stage.
- Touching any button other than the power button can also illuminate the down light.

6.13 How to use the appliance

Before loading your first load of laundry

Your new appliance was tested before leaving the factory. This process involves running various wash cycles. As a result, a small amount of water may remain in the tub and drainage system. Run a Drum clean cycle with no laundry and no detergent to clean the system before your first load of laundry.

Daily use

Preparing the laundry

EMPTY POCKETS

- Coins, paper clips, etc. could damage the load and the washing machine components.
- Tissues will break down during the wash cycle and the fragments will have to be subsequently removed by hand.

CLOSE ALL ZIPPERS, BUTTONS, AND HOOKS. TIE ALL RIBBONS OR BELTS

- Insert the smaller garments (e.g. nylon hosiery, belts, etc.) and garments with hooks (e.g. braziers) into a fabric bag or a pillowcase with zipper. Remove any rings from curtains, or else place the curtains inside a fabric bag together with the rings.

FABRIC TYPE/SYMBOL ON THE WASH LABEL

- Cottons, mixed fibres, easy care/synthetics, wool, hand wash items.
- Color
separate colored and white items. wash new colored articles separate.
- Size
wash items of different sizes in the same wash load , to improve washing efficiency and distribution of the articles in the drum .
- Delicates
wash delicate items separately; they require gentle treatment.

How to use the appliance

1 . Load laundry

open the door and load the laundry. Load the articles one at a time loosely into the drum, without overfilling. observe the load sizes given in the "Table of wash cycle"; overloading the machine will result in unsatisfactory washing results and creased laundry.

2 . Close door

Make sure that no laundry gets stuck between door glass and rubber seal. close the door So that you can hear it click shut.

3 . Open the tap

Make sure that the appliance is connected to the water mains. open the tap.

4. Set the desired program

select the required program with WASH CYCLE SELECTOR Knob. The duration of the wash cycle is shown on the display. The washing machine automatically displays the default temperature and spin speed settings possible for the selected program. Adjust the temperature and/or spin speed setting if needed with the relative buttons.

- Change temperature,
if needed press the TEMP button to progressively lower the temperature setting until cold wash has been set (all temperature value indicator light go out on the display) pressing the button again sets the highest possible setting

- Change spin speed, if needed
press the SPEED button to progressively decrease the spinning speed until the spin cycle is turned off (all spinning speed value indicator light go out on the display) pressing the button again sets the highest possible setting.
- Select options, if needed
press the button(s) to select the option; the corresponding option indicator light is on press the button(s) again to cancel the option, the corresponding option indicator light goes out.




If selected option is incompatible with the program set, the incompatibility will be signaled by a buzzer and the corresponding option indicator light will flash.



If the selected option is incompatible with another previously set option, only the most recent selection will remain active.

5 . Add detergent

pull out the detergent dispenser detergent (and additives/softener) relative compartments as described below.

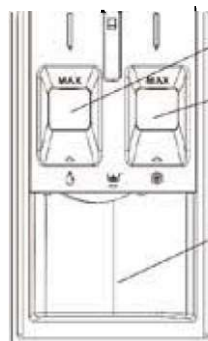

Compartment 1:
powder washing detergent.


Compartment 2:
Liquid washing detergent
The liquid detergent must not exceed the "MAX" level.


Compartment 3:
Additives
(softener etc.)


The fabric softener must not exceed the " MAX" level.

Observe the dosing recommendations on the detergent pack. Correct dosing of detergent/additives is important, because:

- It optimizes the cleaning result.
- It avoids irritating residues of surplus detergent in your laundry.
- It saves money by avoiding waste of surplus detergent.
- It protects the washer by avoiding calcification of components.
- It respects the environment by avoiding unnecessary environmental burden.

 Do not use hand washing detergents because these create too much foam.



 Use powder detergent for white cotton garments, for pre-washing, and for washing at temperatures over 60°C.

 Follow the instructions given on the detergent packing.

6. Delaying the end of a program



- To set a program to end at a later time, see the section "control panel/ ENDING IN".

7. Start program

- Press the START/PAUSE  button. The relative indicator light is lit, the door locks and the DOOR LOCK indicator light  is lit.
- To avoid overflow, do not open the detergent dispenser during a running program anymore.
- The remaining program duration can vary. Factors like unbalance in the wash load, or foam formation, can have an effect on the program duration.




8. Change the settings of a running program, if needed You can still change the settings while a program is running. The changes will be applied, provided the respective program phase has no finished yet.

To change the settings of a running program:


- Press START/PAUSE  button put the running program on pause.
- Change your settings.
- Press START/PAUSE  button again to continue the program.

If you have changed the program, do not detergent for the new program.

To prevent that a running program is changed by accident (for instance by children), use the CHILD lock function (see section "control panel / SPIN).



Pause a running program and open the door, if needed press START/PAUSE  button to pause a running program. If the water level and/or temperature in the drum are/is not high, the DOOR LOCK indicator light  turns off. You can open the door, for example to add more laundry, or to remove laundry which was loaded by mistake. press START/PAUSE  button again to proceed with the program.

9. Cancelling a running program, if needed:

- Turn the Linear mark on the wash cycle selector knob under the symbol "①" to turn off the appliance.
- If the water level and/or temperature are/is low enough, the door is unlocked and can be opened.
- The door remains locked if there is higher water level in the drum. To unlock the door, firstly turn the wash cycle selector knob to select the spin program, then press the SPIN button to set the spin program off (all spinning speed value indicator light go out on the display).
- Press START/PAUSE  button to run spin program. The water is pumped out from the drum during the cycle. The door unlocks at the end of the program.

10. Switch off the appliance after program End.


- At the end of the cycle, the message "End" is shown on the digital display.

- The door can only be opened when the DOOR LOCK indicator light  goes out.
- Check that the DOOR LOCK indicator light  is off, then open the door and take out the laundry.
- Turn the Linear mark on the wash cycle selector knob under the symbol "①" to turn off the appliance.
- Turn off the tap.

Leave the door ajar to let the interior of the appliance to dry.

6.14 Cancelling the Programme

The programme is cancelled when programme selection knob is turned to a different programme or machine is turned off and on again using the programme selection knob.

 If You turn the programme selection knob when the Child Lock is enabled, the programme will not be cancelled. You should cancel the Child Lock first. If You want to open the loading door after you have cancelled the programme but it is not possible to open the loading door since the water level in the machine, is above the loading door baseline, then turn the Programme Selection Knob to Pump+Spin programme and drain the water in the machine.

6.15 Ending of Programme

End symbol appears on the display when the programme is completed. Completed programme steps will be displayed if you press any button.

Standby Mode

Your machine has the "Standby Mode" feature. After turning the machine on with the On/Off button, if no programme is started or no other action is taken during the selection phase, or if nothing is performed within approximately 10 minutes after the selected programme is over, the machine automatically switches to energy saving mode. Furthermore, if your product has a display that shows the programme time, this display is completely turned off. If you turn the programme selection button, the lights are illuminated and the screen will turn on again. The choices you make when exiting the energy saving state may change.

Check your selections' accuracy before starting the programme. Adjust your settings again if necessary. This is not an error.

7 MAINTENANCE AND CLEANING




Please read the "Safety Instructions" section first!

Service life of your product extends and frequently experienced problems will be reduced if it is cleaned at regular intervals.

7.1 Cleaning the Detergent Drawer

Clean the detergent drawer at regular intervals (once every 4 to 5 wash) as mentioned below to prevent accumulation of powder detergent. If there is a buildup of residual detergent or additives, or if the softener compartment is not rinsed out well enough, it may be helpful to clean the dispenser.

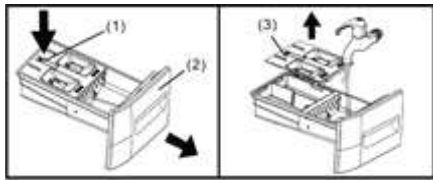

1. Open the detergent dispenser tray fully. Press down on the drawer catch (1) and pull the tray (2) from the appliance housing.
2. Remove the liquid detergent cover (3) by grasping it and pulling it upwards from the detergent dispenser tray.
3. Clean the liquid detergent cover and the detergent dispenser tray by holding it under running water. Lightly wipe away any remaining detergent residue.
4. Attach the liquid detergent cover and slide the detergent dispenser tray back in place and close the tray securely.

Tip: Do not operate the appliance without the detergent dispenser tray in place. Always keep the tray completely closed.

7.2 Cleaning the Loading Door and the Drum

For products with drum cleaning programme, please see the Operating the product section.



Repeat Drum Cleaning process in every 2 months.

NOTICE: Use an anti-limescale suitable for the washing machines.



After every washing make sure that no foreign substance is left in the product.

If the holes on the door gasket shown in the figure is blocked, open the holes using a toothpick. Foreign metal substances will cause rust stains in the drum. Clean the stains on the drum surface by using cleaning agents for stainless steel. Never use steel wool or wire wool. These will damage the painted, chrome coated and plastic surfaces.

We recommend you to wipe the door gasket with a dry and clean cloth at the end of the programme. This will remove residues on the door gasket in your machine and prevent formation of malodours.

7.3 Cleaning the Body and Control Panel

Wipe the body of the product with soapy water or non-corrosive mild gel detergents as necessary, and dry with a soft cloth. Use only a soft and damp cloth to clean the control panel. Do not use cleaning products that contain bleach.

7.4 Cleaning the Water Intake Filters

There is a filter at the end of each water intake valve at the rear of the product and also at the end of each water intake hose where they are connected to the tap. These filters prevent foreign substances and dirt in the water to enter the product. Filters should be cleaned if they are dirty.



1. Close the taps.
2. Remove the nuts of the water intake hoses to access the filters on the water intake valves and clean them with an appropriate brush. If the filters are too dirty, remove them from their places with a pliers and clean in this way.
3. Take out the filters on the flat ends of the water intake hoses together with the gaskets and clean thoroughly under running water.
4. Replace the gaskets and filters carefully and tighten their nuts by hand.

7.5 Draining Remaining Water and Cleaning the Pump Filter

The filter system in your product prevents solid items such as buttons, coins and fabric fibres clogging the pump impeller during draining of washing water. Thus, the water will be drained without any problem and the service life of the pump will extend. If the product fails to drain water inside it, the pump filter is clogged. Filter must be cleaned whenever it is clogged or in every 3 months. Water must be drained off first to clean the pump filter. In addition, prior to transporting the product (e.g., when moving to another house) water should be drained completely.



NOTICE

Foreign substances left in the pump filter may damage your product or may cause noise problem. In regions where freezing is possible, the tap must be closed, system hose must be removed and the water inside the product must be drained when the product is not in use. After each use, turn off the tap to which the mains hose is connected.


In order to clean the dirty filter and drain the water:

1. Unplug the product to cut off the supply power.



Temperature of water inside the product may rise up 90°C. To avoid the risk of scalding, clean the filter after the water inside the product is cooled down.

2. Open the filter cover.

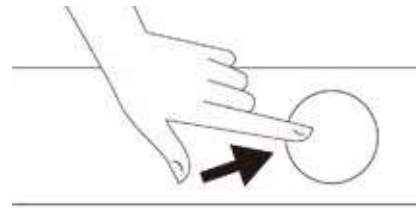


3. Follow the below procedures in order to drain water.

If the product does not have an emergency water draining hose, in order to drain the water:



- Place a large container at the end of the hose to collect the water from the filter.
 - When the pump filter starts leaking water loosen it by turning (opposite clockwise). Fill the running water to the container you placed in front of the filter. Keep a cloth ready to clean the water that may spill.
 - Completely turn and remove the pump filter when the water in the product leaks out.
1. Clean any residues inside the filter as well as fibres, if any, around the pump impeller region.
 2. Replace the filter.
 3. If the filter cap is composed of two pieces, close the filter cap by pressing on the tab. If it is one piece, seat the tabs in the lower part into their places first, and then press the upper part to close.


8 TROUBLESHOOTING

 Please read the "Safety Instructions" section first!	
Anomalies:	Possible causes / Solution:
Programmes do not start after the loading door is closed.	<ul style="list-style-type: none"> • Start / Pause / Cancel button is not pressed. >>> Press Start / Pause / Cancel button. • It may be difficult to close the loading door in case of excessive loading. >>> Reduce the amount of laundry and make sure that the loading door is closed properly.
Programme cannot be started or selected.	<ul style="list-style-type: none"> • The product has switched to self-protection mode due to a supply problem (line voltage, water pressure, etc.). >>> Depending on the product model, select another program by turning the Program Selection button or pressing and holding the On/Off button for 3 seconds to cancel the program. Previous programme will be cancelled. See Cancelling the Programme [29]
Water inside the product.	<ul style="list-style-type: none"> • Some water has remained in the product due to the quality control processes in the production. >>> This is not a failure; water is not harmful to the product.
The product does not take water in.	<ul style="list-style-type: none"> • Tap is turned off. >>> Turn on the taps. • Water inlet hose is bent. >>> Flatten the hose. • Water inlet filter is clogged. >>> Clean the filter. • Loading door is not closed. >>> Close the door.
The product does not drain water.	<ul style="list-style-type: none"> • Water drain hose is clogged or twisted. >>> Clean or flatten the hose. • Pump filter is clogged. >>> Clean the pump filter.
Product vibrates or makes noise.	<ul style="list-style-type: none"> • Product is standing unbalanced. >>> Adjust the stands to balance the product. • A hard substance has entered into the pump filter. >>> Clean the pump filter. • Transportation safety bolts are not removed. >>> Remove the transportation safety bolts. • Laundry quantity in the product is too little. >>> Add more laundry to the product. • Excessive laundry is loaded in the product. >>> Take out some of the laundry from the product or distribute the load by hand to balance it homogeneously in the product. • Product is leaning on a rigid item. >>> Make sure that the product is not leaning on anything.
There is water leaking from the bottom of the product.	<ul style="list-style-type: none"> • Water drain hose is clogged or twisted. >>> Clean or flatten the hose. • Pump filter is clogged. >>> Clean the pump filter.
Product stopped shortly after the programme started.	<ul style="list-style-type: none"> • Machine has stopped temporarily due to low voltage. >>> Product will resume running when the voltage restores to the normal level.
Product directly drains the water it takes in.	<ul style="list-style-type: none"> • Draining hose is not at adequate height. >>> Connect the water draining hose as described in the user manual.
No water can be seen in the product during washing.	<ul style="list-style-type: none"> • Water is inside the invisible part of the product. >>> This is not a failure.

<p>Loading door cannot be opened.</p>	<ul style="list-style-type: none"> • Loading door lock is activated because of the water level in the product. >>> Drain the water by running the Pump or Spin programme. • Product is heating up the water or it is at the spinning cycle. >>> Wait until the programme completes. • Loading door may be stuck because of the pressure it is subjected to. >>> Grab the handle and push and pull the loading door to release and open it.
<p>Washing takes longer than specified in the user manual.</p>	<ul style="list-style-type: none"> • Water pressure is low. >>> Product waits until taking in adequate amount of water to prevent poor washing quality due to the decreased amount of water. Therefore, the washing time extends. • Voltage is low. >>> Washing time is prolonged to avoid poor washing results when the supply voltage is low. • Input temperature of water is low. >>> Required time to heat up the water extends in cold seasons. Also, washing time can be lengthened to avoid poor washing results. • Number of rinses and/or amount of rinsing water have increased. >>> Product increases the amount of rinsing water when good rinsing is needed and adds an extra rinsing step if necessary. • Excessive foam has occurred and automatic foam absorption system has been activated due to too much detergent usage. >>> Use recommended amount of detergent.
<p>Programme duration does not countdown. (On models with display)</p>	<ul style="list-style-type: none"> • Timer may stop during water intake. >>> Timer indicator will not countdown until the product takes in adequate amount of water. The product will wait until there is sufficient amount of water to avoid poor washing results due to lack of water. Timer indicator will resume countdown after this. • Timer may stop during heating step. >>> Timer indicator will not countdown until the product reaches the selected temperature. • Timer may stop during spinning step. >>> Automatic unbalanced load detection system is activated due to the unbalanced distribution of the laundry in the product.
<p>Programme duration does not countdown</p>	<ul style="list-style-type: none"> • There is unbalanced load in the product. >>> Automatic unbalanced load detection system is activated due to the unbalanced distribution of the laundry in the product.
<p>Product does not switch to spinning step.</p>	<ul style="list-style-type: none"> • There is unbalanced load in the product. >>> Automatic unbalanced load detection system is activated due to the unbalanced distribution of the laundry in the product. • The product will not spin if water is not drained completely. >>> Check the filter and the draining hose. • Excessive foam has occurred and automatic foam absorption system has been activated due to too much detergent usage. >>> Use recommended amount of detergent.
<p>Washing performance is poor: Laundry turns gray.</p>	<ul style="list-style-type: none"> • Insufficient amount of detergent has been used over a long period of time. >>> Use the recommended amount of detergent appropriate for water hardness and the laundry. • Washing has been made at low temperatures for a long time. >>> Select the proper temperature for the laundry to be washed. • Insufficient amount of detergent is used with hard water. >>> Using insufficient amount of detergent with hard water causes the soil to stick on the cloth and this turns the cloth into gray in time. It is difficult to eliminate graying once it happens. Use the recommended amount of detergent appropriate for water hardness and the laundry. • Excessive amount of detergent is used. >>> Use the recommended amount of detergent appropriate for water hardness and the laundry.

<p>Washing performance is poor: Stains persist or the laundry is not whitened.</p>	<ul style="list-style-type: none"> • Insufficient amount of detergent is used. >>> Use the recommended amount of detergent appropriate for water hardness and the laundry. • Excessive laundry is loaded in. >>> Do not load the product in excess. Load with amounts recommended in the "Programme and consumption table". • Wrong programme and temperature were selected. >>> Select the proper programme and temperature for the laundry to be washed. • Wrong type of detergent is used. >>> Use original detergent appropriate for the product. • Detergent was put in the wrong compartment. >>> Put the detergent in the correct compartment. Do not mix the bleaching agent and the detergent with each other.
<p>Washing performance is poor: Oily stains appeared on the laundry.</p>	<ul style="list-style-type: none"> • Regular drum cleaning is not applied. >>> Clean the drum regularly. For this procedure, see https://parts-selfservice.europeanappliances.com/
<p>Washing performance is poor: Clothes smell unpleasantly.</p>	<ul style="list-style-type: none"> • Odours and bacteria layers are formed on the drum as a result of continuous washing at lower temperatures and/or in short programmes. >>> Leave the detergent drawer as well as the loading door of the product ajar after each washing. Thus, a humid environment favourable for bacteria cannot occur in the machine.
<p>Colour of the clothes faded.</p>	<ul style="list-style-type: none"> • Excessive laundry was loaded in. >>> Do not load the product in excess. • Detergent in use is damp. >>> Keep detergents closed in an environment free of humidity and do not expose them to excessive temperatures. • A higher temperature was selected. >>> Select the proper programme and temperature according to the type and soiling degree of the laundry.
<p>Washing machine does not rinse well.</p>	<ul style="list-style-type: none"> • The amount, brand and storage conditions of the detergent used are inappropriate. >>> Use a detergent appropriate for the washing machine and your laundry. Keep detergents closed in an environment free of humidity and do not expose them to excessive temperatures. • Detergent was put in the wrong compartment. >>> If detergent is put in the prewash compartment although prewash cycle is not selected, the product can take this detergent during rinsing or softener step. Put the detergent in the correct compartment. • Pump filter is clogged. >>> Check the filter. • Draining hose is folded. >>> Check the drain hose.
<p>Laundry became stiff after washing.</p>	<ul style="list-style-type: none"> • Insufficient amount of detergent is used. >>> Using insufficient amount of detergent for the water hardness can cause the laundry to become stiff in time. Use appropriate amount of detergent according to the water hardness. • Detergent was put in the wrong compartment. >>> If detergent is put in the prewash compartment although prewash cycle is not selected, the product can take this detergent during rinsing or softener step. Put the detergent in the correct compartment. • Detergent was mixed with the softener. >>> Do not mix the softener with detergent. Wash and clean the drawer with hot water.
<p>Laundry does not smell like the softener.</p>	<ul style="list-style-type: none"> • Detergent was put in the wrong compartment. >>> If detergent is put in the prewash compartment although prewash cycle is not selected product, the can take this detergent during rinsing or softener step. Wash and clean the drawer with hot water. Put the detergent in the correct compartment. • Detergent was mixed with the softener >>> Do not mix the softener with detergent. Wash and clean the drawer with hot water.

<p>Detergent residue in the detergent drawer.</p>	<ul style="list-style-type: none"> • Detergent was put in wet drawer. >>> Dry the detergent drawer before putting in detergent. • Detergent has gotten damp. >>> Keep detergents closed in an environment free of humidity and do not expose them to excessive temperatures. • Water pressure is low. >>> Check the water pressure. • The detergent in the main wash compartment got wet while taking in the prewash water. Holes of the detergent compartment are blocked. >>> Check the holes and clean if they are clogged. • There is a problem with the detergent drawer valves. >>> Call the Authorised Service Agent. • Detergent was mixed with the softener. >>> Do not mix the softener with detergent. Wash and clean the drawer with hot water.
<p>Detergent residue on the clothes.</p>	<ul style="list-style-type: none"> • The machine might have been overloaded. >>> Do not overload the machine. • Wrong programme and temperature were selected. >>> Select the proper programme and temperature for the laundry to be washed. • Wrong type of detergent might have been used. >>> Select the proper detergent for the laundry to be washed.
<p>Too much foam forms inside the product.</p>	<ul style="list-style-type: none"> • Improper detergents for the washing machine is used. >>> Use detergents appropriate for the washing machine. • Excessive amount of detergent is used. >>> Use only sufficient amount of detergent. • Detergent was stored under improper conditions. >>> Store detergent in a closed and dry location. Do not store in excessively hot places. • Some meshed laundry such as tulle may foam too much because of their texture. >>> Use smaller amounts of detergent for this type of item. • Detergent was put in the wrong compartment. >>> Make sure you place the detergent in the appropriate compartment. • Softener is being taken early by the product. >>> There may be problem in the valves or in the detergent drawer. Call the Authorised Service Agent.
<p>Foam is overflowing from the detergent drawer.</p>	<ul style="list-style-type: none"> • Too much detergent is used. >>> Mix 1 tablespoonful softener and ½ l water and pour into the main wash compartment of the detergent drawer. >>> Put detergent into the product suitable for the programmes and maximum loads indicated in the "Programme and consumption table". When you use additional chemicals (stain removers, bleaches and etc.), reduce the amount of detergent.
<p>Laundry remains wet at the end of the programme.</p>	<p>Excessive foam has occurred and automatic foam absorption system has been activated due to too much detergent usage. >>> Use recommended amount of detergent.</p>
<p>Drying lasts too long.</p>	<ul style="list-style-type: none"> • The machine might have been overloaded. >>> Do not overload the machine. • Spinning might not be sufficient for laundry. >>> Select a higher spin speed in the washing step of the Washer-Dryer. • Tap is turned off. >>> Turn on the taps.
<p>Laundry comes off wet after the drying step.</p>	<ul style="list-style-type: none"> • The programme selected might not be suitable for the type of laundry. >>> Check the care labels on clothes and select a programme accordingly, or select timed programmes additionally. • The machine might have been overloaded. >>> Do not overload the machine. • Spinning might not be sufficient for laundry. >>> Select a higher spin speed in the washing step of the Washer-Dryer.
<p>Machine does not start or programme cannot be started.</p>	<ul style="list-style-type: none"> • Power cable might be unplugged. >>> Make sure that the power cable is plugged in. • Programme might not be set, or the Start/Pause/Cancel button might not be pressed. >>> Make sure the programme is set and the machine is not in Standby mode. • Child lock might be activated. >>> Disable Child Lock.

Laundry shrinks, fades, tarnishes or gets damaged.	The programme selected might not be suitable for the type of laundry. >>> Check the care labels on clothes and select a programme accordingly, or select timed programmes additionally. You should not dry laundry that is not suitable for drying.
Machine does not dry.	Laundry might not be dried or the drying step might not be enabled. >>> Check if the drying function is selected after the selected washing programme.
Washing drying end issue	<ul style="list-style-type: none"> • The drying is cooled in the last 20 minutes, and the temperature can be unlocked when it drops to 53 degrees in the last 1 minute. If the unlocking temperatures is not reached, the cooling will continue.
Loading door cannot be opened.	<ul style="list-style-type: none"> • The door of your machine might not be opening due to safety reasons. >>> If the door locked indicator is still active on the display after the drying step, the machine will keep the door locked for your safety until it cools down. • If there is no power, loading door of the product will not open. >>> To open the loading door, open the pump filter cap and pull down the emergency handle positioned at the rear side of the said cap. See Loading Door Lock [39] <p>The product does not switch to spinning step when the laundry is not evenly distributed in the drum to prevent any damage to the product and to its surrounding environment. Laundry should be rearranged and respun. Regular drum cleaning is not applied. Clean the drum regularly. See https://parts-selfservice.europeanappliances.com/en/landing</p> <div style="border: 1px solid black; padding: 5px; margin: 10px 0;">  <p>If you cannot eliminate the problem although you follow the instructions in this section, consult you dealer or the Authorised Service Agent. Never try to repair a nonfunctional product yourself.</p> </div> <p>See also 2 Cleaning the Loading Door and the Drum [36].</p>

Fault Code	Fault Description	Possible Causes
E02	Abnormal water inflow	1. Verify water tap is open; 2. Verify that inlet hose is not bent; 3. Clean the filter at the back of the inlet water connection. It could be blocked with limescale or any other debris; 4. Water pressure is too low or water tap is not fully open; 5. Machine does not install properly, syphon effect. Connect the drain hose as indicated into the IFU; 6. Drain hose does not respect the height required (please, verify it in the IFU).
E03	Abnormal drainage	Clean the Drain Pump Filter
E05	Water temperature NTC failure	Power off
E11	Condenser NTC or dryer NTC failure	Power off
EE0	Water heating pipe open circuit	Power off
EE1	Heating pipe short circuit (water heating or dryer heating)	Power off
EH0	Drying timeout	Power off
U4	Door lock failure	Power off
EA2	Water level being abnormally high	Power off
EA1	water level switch failure	Power off
Eb02	Supply voltage too low	Disconnect the appliance, wait 10 minutes and plug it again.
Eb04	Supply voltage too high	
Eb08	Abnormal operation of motor	Reduce the clothes load using IFU information.
Eb20	"IPM abnormality or over temperature of IPM and motor"	Reduce the clothes load using IFU information.
Eb90	Reset timeout	
EC1	"Abnormal communication between display and inverter;"	Disconnet the product, wait 2 minutes and plug it again.
EC2	"Abnormal communication between display and main control (PU)"	
H	High temperature	Press Start or temperature decrease

9 DISCLAIMER / WARNING

Some (simple) failures can be adequately handled by the end-user without any safety issue or unsafe use arising, provided that they are carried out within the limits and in accordance with the following instructions (see the "Self-Repair" section). Therefore, unless otherwise authorized in the "Self-Repair" section below, repairs shall be addressed to registered professional repairers in order to avoid safety issues. A registered professional repairer is a professional repairer that has been granted access to the instructions and spare parts list of this product by the manufacturer according to the methods described in legislative acts pursuant to Directive 2009/125/EC.

However, only the service agent (i.e. authorized professional repairers) that you can reach through the phone number given in the user manual/warranty card or through your authorized dealer may provide service under the guarantee terms. Therefore, please be advised that repairs by professional repairers (who are not authorized by Beko) shall void the guarantee.

Self-Repair

Self-repair can be done by the end-user with regard to the following spare parts: door, door hinge and seals, other seals, door locking assembly and plastic peripherals such as detergent dispensers (an updated list is also available in support.beko.com as of 1st of March 2021) Moreover, to ensure product safety and to prevent risk of serious injury, the mentioned self-repair shall be done following the instructions in the user manual for self-repair or which are available in parts-selfservice.europeanappliances.com.

For your safety, unplug the product before attempting any self-repair.

Repair and repair attempts by end-users for parts not included in such list and/or not following the instructions in the user manuals for self-repair or which are available in support.

Beko.com, might give raise to safety issues not attributable to support.beko.com, and will void the warranty of the product. Therefore, it is highly recommended that end-users refrain from the attempt to carryout repairs falling outside the mentioned list of spare parts, contacting in such cases authorized professional repairers or registered professional repairers. On the contrary, such attempts by end-users may cause safety issues and damage the product and subsequently cause fire, flood, electrocution and serious personal injury to occur. By way of example, but not limited to, the following repairs must be addressed to authorized professional repairers or registered professional repairers: motor, pump assembly, main board, motor board, display board, heaters etc. The manufacturer/seller cannot be held liable in any case where end-users do not comply with the above.

The spare part availability of the washing machine that you purchased is 10 years. During this period, original spare parts will be available to operate the washing machine properly.