

Television


Reference Guide



Для получения полезной информации о продукции Сони
Для отримання корисної інформації щодо виробів компанії Sony
Sony өнімдерінің пайдалы ақпараттары
Sony mahsulotlari haqida foydali ma'lumotlar uchun

www.sony.eu/support

BRAVIA

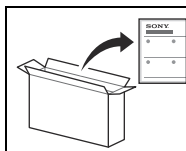

To attach the Table-Top Stand, refer to the Setup Guide.

Table of Contents

ВАЖНОЕ ПРИМЕЧАНИЕ	3
ВАЖЛИВА ПРИМІТКА	3
Safety Information	3
Parts and Controls	5
Controls and Indicators	5
Using Remote Control	6
Remote Control Parts Description	6
Connection Diagram	8
Installing the TV to the Wall	10
Using the optional Wall-Mount Bracket ..	10
Detaching the Table-Top Stand from the TV	11
Troubleshooting	12
Troubles and Solutions	12
Specifications	13

Internet Connection and Data Privacy

This product connects to the internet during initial setup as soon as a network is connected in order to confirm internet connection, and later to configure the Home screen. Your IP address is used in these and all other internet connections. If you do not want your IP address to be used at all, do not set-up the wireless internet function and do not connect an internet cable. Please refer to the privacy information presented in the set-up screens for further details of internet connections.

Introduction

Thank you for choosing this Sony product. Before operating the TV, please read this manual thoroughly and retain it for future reference.

Note

- Before operating the TV, please read the "Safety Information" (page 3).
- Read the supplied Safety Information for additional safety information.
- Images and illustrations used in the Setup Guide and this manual are for reference only and may differ from the actual product.
- The "xx" that appears in the model name corresponds to a numeric digit, related to design, colour or TV system.
- Sales should be performed in accordance with current applicable local regulation. Product which cannot be used anymore should be utilized in accordance with current applicable local regulation.

Help

Find more troubleshooting and other useful information directly from your TV. Press **HELP** on the remote control to display a list of topics, or to search by keyword.

Help Guide (Manual)

For more detailed information, select [Help Guide] from the Help menu on your TV. You can also check the Help Guide from your PC or smartphone (information provided on the back cover of this manual).

Location of the identification label

Labels for the TV Model No., Production Date (year/month) and Power Supply rating are located on the rear of the TV or package.

Дата изготовления указана на изделии и упаковке на этикетке со штрих-кодом в следующем формате: YYYY/MM, где YYYY - год, MM - месяц изготовления.

Дата виготовлення зазначена на виробі та упаковці на етикетці зі штрих-кодом у наступному форматі: YYYY/MM, де YYYY - рік, MM - місяць виготовлення.

Өнімнің күні мен штрих-кодында штрих-код таңбасының коды келесі форматта көрсетіледі: ЖЖЖЖ / ММ, мұнда ЖЖЖЖ - жыл ММ - өндіріс мезгілі.

Өндіруші: Сони Визуал Продактс Инк.

Өндіруші мекенжайы: 2-10-1 Осаки Шинагава-ку Токио, 141-8610 Жапония

Словакияда немесе Малайзияда жасалған.

Өндіруші ел өнімде және қорапта көрсетілген.

ЕАЭС

Кеден одағы жеріндегі шетелден әкелуші: «Сони Электроникс» АҚ, Ресей, 123103, Мәскеу, Карамышевский өтпе көшесі, 6 Қазақстан жеріндегі тұтынушылардың шағым-талаптарын қабылдауға уәкілетті ұйым «Сони Электроникс» АҚ Қазақстандағы Өкілдігі, 050010, Қазақстан Республикасы, Алматы қ., Достық даңғылы, 117/7 үй

ВАЖНОЕ ПРИМЕЧАНИЕ

Название продукта: Телевизор

Производитель: Сони Вижуал Продактс Инк., 2-10-1 Осаки
Шинагава-ку Токио, 141-8610 Япония
Сделано в Словакии или Малайзии.

Страна производства указана на изделии и упаковке.



Импортер на территории стран Таможенного союза: АО
«Сони Электроникс», Россия, 123103, Москва, Карамышевский
проезд, 6

Организация, уполномоченная принимать претензии от
потребителей на территории Казахстана
АО «Сони Электроникс»

Представительство в Казахстане, 050010, Республика
Казахстан, г. Алматы, пр. Достык, дом 117/7

ВАЖЛИВА ПРИМІТКА

Назва виробу: Телевізор

Справжнім Сони Вижуал Продактс Инк. заявляє, що телевізори
SONY моделей KD-75XG8596, KD-65XG8596, KD-55XG8596
відповідають Технічному регламенту радіобладнання;
повний текст декларації про відповідність доступний на
веб-сайті за такою адресою: <http://www.compliance.sony.ua/>.

Радіобладнання може використовуватися на території
України без порушення чинних вимог щодо радіочастотного
спектру.

Виробник: Сони Вижуал Продактс Инк., 2-10-1 Осаки Шинагава-ку
Токио, 141-8610 Японія

Вироблено у Словаччині або Малайзії.

Країна виробництва зазначається на виробі та пакуванні.


Safety Information

Installation/Set-up


Install and use the TV set in accordance with the instructions
below in order to avoid any risk of fire, electric shock or damage
and/or injuries.

Installation

- The TV set should be installed near an easily accessible mains socket.
- Place the TV set on a stable, level surface to prevent it from falling over and causing personal injury or property damage.
- Install the TV where it cannot be pulled, pushed, or knocked over.
- Install the TV so that the TV's Table-Top Stand does not protrude out from the TV stand (not supplied). If the Table-Top Stand protrudes out from the TV stand, it may cause TV set to topple over, fall down, and cause personal injury or damage to the TV.

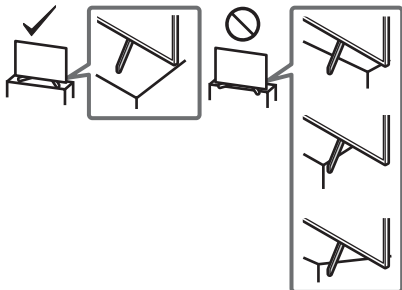


- Only qualified service personnel should carry out wall-mount installations.
- For safety reasons, it is strongly recommended that you use Sony accessories, including:
 - Wall-Mount Bracket SU-WL450
- Be sure to use the screws supplied with the Wall-Mount Bracket when attaching the Wall-Mount Bracket to the TV set. The supplied screws are designed as indicated by illustration when measured from the attaching surface of the Wall-Mount Bracket. The diameter and length of the screws differ depending on the Wall-Mount Bracket model.
Use of screws other than those supplied may result in internal damage to the TV set or cause it to fall, etc.

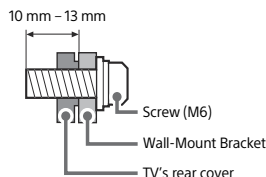


Transporting

- Before transporting the TV set, disconnect all cables.
- Two or more people are needed to transport a large TV set.
- When transporting the TV set by hand, hold it as shown below.
Do not put stress on the LCD panel and the frame around the screen.
- When lifting or moving the TV set, hold it firmly from the bottom.

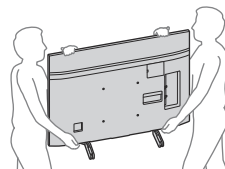


- When transporting the TV set, do not subject it to jolts or excessive vibration.
- When transporting the TV set for repairs or when moving, pack it using the original carton and packing material.

Topple prevention

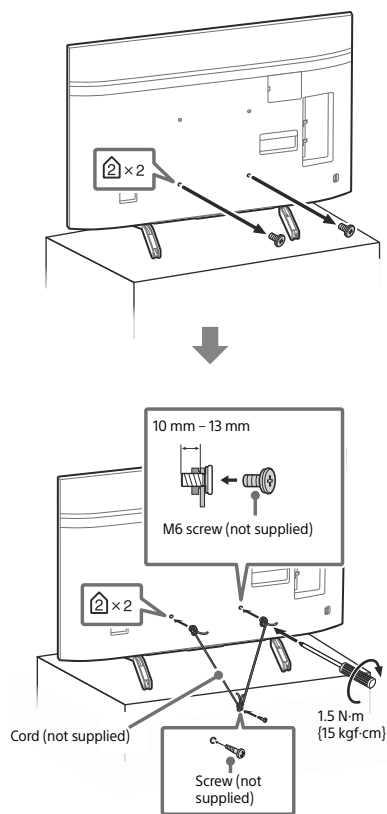

Parts and Controls

Controls and Indicators

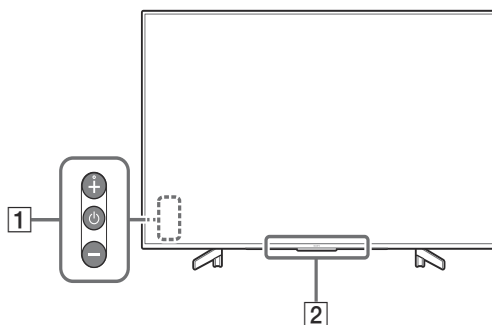

1 (Power) /+/-

When the TV is off,

Press  to power on.

When the TV is on,

Press and hold  to power off.

Press  repeatedly to change the function,
then press + or - button to:

- Adjust the volume.
- Select the channel.
- Select the input source of TV.

2 Remote Control sensor* / Light sensor* / Illumination LED

The illumination LED lights up or blinks
according to the status of the TV.


For more information, refer to the Help
Guide.

* Do not place anything near the sensor.

Using Remote Control

Remote Control Parts Description

The remote control shape, location, availability and function of remote control buttons may vary depending on your region/country/TV model.

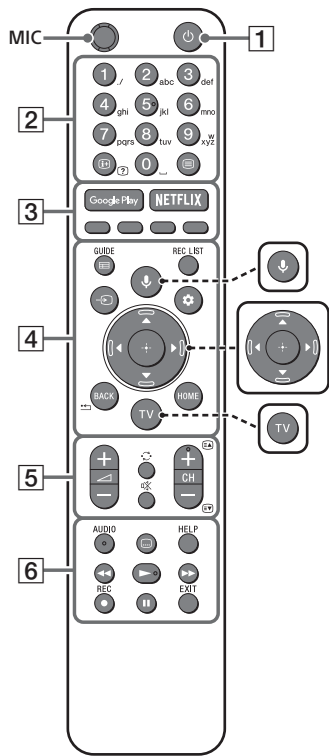

**Ⓜ (Microphone)**
Use voice search*. (e.g., Search various content by voice.)

**▲/▼/◀/▶/⊕ (Navigation D-Pad)**
On screen menu navigation and selection.

**TV**
Switch to a TV channel or input and display the TV menu.

* The voice search requires an Internet connection.

- 1

**(TV standby)**
Turn on or turn off the TV (standby mode).
- 2

**(Info/Text reveal)**
Display information.

**(Text)**
Display text information.
- 3

Google Play
Access the “Google Play” online service.

- NETFLIX (Only on limited region/country/TV model)**
Access the “NETFLIX” online service.

Colour buttons
Execute corresponding function at that time.
- 4

**GUIDE/**

Display the digital programme guide.

REC LIST
Display the Title list.

(Input select)

Display and select the input source, etc.

(Quick settings)

Display Quick Settings.

BACK/

Return to the previous screen.

HOME

Display the TV Home Menu.

5 **+/- (Volume)**

Adjust the volume.

(Jump)

Jump back and forth between two channels or inputs. The TV alternates between the current channel or input and the last channel or input that was selected.

(Mute)

Mute the sound. Press again to restore the sound.

Hint

- The accessibility shortcut service can be turned on or off by pressing and holding .

CH +/-/**/**

In TV mode: Select the channel.

In Text mode: Select the next () or previous () page.

6 **AUDIO**

Select the sound of multilingual source or dual sound for the programme currently being viewed (depend on programme source).

(Subtitle setting)

Turn subtitles on or off (when the feature is available).

HELP

Display the Help menu. Help Guide can be accessed from here.

Operate media contents on the TV and connected BRAVIA Sync-compatible device.

REC


Record the currently viewed programme on the USB HDD.

EXIT

Return to the previous screen or exit from the menu. When an Interactive Application service is available, press to exit from the service.

Connection Diagram

For more information on connections, refer to the Help Guide by pressing **HELP** on the remote control.

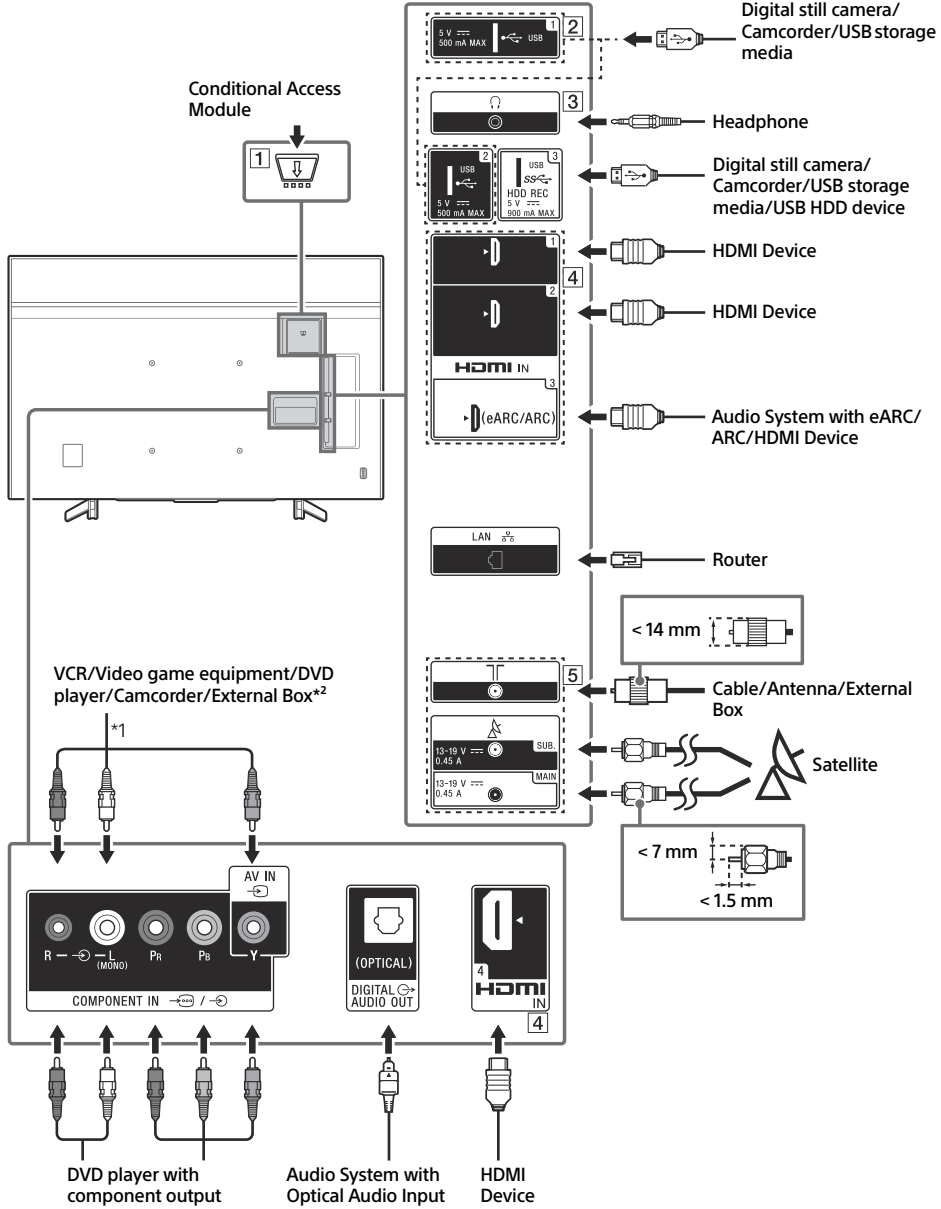

1 CAM (Conditional Access Module)

- Provides access to pay TV services. For details, refer to the instruction manual supplied with your CAM.
- Do not insert the smart card directly into the TV CAM slot. It must be fitted into the Conditional Access Module provided by your authorised dealer.
- CAM is not supported in some countries/areas. Check with your authorised dealer.
- A CAM message may appear when you switch to a digital programme after using the Internet video.

2 USB 1/2, USB 3 (HDD REC)*³


- Connecting a large USB device may interfere with other connected devices beside it.
- When connecting a large USB device, connect to the USB 1 port.
- Connect a USB HDD device to the USB 3 port (blue).

3 (Headphone)

- Supports 3-pole stereo mini jack only.
- You cannot output sound from both the headphone and the TV speakers at the same time.

4 HDMI IN 1/2/3/4

- HDMI interface can transfer the digital video and audio on a single cable.

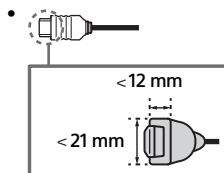


- To enjoy high quality 4K 50p/60p contents, connect a Premium High Speed HDMI cable and set the [HDMI signal format] to [Enhanced format]. Do this setting individually for each connected HDMI IN terminal. For details of supported formats, refer to the "Specifications" in this manual (page 13-15).

• HDMI IN 3 eARC/ARC (Enhanced Audio Return Channel/Audio Return Channel)

Connect your audio system to the HDMI IN 3 to route TV audio to your audio system. An audio system that supports HDMI eARC/ARC can send video to the TV, and receive audio from the TV via the same HDMI cable. If your audio system does not support HDMI eARC/ARC, an additional connection with DIGITAL AUDIO OUT (OPTICAL) is necessary.

 - Use the HDMI cable with Ethernet to connect audio system with eARC.



5 (RF input), (Satellite input)

- Connections for terrestrial/cable and satellite. Connection steps: SUB. → MAIN → Antenna
- For SUB. jack, connect only when you are using twin tuner mode except for Single Cable Distribution EN50494.

*1 When connecting mono equipment, connect to the L (MONO) audio jack (socket).

*2 For an external device which has only SCART AV OUT, use a SCART-RCA adaptor.

*3 Only on limited region/country/TV model.

Installing the TV to the Wall

Using the optional Wall-Mount Bracket

This TV's instruction manual only provides the steps to prepare the TV for Wall-Mount installation before it is installed on the wall.

To Customers:

For product protection and safety reasons, Sony strongly recommends that installation of your TV be performed by Sony dealers or licensed contractors. Do not attempt to install it yourself.

To Sony Dealers and Contractors:

Provide full attention to safety during the installation, periodic maintenance and examination of this product.

Sufficient expertise is required for installing this product, especially to determine the strength of the wall for withstanding the TV's weight. Be sure to entrust the attachment of this product to the wall to Sony dealers or licensed contractors and pay adequate attention to safety during the installation. Sony is not liable for any damage or injury caused by mishandling or improper installation.

Use the Wall-Mount Bracket SU-WL450 (not supplied) to install the TV to the wall.

When installing the Wall-Mount Bracket, also refer to the Operating Instructions and Installation Guide supplied with the Wall-Mount Bracket.


Note

- Be sure to store the removed screws in a safe place, keeping them away from children.




For instructions on Wall-Mount Bracket installation, see the Installation Information (Wall-Mount Bracket) on the product page for your TV model.
www.sony.eu/support/

Remove the screws from the rear of the TV.

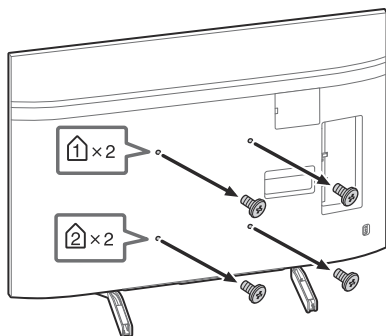

Detaching the Table-Top Stand from the TV

- 1 Remove one side of the Table-Top Stand at a time. Firmly hold the Table-Top Stand securely with both hands while the other people lift up the TV.

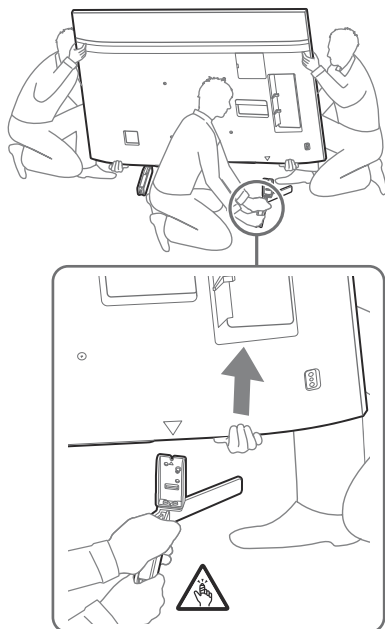

- 2 Repeat the previous step and remove the other side of the Table-Top Stand.

Note

- Three or more people are required to detach the Table-Top Stand.
- Be careful not to use excessive force while detaching the Table-Top Stand from the TV as it may cause the TV set to fall resulting in personal injury or physical damage to the TV.
- Take care when handling the Table-Top Stand to prevent damage to the TV.
- Be careful when lifting the TV as the Table-Top Stand is detached, the Table-Top Stand may topple over and cause personal injury.
- Take care when removing the Table-Top Stand from the TV to prevent it from falling over and damaging the surface that the TV is sitting on.

Troubleshooting

General troubleshooting for issues like: black screen, no sound, frozen picture, TV does not respond, or network is lost, do the following steps.

- 1 Restart your TV by pressing the power button on the remote control until a message appears. The TV will restart. If the TV does not recover, try unplugging the mains lead. Then press the power button on the TV and wait for two minutes, and plug in the mains lead.
- 2 Refer to the Help menu by pressing **HELP** on the remote control.
- 3 Connect your TV to the Internet and perform a software update. Sony recommends you to keep your TV software updated. Software updates provide new features and performance improvements.
- 4 Visit Sony support website (information provided on the front cover of this manual).

When you plug in the TV, the TV may not be able to turn on for a while even if you press the power button on the remote control or the TV.

It takes time to initialize the system. Wait for about one minute, then operate it again.

Troubles and Solutions

When the illumination LED is flashing in red.

- Count how many times it flashes (interval time is three seconds).
Reboot the TV by disconnecting the mains lead until the illumination LED stopped flashing in red, then turn on the TV.
If the problem persists, disconnect the mains lead, and contact your dealer or Sony service centre with the number of times the illumination LED flashes.

Terrestrial/cable service cannot be received.

- Check the antenna (aerial)/cable connection and booster settings.
- Select terrestrial/cable service by pressing **TV** on the remote control, and then select [Digital] if the broadcasting service is not displayed.
- Terrestrial signal might be suppressed if there is a strong signal supplied nearby. Set [LNA (CH ---)] to [Off] in digital tuning settings.
- After moving to a new house or trying to receive new services, attempt a service search by selecting [Digital tuning].

Satellite service cannot be received.

- Check the satellite cable connection.
- When [No signal. LNB overload detected...] message is displayed, unplug the mains lead. Then, ensure the satellite cable is not damaged and the satellite signal line is not short-circuited in the satellite connector.

The remote control does not function.

- Replace the batteries.

The parental lock for broadcast password has been forgotten.

- Enter 9999 for the PIN code and select [Change PIN code].

The TV surrounds become warm.

- When the TV is used for an extended period, the TV surrounds become warm. You may feel hot when touching there by the hand.

Specifications

System

Panel system

LCD (Liquid Crystal Display) Panel, LED Backlight

TV system

Depending on your country/area selection/TV model

Analogue: B/G, D/K, I

Digital: DVB-T/DVB-C

DVB-T2*1

Satellite*1: DVB-S/DVB-S2

Colour system

PAL/SECAM/NTSC3.58 (Video only)/NTSC4.43 (Video only)

Channel coverage

Depending on your country/area selection/TV model

Analogue: UHF/VHF/Cable

Digital: UHF/VHF/Cable

Satellite*1: IF Frequency 950-2,150 MHz

Sound output

10 W + 10 W

Wireless technology

Protocol IEEE 802.11a/b/g/n/ac

(IEEE 802.11ac may not be available depending on countries/regions.)

Bluetooth Version 4.2

KD-75XG85xx, KD-65XG85xx, KD-55XG85xx

Стандарт зв'язку (мережі, інтерфейсу передавання даних) - IEEE 802.11a/b/g/n/ac	
Смуга радіочастот, в якій працює (передавання / приймання)	Максимальна потужність випромінювання у зазначених смугах радіочастот
2400-2483,5 МГц	20,0 дБм
5150-5350 МГц, 5470-5670 МГц, 5670-5725 МГц, 5725-5850 МГц	20,0 дБм

Стандарт зв'язку (мережі, інтерфейсу передавання даних) - Bluetooth IEEE 802.15.1	
Смуга радіочастот, в якій працює (передавання / приймання)	Максимальна потужність випромінювання у зазначених смугах радіочастот
2400-2483,5 МГц	10,0 дБм

RMF-TX500E

Стандарт зв'язку (мережі, інтерфейсу передавання даних) - Bluetooth IEEE 802.15.1	
Смуга радіочастот, в якій працює (передавання / приймання)	Максимальна потужність випромінювання у зазначених смугах радіочастот
2400-2483,5 МГц	10,0 дБм

Версія програмного забезпечення

Телевізор: PKGEUA

Натисніть **HELP** на пристрої дистанційного керування, щоб дізнатися версію програмного забезпечення.

Пристрій дистанційного керування:

Select [Remote control] → [Software version]

from [Settings]. For more information, refer to the Help Guide.

The software loaded on this radio equipment is verified to comply with the essential requirements of Ukrainian technical regulation of radio equipment.

Input/Output jacks

Antenna (aerial)/cable

75 ohm external terminal for VHF/UHF

Satellite antenna*1

Female F Type Connector, 75 ohm.

DiSEqC 1.0, LNB 13 V/18 V & 22 kHz tone, Single Cable Distribution EN50494.

COMPONENT IN

YPbPr (Component Video): 1080p (50, 60 Hz), 1080i (50, 60 Hz), 720p (50, 60 Hz), 576p, 576i, 480p, 480i

Audio input (phono jacks)

AV IN

Video input (common phono pin with Y input)

HDMI IN 1/2/3/4 (support 4K resolution, HDCP 2.3-compatible)

Video:

4096 × 2160p (50, 60 Hz)*2*3, 4096 × 2160p (24 Hz)*2, 3840 × 2160p (50, 60 Hz)*3, 3840 × 2160p (24, 25, 30 Hz), 1080p (30, 50, 60 Hz), 1080/24p, 1080i (50, 60 Hz), 720p (30, 50, 60 Hz), 720/24p, 576p, 480p, PC Formats*4

Audio:

In eARC (Enhanced Audio Return Channel) mode*5

Refer to the Help Guide for details.

Except eARC mode

5.1 channel linear PCM: 32/44.1/48/88.2/96/176.4/192 kHz 16/20/24 bits, Dolby Digital, Dolby Digital Plus, DTS

eARC/ARC (Enhanced Audio Return Channel/
Audio Return Channel) (HDMI IN 3 only)

In eARC mode*⁵

Refer to the Help Guide for details.

In ARC mode

Two channel linear PCM: 48 kHz 16 bits, Dolby
Digital, Dolby Digital Plus, DTS

➞ DIGITAL AUDIO OUT (OPTICAL)

Digital optical jack (Two channel linear PCM:
48 kHz 16 bits, Dolby Digital, DTS)

📶 (Stereo mini jack)

Headphone

➡ 1, ➡ 2, **SS** ➡ 3 (HDD REC)*⁶

USB device port (**SS** ➡ 3 USB HDD device for REC
feature)

USB port 1 and 2 support High Speed USB
(USB 2.0)

USB port 3 supports Super Speed USB (USB 3.1
Gen 1)



CAM (Conditional Access Module) slot



LAN

10BASE-T/100BASE-TX connector (Depending on
the operating environment of the network,
connection speed may differ. The communication
rate and quality are not guaranteed.)

Others

Optional accessories

Wall-Mount Bracket: SU-WL450

Условия хранения:

Товары сохраняют в упакованном виде в
темных, сухих, чистых, хорошо
вентилируемых помещениях, изолированных
от мест хранения кислот и щелочей.
Температура хранения*⁷: от -20 °C до +60 °C.
Относительная влажность хранения*⁷: < 80 %
(без конденсации).

Рабочая температура: от 0 °C до 40 °C. Рабочая
относительная влажность: 10 % – 80 % (без
конденсации).

Умови зберігання:

Продукцію зберігають в упакованому виді в
темних, сухих, чистих, добре вентильованих
приміщеннях, ізольованих від місць зберігання
кислот і лугів. Температура зберігання*⁸: від
-20 °C до +60 °C. Відносна вологість
зберігання*⁸: < 80 % (без конденсації).
Робоча температура: від 0 °C до 40 °C. Робоча
відносна вологість: 10 % – 80 % (без
конденсації).

Сақтау шарты:

Өнімдерді қараңғы, құрғақ, таза,
жақсы желдетілетін қышқылдар мен сілтілік
металдар сақталған орыннан оқшауланған
бумада сақтау қажет. Сақтау температурасы*⁹:
-20 °C мен +60 °C аралығы. Сақтау
ылғалдылығы*⁹: < 80 % салыст. ылғалдылық
(конденсациясыз).

Жұмыс температурасы: 0 °C мен 40 °C аралығы.

Жұмыс ылғалдылығы: 10 % – 80 % салыст.
ылғалдылық (конденсациясыз).

Saqlash shartlari:

Jihoz qorong'i, quruq, toza, havo aylanishi yaxshi
bo'lgan kartonda hamda kislot va ishqorlar
saqlanadigan binolardan xoli joyda saqlanishi
lozim. Saqlash joyidagi harorat*¹⁰: -20 °C dan
+60 °C gacha. Saqlash joyidagi namlik*¹⁰: < 80 %
nisbiy namlik (kondensatsiyasiz).
Ishlatish joyidagi harorat: 0 °C dan 40 °C gacha.
Ishlatish joyidagi namlik: 10 % – 80 % nisbiy
namlik (kondensatsiyasiz).

Power, Product Fiche and others

Power requirements

220 V – 240 V AC, 50 Hz

Energy Efficiency Class*¹¹

KD-75XG85xx: A+

KD-65XG85xx: A

KD-55XG85xx: A

Screen size (measured diagonally) (Approx.)

KD-75XG85xx: 189.3 cm / 75 inches

KD-65XG85xx: 163.9 cm / 65 inches

KD-55XG85xx: 138.8 cm / 55 inches

Удельная потребляемая мощность в режиме
[Стандартный]

KD-75XG85xx: 10,4 мВт/см²

KD-65XG85xx: 11,1 мВт/см²

KD-55XG85xx: 13,5 мВт/см²

Quvvat sarfi*¹¹

KD-75XG85xx: 0,01 W/cm²

KD-65XG85xx: 0,01 W/cm²

KD-55XG85xx: 0,01 W/cm²

Power consumption

In [Standard] mode

KD-75XG85xx: 158 W

KD-65XG85xx: 127 W

KD-55XG85xx: 111 W

In [Vivid] mode

KD-75XG8596: 275 W

KD-65XG8596: 221 W

KD-65XG8577: 221 W

KD-55XG8596: 186 W

KD-55XG8577: 186 W

Annual energy consumption*12

KD-75XG85xx: 219 kWh per year

KD-65XG85xx: 176 kWh per year

KD-55XG85xx: 154 kWh per year

Standby power consumption*11*13*14

0.50 W (25 W in software/EPG update mode)

O'chiq rejimdagi quvvat sarfi*11

mavjud emas

Quvvat koeffitsiyenti*11

KD-75XG85xx: 0,92

KD-65XG85xx: 0,89

KD-55XG85xx: 0,89

Display resolution

3,840 dots (horizontal) × 2,160 lines (vertical)

Output Rating

USB 1/2

5 V ---, 500 mA MAX

USB 3

5 V ---, 900 mA MAX

Dimensions (Approx.) (w × h × d)

with Table-Top Stand

KD-75XG85xx: 167.3 × 103.1 × 35.8 cm

KD-65XG85xx: 145.0 × 89.9 × 31.6 cm

KD-55XG85xx: 123.1 × 77.6 × 31.6 cm

without Table-Top Stand

KD-75XG85xx: 167.3 × 96.3 × 5.4 cm

KD-65XG85xx: 145.0 × 83.6 × 5.2 cm

KD-55XG85xx: 123.1 × 71.3 × 5.2 cm

Mass (Approx.)

with Table-Top Stand

KD-75XG85xx: 39.3 kg

KD-65XG85xx: 26.3 kg

KD-55XG85xx: 19.7 kg

without Table-Top Stand

KD-75XG85xx: 37.8 kg

KD-65XG85xx: 25.3 kg

KD-55XG85xx: 18.7 kg

*1 Not all the TV sets have DVB-T2 or DVB-S/S2 technology or satellite antenna terminal.

*2 When 4096 × 2160p is input and [Wide mode] is set to [Normal], the resolution is displayed as 3840 × 2160p. To display 4096 × 2160p, set [Wide mode] setting to [Full 1] or [Full 2].

*3 To support 18 Gbps, set [HDMI signal format] to [Enhanced format].

*4 Refer to the Help Guide for details.

*5 eARC mode is active when [eARC mode] is set to [Auto], [Speakers] is set to [Audio system] and eARC compatible audio system is connected.

*6 Only on limited region/country/TV model.

*7 Примечание: максимальные значения для обоих параметров не могут быть достигнуты одновременно.

*8 Примітка: неможливо отримати максимальні значення для обох параметрів одночасно.

*9 Ескерту: Екі параметрдің ең үлкен мәндеріне бір уақытта жету мүмкін емес.

*10 Eslatma: Har ikkala parametr uchun ham maksimal qiymatga bir vaqtda erishish mumkin.

*11 The energy efficiency label is provided with the device.

*12 Energy consumption in kWh per year, based on the power consumption of the television operating 4 hours per day for 365 days. The actual energy consumption will depend on how the television is used.

*13 Specified standby power is reached after the TV finishes necessary internal processes.

*14 Standby power consumption will increase when your TV is connected to the network.

Note

- Do not remove the dummy card or cover (availability depends on TV model) from TV CAM (Conditional Access Module) slot other than to insert a smart card fitted in CAM.
- Optional accessories availability depends on countries/region/TV model/stock.
- Design and specifications are subject to change without notice.

Notes on Digital TV function

- Digital TV (DVB terrestrial, satellite and cable), interactive services and network functions may not be available in all countries or areas. Some functions might not be enabled or might not operate correctly with some providers and network environments. Some TV service providers may charge a fee for their services.
- This TV supports digital broadcasting using MPEG-2, H.264/MPEG-4 AVC and H.265/HEVC codecs, but compatibility with all operator/service signals, which may change over time, cannot be guaranteed.

Trademark information

- The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.
- Dolby, Dolby Vision, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright © 1992-2015 Dolby Laboratories. All rights reserved.
- "BRAVIA", BRAVIA and BRAVIA Sync are trademarks or registered marks of Sony Corporation.
- Gracenote, the Gracenote logo and logotype, "Powered by Gracenote" logo are either registered trademarks or trademarks of Gracenote, Inc. in the United States and/or other countries.

- Vewd® Core. Copyright 1995-2019 Vewd Software AS. All rights reserved.
- Google, Google Play, Chromecast, YouTube, Android TV and other related marks and logos are trademarks of Google LLC.
- Wi-Fi®, Wi-Fi Alliance® and Wi-Fi Direct® are registered trademarks of Wi-Fi Alliance.
- The Wi-Fi CERTIFIED™ Logo is a certification mark of Wi-Fi Alliance.
- For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS, Inc. DTS, the Symbol, & DTS and the Symbol together are registered trademarks, and DTS Digital Surround is a trademark of DTS, Inc. © DTS, Inc. All Rights Reserved.
- The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Sony Corporation is under license. Other trademarks and trade names are those of their respective owners.
- Netflix is a registered trademark of Netflix, Inc.
- DiSEqC™ is a trademark of EUTELSAT. This TV supports DiSEqC 1.0. This TV is not intended for controlling motorized antennas.
- TUXERA is a registered trademark of Tuxera Inc. in the US and other countries.
- USB-IF SuperSpeed USB Trident logo is a registered trademark of USB Implementers Forum, Inc. 
- All other trademarks are the property of their respective owners.



Справочное руководство
Довідка
Көмекші нұсқаулық

http://rd1.sony.net/help/tv/gaep2/h_aep/

<http://www.sony.net/>

© 2019 Sony Visual Products Inc.