





Operating and installation instructions

Wine conditioning unit



To avoid the risk of accidents or damage to the appliance it is **essential** to read these instructions before it is installed and used for the first time.

Contents

Warning and Safety instructions	4
Caring for the environment	12
How to save energy	13
Guide to the appliance	14
Control panel	14
Symbols	15
Door opening mechanism	17
Accessories	18
Accessories supplied	18
Optional accessories	18
Switching on and off	19
Before using for the first time	19
Operating the wine conditioning unit	19
Switching on	19
Switching off	20
Switching off for longer periods of time	20
Selecting further settings	21
Safety lock 	21
Audible tones 	22
Display brightness 	23
The optimum temperature and air quality	24
The optimum temperature	24
Setting the temperature	25
Temperature range	26
Temperature display	26
Air quality and humidity	26
DynaCool (constant humidity) 	27
Air filtration with the Active AirClean filter	28
Temperature and door alarm	29
Feature lighting	31
Switching the feature lighting on and off	31
Setting the brightness of the feature lighting	31
Lighting duration of the feature lighting	32

Storing wine bottles	33
Wooden shelves	33
Moving the wooden shelves	34
Adjusting the wooden shelves	34
Annotating wooden shelves	35
Inserting the decor shelf	36
Maximum capacity	36
Automatic defrosting	37
Cleaning and care	38
Cleaning agents	38
Before cleaning	39
Interior, appliance door and accessories	39
Cleaning the ventilation gaps	40
Cleaning the door seal	40
Active AirClean filters	41
Replacing the Active AirClean filter	41
What to do if	43
Noises	48
Miele@home	49
After Sales / Guarantee	51
Information for dealers	52
Demo mode ■	52
Electrical connection	54
Installation	55
Location	55
Climate range	55
Ventilation	56
Different types of ventilation gaps	57
Before installing the wine conditioning unit	57
Building-in dimensions	58
Installing the wine conditioning unit	59

Warning and Safety instructions

This wine conditioning unit complies with all statutory safety requirements. Please note that inappropriate use can lead to personal injury and damage to property.

To avoid the risk of accidents and damage to the appliance, please read these instructions carefully before using it for the first time. They contain important notes on installation, safety, use and maintenance.

Miele cannot be held liable for non-compliance with these instructions.

Keep these instructions in a safe place and ensure that new users are familiar with the contents. Pass them on to any future owner.



Glass breakage.

Danger of injury from broken glass.

If installed at altitudes above 1500 m there is a risk of the glass in the door breaking because of changes in air pressure. Shards of glass can cause severe injury if not handled with care.

Correct application

- ▶ This wine conditioning unit is intended for use in the home and in similar environments, for example
 - in shops, offices and similar work settings
 - by the guests in hotels, motels, bed & breakfasts and other typical home settings.

This wine conditioning unit is not intended for outdoor use.

- ▶ The wine conditioning unit is intended for domestic use only for storing wine.

It must not be used for any other purpose.

► The wine conditioning unit is not suitable for storing and keeping cool medicines, blood plasma, laboratory preparations or other such materials or products. Incorrect use of the wine conditioning unit for such purposes can cause deterioration of the items stored. The wine conditioning unit is not suitable for use in areas where there is a risk of explosion.

Miele cannot be held liable for damage resulting from improper or incorrect use of the appliance.

► The wine conditioning unit can only be used by people with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they are supervised whilst using it, or have been shown how to use it in a safe way and recognise and understand the consequences of incorrect operation.

Safety with children

► Children under 8 years of age must be kept away from the wine conditioning unit unless they are constantly supervised.

► Children 8 years and older may only use the wine conditioning unit unsupervised if they have been shown how to use it safely and recognise and understand the consequences of incorrect operation.

► Children must not be allowed to clean or maintain the wine conditioning unit unsupervised.

► Please supervise children in the vicinity of the wine conditioning unit and do not let them play with it.

Warning and Safety instructions

► Danger of suffocation. Packaging, e.g. plastic wrappings, must be kept out of the reach of babies and children. Whilst playing, children could become entangled in packaging or pull it over their head and suffocate.

Technical safety

► The coolant system is tested for leaks. The wine conditioning unit complies with statutory safety requirements and the appropriate EU guidelines.



► This wine conditioning unit contains the coolant Isobutane (R600a), a natural gas which is environmentally friendly. Although it is flammable, it does not damage the ozone layer and does not increase the greenhouse effect.

The use of this coolant has, however, led to a slight increase in the noise level of the appliance. In addition to the noise of the compressor, you might be able to hear the coolant flowing around the system. This is unavoidable, and does not have any adverse effect on the performance of the appliance.

Care must be taken during the transportation and setting up of the wine conditioning unit that no parts of the cooling system are damaged. Leaking coolant can damage the eyes.

In the event of any damage:

- avoid naked flames or anything which creates a spark,
- disconnect the appliance from the mains electricity supply,
- ventilate the room where the wine conditioning unit is located for several minutes, and
- contact the Miele Service Department.

Warning and Safety instructions

- ▶ The more coolant there is in a wine conditioning unit, the larger the room it should be installed in. In the event of a leakage, if the appliance is in a small room, there is the danger of combustible gases building up. For every 11 g of coolant at least 1 m³ of room space is required. The amount of coolant in the appliance is stated on the data plate inside the wine conditioning unit.
- ▶ To avoid the risk of damage to the wine conditioning unit, make sure that the connection data (fuse rating, frequency and voltage) on the data plate corresponds to the household supply. Check that this is the case before connecting the wine conditioning unit. Consult a qualified electrician if in any doubt.
- ▶ The electrical safety of the wine conditioning unit can only be guaranteed when correctly earthed. It is essential that this standard safety requirement is met. If in any doubt please have the electrical installation tested by a qualified electrician.
- ▶ Reliable and safe operation of the wine conditioning unit can only be assured if it has been connected to the mains electricity supply.
- ▶ If the electrical connection cable is faulty it must only be replaced by a Miele authorised service technician to protect the user from danger.
- ▶ Do not connect the wine conditioning unit to the mains electrical supply by a multi-socket adapter or extension lead. These are a fire hazard and do not guarantee the required safety of the appliance.
- ▶ If moisture gets into electrical components, it could cause a short circuit. Therefore, do not operate this wine conditioning unit in areas which are exposed to moisture (e.g in a garage or utility room).

Warning and Safety instructions

- ▶ This wine conditioning unit must not be used in a non-stationary location (e.g. on a ship).
- ▶ Do not use a damaged wine conditioning unit. It could be dangerous. Check the wine conditioning unit for visible signs of damage.
- ▶ For safety reasons, this wine conditioning unit may only be used after it has been built in.
- ▶ The wine conditioning unit must be isolated from the electricity supply during installation, maintenance and repair work.
- ▶ Unauthorised installation, maintenance and repairs can cause considerable danger for the user.
Installation, maintenance and repairs must only be carried out by a Miele authorised technician.
- ▶ While the wine conditioning unit is under guarantee, repairs should only be undertaken by a Miele authorised service technician. Otherwise the guarantee is invalidated.
- ▶ Miele can only guarantee the safety of the appliance when genuine original Miele replacement parts are used. Faulty components must only be replaced by Miele spare parts.

Correct use

- ▶ The wine conditioning unit is designed for use within a certain climate range (ambient temperatures), and should not be used outside this range. The climate range for your wine conditioning unit is stated on the data plate inside the appliance. Installing it in a room with too low an ambient temperature, e.g. a garage, will lead to the wine conditioning unit switching off for longer periods so that it cannot maintain the required temperature.
- ▶ Do not cover or block the air vents as this could impair the efficiency of the appliance, increase the electricity consumption and could cause damage to the components.

Warning and Safety instructions

- ▶ If the wine conditioning unit is used for storing food which contains fat or oil, make sure that it does not come into contact with plastic components as any spillages of oil or fat could cause stress cracks to the plastic and cause it to break or split.
- ▶ Do not store explosive materials in the wine conditioning unit or any products containing propellants (e.g. spray cans). Electrical components could cause flammable vapours to ignite. Danger of fire and explosion.
- ▶ Do not operate any electrical equipment (e.g. an electric ice cream maker) inside the wine conditioning unit. Danger of sparking and explosion.
- ▶ Only use genuine original Miele accessories and spare parts with this appliance. Using accessories or spare parts from other manufacturers will invalidate the guarantee, and Miele cannot accept liability.

Stainless steel appliances

- ▶ Adhesives will damage the stainless steel surface and cause it to lose its dirt-repellent protective coating. Do not use sticky notes, transparent adhesive tape, masking tape or other types of adhesive on the stainless steel surface.
- ▶ The surface is susceptible to scratching. Even magnets can cause scratching.

Cleaning and care

- ▶ Do not use any oils or grease on the door seals, as these will cause the seals to deteriorate and become porous with time.
- ▶ Do not use a steam cleaning appliance to clean this wine conditioning unit.
The steam could reach electrical components and cause a short circuit.

Warning and Safety instructions

► Sharp edged or pointed objects will damage the evaporator, causing irreversible damage to the wine conditioning unit. Do not use sharp edged or pointed objects to

- remove frost and ice,
- remove labels, stickers etc.

Transporting the appliance

- ▶ Always transport the wine conditioning unit in an upright position and in its original transport packaging to avoid damage in transit.
- ▶ Danger of injury and damage. The wine conditioning unit is very heavy and must be transported by two people.

Disposing of your old appliance

- ▶ Before disposing of an old appliance, first make the door latch or lock unusable.
This way you will prevent children from accidentally locking themselves in and endangering their lives.
- ▶ Splashes of coolant can damage the eyes. Be careful not to damage any part of the pipework whilst awaiting disposal, e.g. by
 - puncturing the coolant channels in the condenser,
 - bending any pipework, or
 - scratching the surface coating.

Caring for the environment


Disposal of the packing material

The packaging is designed to protect the wine conditioning unit from damage during transportation. The packaging materials used are selected from materials which are environmentally friendly for disposal and should be recycled.

Recycling the packaging reduces the use of raw materials in the manufacturing process and also reduces the amount of waste in landfill sites.

Disposal of your old appliance

Electrical and electronic appliances often contain valuable materials. They also contain specific materials, compounds and components, which were essential for their correct function and safety. These could be hazardous to human health and to the environment if disposed of with your domestic waste or if handled incorrectly. Please do not, therefore, dispose of your old appliance with your household waste.

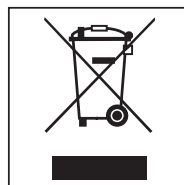

Please dispose of it at your local community waste collection / recycling centre for electrical and electronic appliances, or contact your dealer or Miele for advice. You are also responsible (by law, depending on country) for deleting any personal data that may be stored on the appliance being disposed of.

Take care not to damage the pipework at the back of your wine conditioning unit before or during transportation to an authorised collection depot. In this way, coolant in the pipework and oil in the compressor will be contained, and will not leak into the environment.

Please ensure that your old appliance presents no danger to children while being stored awaiting disposal. See "Warning and Safety instructions" for more information.

How to save energy

	Normal energy consumption	Increased energy consumption
Installation / Maintenance	In a ventilated room.	In an enclosed, unventilated room.
	Protected from direct sunlight.	In direct sunlight.
	Not near to a heat source (radiator, oven).	Near to a heat source (radiator, oven).
	Where the ideal ambient room temperature is approx. 20 °C.	Where the ambient room temperature is above 25 °C.
	Ventilation gaps uncovered and dusted regularly.	Ventilation gaps covered or dusty.
Temperature setting	10 to 12 °C	The lower the temperature, the higher the energy consumption.
Use	Wooden shelves arranged as they were when the appliance was delivered.	
	Only open the door when necessary and for as short a time as possible. Store wine bottles in an organised way.	Frequent opening of the door for long periods will cause a loss of coldness. The wine conditioning unit works harder to cool down and the compressor runs for longer periods.
	Do not over-fill the appliance to allow air to circulate.	Poor air circulation will cause a loss of coldness.









Guide to the appliance

Control panel




- ① For switching the whole wine conditioning unit on and off
- ② Optical interface (for Service technicians only)
- ③ For switching the DynaCool function (constant humidity) on and off
- ④ For switching the feature lighting on and off
- ⑤ For setting the temperature (V for colder)
- ⑥ OK sensor for confirming a selection
- ⑦ For setting the temperature (^ for warmer)
- ⑧ Sensor for accessing or leaving settings mode
- ⑨ For switching off the temperature or door alarm
- ⑩ Display with temperature and symbols (symbols only visible in settings mode; see chart for an explanation of the symbols)

Symbols

Symbol	Meaning	Function
	Safety lock	To prevent inadvertent switching off and altering of settings
	Audible tones	Choice of sensor tone and door alarm tone
	Miele@home	Only visible when a communication module or communication stick is fitted and signed on (see "Miele@home")
	Demo mode (only visible when Demo mode is switched on)	For switching off Demo mode
	Display brightness settings	For adjusting the brightness of the display
	Active AirClean filters	Lights up when the active charcoal filter needs changing
	Mains connection	Confirms that the wine conditioning unit is connected to the electricity supply when it is not switched on; flashes in the event of a power cut
	Alarm	Lights up when there is a door alarm; flashes when there is a temperature alarm, power cut or a fault

Guide to the appliance

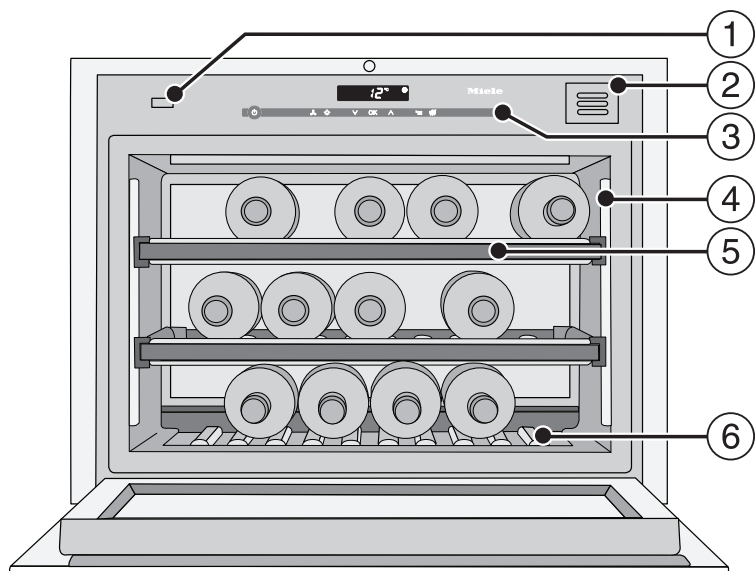


- ① Push2open door catch
- ② Active AirClean filter
- ③ Control panel
- ④ Lighting
- ⑤ Wooden shelves with labels (FlexiFrames with Noteboard)
- ⑥ Decor rack
(the decor rack can be taken out) The data plate is located underneath the decor rack.

Door opening mechanism

The Push2open system on your wine conditioning unit makes it easy to open the door. The appliance door is sensitive to pressure.

The Push2open system is deactivated at the factory. The system has to be activated by touching the On/Off sensor once the appliance has been installed in the niche (see "Switching on and off").

To open the door

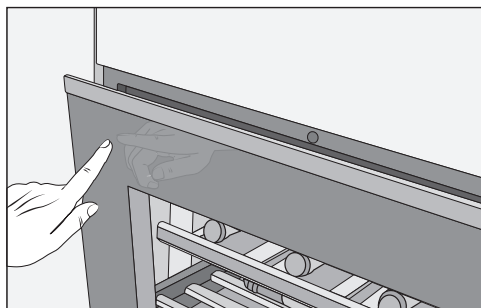

- Press briefly **against the top left hand side of the appliance door** and then release it. The door will then open a little way automatically.

- Then pull the door fully open.



Danger of damage!

Do not subject the door to any pressure when it is open. Do not place anything on it whilst open.

To protect against inadvertent opening: if you do not pull the door open, it will close again by itself after approx. 3 seconds.

To close the door

- Push the door shut.



Danger of damage!

To avoid damage to the door opening mechanism:

Do not obstruct the appliance door while it is opening. Do not push in or hold onto the door catch while the door is closing.

Please be aware that using magnets in front of the wine conditioning unit door can cause it to open by mistake. This is caused by the door closing mechanism on the wine conditioning unit.

Accessories

Accessories supplied

Chalk

Use the chalk to annotate the magnetic strips on the wooden shelves to identify your wines quickly and easily.

Active AirClean filter

The Active AirClean filter ensures optimum air quality in the wine conditioning unit by filtering the incoming air.

Wooden slats for fitting across the rack

Longer bottles including Magnums can be stored in the wine conditioning unit by fitting the longer wooden slats supplied across the rack

Optional accessories

A range of useful Miele accessories and care products are available for your wine conditioning unit.

Multi-purpose microfibre cloth

The microfibre cloth is suitable for removing fingerprints and light soiling from surfaces such as stainless steel, glass, plastic and chrome without the use of chemicals.

Active AirClean filters

See "Accessories supplied".

Accessories are available to order via the Miele Webshop, from Miele directly (see back cover for contact details) or from your Miele dealer.

Before using for the first time

Packaging material

- Remove all packaging material from the inside of the appliance.

Protective foil (depending on model)

Stainless steel surfaces have a layer of protective foil to prevent scratching during transportation.

- Do not remove the foil until the wine conditioning unit has been installed in its final location. Start at one of the top corners.

Cleaning

Please refer to the relevant instructions in "Cleaning and care".


- Clean the inside of the appliance and the accessories.

Operating the wine conditioning unit

A light touch of the finger on the sensors is all that is required to operate this wine conditioning unit.


A tone will sound each time a sensor is touched. You can deactivate this, if you wish (see "Selecting further settings - Audible tones").


Switching on

When the wine conditioning unit is connected to the electrical supply, the mains connection symbol  will appear in the display after a short while.



- Touch the On/Off sensor.

The mains connection symbol  will go out and the wine conditioning unit will start to cool.

The first time the appliance is switched on the alarm symbol  will flash until the selected temperature has been reached.


The interior lighting will come on when the door is opened.


Switching on and off

Switching off



- Touch the On/Off sensor.

If this does not work, the safety lock  is still activated.

The temperature display will go out and the mains connection symbol  will appear.

The interior lighting will go out and the cooling process will be switched off.

Switching off for longer periods of time

If the wine conditioning unit is not going to be used for a longer period of time, e.g. whilst on holiday:

- switch it off,
- disconnect it from the mains,
- clean it out, and
- leave the door ajar to air the wine conditioning unit and avoid odours building up inside it.

If, during a long absence, the wine conditioning unit is switched off but not cleaned and the door left shut, there is a danger of mould building up inside the appliance.

Selecting further settings

Certain settings on the wine conditioning unit can only be selected in settings mode.

The door alarm is automatically disabled when the appliance is in settings mode.

Safety lock


The safety lock can be activated to prevent:

- the appliance being switched off by mistake,
- the temperature being changed by mistake,
- DynaCool being switched on by mistake,
- the feature lighting being switched on by mistake.

Activating or deactivating the safety lock




- Touch the settings sensor.




 
All symbols available for selection will appear in the display and the  symbol flashes.



- Touch the OK sensor to confirm your selection.


The last selected setting flashes and the  symbol lights up in the display.



- By touching the  or  sensor, you can now select whether the safety lock is activated or deactivated:
: the safety lock is deactivated
: the safety lock is activated




- Touch the OK sensor to confirm your selection.

The selected setting is applied, the  symbol flashes.



- Touch the settings sensor to leave settings mode.
Otherwise the appliance exits settings mode automatically after approximately one minute.

The  symbol will appear in the display when the lock is activated.

Selecting further settings

Audible tones 🎵

The wine conditioning unit has audible tones such as the sensor tone and the door and temperature alarms.

You can switch the sensor tone or the door alarm tone on or off but you cannot deactivate the temperature alarm.

There are four settings to choose from. Option 3 is set the factory, i.e. the sensor tone and the door alarm are switched on.

Switching audible tones on/off



- Touch the settings sensor.

All symbols available for selection will appear in the display and the 🔒 symbol flashes.



- Touch the sensors for setting the temperature (Δ or ∇) repeatedly until the 🎵 symbol flashes.



- Touch the OK sensor to confirm your selection.

The last selected setting flashes and the 🎵 symbol lights up in the display.



- By touching the Δ or ∇ sensor you can now select:

0: sensor tone off; door alarm off

1: sensor tone off; door alarm on (after 4 minutes)

2: sensor tone off; door alarm on (after 2 minutes)

3: sensor tone on; door alarm on (after 2 minutes)



- Touch the OK sensor to confirm your selection.

The selected setting is applied, the 🎵 symbol flashes.



- Touch the settings sensor to leave settings mode.

Otherwise the appliance exits settings mode automatically after approximately one minute.

Display brightness ☀


The display brightness can be adjusted to suit lighting conditions in the room.

The display brightness can be adjusted in steps from 1 to 3. The factory default setting is 3 (maximum brightness).

Altering the display brightness



- Touch the settings sensor.

All symbols available for selection will appear in the display and the  symbol flashes.



- Touch the sensors for setting the temperature (^ or v) repeatedly until the ☀ symbol flashes.



- Touch the OK sensor to confirm your selection.

The last selected setting flashes and the ☀ symbol lights up in the display.



- By touching the ^ or v sensor you can now alter the brightness of the display:
1: dimmest setting
2: medium setting
3: brightest setting.



- Touch the OK sensor to confirm your selection.

The selected setting is applied, the ☀ symbol flashes.



- Touch the settings sensor to leave settings mode.
Otherwise the appliance exits settings mode automatically after approximately one minute.

The optimum temperature and air quality

Wine keeps on maturing depending on the surrounding conditions. The length of time for which wine can be kept in good condition will therefore depend not only on the temperature but also on the air quality.

The wine conditioning unit with its constant ideal temperature, increased air humidity and odour free atmosphere offers the perfect conditions for storing your wine.

It also guarantees a vibration-free environment (in contrast to a refrigerator) so that the maturing process is not disturbed.

The optimum temperature

Wine can be stored at a temperature between 6 and 18 °C. If you are storing white and red wines together, select a temperature between 12 and 14 °C. This is suitable for both white and red wines. Red wine should be taken out of the wine conditioning unit and opened at least two hours before drinking to allow it to breathe and develop its aroma.

At too high a temperature (over 22 °C) wine matures too quickly, which prevents the aromas from developing further. Wine cannot mature fully at too low a temperature (below 5 °C).

Fluctuations in temperature put wine under stress and interrupt the maturing process. It is therefore very important to maintain a constant temperature.

Type of wine	Recommended drinking temperature
Light, fruity reds:	+14 °C to +16 °C
Full-bodied reds:	+18 °C
Rosé wines:	+8 °C to +10 °C
Delicate, aromatic whites:	+8 °C to +12 °C
Full-bodied or sweet whites:	+12 °C to +14 °C
Champagne, sparkling white wines:	+6 °C to +10 °C

Tip: Store the wine 1 or 2°C cooler than the recommended drinking temperature as it warms up a little when poured into the glass.

Tip: Full-bodied reds should be opened for 2-3 hours before drinking to allow the wine to breathe and develop its aroma.

The optimum temperature and air quality

Safety device in case of low ambient temperatures

The appliance is equipped with a safety thermostat to protect your wine against a sharp drop in temperature. If the external temperature should fall, a heater element switches on automatically to keep the temperature inside as constant as possible. If the ambient temperature continues to fall, the appliance switches itself off automatically.

Setting the temperature

- Use the two sensors underneath the display to set the temperature.

By touching the sensor



- the temperature will get colder



- the temperature will get warmer.



- Touch the OK sensor to confirm your selection
or
- wait approximately 5 seconds after the last touch of a sensor.

The temperature being set will flash in the display.

The following information shows in the display while the sensors are being touched:

- Touching a sensor once: the **last temperature selected** flashes.
- Each subsequent touch of the sensor: adjusts the temperature shown in 1 °C steps.
- Leaving a finger on the sensor changes the temperature continuously.

A tone will sound (if the sensor tone is switched on) when the lowest or highest possible temperature is reached.

Approximately 5 seconds after the last time a sensor has been touched, the **current** temperature inside the appliance is automatically shown.

When the temperature is altered, there is a short delay until the temperature selected is set.

The temperature display on the control panel always shows the **actual** temperature.

The optimum temperature and air quality

Temperature range

The temperature can be set between 5 °C and 20 °C.

Temperature display

In normal operation the temperature display shows the actual temperature in the appliance.

If the temperature is not within the range that the appliance is able to display, dashes will light up in the temperature display.

Depending on the ambient temperature and the temperature setting, it can take the appliance a few hours to reach the temperature required and for this temperature to then be shown as a constant temperature in the display.

Air quality and humidity

A conventional refrigerator with its low humidity level is not the best place to store wine. It is very important to store wine in an atmosphere with a high humidity level so that the corks remain moist on the outside. Low humidity causes corks to dry out from the outside so they do not seal the bottles as tightly. Wine should be stored lying down to keep the corks moist from the inside too. Air entering the bottle will inevitably spoil the wine.

Do **not** introduce additional moisture into the air, e.g. by placing a dish of water in the appliance, as this will lead to condensation on the interior walls, which can cause corrosion damage.

The optimum temperature and air quality

DynaCool (constant humidity)

DynaCool raises the relative humidity inside the appliance. DynaCool also distributes the humidity and the temperature evenly around the interior so that you can store all your wine under exactly the same excellent conditions. This will create a stable climate in the cabinet which imitates that of a wine cellar.

Switching on DynaCool

If you would like to use the wine conditioning unit to store wine long term, we recommend that you keep the DynaCool function switched on.



- Touch the sensor for switching the DynaCool function on and off so that it is highlighted in yellow.

Even if the DynaCool function has not been switched on, the fans in the appliance will come on automatically when the cooling system switches on to ensure your wine is kept in the optimum climate.

The fans automatically switch off when the door is open.

Switching off DynaCool

The appliance uses slightly more energy and is a little noisier when the DynaCool function is switched on. You can switch it off now and then if you wish.



- Touch the sensor for switching the DynaCool function on and off so that it is no longer highlighted in yellow.

The optimum temperature and air quality

Air filtration with the Active AirClean filter


The Active AirClean filter achieves optimum air quality by filtering the incoming air.

Fresh air from the room enters the appliance via the Active AirClean filter.

The fans (DynaCool function) then distribute the air evenly throughout the cabinet.


Filtering the incoming air through the Active AirClean filter ensures that all the air entering the appliance is fresh and free from dust and odours.

This also ensures your wine does not absorb any unwanted odours through the corks.

Replace the Active AirClean filter regularly. The  symbol will appear in the display to remind you (see "Active AirClean filter").

This wine conditioning unit is equipped with an alarm system so that the temperature cannot rise or fall unnoticed, thus possibly damaging the wine.


Temperature alarm

If the temperature becomes too warm or too cold, the alarm symbol  will flash in the display.

An alarm will also sound.

Audible and visual signals will be activated, for example,

- when the wine conditioning unit is switched on if the temperature differs greatly from the set temperature,
- when too much warm ambient air enters the cabinet when bottles are being rearranged or taken out,
- when a large number of bottles are stored for the first time,
- in the event of a power cut.

The alarm will stop and the alarm symbol  will go out as soon as the temperature has dropped down to the correct level again.


Switching the temperature alarm off early

If the noise disturbs you, you can switch the alarm off if you wish.




- Touch the sensor for switching off the temperature alarm.


The alarm will stop.

The alarm symbol  will continue to flash until the set temperature has been reached.

Temperature and door alarm

Door alarm

An alarm will sound if the door has been left open for longer than 2 minutes. The alarm symbol  will light up in the display.

The alarm will stop and the alarm symbol  will go out as soon as the door is closed.


Switching the door alarm off early

If the noise disturbs you, you can switch the alarm off if you wish.



- Touch the sensor for switching off the door alarm.

The alarm sound will stop.

The alarm symbol  will continue to be lit up until the door is closed.

If the alarm does not sound in the event of a door alarm, then the audible tone has been switched off in settings mode (see "Selecting further settings - Audible tones").

The interior lighting can be set to remain on when the door is closed so your wines can be on display at all times.

Thanks to the use of LED lighting, the wine will not be adversely affected by heat or UV light.

Switching the feature lighting on and off



- Touch the On/Off sensor for the feature lighting so that it is highlighted in yellow.

The interior lighting is now switched on, even when the door is closed.

To switch the feature lighting off again:

- Touch the On/Off sensor for the feature lighting so that it is no longer highlighted in yellow.

The interior lighting is now switched off when the appliance door is closed.

Setting the brightness of the feature lighting

The brightness of the feature lighting can be adjusted.



- Touch the On/Off sensor for the feature lighting so that it is highlighted in yellow.
- Touch the sensor for the feature lighting again for approx. four seconds until *l* flashes in the display (after two seconds *h* will flash).
- Use the \vee and \wedge sensors for altering the temperature to set the feature lighting brightness. Touch and hold the sensors. The brightness will immediately start to adjust gradually up or down.

By touching the sensor



- the lighting becomes dimmer



- the lighting becomes brighter.



- Touch the OK sensor to confirm your choice.

Feature lighting

The selected brightness is saved and the temperature reappears in the display.

As soon as the appliance door is closed, the set brightness for the feature lighting takes effect. When the appliance door is opened, the interior lighting returns to its normal level.

Lighting duration of the feature lighting

The lighting duration for the feature lighting is set to 30 minutes as standard.

The lighting duration can be set to 30, 60, 90 minutes up to 00 (unlimited). The feature lighting will have the brightness setting you have selected previously.

- Open the appliance door.



- Touch the On/Off sensor for the feature lighting so that it is highlighted in yellow.
- Touch the sensor for the feature lighting again for approx. two seconds until *h* flashes in the display.
- Use the \vee and \wedge sensors for altering the temperature to set the feature lighting duration.
The duration (in minutes) will flash in the display.

By touching the sensor



- lighting duration is reduced by 30 minutes



- lighting duration is increased by 30 minutes.



- Touch the OK sensor to confirm your choice.

The selected lighting duration is saved and the temperature reappears in the display.

The lighting duration set starts anew whenever the appliance door is opened and closed.

Caution. Laser beam class 1M

Do not remove the lighting covers. Should the covers be damaged or need to be removed due to damage, do not use optical instruments (magnifying glass or similar) to look at the lighting.

Vibration and movement have a negative effect on the maturing process which can affect the taste of the wine.

To avoid disturbing other bottles when removing a bottle of wine, store bottles of the same type beside each other on the same shelf. Avoid stacking bottles on top of one another on the wooden shelves.


Always place the bottles lying down so that the corks can be kept moist on the inside and air is prevented from getting into the bottles.



Danger of injury.

Take care that wine bottles do not fall out of the appliance when you pull out a wooden shelf. Wine bottles could also become wedged in the shelf above.

Wooden shelves

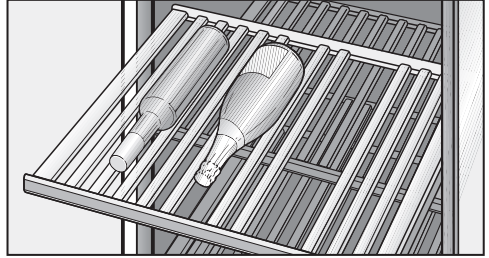


The wooden shelves are on telescopic runners which can be pulled out to make it easier to store and remove bottles.


Storing wine bottles

Moving the wooden shelves

The wooden shelves can be removed and replaced again if required.

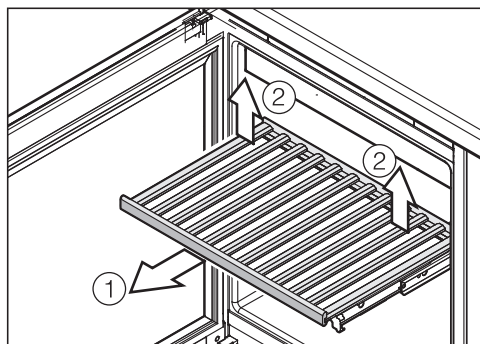


- Pull the wooden shelf out until it stops ①.
- Release the wooden shelf at the back, lifting the shelf on the left and right at the same time ②.
- Lift the wooden shelf forwards to remove it.

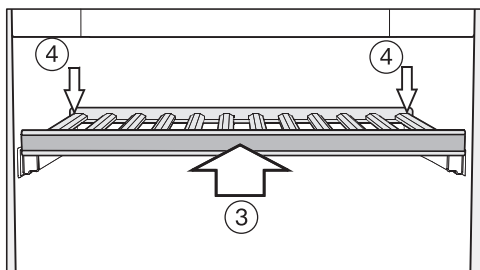

- Slide the wooden shelf back into the appliance as far as it will go ③.
- Push the wooden shelf right back so that it clicks into place at the front.
- Press down on the back of the wooden shelf until it clicks into place at the back ④.

Adjusting the wooden shelves

The slats in the wooden shelves can be individually adjusted to suit, so that every bottle is stored in perfect safety regardless of shape or size.

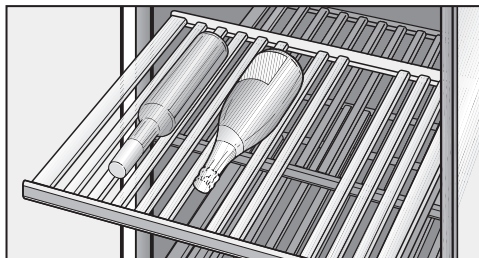


- Simply lift individual slats to move or remove them from the wooden shelves.

The slats in the decor shelf (at the bottom of the appliance) cannot be adjusted.

Storing wine bottles

Storing wine bottles across the appliance

Longer bottles including Magnums can be stored in the wine conditioning unit by fitting the longer wooden slats supplied across the rack

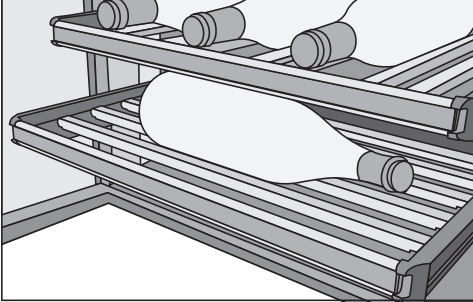


- To store longer bottles in the appliance fit the longer wooden slats supplied across one of the shelves.

Annotating wooden shelves

For quick and easy identification of the wines being stored, you can annotate the blackboard surface on the magnetic strips on the wooden shelves.

Use the chalk supplied. You can write directly on the magnetic strip or remove it from the wooden shelf to do so:

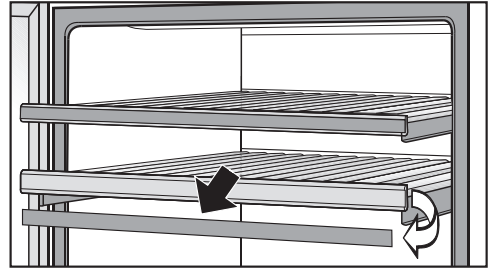

- Hold the magnetic strip by the sides and pull it forwards. The magnetic strip is held on the wooden shelf by magnets.
- Annotate the magnetic strip with the chalk supplied and replace it on the front of the wooden shelf.
- The magnetic strip can be wiped clean with a damp cloth.


Use clean water only to wipe the magnetic strips. **Do not use a cleaning agent** as this would damage the blackboard surface on the magnetic strips.

Storing wine bottles

Inserting the decor shelf

- Place the decor shelf at the very bottom of the appliance (see "Description of the appliance").

Maximum capacity

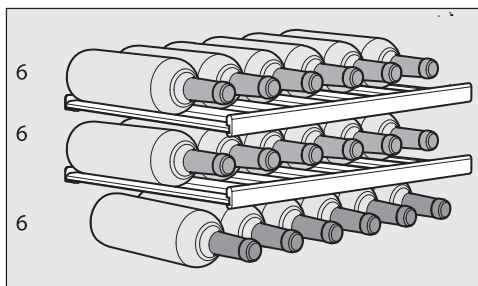

Up to 18 Bordeaux bottles (0.75 l) can be stored in the appliance.

The maximum number of bottles can only be achieved by using all of the wooden shelves (excluding the ones that fit across the rack).



Please note that each wooden shelf has a maximum load-bearing capacity of 25 kg. Do not stack bottles more than 2 layers high on the wooden shelves.

The wine conditioning unit defrosts automatically.

Cleaning and care

Do not let water get into the electronic unit or the lighting.

Do not use a steam cleaning appliance to clean this wine conditioning unit. The steam could reach electrical components and cause a short circuit.

The data plate inside the wine conditioning unit must not be removed. It contains information which is required in the event of a service call.

Cleaning agents

To avoid damaging the surfaces of your appliance, **do not use:**

- cleaning agents containing soda, ammonia, acids or chlorides
- cleaning agents containing descaling agents
- abrasive cleaning agents, e.g. powder cleaners and cream cleaners
- solvent-based cleaning agents
- stainless steel cleaning agents
- dishwasher cleaner
- oven sprays
- glass cleaner (except on the glass in the appliance door)
- hard, abrasive sponges and brushes, e.g. pot scourers
- melamine eraser blocks
- sharp metal scrapers

Cleaning and conditioning agents used inside the wine conditioning unit must be food safe.

We recommend using lukewarm water with a little washing-up liquid to clean surfaces of the appliance.

The following pages contain important information on cleaning.

Before cleaning

- Switch off the wine conditioning unit.
- Disconnect it from the mains.
- Take any wine bottles out of the wine conditioning unit and store them in a cool place.
- Take out all other removable parts for cleaning.
- Remove the magnetic strips from the wooden shelves before cleaning them (see "Annotating wooden shelves").

Interior, appliance door and accessories

Clean the wine conditioning unit at least once a month.

Remove soiling immediately to prevent it from drying on.

- Clean the interior with a solution of lukewarm water and a little washing-up liquid.
- The wooden shelves should only be wiped with a well wrung-out damp cloth. **They must not be allowed to get wet.**
- Use clean water only to wipe the magnetic strips at the front of the wooden shelves. **Do not use a cleaning agent** as this would damage the blackboard surface on the magnetic strips.
- After cleaning, wipe the interior and accessories with a damp cloth, and dry with a soft cloth. Leave the door open to air the appliance for a short while.

- Clean the appliance door with a proprietary glass cleaner.

Stainless steel appliances

The CleanSteel front has a high quality, special finish which is resistant to soiling and is very easy to clean.



Do not use stainless steel cleaning agent to clean these surfaces. This will damage them.

Do not use Miele stainless steel conditioning agent on these surfaces. This will cause noticeable smearing.

Cleaning and care

Cleaning the ventilation gaps

A build-up of dust will increase the energy consumption of the appliance.

- The ventilation gaps should be cleaned on a regular basis with a brush or vacuum cleaner (e.g. use the dusting brush for Miele vacuum cleaners)

Cleaning the door seal

Do not use any grease or oil on the door seal as these will cause the seal to deteriorate and become porous over time.

- The door seal should be cleaned regularly with clean water, and then wiped dry with a soft cloth.


After cleaning

- Replace all shelves and accessories in the wine conditioning unit.
- Reconnect to the mains and switch the wine conditioning unit back on.
- Place the wine bottles back in the wine conditioning unit and close the door.


Active AirClean filters

Fresh air from the room enters the wine conditioning unit through the Active AirClean filter. Filtering the incoming air through the Active AirClean filter ensures that all the air entering the appliance is fresh and free from dust and odours.


The reminder to change the Active AirClean filter will appear every 12 months at the latest.

When the Change Active AirClean filter symbol  lights up in the display, the Active AirClean filter needs to be changed.


Replacing the Active AirClean filter

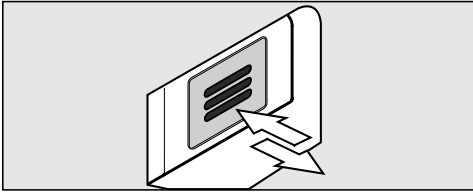


- Push the filter in and then release it.

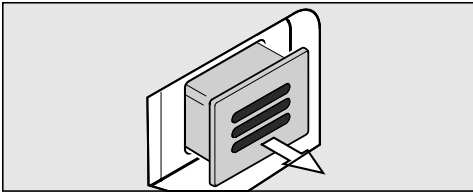


- Pull the filter out.

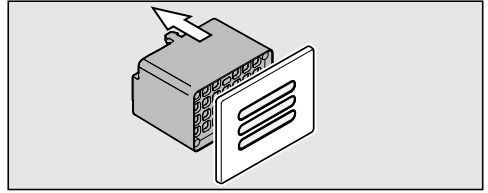

- Detach the back part of the filter from the cover.

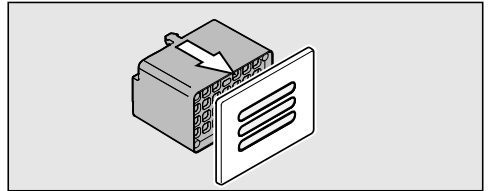

- Push the new filter onto the cover.

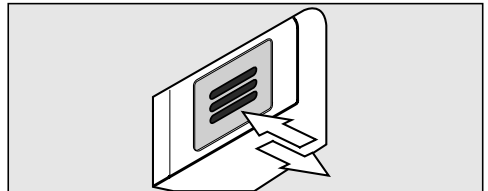

- Insert the new filter.
- Push the filter in and then release it. The filter will lock into place automatically with an audible click.


Active AirClean filters can be obtained from your Miele dealer, Miele or from the Miele website.

Active AirClean filters


To confirm the filters have been changed



- Touch the settings sensor.


All symbols available for selection will appear in the display and the  symbol flashes.



- Touch the sensors for setting the temperature (✓ or ^) repeatedly until the  symbol flashes.



- Touch the OK sensor to confirm your selection.


The 1 will flash in the display (means: Active AirClean filter is fitted in the appliance), the  symbol lights up.



- Touch the symbols for setting the temperature (✓ or ^) repeatedly, until the 2 symbol is displayed (means: the counter has been reset).



- Touch the OK sensor to confirm your selection.

The selected setting is applied, the  symbol flashes.



- Touch the settings sensor to leave settings mode.
Otherwise the appliance exits settings mode automatically after approximately one minute.

The  in the display goes out.

Some minor problems can be corrected without contacting Miele.





If, having followed the suggestions below, you still cannot resolve the problem, please contact Miele.

To prevent unnecessary loss of temperature it is advisable not to open the door while waiting for the wine conditioning unit to be serviced.



Unauthorised installation, maintenance and repairs can cause considerable danger for the user.






Installation, maintenance and repairs must only be carried out by a Miele authorised technician.

Problem	Cause and remedy
The wine conditioning unit is not getting cold, the interior lighting does not come on when the door is opened, and the display is not lit up.	The wine conditioning unit is not switched on and the mains connection symbol  is lit up in the display. ■ Switch on the wine conditioning unit.
	The plug is not inserted in the socket correctly. ■ Insert the plug correctly into the socket. The mains connection symbol  appears in the display when the wine conditioning unit is switched off.
	Check whether the mains fuse has tripped. If it has there could be a fault with the appliance, the household electrical wiring or another electrical appliance. ■ Contact a qualified electrician or Miele.
The  symbol is displayed, the wine conditioning unit is not getting cold. However, the appliance and the interior lighting are working fine.	Demo mode is turned on and the  symbol is illuminated in the display. ■ Switch off Demo mode (see "Information for dealers - Demo mode").

What to do if ...

Problem	Cause and remedy
The compressor is switching on more frequently and for longer periods of time, the temperature in the wine conditioning unit is falling.	The temperature in the wine conditioning unit is set too low. ■ Adjust the temperature.
	The appliance door is not properly closed. ■ Check that the appliance door closes properly.
	The appliance door has been opened too frequently. ■ Only open the door when necessary and for as short a time as possible.
	The ventilation gaps have been covered over or become dusty. ■ Do not cover the ventilation gaps and dust them regularly.
	The ambient temperature is too warm. ■ Decrease the ambient temperature.

Display warnings


Message	Cause and remedy
The alarm symbol  is lit up in the display and an alarm is also sounding.	<p>The door alarm has been activated.</p> <ul style="list-style-type: none"> ■ Close the appliance door. The alarm symbol  will go out and the alarm will stop.
The alarm symbol  is flashing in the display and an alarm is also sounding.	<p>The temperature in the wine conditioning unit has risen higher or fallen lower than the temperature which has been set.</p> <p>This could be due to:</p> <ul style="list-style-type: none"> – the appliance door being opened too often, – blocked ventilation gaps, – a lengthy interruption to the power supply. <ul style="list-style-type: none"> ■ The alarm will stop and the alarm symbol  will go out as soon as the cause of the alarm has been rectified.
The Change Active AirClean filter symbol  is lit up.	<p>This is the reminder to change the Active AirClean filter.</p> <ul style="list-style-type: none"> ■ Replace the Active AirClean filter and then confirm the filter change in settings mode (see "Active AirClean Filter").
A dash is lit up up/flash- ing in the display.	<p>Only temperatures within the range the wine conditioning unit can display will be shown.</p>
"F1" to "F3" or "S1" to "S3" appear in the display.	<p>There is a fault.</p> <ul style="list-style-type: none"> ■ Call the Service Department.

What to do if ...

The interior lighting is not working.

Problem	Cause and remedy
The LED interior lighting is not working.	The wine conditioning unit is not switched on. ■ Touch the On/Off sensor.
	To avoid overheating, the LED lighting switches itself off automatically after approx. 15 minutes if the door is left open. If this is not the case, then there is a fault. <div>Caution. Laser beam class 1M Do not remove the lighting covers. Should the covers be damaged or need to be removed due to damage, do not use optical instruments (magnifying glass or similar) to look at the lighting.</div> ■ Call the Miele Service Department.
The LED interior lighting is on even when the door is closed.	The feature lighting is switched on. ■ Switch the feature lighting off (see "Feature lighting").


General problems with the wine conditioning unit

Problem	Cause and remedy
There is no audible alarm although the door has been open for a long time.	This is not a fault. The alarm tone has been switched off in settings mode (see "Selecting further settings - Audible tones").
You cannot switch the wine conditioning unit off.	The safety lock is activated. The  symbol is lit up in the display. ■ Deactivate the lock (see "Selecting further settings - Activating or deactivating the lock").
The slats on the wooden shelves are warping.	Volume change due to moisture absorption or drying out is a typical characteristic of wood. An increase in humidity will cause wooden components to warp, which can lead to cracking. Knots and grain patina are part of the natural character of wood.
Mildew has begun to form on the wine bottle labels.	Mildew can begin to form on the labels, depending on the type of label adhesive used. ■ Clean the wine bottles and remove any adhesive residue.
A white deposit has formed on the wine bottle corks.	The corks have oxidised due to contact with the air. ■ Use a dry cloth to wipe off the deposit. The deposit will not affect the quality of the wine.

Noises

Normal noises	What causes them
Brrrrr ...	A humming noise is made by the motor (compressor). This noise can get louder for brief periods when the motor switches on.
Blubb, blubb ...	A gurgling noise can be heard when coolant is circulating through the pipes.
Click ...	Clicking sounds are made when the thermostat switches the motor on and off.
Sssrrrrr ...	On multi-zone wine conditioning units you can sometimes just hear the sound of the fan inside the appliance.
Crack ...	A cracking sound can be heard when material inside the wine conditioning unit expands.
Remember that the noise of the compressor and the coolant circulating in the system is unavoidable.	

Noises that you can easily rectify	Possible cause	Remedy
Rattling, vibrating	The wine conditioning unit is uneven.	Realign the wine conditioning unit using a spirit level, by raising or lowering the screw feet underneath the appliance.
	Shelves are unstable or sticking.	Check all removable items and refit them correctly.
	Bottles or containers are touching each other.	Separate them.
	The transport cable clips are hanging loose at the back of the appliance.	Remove the cable clips.

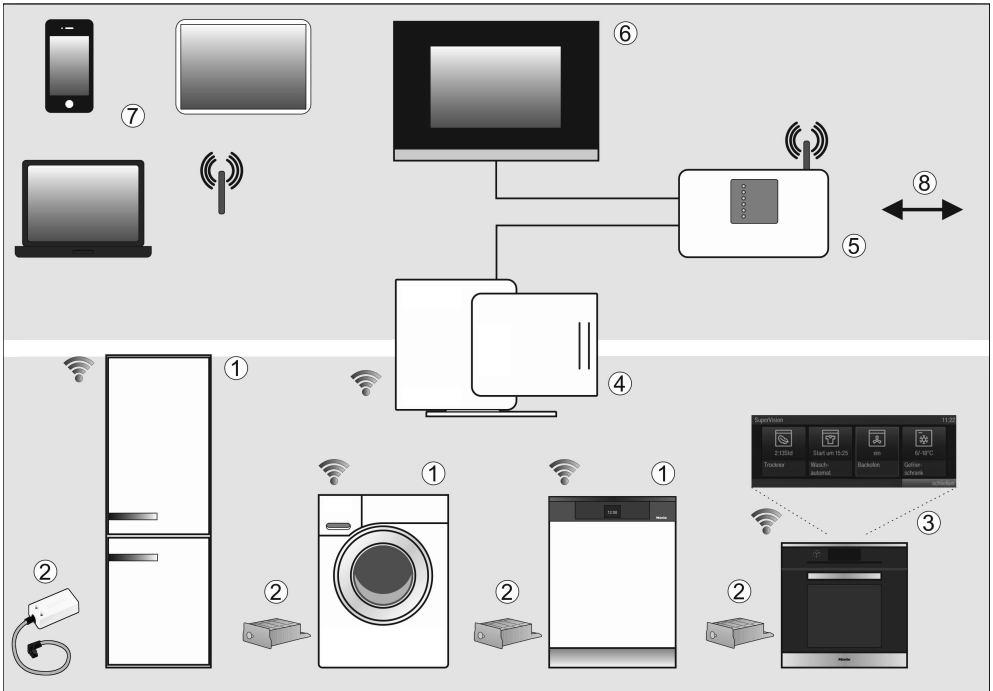

- ① Miele@home communication enabled appliance
- ② Miele@home communication stick XKS3000Z or communication module XK-M3000Z
- ③ Miele@home communication enabled Master appliance with SuperVision functionality
- ④ Miele@home Gateway XGW3000
- ⑤ WiFi router
- ⑥ Connection to a Home automation system
- ⑦ Smartphone, Tablet PC, Laptop
- ⑧ Internet connection

Please note that the Miele@home and SuperVision system is currently only available in selected countries.

This appliance ①/③ is network enabled and can be connected to the Miele@home system via a communication module or communication stick ② and a conversion kit where required.

The Miele@home system enables network enabled appliances to send information via the household wiring network to a master appliance ③ such as an oven with SuperVision functionality, about their operational status, as well as information about the progress of the programme.

Displaying information and controlling appliances

- SuperVision master appliance ③
The status of other signed on appliances can be shown in the display of some network enabled appliances.
- Mobile device ⑦
A PC, Notebook, Tablet PC or a Smartphone can be used within the reception area of a household WLAN ⑤ to display status information about signed on appliances and carry out certain functions.
- Household network ⑥
The Miele@home system enables smart living. The Miele@home Gateway ④ allows other network enabled appliances to integrate into the household bus system.

- In Germany, network enabled appliances can be integrated into the QIVICON Smart Home Platform instead of the Miele@home Gateway (www.qivicon.de).

SmartStart (depending on household appliance)

Smart grid enabled appliances can be started automatically at a time when electricity costs are favourable or when a favourable supply of electricity is available (e.g. from a solar power system).

Optional accessories (depending on household appliance)

- Communication module XKM3000Z or communication stick XKS3000Z
- Conversion kit for communication system XKV
- Miele@home Gateway XGW3000

These accessories are supplied with their own installation and operating instructions.

Further information

Further information regarding Miele@home is available on the internet and in the instruction manuals of the various Miele@home components.

After sales service

In the event of any faults which you cannot easily remedy, please contact

- your Miele Dealer, or
- the Miele Service Department.

See end of this booklet for contact details.

When contacting your Dealer or Miele, please quote the model and serial number of your appliance.

This information is given on the data plate inside the wine conditioning unit.

Please note that telephone calls may be monitored and recorded for training purposes.

Guarantee: U.K.

In the U.K. the appliance is guaranteed for 2 years from the date of purchase. However, you must activate your cover by calling 0330 160 6640 or registering online at www.miele.co.uk.

Guarantee: Other countries

For information on the appliance guarantee specific to your country please contact Miele.

See end of this booklet for contact details.

Information for dealers


Demo mode

The wine conditioning unit can be demonstrated in the showroom or at exhibitions in "Demo mode". In this mode the control panel and interior lighting are active but the compressor remains switched off, so that the appliance does not cool down.

Switching on demo mode



- Switch the wine conditioning unit off by touching the On/Off sensor.

The temperature display will go out and the mains connection symbol  will appear.





- Place your finger on the V sensor, and leave it there.



- At the same time, briefly touch the On/Off sensor (without letting go of the V sensor).



- Leave your finger on the V sensor until the  symbol appears in the display.
- Then release the V sensor.


Demo mode is activated and the  symbol appears in the display.

Switching off Demo mode


The  symbol is lit up in the display.



- Touch the settings sensor.


All symbols available for selection will appear in the display and the  symbol flashes.




- Touch the sensors for setting the temperature (V or ^) repeatedly until the  symbol flashes.



- Touch the OK sensor to confirm your selection.


1 flashes in the display (means: Demo mode is switched on) and the  symbol lights up.



- Touch the ✓ or ∧ sensor until  appears (means: Demo mode is switched off).




- Touch the OK sensor to confirm your selection.

The selected setting is applied, the  symbol flashes.



- Touch the settings sensor to leave settings mode.
Otherwise the appliance exits settings mode automatically after approximately one minute.

Demo mode is switched off, the  symbol goes out.

Electrical connection

The appliance is supplied with a mains cable with moulded plug for connection to a 50 Hz 220–240 V supply.

The fuse rating must be at least 10 A (13 A in the UK).

All electrical work should be carried out by a suitably qualified and competent person in strict accordance with current local and national safety regulations (BS 7671 in the UK). Please ensure that the connection data quoted on the data plate match the household mains supply.

Connection should be made via a suitable switched socket which is easily accessible. It must not be located behind the appliance.

If the mains socket is not accessible after the appliance has been installed, a separator for each terminal must be present. There must be an all-pole contact gap of at least 3 mm in the switch (including switch, fuses and relays according to EN 60335).

The plug and mains connection cable must not come into contact with the back of the appliance as vibrations can cause damage to these components. This, in turn, could result in a short circuit.


Do not plug in other appliances behind this wine conditioning unit.

Do not connect the appliance to the mains electricity supply by an extension lead. Extension leads do not guarantee the required safety of the appliance (e.g. danger of overheating).

Do not connect the appliance to an inverter such as those used with an autonomous energy source e.g. **solar power**. When switched on, peak loads in the system can cause the safety switch-off mechanism to be triggered. This can damage the electronic unit. The appliance must not be used with so-called **energy-saving devices** either. These reduce the amount of energy supplied to the appliance, causing it to overheat.

If the mains cable needs to be replaced this must be done by a suitably qualified person.

A wine conditioning unit that has not been installed in its niche can tip up.

 **Fire risk and danger of damage!**
This wine conditioning unit must not be installed underneath a hob.


Location

This appliance should be installed in a dry, well-ventilated room.

When deciding where to install your wine conditioning unit please bear in mind that it will use more energy if installed near to a heater, a cooker or other appliance that gives off heat. Direct sunlight should also be avoided. The higher the room temperature, the longer the compressor runs and the higher the energy consumption is.

When installing the wine conditioning unit, please note:

- The socket must be easily accessible in an emergency, not concealed behind the appliance.
- The plug and cable must not touch the back of the wine conditioning unit as they could be damaged by vibrations from the appliance.
- Do not plug in other appliances behind this wine conditioning unit.

 **Danger from broken glass!**
Danger of injury from broken glass. If installed at altitudes above 1500 m there is a risk of the glass in the door breaking because of changes in air pressure. Shards of glass can cause severe injury if not handled with care.

Climate range

The wine conditioning unit is designed for use within a certain climate range (ambient temperatures) and should not be used outside this range. The climate range of the wine conditioning unit is stated on the data plate inside it.

Climate range	Ambient room temperature
SN	+10 °C to +32 °C
N	+16 °C to +32 °C
ST	+16 °C to +38 °C
T	+16 °C to +43 °C

Operating in a room which is too cold will cause the compressor to switch off for too long, causing the internal temperature in the wine conditioning unit to rise which could lead to damage.

IMPORTANT

In environments with high humidity condensation may appear on the external surfaces of the wine conditioning unit.

Condensate can cause corrosion on external appliance walls.

For prevention, it is advisable to install the wine conditioning unit with sufficient ventilation in a dry and/or air conditioned room.

After installation make sure that the appliance door closes properly, the ventilation gaps are not covered and that the wine conditioning unit has been installed in accordance with these installation instructions.

Installation


Ventilation

⚠ If the ventilation gaps given are not observed, the compressor will run more frequently and for longer periods.

This will result in increased energy consumption and a higher operating temperature for the compressor. This may, in turn, cause damage to the compressor.

It is essential to observe the ventilation gaps given.


Air at the back of the wine conditioning unit gets warm. The appliance housing unit must therefore be constructed to allow sufficient space for ventilation (see "Building-in dimensions").

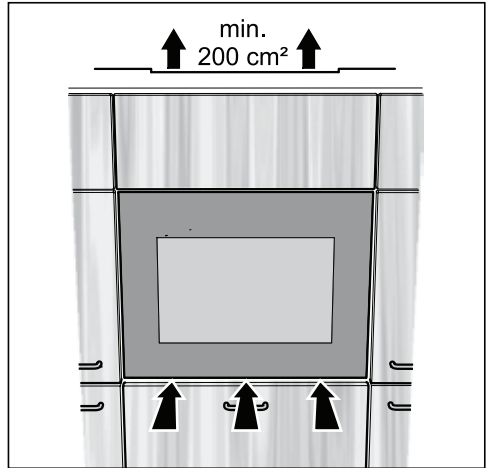

- Air intake is provided underneath the appliance door.
- Air must be allowed to escape through a ventilation gap provided above the wine conditioning unit. This ventilation gap must have a minimum cross-section of 200 cm² to ensure that the warm air can escape unhindered.
- Important! The appliance uses less energy, the larger the ventilation cross-section.

The air inlet and outlet must not be covered or blocked in any way. They must also be regularly cleaned of dust.

Different types of ventilation gaps

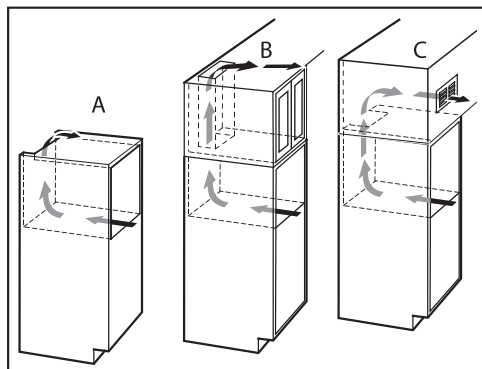


- A : directly above the wine conditioning unit
- B : above a top box
- C : in a top box through a ventilation grille at the front

If ventilation grilles are to be fitted in the ventilation gaps, the ventilation gaps must be larger than 200 cm^2 . The unobstructed airflow of 200 cm^2 is calculated by adding up the total area of ventilation openings in the grille.

Before installing the wine conditioning unit


- Take any accessories out of the appliance.

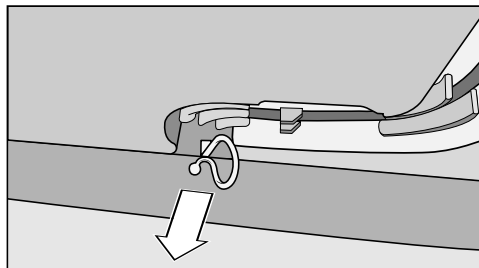

- Remove the cable clip from the back of the appliance (depending on model).

Installation


Building-in dimensions

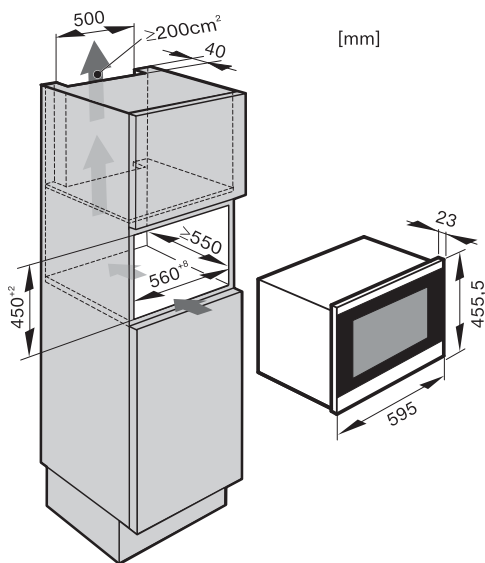

The mains connection cable is 2300 mm long.

The socket must be easily accessible in an emergency, not concealed behind the appliance.


Installing the wine conditioning unit

 **Warning!** Do not drop the appliance. Risk of injury and damage.

Two people are required for installing this wine conditioning unit.

- Install the wine conditioning unit in a stable, solid housing unit, positioned on an even and level floor.
- The niche must be horizontally and vertically aligned.
- The required ventilation cross-sections must be ensured (see "Installation - Ventilation" and "Building-in dimensions").


To install the wine conditioning unit, you will need the following tools:

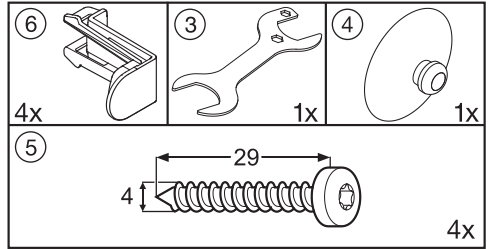


You will also need a spirit level and a screwdriver.

Installing the wine conditioning unit

Installing the wine conditioning unit

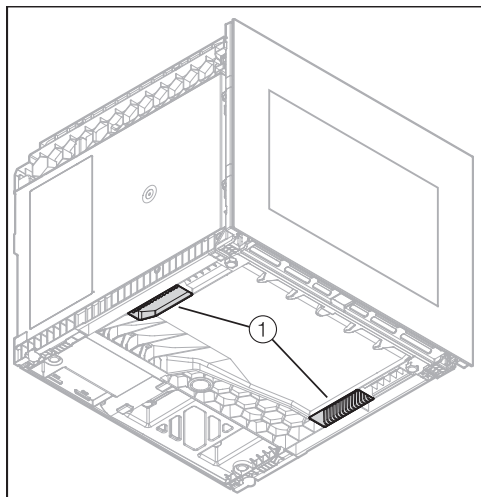


- Use the hand holds ① underneath the wine conditioning unit when carrying it.
- Feed the mains cable from the back of the appliance through to the socket.

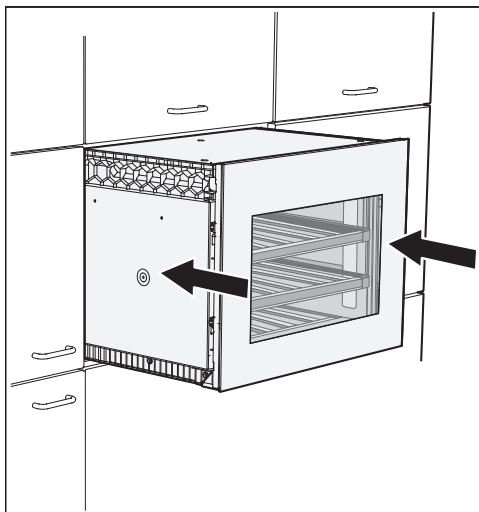

- Push the wine conditioning unit back into the housing unit. Take care not to damage the mains cable whilst pushing it back in.
- Align the wine conditioning unit to adjoining furniture doors.


Installing the wine conditioning unit

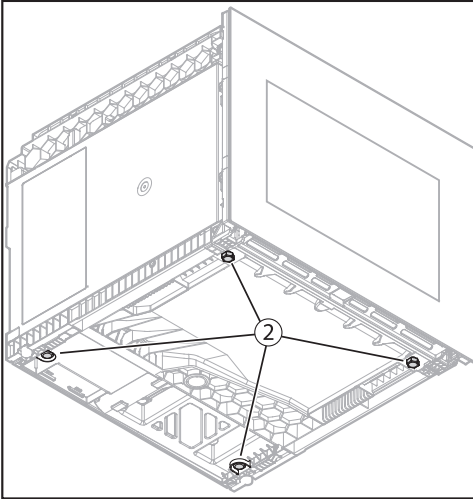

- If you need to realign the wine conditioning unit, you will need to pull it out of the housing unit to readjust the feet ② underneath it.
- Adjust the feet ② to the required height.


The feet can be manually adjusted or with the spanner supplied.

- Push the wine conditioning unit back into the housing unit and check the alignment with adjoining furniture again. Take care not to damage the mains cable whilst pushing it back in.

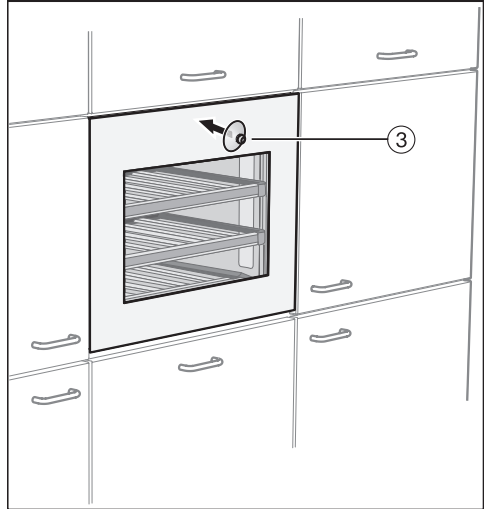


- Attach the suction cap supplied ③ to the glass door and open the door.

Installing the wine conditioning unit

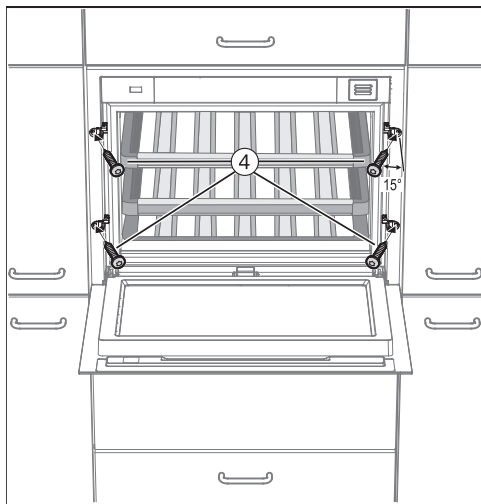

- Secure the wine conditioning unit to the carcass using the four screws supplied (4 x 29) ④. The screws should be screwed into the carcass at a slight angle (approx. 15°).

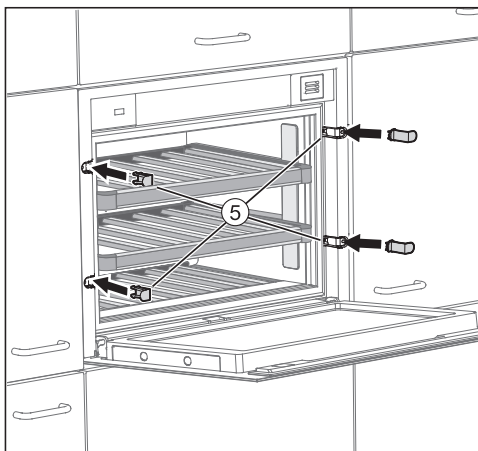

- Fit the covers ⑤ (supplied).
- Now connect the wine conditioning unit to the electrical supply.

When the wine conditioning unit is connected to the electrical supply, the mains connection symbol $\text{---}\text{C}\text{---}$ will appear in the display after a short while.



- Touch the On/Off button.

The mains connection symbol $\text{---}\text{C}\text{---}$ will go out and the wine conditioning unit will start to cool.

The Push2open system on the wine conditioning unit is now activated (see "Guide to the appliance – Door opening mechanism").

United Kingdom

Miele Co. Ltd.
Fairacres, Marcham Road
Abingdon, Oxon, OX14 1TW
Customer Contact Centre Tel: 0330 160 6600
E-mail: mielecare@miele.co.uk
Internet: www.miele.co.uk

Australia

Miele Australia Pty. Ltd.
ACN 005 635 398
ABN 96 005 635 398
1 Gilbert Park Drive, Knoxfield, VIC 3180
Tel: 1300 464 353
Internet: www.miele.com.au

China

Miele (Shanghai) Trading Ltd.
1-3 Floor, No. 82 Shi Men Yi Road
Jing' an District
200040 Shanghai, PRC
Tel: +86 21 6157 3500, Fax: +86 21 6157 3511
E-mail: info@miele.cn, Internet: www.miele.cn

Miele (Hong Kong) Limited

41/F - 4101, Manhattan Place
23 Wang Tai Road
Kowloon Bay, Hong Kong
Tel: (852) 2610 1025, Fax: (852) 3579 1404
Email: customerservices@miele.com.hk
Website: www.miele.hk

India

Miele India Pvt. Ltd.
Ground Floor, Copia Corporate Suites
Plot No. 9, Jasola, New Delhi - 110025
Tel: 011-46 900 000, Fax: 011-46 900 001
E-mail: customercare@miele.in, Internet: www.miele.in

Ireland

Miele Ireland Ltd.
2024 Bianconi Avenue
Citywest Business Campus, Dublin 24
Tel: (01) 461 07 10, Fax: (01) 461 07 97
E-Mail: info@miele.ie, Internet: www.miele.ie

Manufacturer: Miele & Cie. KG

Carl-Miele-Straße 29, 33332 Gütersloh, Germany

Miele

Malaysia

Miele Sdn Bhd
Suite 12-2, Level 12
Menara Sapura Kencana Petroleum
Solaris Dutamas No. 1, Jalan Dutamas 1
50480 Kuala Lumpur, Malaysia
Phone: +603-6209-0288
Fax: +603-6205-3768

New Zealand

Miele New Zealand Limited
IRD 98 463 631
Level 2, 10 College Hill
Freemans Bay, Auckland 1011, NZ
Tel: 0800 464 353
Internet: www.miele.co.nz

Singapore

Miele Pte. Ltd.
163 Penang Road
04 - 03 Winsland House II
Singapore 238463
Tel: +65 6735 1191, Fax: +65 6735 1161
E-Mail: info@miele.com.sg
Internet: www.miele.sg

South Africa

Miele (Pty) Ltd
63 Peter Place, Bryanston 2194
P.O. Box 69434, Bryanston 2021
Tel: (011) 875 9000, Fax: (011) 875 9035
E-mail: info@miele.co.za
Internet: www.miele.co.za

United Arab Emirates

Miele Appliances Ltd.
Gold & Diamond Park
Office No. 217-6, Sheikh Zayed Road
P.O. Box 11 47 82 - Dubai
Tel. +971 4 3044 999
Fax. +971 4 3418 852
800-MIELE (64353)
E-Mail: info@miele.ae
Website: www.miele.ae

KWT 6112 iG ed/cs, KWT 6112 iG grgr, KWT 6112 iG obsw



en-GB

M.-Nr. 10 354 451 / 00