

SHARP



User manual

Models:

LC-32CFE6131K
LC-32CHE6131K
LC-40CFE6131K
LC-43CFE6131K
LC-49CFE6031K

LC-49CFE6032K
LC-50CFE6131K

Image for illustration purposes only. Actual product may vary.

IMPORTANT GUARANTEE INFORMATION

Congratulations on purchasing this television. We hope you have many years of trouble free enjoyment from your purchase.

Your product is covered under the manufacturers guarantee for 12 months from the date of purchase.

If you experience any difficulties with your TV, please refer to the 'Frequently asked questions' section in this user guide.

If you are still unable to remedy the issue, try resetting the TV to factory settings. (Details in the 'Settings menu' section of this user guide). Alternatively you can contact the helpline on the number below.

In the event that a fault is diagnosed, the helpline will arrange to collect the TV from your home or work address, return it to our service centre, repair the item and then return it to you.

If we believe we cannot offer a permanent repair, we will replace the item.

Technical Support Information

Telephone UK 0871 097 1163, ROI 01443 3940

Web support: www.umc-uk.co.uk

The telephone opening hours are Monday to Friday 8.30am to 6pm, Saturday 9am – 5pm.
UK: Calls cost 12p per minute plus your phone company's access charge.
ROI: Calls are charged at a local rate.

You must retain all packaging materials, in addition to your proof of purchase/receipt, as you will need these in the event of warranty/service support.

This guarantee is in addition to and does not affect your statutory rights.

If you need to call the helpline, you will need the following information.

- 1) Model No _____ (You can find this on the rear of the TV)
- 2) Date of purchase _____ (You can find this on your sales receipt)
- 3) Serial Number _____ (You can find this on the rear of the TV)

EXAMPLE OF LABEL ON REAR OF TV

Model No →

Serial No. →

LCD COLOR TV
MODEL: LC-30CFE101K
220-240V~ 60Hz 88W/80W/100W(econ/td/ma)
Energy class: A+

SERIAL No. 30CFE101K XXXXX1000001

CAUTION: TO PREVENT ELECTRIC SHOCK, DO NOT REMOVE COVER.
HOUSEHOLD SERVICEABLE PARTS INSIDE.
REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

Manufactured under license from Dolby Laboratories.
Dolby and the double-D symbol are trademarks of Dolby Laboratories.

UMC Poland Sp. z o.o.
Olszewska 87A/87-148 Łyżymice, Poland
Assembled in Europe

HDMI

This TV set is for domestic use only

Important safety instruction



Please read these instructions. All the safety and operating instructions should be read before the appliance is operated.

Warnings

- Television sets which weigh 20kg or more must be lifted and carried by at least 2 people.
- This television does not contain any parts that are serviceable by the user. In case of a fault, contact the manufacturer or authorised service department. Exposing the internal parts inside the TV may endanger your life. The manufacturer's guarantee does not extend to faults caused by repairs carried out by unauthorised third parties.
- To reduce the risk of fire, electric shock or damage to the TV, do not expose it to dust, rain or moisture. Never expose the TV to dripping or splashing and do not place objects filled with liquids on or near the TV.
- Do not connect any external devices (DVD player, games console etc) when the TV is switched on. Disconnect both the TV and device from the mains before connecting. Only switch appliances on when the connection process is complete.
- Do not place the television in a confined space and do not obstruct the ventilation openings at the rear of the television.
- When installing on a wall, ensure the TV is at least 5cm from the wall for ventilation.
- Always ensure that the TV's ventilation openings are not covered with items such as newspapers, table-cloths, curtains, etc.
- Dispose of this television and any components including batteries in an environmentally friendly manner. If in doubt, please contact your local authority for details of recycling.

Safety

- For your safety, this appliance is fitted with a fused 3 pin mains plug. Should the fuse need to be replaced, ensure that any replacement is of the same amperage and approved with the BSI mark.
- Never try and replace the mains plug unless you have adequate qualifications and are legally authorised to do so. In the event that a replacement mains cable is required, contact the manufacturer for a suitable replacement.
- Never use the television if it is damaged in any way.
- Always place the television on a flat level surface avoiding anywhere which may be subject to strong vibration.
- The ideal distance to watch the television is approximately five times the length of the diagonal measurements of the TV screen.

- Ensure the television is not placed on top of the power cable as the weight of the television may damage the cable and cause a safety hazard.
- Never place mobile phones, speakers or any other device which may cause magnetic or radio interference, near the television. If interference is apparent, move the device causing the interference away from the television.
- To disconnect the apparatus from the mains, please use the mains plug located on the underside/rear of the TV.
- Ensure that the mains plug is always easily accessible.

WARNING: Excessive noise when using earphones and headphones can cause loss of hearing.

Maintenance

- To clean your TV, wipe with a soft, dry cloth. If the surfaces are extremely dirty, use a soft cloth dipped in a soap and water solution or a weak detergent solution.
- Never use alcohol, paint thinner or benzene to clean this unit.
- Before using a chemically treated cloth, read the instructions that came with the cloth carefully.

CAUTION: If water or other liquid enters the television through the display panel surface, a malfunction may occur.



Packaging

- The safest way to transport your item is in the original box/packaging - please save your packaging for this.
- You will need the original box/packaging in the event of warranty/service repair or support. We are unable to carry out warranty/service if you are unable to package the item correctly.

Important information regarding use of video games, computers, captions or other fixed image displays

The extended use of fixed image program material can cause a permanent "shadow image" on the LCD/LED panel, also known as "screen burn".

This "shadow image" can appear in the background during normal viewing. This type of irreversible LCD/LED panel deterioration can be limited by observing the following steps:

1. Reduce the brightness/contrast setting to a minimum suitable viewing level.
2. Do not display the fixed image for extended periods of time.
3. Turn the power off when not in use.

Examples of images that are more likely to cause "screen burn" are as follows (this is not an exhaustive list):

- TV channel logos: e.g. shopping channel logos and pricing displays - especially if they are bright and stationary. Moving or low-contrast graphics are less likely to cause ageing of the screen.
- Time displays.
- Teletext: Do not view a stationary page for a long period of time
- TV/DVD menus: e.g. listings of DVD disc content.
- Pause mode: Do not leave the TV in pause mode for long periods of time, e.g. when watching DVDs or videos.

Important: Once 'shadow image/screen burn' occurs, it will never disappear and is not repairable under warranty.

How do I dispose of this product?

UK: Waste electrical products should not be disposed of with household waste. Please dispose of the product at a designated collection point for recycling of WEEE. For your nearest facilities, please see www.recycle-more.co.uk or in store for details.



ROI: Waste electrical products should not be disposed of with household waste. Separate disposal facilities exist. Check with your local authority or retailer for recycling advice.



Batteries

- Do not expose batteries to high temperatures, excessive heat, prolonged sunshine or fire as this may cause leakage, explosion or ignition. Observe the correct polarity when inserting batteries.
- Do not use different types of batteries together or mix old and new batteries.
- Dispose of batteries in an environmentally friendly way.
- Certain regions may regulate the disposal of batteries. Please consult your local authority.

Trademarks

HDMI

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing, LLC in the United States and other countries.

HDTV

The "HD TV" Logo is a trademark of DIGITALEUROPE.

HDTV 1080p

The "HD TV 1080p" Logo is a trademark of DIGITALEUROPE.

DVB

The DVB logo is the registered trademark of the Digital Video Broadcasting (DVB) project.

FREEVIEW

The FREEVIEW words and logos are trade marks of DTV Services LTD. © DTV Services Ltd.

SAORVIEW

SAORVIEW is a registered trademark owned by RTÉ.

Dolby

Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

YouTube

YouTube and the YouTube logo are trademarks of Google Inc.

Wi-Fi

The Wi-Fi CERTIFIED Logo is a certification mark of the Wi-Fi Alliance.

Miracast

Wi-Fi CERTIFIED Miracast and Miracast are trademarks of Wi-Fi Alliance.

Intel WiDi

Intel and the Intel WiDi logo are trademarks of Intel Corporation in the U.S. and/or other countries.

DLNA

DLNA, the DLNA Logo and DLNA CERTIFIED are trademarks, service marks, or certification marks of the Digital Living Network Alliance.

CE Statement:

Hereby, Universal Media Corporation I.t.d. declares that this LED TV is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

<http://www.sharp.eu/av/documnts-of-conformity>

CONTENTS

Manufacturers guarantee information	3
Important safety instructions	4-5
What is included in the box	8
Attaching / detaching the stand	9
Securing the TV to a wall / wall mounting	10
Remote control	11
TV buttons and Input Source menu	13
Connections	14-21
Connecting the TV to the Internet	23
TV menu operation	24-33
Picture menu	24-25
Sound menu	26
Channel menu	27
Lock menu	28
Time menu	29
Network configuration	30
Settings menu	31
Applications menu	32-33
7 day TV guide and channel list	34
USB record - Freeview / Saorview	35
General information	36-45
Frequently asked questions	36-37
Technical specifications	38-45



 
For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS Licensing Limited. DTS, the Symbol, & DTS and the Symbol together are registered trademarks, and DTS TruSurround is a trademark of DTS, Inc. © DTS, Inc. All Rights Reserved.

WHAT IS INCLUDED IN THE BOX

Accessories

Included with this TV are the following accessories.

1 x User guide

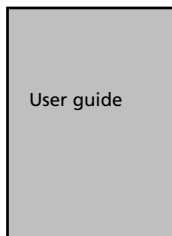

1 x Quick start guide



1 x TV



1 x RF cable



1 x Remote control and 2 x AAA batteries



1 x SCART to AV adapter cable

(For LC-49CFE6031K,
LC-49CFE6032K and
LC-50CFE6131K models only)



(For the LC-32CFE6131K
model only)



1 x Mini composite / AV cable
(For LC-32CHE6131K, LC-40CFE6131K, LC-43CFE6131K
LC-49CFE6031K, LC-49CFE6032K and LC-50CFE6131K
models only)



1 x Mini component / YPbPr cable



1 x Stand installation pack



1 x L (left)

1 x R (right)



Please save your box/packaging as you will need this in the event of warranty/service repair or support. We are unable to carry out warranty/service if you are unable to package it correctly. The safest way to package your item in the event of warranty/service repair is in its original box/packaging.

 
ATTACHING THE STAND

Attaching the stand/feet


To complete the stand/feet installation you will require a cross head screw driver.

Screws that are included.

4 x 

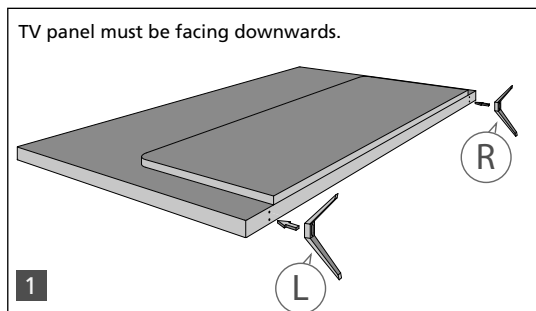


(fig.1) Place the TV set on a flat and clean surface with the panel facing downwards to avoid damage, then fix the stand/feet shown. **The feet are marked L (left) and R (right).**

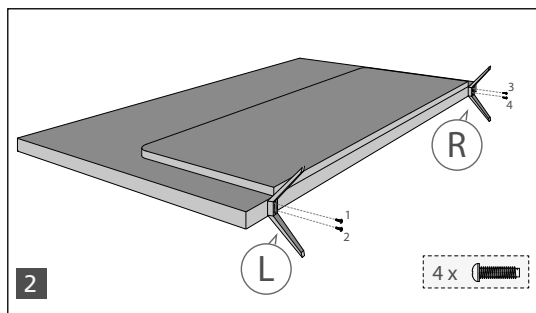 

(fig.2) Secure the stand/feet to the underside of the TV set using the 4 screws provided.

Detaching the stand

 Remove the screws highlighted then remove the stand/feet from the underside of the TV set.

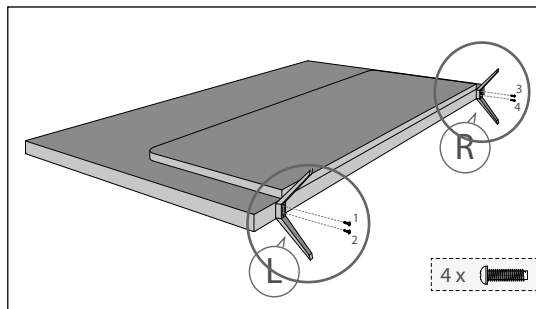



SECURING THE TV TO A WALL

Securing the TV to a wall with anti-tip straps

For maximum security in the home, when using a TV with its stand, anti-tip straps should be fitted. These are available from supermarket websites and other websites and are an easy, inexpensive and effective way of ensuring your TV stays safely upright. Straps are designed to be attached to the rear of the TV and then tethered to the wall or the furniture the TV is stood on, these are fitted as follows.

A) Using one or both of the top wall-mounting holes and screws fasten one end of the fastening cord/s to the TV. (the screws are already supplied in the wall mounting holes)

  B) Secure the other end of the fastening cord/s to your wall. (you will need screws/fixings suitable for your wall type - available separately from most DIY stores).

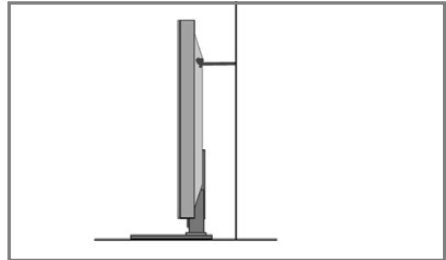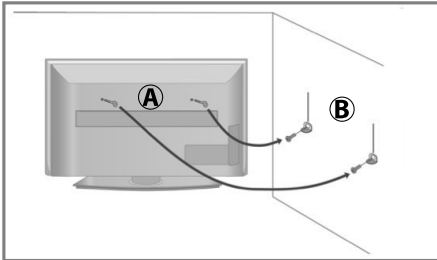


Note - Please ensure that children do not climb on the TV set.

The Royal Society for the Prevention of Accidents is urging people to take care with flat-screen televisions. RoSPA stated in 2010 that "Toddlers are particularly at risk of pulling flat-screen televisions on to themselves. They are unsteady on their feet and are attracted by colourful television images."

The risk is increased as televisions become lighter.

Wall mounting

 IMPORTANT - Before drilling any holes in the wall ensure you are not drilling where there could be any electrical wires, water or gas pipes.

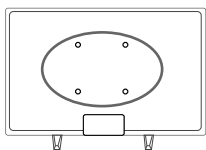

1) Remove the four screws located at the back of the TV set.

2) The wall mount can now be easily attached to the mounting holes, located on the back of the TV, using the same four screws removed.

For VESA wall mounting information please refer to the Technical Specification page.

For optimum viewing, if wall mounting the TV higher than eye level, the TV should be tilted downwards so that the TV's screen is 'face on'. See fig 1 and 2.

fig 1 INCORRECT


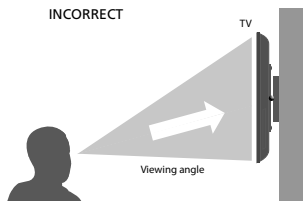 


fig 2 CORRECT

 



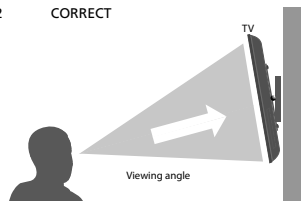

Important – If wall mounting this TV, only use the screws already provided in the wall mounting holes located at the back of the TV, using other screws which are longer could cause irreparable damage to internal parts.

REMOTE CONTROL

During the initial set up of your TV you will need to pair the remote control to the TV.

To pair the remote control to the TV, ensure the TV is in standby mode, press and hold the green and yellow buttons (highlighted below) on the remote control for a few seconds.


Key

-  For models with integrated DVD players.
-  For models with PVR Function.
-  For models with USB Playback.
-  For models with 3D functions.

1

STANDBY - Switch on the TV when in standby or vice versa.
MUTE - Mute the sound or vice versa.
NET+ - Access the Aquos Net application.
DTV - Switch to digital TV source.
USB - Switch to USB source.
YOUTUBE - Access the Youtube App.

2

 





 








NUMBER BUTTONS - 0-9 to select a TV channel directly.
TV GUIDE - Opens the 7 day TV guide (digital TV mode).
 - To return to the previous channel viewed.

3

 VOL (+/-) - To increase/decrease the sound level.
PICTURE - Scrolls through picture mode options.
SOUND - Scrolls through sound mode options.
SOURCE - To display the input/source menu.
CH (+/-) - To increase or decrease the channel being watched.
MENU - To display OSD menu.
EXIT - To exit all menus.
(▲/▼/◀/▶/OK) - Allows you to navigate the on-screen menus and adjust the system settings to your preference.
BACK - To go back a previous step.
FAV - To display favourites menu.

4

INFO - Press once for now/next channel information.
 - Press twice for information about the current programme.
SLEEP - Press repeatedly to cycle through the sleep options.
AUDIO - To change the audio language (if available).
SUBTITLE - To switch the dialogue at the bottom of the screen (on/off).
TEXT - To enter/exit Text.
TEXT HOLD - Teletext mode - Holds current page which is displayed (Analogue TV).
TEXT/ZOOM - Zoom function for Teletext and DVD.
DISPLAY - To switch off the screen when listening to radio.
 ▶ **RECORD** - Access the USB record function.

- ◀◀ - To restart the current chapter
- ▶▶ - To advance forward to the next chapter
- /▲ - To stop the playback/Eject Disc
 (To EJECT the disc press/hold the ■/▲ button for 4 seconds)
- ◀◀ - To play in fast rewind mode
- ▶▶ - To play in fast forward mode
- ⏮ - To play/pause

▶ **REC LIST** - Opens the list of what has been previously recorded.
 ▶ **GOTO** - To go to a specific chapter.
 ▶ **A-B** - Press once to set point, press a second time to return to point.
 ▶ **ANGLE** - Select different angle of DVD.
 ▶ **REPEAT** - To repeat playback.



Buttons to use when pairing the remote control to the TV.

TV BUTTONS AND INPUT SOURCE MENU



- 1 Volume up and menu right
- 2 Volume down and menu left
- 3 Programme/channel up and menu up
- 4 Programme/channel down and menu down
- 5 Displays menu/OSD
- 6 Displays the 'Input Source' menu
- 7 Standby power On/Off

Note: The shape of the TV buttons may vary by model.

Choosing Mode Input/Source

Use the source menu to switch between input/connections.

 
A) Using the buttons on the remote control:

- 1) Press [SOURCE] - The source menu will appear.
- 2) Press [V] or [A] to select the input you require.
- 3) Press [OK].

B) Using the buttons on the Television:

- 1) Press [SOURCE].
- 2) Scroll up / down using CH+ / CH- buttons to the input/source you require.
- 3) Press Vol+ to change input/source to the one selected.



For further information on input/connections please view 'Connections' pages.

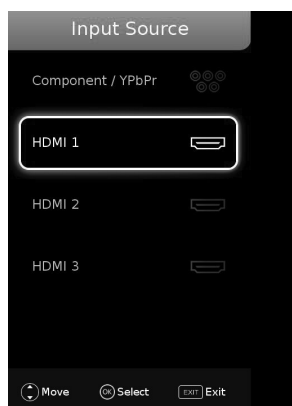

An example of the 'Input Source' menu
(will vary by model)

CONNECTIONS

  Input/Outputs for the LC-32CFE6131K.

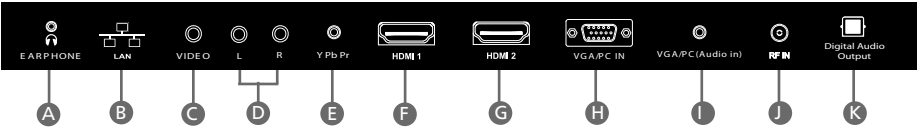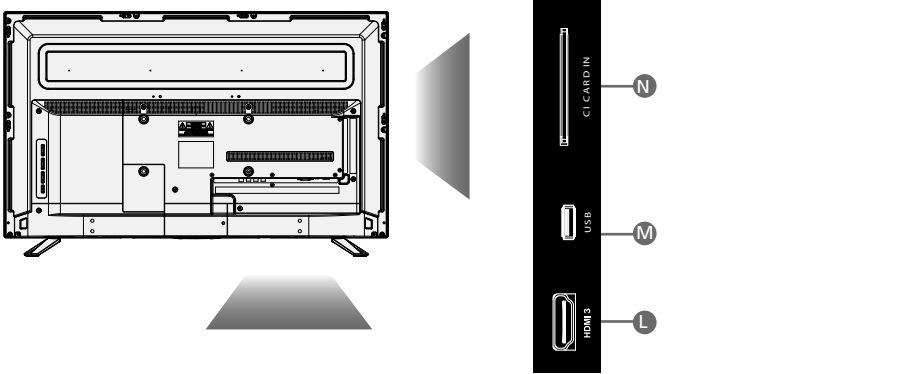


A	Earphones	Earphone input
B	LAN*	Network connection
C	Video	Video input
D	R/L	R/L Audio shared for Video/Composite and component/ YPbPr
E	YPbPr	HD input (Ypbpr)
F	HDMI 1	HDMI input
G	HDMI 2	HDMI input (ARC)

H	VGA PC	VGA-PC Input
I	VGA PC audio in	3.5mm PC audio input
J	RF in	RF / TV aerial input
K	Digital audio	Digital optical audio output
L	HDMI 3	HDMI input
M	USB	USB port
N	CI card in	Common interface module

*The LAN/Ethernet port is used for Freeview HD services and smart functions.

CONNECTIONS

 Input/Outputs for the LC-32CHE6131K, LC-40CFE6131K and LC-43CFE6131K.

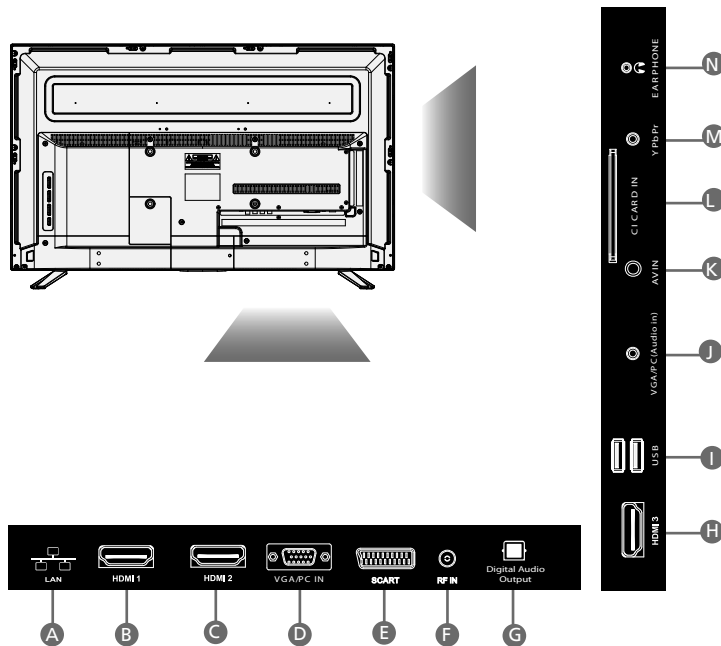


A	LAN*	Network connection
B	HDMI 1	HDMI input
C	HDMI 2	HDMI input (ARC)
D	VGA PC	VGA-PC input
E	SCART	SCART input
F	RF in	RF / TV aerial input
G	Digital audio	Digital optical audio output

H	HDMI 3	HDMI input
I	USB x 2	USB port
J	VGA PC audio in	3.5mm PC audio input
K	AV in	Audio/video input
L	CI card in	Common interface module
M	YPbPr	HD input (Ypbpr)
N	Earphones	Earphone input

The LAN/Ethernet port is used for Freeview HD services and smart functions.

CONNECTIONS

 Input/Outputs for the LC-49CFE6031K and LC-50CFE6131K.

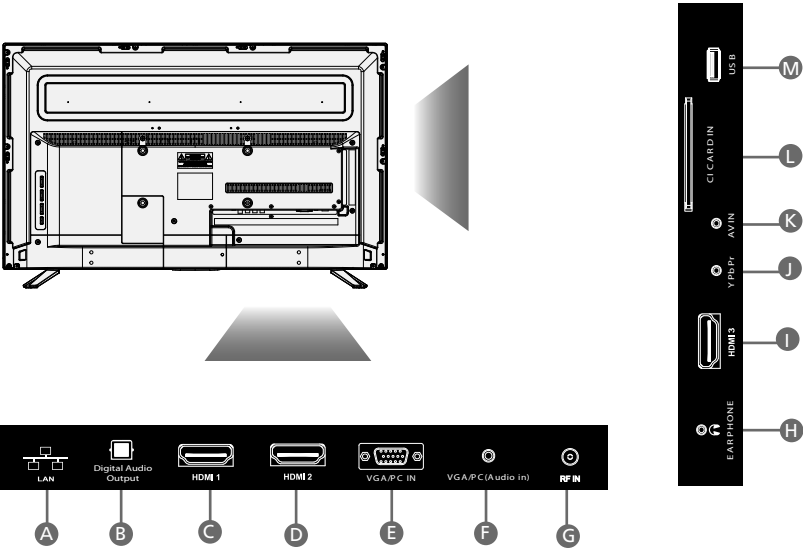


A	LAN*	Network connection
B	Digital audio	Digital optical audio output
C	HDMI 1	HDMI input
D	HDMI 2	HDMI input (ARC)
E	VGA PC	VGA-PC Input
F	VGA PC audio in	3.5mm PC audio input
G	RF in	RF / TV aerial input

I	Earphones	Earphone input
J	HDMI 3	HDMI input
K	YPbPr	HD input (Ypbpr)
L	AV in	Audio/video input
M	CI card in	Common interface module
N	USB	USB port

The LAN/Ethernet port is used for Freeview HD services and smart functions.

CONNECTIONS

 Input/Outputs for the LC-49CFE6032K.

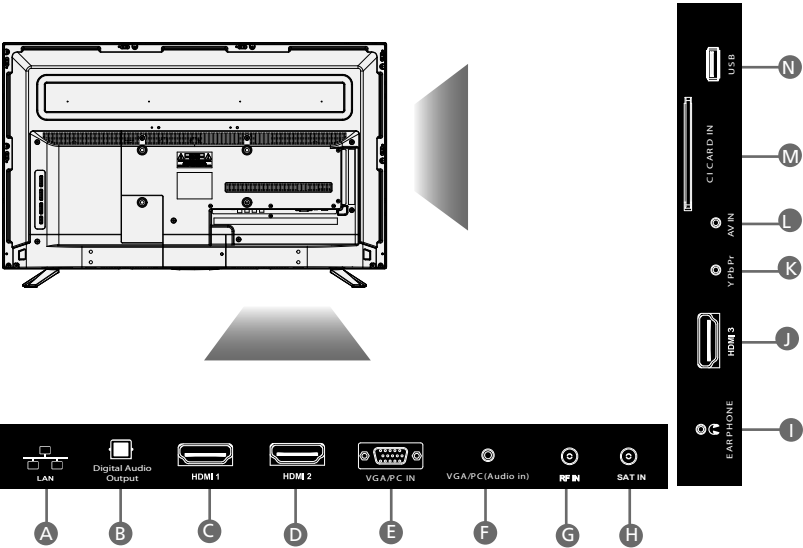

A	LAN*	Network connection
B	Digital audio	Digital optical audio output
C	HDMI 1	HDMI input
D	HDMI 2	HDMI input (ARC)
E	VGA PC	VGA-PC Input
F	VGA PC audio in	3.5mm PC audio input
G	RF in	RF / TV aerial input

H	SAT In	Satellite Input
I	Earphones	Earphone input
J	HDMI 3	HDMI input
K	YPbPr	HD input (Ypbpr)
L	AV in	Audio/video input
M	CI card in	Common interface module
N	USB	USB port

The LAN/Ethernet port is used for Freeview HD services and smart functions.

CONNECTIONS

Connection options for the LC-32CFE6131K.

Note: Connecting cables are shown for example only and may not be included. Please check 'What Is Included In The Box' page.

 
Connecting to a device with Composite AV/Video output

TV source should be set to Composite/AV



Connecting to a device with SCART output (using SCART to AV cable)


TV source should be set to Composite/AV

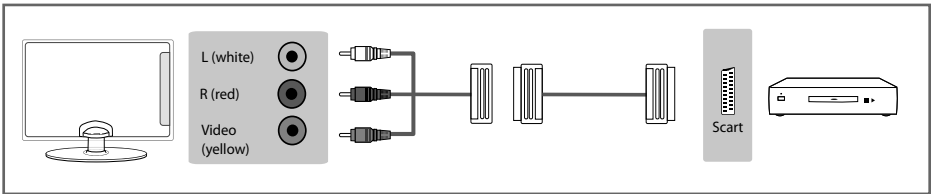

Connecting to a device with Component/YPbPr output

If you are supplied with a cable from the device which has red, green, blue, red & white connectors you must connect via Component (for picture) and by phono cable (for sound).

 TV source should be set to Component/YPbPr

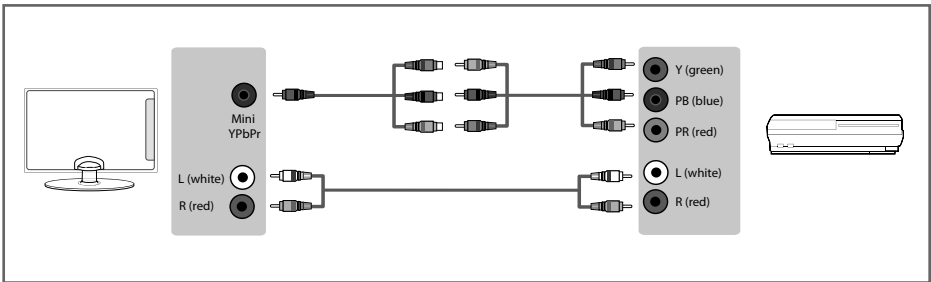


CONNECTIONS

Connection options for LC-49CFE6031K, LC-49CFE6032K and LC-50CFE6131K.

Note: Connecting cables are shown for example only and may not be included. Please check 'What Is Included In The Box' page.


Connecting to a device with Composite AV/Video output

 TV source should be set to Composite/AV

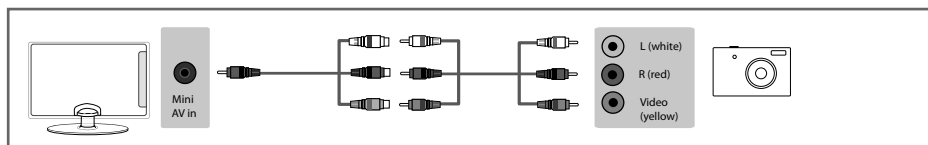

Connecting to a device with SCART output (using SCART to AV cable)

 
TV source should be set to Composite/AV

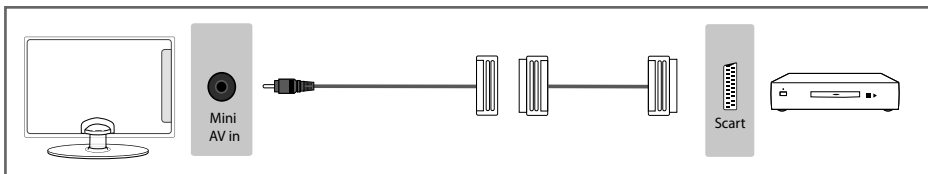

Connecting to a device with Component/YPbPr output

If you are supplied with a cable from the device which has red, green, blue, red & white connectors you must connect via Component (for picture) and by phono cable (for sound).

 TV source should be set to Component/YPbPr

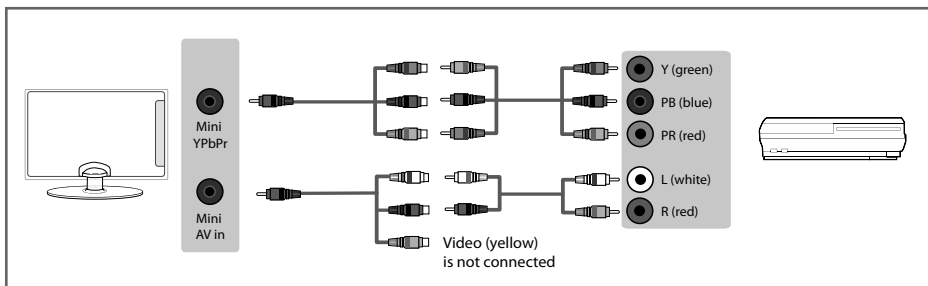


CONNECTIONS

Connection options for the **LC-32CHE6131K, LC-40CFE6131K**
and **LC-43CFE6131K**.

Note: Connecting cables are shown for example only and may not be included. Please check 'What Is Included In The Box' page.


Connecting to a device with Composite AV/Video output

 TV source should be set to Composite/AV

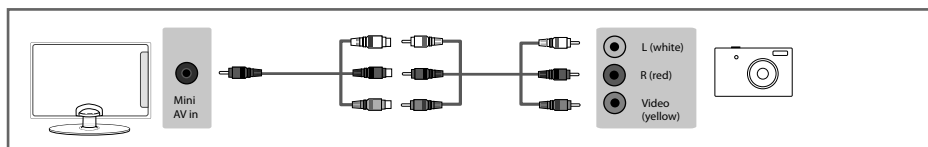

Connecting to a device with SCART output

 
TV source should be set to SCART

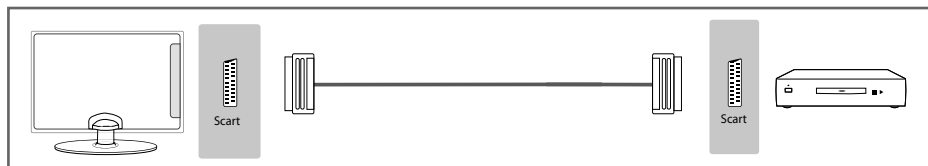

Connecting to a device with Component/YPbPr output

If you are supplied with a cable from the device which has red, green, blue, red & white connectors you must connect via Component (for picture) and by phono cable (for sound).

 TV source should be set to Component/YPbPr

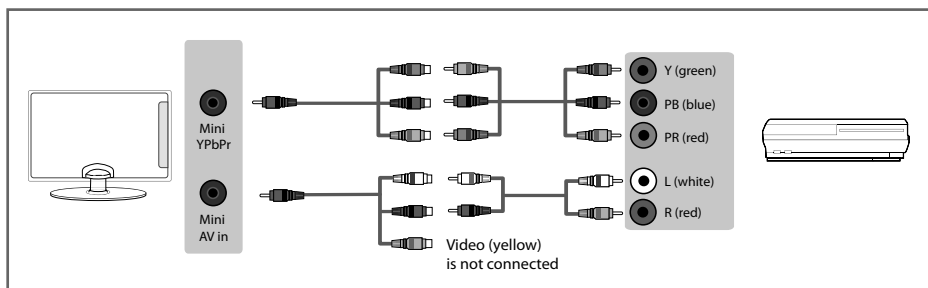

CONNECTIONS

 
Connection options for all models.

Note: Connecting cables are shown for example only and may not be included. Please check 'What Is Included In The Box' page.

Connecting to a device with HDMI output


A HDMI cable can output both video and audio and enables you to enjoy digital-quality video and audio with minimal loss of quality.

TV source should be set to the corresponding HDMI port (HDMI 1, HDMI 2 etc)

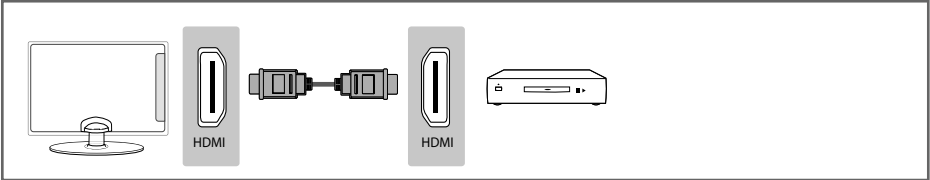


Connecting to a device with VGA/PC output (Laptop or Desktop Computer)

 TV source should be set to VGA/PC

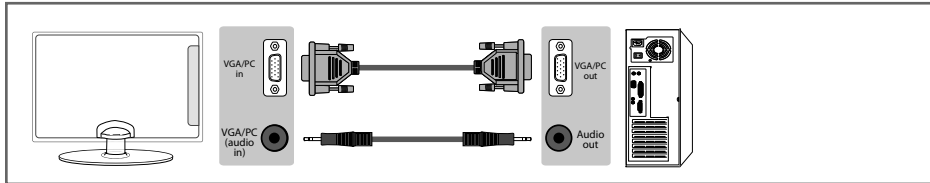


Connecting to an external audio device (Amplifiers, Surround Sound, Sound Bars etc)

 When connecting via the TV's 3.5mm earphone output, this will disable the TV speakers.

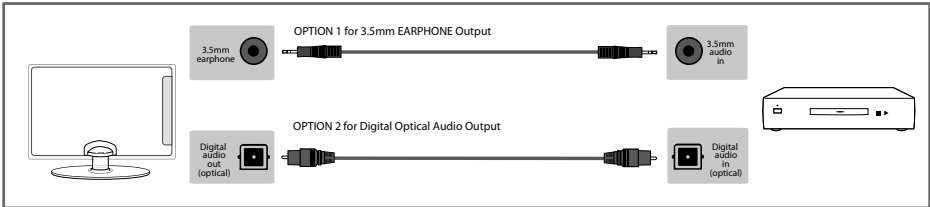

Connecting an Ethernet/Network cable

 The LAN/Ethernet port is used for Freeview HD services and smart functions.

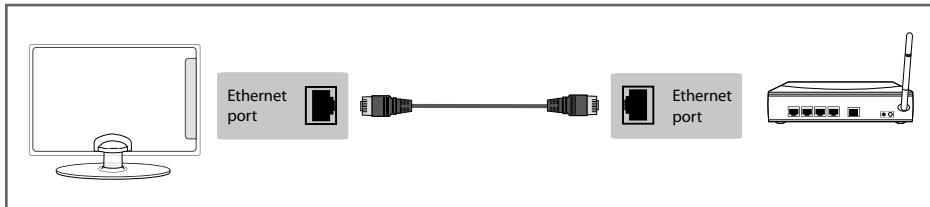

CONNECTING THE TV TO THE INTERNET

When you first power on your new SMART TV there will be an option to follow various on-screen set up instructions. These instructions will enable you to connect to the internet via your home network. You can connect to your home network either wirelessly or with an Ethernet cable.

If you decide not to follow the initial set up instructions and need to connect at a later date please follow these simple steps below:

 
Connecting your TV with a wireless connection

- 1) Press Menu on the remote control (fig.1).
- 2) Scroll through the menu and select and enter the 'Network' menu.
- 3) In the 'Network' menu, example below, scroll down and select 'Wi-Fi Config' (fig.2).
- 4) Within the 'Wi-Fi config' options, highlight and select 'Wi-Fi Auto Search'.
- 5) The TV will then automatically search for networks.
- 6) Select the preferred type of network connection then enter the network password.
- 7) The TV will then establish a connection.

Note: An icon will appear in the top right hand side of the 'Application' menu to show you if the TV is connected to the internet.

Connecting your TV with an Ethernet/LAN cable:

- 1) Plug in your Ethernet cable into the RJ45 (Ethernet) socket located at the rear of the television.

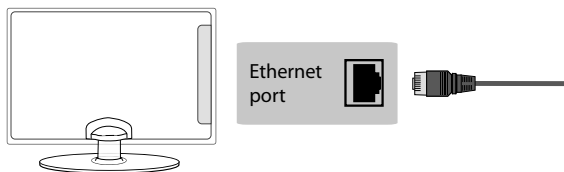

- 2) Press Menu on the remote control. (fig.1)
- 3) Scroll through the menu and select and enter the 'Network' menu.
- 4) In 'Network Configurations', select 'Cable'.(fig.2).
- 5) Set will automatically configure itself.
- 6) Exit the menu by pressing 'EXIT' on the remote control.

fig.1



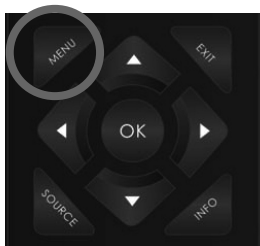 


fig.2

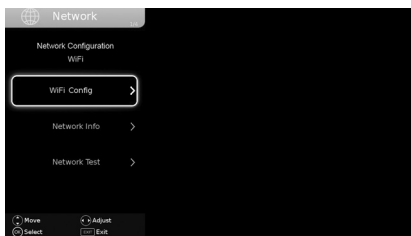 

PICTURE MENU

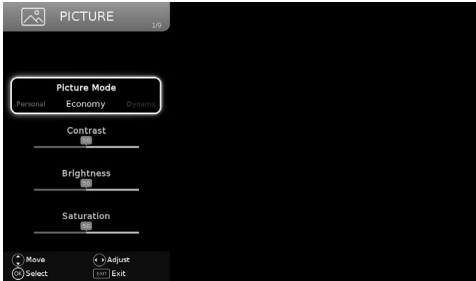 

To access this menu, press [MENU] button on the remote control.
To select a sub menu press [OK]

If you wish to make changes to any of the default settings, use the scroll ▲▼▶◀ buttons.
To confirm any settings press [OK] button. To exit this menu at anytime, press [EXIT] button.

Picture Mode - Choose from the following presets:

Dynamic	Recommended settings for fast moving pictures
Standard	Standard settings
Mild	Set to be lighter in colour and less bright
Personal	Lets you manually alter all the settings
Economy	Power saving mode which reduces the energy used by up to 25% (by reducing the power to the LED/LCD panel). In Economy mode, the TV will switch itself to Standby mode after 3-5 hours in the event that the TV buttons or remote control buttons are not pressed (change the picture mode to another setting to de-activate this function)



You can make the following adjustments in **Personal** mode:

- Contrast - Switch the balance between black and white.
- Brightness - Increase or decrease the brightness of the picture.
- Colour - Increases the colour from black and white.
- Tint - Lets you increase or decrease the level of tint within the picture (only available for NTSC input signal).
- Sharpness - Increase or decrease the sharpness of the picture.

Colour Temperature Choose from the following presets:

Normal	Default settings
Warm	Increases red within the picture
Cold	Increases blue within the picture
Personal	Lets you manually alter the settings

  PICTURE MENU

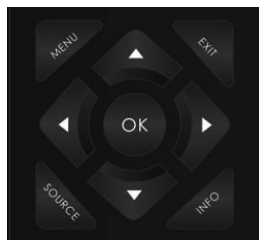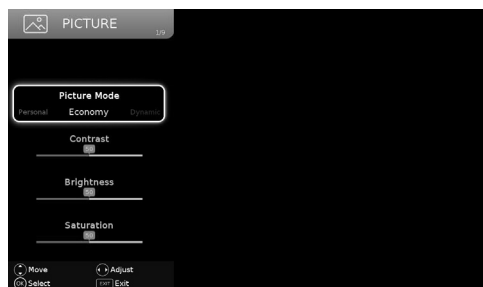

To access this menu, press [MENU] button on the remote control.

To select a sub menu press [OK]

If you wish to make changes to any of the default settings, use the scroll ▲▼▶◀ buttons.

 
To confirm any settings press [OK] button. To exit this menu at anytime, press [EXIT] button.

Aspect Ratio - Within the UK the picture format varies depending on the channel/broadcast. There are a number of different options to best meet your needs. Choose from the following settings:

Auto


Automatically displays the best picture format so the picture is in the correct position, black lines maybe viewable at the top/bottom and/or sides.

4:3

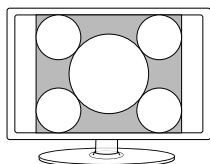


Displays the 4:3 picture in its original size. Side bars are shown to fill the 16:9 screen

 Full Screen

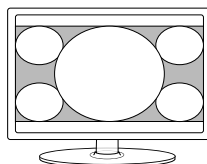


Displays the 14:9 picture in the correct proportion. As a result bars are shown on the screen

 16:9

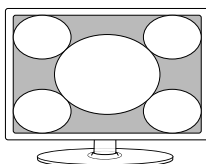

Fills the screen with a regular 16:9 signal and 4:3 picture format will be stretched to fill the screen

 Zoom1 and Zoom 2

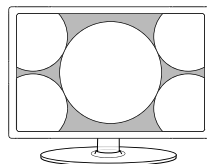



The picture is the correct proportion but zoomed in to fill the screen

Noise Reduction - Allows you to switch noise reduction ON or OFF. Choose one of the following presets: low, middle, high and Off.

MPEG Noise Reduction - Allows you to change the MPEG noise reduction setting. This feature improves the quality of pictures by reducing the picture noise without compromising the picture resolution. Choose one of the following presets: low, middle, high and Off.

Active Contrast - Automatically optimises the 'backlight' and 'contrast' of the picture according to the brightness of the screen. Choose one of the following presets: low, middle, high and Off.

  SOUND MENU

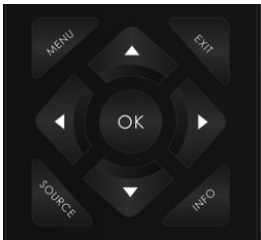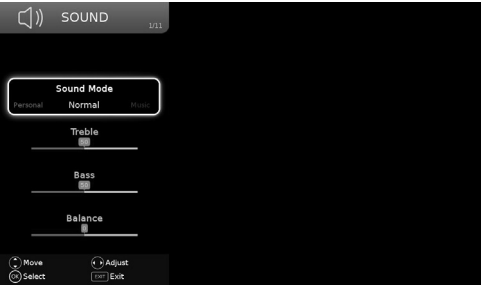

Sound Mode - Choose from the following presets

Standard	Default settings
Music	Emphasises music over voices
Movie	Provides live and full sound for movies
Sports	Emphasises sound for sports
Personal	Selects your personal sound settings. Any adjustments made automatically sets the sound mode to Personal .

EQ - Adjust the audio level of separate frequencies via the band equaliser.

Balance - To switch the sound between the left and right speakers.

Auto Volume Level (AVL) - When 'on' is selected, the volume will attempt to stay at a constant level regardless of TV programme and advertisements.

DTS TruSurround - Choose from the following presets

Off	Off
On	On - TruSurround™ creates an immersive, feature-rich surround sound experience from two speakers, complete with rich bass, high frequency detail and clear dialog

Digital Output - This is the digital optical audio output. Choose from the following options:

Off	To turn off Digital Output
Auto	Selects the best settings automatically
PCM	Select this option if you are connecting to a Stereo Hi-fi via optical cable (Pulse-code modulation (PCM) is a digital representation of an analogue signal)

 
Audio Description - This allows the user to switch Audio Description ON or OFF. (Audio Description is a service available on certain programmes. It provides a description of what is happening during the selected programme for a person who is visually impaired).

AD Volume - This allows the user to increase and decrease the AD (Audio Description) volume level.

Audio Delay - Enables the user to adjust setting to sync picture and audio.

SPDIF Delay - Enables the user to adjust sound setting to sync picture and audio for external speakers connected via digital audio output.

CHANNEL MENU

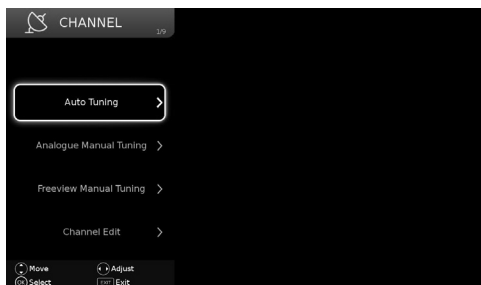

To access this menu, press [MENU] button on the remote control and scroll right.
To select a sub menu press [OK]

If you wish to make changes to any of the default settings, use the scroll ▲▼▶◀ buttons.
To confirm any settings press [OK] button. To exit this menu at anytime, press [EXIT] button.

Auto Tuning - Allows you to retune the television for all digital channels, digital radio stations and analogue devices.

Analogue Manual Tuning - Allows you to manually tune your analogue signal.

Freeview/Saorview Manual Tuning* - Allows you to manually tune your digital signal.

Channel Edit - Allows you to delete, move, skip and select favourite channels.



Important: To receive Freeview/Saorview channels, in particular HD channels, you will need a Digital TV aerial and be in a good Freeview/Saorview coverage area. You can check the coverage for your area at www.freeview.co.uk or www.saorview.ie

Please note that any Freeview HD channels found during tuning will be placed in channel positions above 100.
For example, 101 (BBC1 HD) 102 (BBC2 HD) etc.

*Freeview channels are only available in the UK, Saorview channels are only available in the ROI.

Signal Information - Allows you to view signal frequency, signal quality and signal strength.

CI Information - Pay per view services require a "smartcard" to be inserted into the TV. If you subscribe to a pay per view service the provider will issue you with a 'CAM' and a "smartcard". The CAM can then be inserted into the COMMON INTERFACE PORT (CI Card In).

Recorded List - Shows a list of recorded TV programmes.

Schedule List - Lists your programme reminders.

 
 
OAD (Software Update) - Switch on/off OAD (over air download) software updates.

Satellite setup - Available for the LC-49CFE6032K model only. This allows you to enter the satellite settings/tuning menu. In this menu you can select 'satellite', 'transponder', 'LNB type', etc.

This option is only available when you switch your TV to 'Satellite' in the source menu.

Tip: If you do not press any buttons for 30 seconds, the menu will automatically exit. You can change the length of time before the menu exits automatically - see 'OSD Timer' in the Time Menu

LOCK MENU

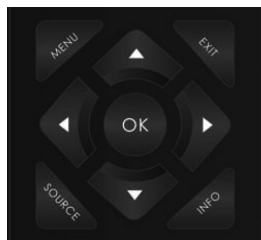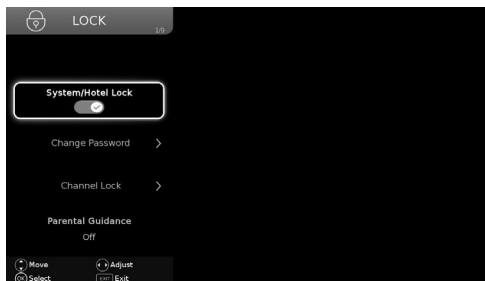

To access this menu, press [MENU] button on the remote control and scroll right.
To select a sub menu press [OK]

If you wish to make changes to any of the default settings, use the scroll ▲▼►◄ buttons.
To confirm any settings press [OK] button. To exit this menu at anytime, press [EXIT] button.

System/Hotel Lock - Allows you to lock or unlock the menu. You will be asked to enter a 4 digit password

Use the ◀ button to quit the password input or use the ▶ button to clear. Default password is 0000.

Change Password - Allows you to change the password.

Channel Lock - Allows you to lock certain channels manually.

Parental Guidance - Allows you to set the rating to block certain content based on age information.

TV Button Lock - Allows you to lock the buttons on the side of the TV set.

 
Default Source - Allows the user to set the default source. The default source is the source the TV starts on when first switched on.

Default Channel - Allows the user to set a channel as the default channel on the Digital source. The default channel is the channel the TV starts on when first switched on.

Max Volume - Allows you to adjust and set the maximum volume.

Source Lock - Allows you to lock the source menu.

TIME MENU

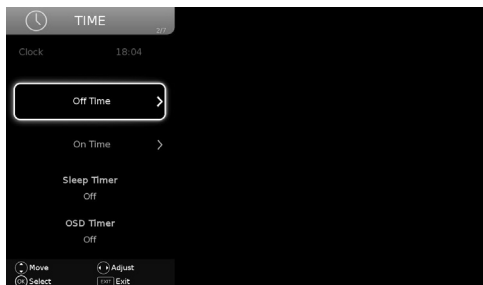

To access this menu, press [MENU] button on the remote control and scroll right.
To select a sub menu press [OK]

If you wish to make changes to any of the default settings, use the scroll ▲▼▶◀ buttons.
To confirm any settings press [OK] button. To exit this menu at anytime, press [EXIT] button.

Off Time - Allows you to set a specific time for your TV to turn off.

On Time - Allows you to set a specific time for your TV to turn on, the channel it will then display, the source it will be on and also the volume. This function can then be toggled to repeat every day or a certain day.

 
Sleep Timer - Lets you set the sleep timer so the television automatically switches off after a set amount of time. Off -> 10min -> 20min -> 30min -> 60min -> 90min -> 120min -> 180min -> 240min.

OSD Timer - Lets you adjust the amount of time the On Screen Menu stays on the screen before disappearing.

Auto standby - Set 'Auto Standby' to OFF, 3 hours, 4 hours or 5 hours.

Time Zone - Change your current time zone.

NETWORK CONFIGURATION

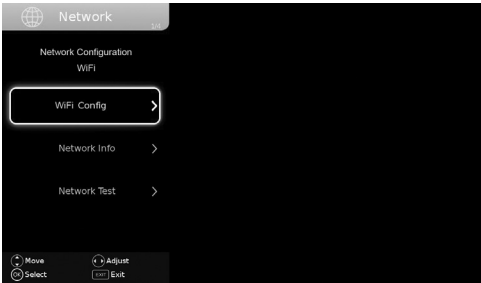

To access this menu, press [MENU] button on the remote control and scroll right.
To select a sub menu press [OK]

If you wish to make changes to any of the default settings, use the scroll ▲▼▶◀ buttons.
To confirm any settings press [OK] button. To exit this menu at anytime, press [EXIT] button.

The Network connection enables you to update the TV software and a number of Smart TV functions.

For the network configuration to work the TV will need to be connected to your home network via an ethernet cable, with these requirements in place the TV will connect to the network automatically.

Network Config - Allows you to select either Cable or Wifi connection.

WiFi / IP Config - Allows you to access LAN network connection settings. Choose from the following options:

Auto	Will automatically connect the TV to your home network(this is the default setting and is highly recommended)
Manual	Allows you to manually change the IP, Netmask, Gateway and DNS information.



WiFi Config - If WiFi is selected during the first time installation process.

Wi-Fi Configuratrion	Wireless network connection settings
Wi-Fi Auto Search	Automatically searches for available wireless networks. Select the desired Wi-Fi network and then enter the network password (if network is password protected). Once the password is accepted, you will not be asked for it again.

Network Info - Allows you to view Information about network settings.

Network Test - Allows you to test the network connection.

  SETTINGS MENU

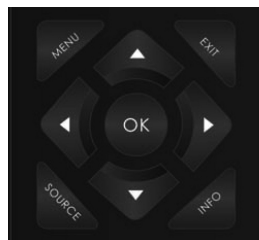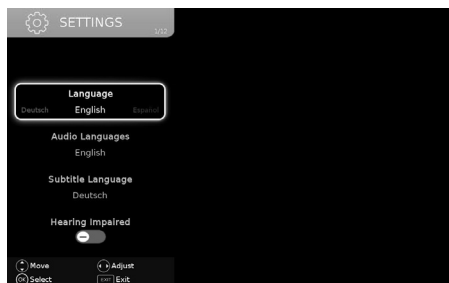

Language - Allows you to change the language of the menu.

Audio Language - Select your preferred primary audio language.

Audio Language 2 - Select your preferred secondary audio language.

Subtitle Language - Select your preferred primary subtitle language.

Subtitle Language 2 - Select your preferred secondary subtitle language.

Hearing Impaired - This allows the user to turn on the Hearing Impaired function, this produces subtitles on the screen which provide a description of what is happening during the selected program.

Blue Screen - Changes the background when there is no input between clear and a blue background (only available on some sources).

PVR File System - PVR Recording options:

Select disk	Select USB port and disk partition
TimeShift Size	Set size time of shift buffer.
Format Start	You can format the connected USB storage device to FAT 32 file system. WARNING: ALL DATA ON THE USB DEVICE WILL BE DELETED
Speed check	Tests write speed of connected USB storage devices.

First Time Installation - Allows you to access the First Time Installation menu and retune the TV set.

Software Update (USB) - Allows you to update your TV with the newest software using a USB memory stick.

Software and instructions are available on our website.

Software Update (NET) - Allows you to update your TV with the newest software via your internet connection. This will require the TV to be connected to the internet and have a blank USB memory stick inserted in to the USB input of the TV. The software will be downloaded on to the blank USB memory stick and then complete the update process.

Reset TV - This resets the menus to factory settings and clears all the TV channels from the television.

HDMI CEC (Consumer Electronic Control) - Allows HDMI devices to control each other and allows the user to operate multiple devices with one remote control (only available with compatible devices).

 
 
LED Status - Allows the user to switch the LED power indicator light ON or OFF when the TV is being operated. (When this option is set to OFF the LED power indicator light will flash when the remote control is used).

Version Info - Allows you to view the version/information of the software installed on the TV set.

Store Mode - Switch ON/OFF shop demonstration mode (available only if store mode was selected during first time installation).

Note: For further support with software updates, contact our technical support team or refer to the 'product support' section of the website. If the TV is using the newest software available it will not attempt to update the software.

APPLICATIONS MENU

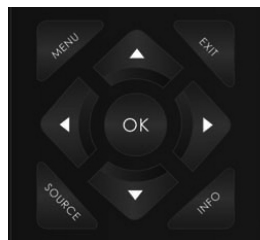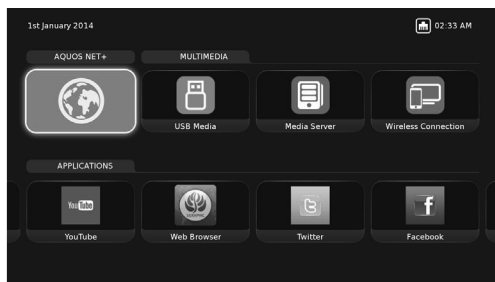

To access this menu, press [MENU] button on the remote control and scroll left/right.
To select a sub menu press [OK]

If you wish to make changes to any of the default settings, use the scroll ▲▼►◄ buttons.
To confirm any settings press [OK] button.

To exit this menu at anytime, press the 'MENU', 'EXIT' or 'BACK' button on the remote control.

The Application Menu allows you to access the TV set's "SMART" features. In this menu you can enter various functions including Youtube, Facebook, etc. At the bottom of the screen there are some key apps for easy and quick access.

 
 
Aquos Net+



Aquos Net+ is a portal to a variety of apps and multimedia which the TV Accesses via the internet.

To enter Aquos Net+ you will be prompted to enter a language and accept terms and conditions. Once the relevant information has been entered you will be able to use a range of features such as MUZU.TV, Viewster and Dailymotion.

Content is updated and managed from a central source, so look out for new features and updates.

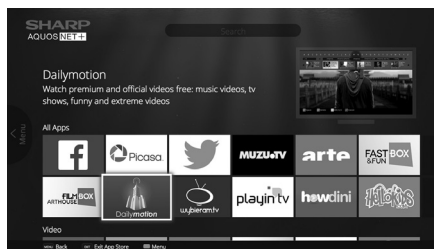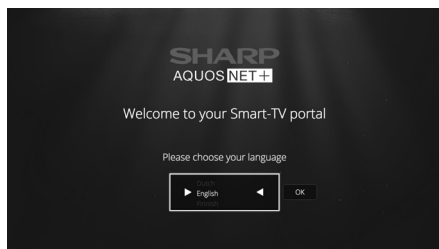

Note: If you wish to reset the settings for AQUOS NET+ back to the default settings, you will need to access the AQUOS NET+ portal and enter the settings menu. In the settings menu press the YELLOW button on the remote control, you will then be asked 'Yes' or 'No' to confirm your decision, highlight 'Yes' and press 'OK' on the remote control to complete the reset process.

 
APPLICATIONS MENU

USB mode and media server



The USB media and the media server offer the playback of various different types of content that is either saved on your USB memory stick or external media server. (USB mode allows you to view/playback files from an external USB device and Media Server connects to your home network and can view/playback files from your laptop, PC, tablets and smart phones).


When accessing the USB media or media server features the below menu screen will appear. The content will be divided into Photo, Music, Movie and All.

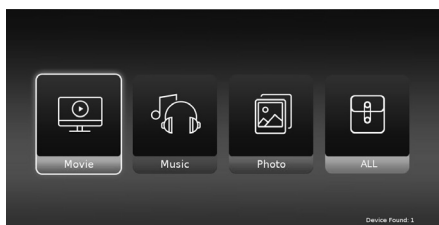

1) You can navigate through the menus using the scroll ▲▼▶◀ buttons on the remote control, to confirm the item you wish to play/view press the [OK] button.



 2) USB mode - Select the USB drive (If your drive only has 1 partition you will only see 1 item)
Media server - Select the external device that you would like to access.

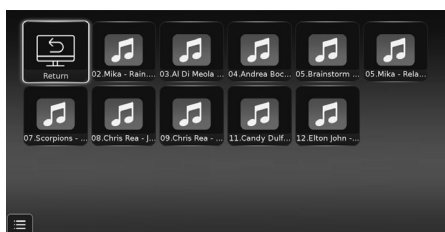

3) You can now access the item. Press OK to view.



4) Whilst viewing your media, you can control the item by using the remote control buttons (below) or by pressing (Info) to access the on-screen playback menu, you can now make your selection by using the ▲▼▶◀ and (OK) buttons on the remote control.

Fig.A

 


Tip: If you experience a playback issue, please ensure the files being used are the correct format (example - the picture plays but no sound) See technical specification page for compatible file types

Note: USB extension cables are not recommended as they can cause a reduction in picture/audio quality and stoppages during play back of USB content.

APPLICATIONS MENU


Wireless display

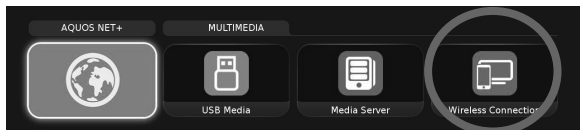

The Wireless Display feature allows you to connect to a compatible external device such as a laptop, tablet and/or smart phone. Once connected, your device will mirror content to the TV.



 Applications

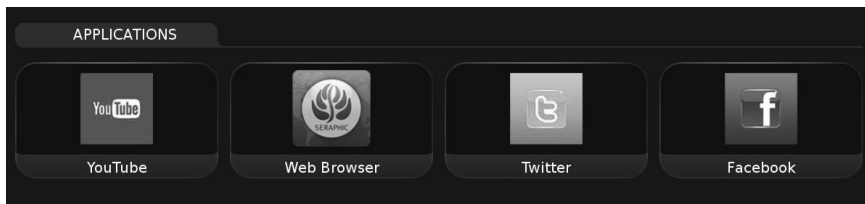

Contains the most commonly used apps for quick and easy access.

Youtube - Videosharing website allows you to discover, watch and share originally-created videos.

Web browser - Application for accessing websites via the internet.

 
Twitter - Online social networking service that enables users to send and read short 140-character messages called "tweets".

Facebook - The popular social networking website that allows registered users to create profiles, upload photos and videos.

7 DAY TV GUIDE

TV Guide is available in Saorview/Freeview TV mode. It provides information about forthcoming programmes (where supported by the Saorview/Freeview channel). You can view the start and end time of all programmes and on all channels for the next 7 days and set reminders.

1) Press [TV GUIDE] on the remote control, the following 7 Day TV Guide will appear.

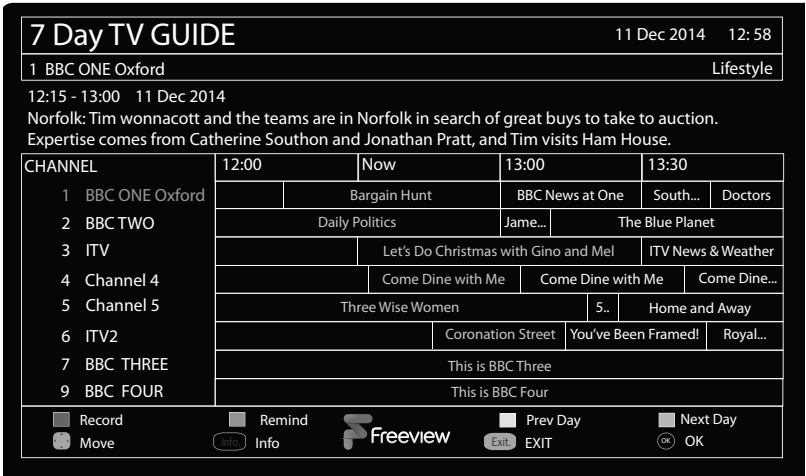

2) Navigate through the menu using ▲▼▶◀.

You can now:

Record a programme by pressing RED (USB device must be connected)

Set a reminder by pressing GREEN

View a previous day by pressing YELLOW

View the next day by pressing BLUE

3) Press [EXIT] to exit the 7 day TV Guide

Channel List

To view the channel list, please ensure that the TV is set to either the analogue or digital source and no menus or TV notifications are displayed.



1) Press [OK] on the remote control and the channel list menu will appear.

2) Press LEFT / RIGHT arrow to filter desired channel types (Digital TV, HD channels, Radio, Data, All).

3) Scroll through the channel list by using ▲▼ buttons then press [OK] to view the channel that is currently highlighted.

4) Press [EXIT] to exit the channel list.

USB RECORD - FREEVIEW/SAORVIEW MODE

Built into this television is a USB record facility. This function is available in Freeview/Saorview mode when used in conjunction with a compatible USB memory stick or USB hard drive. The benefits of this are as follows:

- Pause live TV and then playback, fast forward and rewind (up to live TV)
- One button record, if you decide you want to record the current programme
- Easy programmable recording from the 7 day TV Guide
- Record TV and watch/listen back on your computer/laptop

Due to the nature of the product, it is necessary to use a high speed USB memory stick (as the TV reads from and writes to the memory stick at the same time, some memory sticks may not be suitable)

You can purchase high speed memory sticks from some computer stores, alternatively, we have a selection of tested and compatible memory sticks available to purchase directly from our website or contacting our technical support team.

Minimum specification - USB Memory Stick

Read Speed	80 MB/s (Mega Byte Per Second)
Write Speed	40 MB/s (Mega Byte Per Second)

If you wish to use a USB portable hard drive larger than 32GB, please refer to the FAQ section at the rear of this user guide.

Pause live TV (time shift)

Pausing Live TV is very simple.



- ⏸ - Press the play/pause button and the television will pause and the live content will be recorded. To resume watching press play/pause again.
- ⏩ - Press fast forward to go forward in a recording (i.e. to skip adverts)
- ⏮ - Press fast rewind to go back in a recording (i.e. if you fast forwarded too far)

Tip: When you switch the TV to standby or change channel the time shift memory is wiped. To restart time shift you must press play/pause button.

One button record

At any point in time you may decide to record the current channel that you are watching. To do this you need to press the red button highlighted below.



Tip: This television contains one TV tuner, therefore it can only record the channel you are watching or record one channel while the television is in standby mode.

Note: USB record function is only available in Freeview/Saorview TV mode. Due to copyright laws and illegal copying/recording it is not possible to record to/from any other input/output source.

FREQUENTLY ASKED QUESTIONS

General	I would like to have louder sound by connecting additional speakers. For TV models with digital optical audio output.	1) Use the 3.5mm headphone output and a 3.5mm to phono cable (available separately) to connect to an amplifier/surround sound system. Please note this will deactivate the TV's built in speakers. 2) Connect a digital optical audio cable from the TV's digital optical audio output to your amplifier/surround systems digital optical audio input.
General	Why are some options in the menu unavailable and greyed out.	Some options are only available in certain sources, i.e. HDMI. They are unavailable in the other sources where they have no affect.
General	Can I stop my TV automatically turning off after 4hrs?	Yes, in the 'Time' menu settings, scroll down to Auto standby and select OFF.
TV	I have tuned in Digital TV but I am not receiving any or all of the channels and/or the channels I receive are breaking up.	1) Check you are in an area that can receive Freeview/Saorview, visit www.freeview.co.uk or www.saorview.ie 2) Check you are using an aerial that is able to receive a good digital signal. In most cases, you will need an outdoor digital hi-gain/wideband aerial. In areas that have excellent digital coverage, you may be able to use a loft type aerial but it is highly likely that you will also need to connect a booster between the back of the TV and the TV aerial wall socket. Unfortunately, to receive a good enough digital signal, it is not possible to use a portable/indoor type aerial.
TV	I have re-tuned my television but when I switch it off it is not storing the channels.	If the TV does not save the channels when you power it off, it's likely the channel database has become corrupt. 1) Turn off the TV. 2) Remove the RF/Aerial cable from the rear of the TV and then turn the TV back on again. 3) Using the remote control, press Menu followed by 8-8-8-8 to enter the initial setup/first time installation menu. 4) Press OK (let the TV run the full tuning process). 5) Once completed, turn off the TV, reconnect the RF/Aerial cable then turn the TV back on again. 6) Repeat steps 3 & 4.
VCR/DVD Recorder	I have connected the TV to my VCR or DVD Recorder via SCART but it is not recording.	In addition to connecting via SCART, you should connect the aerial cable from the wall socket to your VCR/DVD Recorder and another aerial cable from the VCR/DVD Recorder to the TV.
Game Consoles	I have connected my Playstation/Xbox to the TV via HDMI, but I am not receiving any pictures or sound on my TV	1) Ensure the TV's source is set to HDMI. 2) Check your settings on your Playstation/Xbox are as per the Playstation/Xbox instruction manual.
Game Consoles	I have connected my Playstation/Xbox to the TV via Component cables (red, green & blue) but I am not receiving any sound.	Component cables only provide HD pictures. For the sound you will need to connect the red & white audio cables on the Playstation/Xbox to the red & white phono inputs (or mini AV input where fitted) on the rear of the TV. Please refer to the 'Connections' pages.
System Lock	I have changed the password on the television and now forgotten it.	There is a master password of 4711, to gain access to the TV menu and reset the normal password.
USB Mode	I have inserted a USB Memory Key, but the TV does not recognise it.	Ensure the USB Memory Key is formatted to type FAT32.
USB Mode	Using a USB portable hard drive / larger than 32GB.	If you wish to use a portable hard drive larger than 32GB, please note that it must be formatted to the FAT32 file system in order to operate on this TV. Windows XP/Vista computers are only capable of formatting up to 32GB, therefore, you will need a software programme/utility to format larger hard drives. Please refer to the website, www.umc-uk.co.uk , for more information.
USB Record	I cannot change the channel, access the menu or use the red button.	During time shift you cannot change the channel, access the menu or use the red button.
USB Record	When using the USB to record the picture 'breaks up' or experience loss of sound.	Check the USB memory stick meets the minimum read speed requirements. Standard definition channels require a read speed of 20 MB/s (Mega Byte per second) and a write Speed of 6 MB/s (Mega Byte per second) HD channels require the read speed of 80 MB/s (Mega Byte per second) and a write speed of 40 MB/s (Mega Byte per second). USB 3.0 sticks should normally ne used where possible.

FREQUENTLY ASKED QUESTIONS

Freeview HD	I cannot access all Freeview channels.	Some data channels for Freeview can only be obtained when the TV's ethernet port is connected to your router.
Freeview HD	I cannot find the Freeview HD channels.	Freeview HD channels found during tuning will be placed in channel positions above 100. For example, 101 (BBC1 HD), 102 (BBC2 HD) etc.
Smart	I cannot access Smart apps on my Sharp Smart TV.	<p>Check your TV is connected to the internet and there is suitable signal strength. You can carry out a Network Test as follows:</p> <ol style="list-style-type: none"> 1) Press Menu on the remote control. 2) Select 'Network' Menu then 'Network Test'. 3) This will show the status of the internet connection. <p>If you have no internet connection you must re-connect your TV as follows:</p> <ol style="list-style-type: none"> 1) Press Menu on the remote control. 2) Select 'Network' Menu then 'Wi-fi config'. 3) Then 'Wifi Auto Search'. 4) The TV will then automatically search for Networks. 5) Select the desired network then enter the Network password. 6) The TV will then connect. <p>Note: An icon will appear in the top right hand side of the Application page to show you if the TV is connected to the internet.</p>
Smart	I cannot access content through the Media Server settings	Check your TV is connected to your local network and there is suitable signal strength. Check the server devices you are trying to connect with are also on the Network and are set to share content.
Smart	I cannot access content through the Wireless Connection settings	Ensure the device you are trying to mirror onto the TV is correctly paired with the TV. Check the settings on the device, move your device closer to the TV set, check the user guide of the device to ensure it is compatible with this function.
Smart	While using Media Server, access is not possible or connection is slow	<p>If the folder you are attempting to view contains a large amount of files, it may take a little while to load, this is normal, content may be blocked on the host PC. Reconfigure the host PC to allow external access.</p> <p>Note: Host may not be connected to your network.</p>
Smart	I cannot access Facebook or Twitter	Ensure that you have an active account and that your network is not blocking access to these sites.
Smart	The YouTube app does not work and/or is erratic	Ensure that your network is not blocking access to YouTube and the speed of your internet connection is fast enough for viewing YouTube content.

TECHNICAL SPECIFICATION

Product fiche

Trademark	Sharp
Model ID	LC-32CHE6131K
Energy efficiency class	A+
Visible screen size (diagonal)	81 cm / 32 inches
On-mode average power consumption	31.0 W
Annual energy consumption *1	45 kWh
Standby power consumption *2	<0.50 W
Off mode power consumption	n/a
Screen resolution	1366 (H) x 768 (V)
*1: Energy consumption XYZ kWh per year, based on the power consumption of the television operating 4 hours per day for 365 days. The actual energy consumption will depend on how the television is used.	
*2: When the TV is turned off with the remote control/standby button and no function is active.	

Additional technical information

RF	75 ohm Antenna / Analog / DVB
Inputs	3 x HDMI, 1 x SCART, 1 x VGA/PC, 2 x USB, 1 x RJ45 (Ethernet), 1 x 3.5mm jack for PC audio input, 1 x Mini Component/YpBPr, 1 x Mini Composite/Video & L/R Audio shared for Composite/Video & Component/YpBPr,
Sound Outputs	1 x 3.5mm Headphone/Audio out, 1 x Digital Optical Audio Out
Speaker / Amplifier Watts (RMS)	2 x 10 / 2 x 8
Voltage and power consumption	AC 220V ~ 240V; 50/60Hz 31/45/70 (home mode/standard/max) (<0.5W in Standby)
Dimensions including stand (mm)	733W x 467H x 160D
Net weight (Kgs)	4.5
Wall Mounting	VESA 200 x 100 (mm)

TECHNICAL SPECIFICATION

Product fiche

Trademark	Sharp
Model ID	LC-32CFE6131K
Energy efficiency class	A+
Visible screen size (diagonal)	81 cm / 32 inches
On-mode average power consumption	31.0 W
Annual energy consumption *1	45 kWh
Standby power consumption *2	<0.50 W
Off mode power consumption	n/a
Screen resolution	1920 (H) x 1080 (V)
*1: Energy consumption XYZ kWh per year, based on the power consumption of the television operating 4 hours per day for 365 days. The actual energy consumption will depend on how the television is used.	
*2: When the TV is turned off with the remote control/standby button and no function is active.	

Additional technical information

RF	75 ohm Antenna / Analog / DVB
Inputs	3 x HDMI, 1 x VGA/PC, 1 x USB, 1 x RJ45 (Ethernet), 1 x 3.5mm jack for PC audio input, 1 x Mini Component/YPbPr, 1 x Composite/Video, 1 x L/R Audio shared for Composite/ Video & Component/YPbPr
Sound Outputs	1 x 3.5mm Headphone/Audio out, 1 x Digital Optical Audio Out
Speaker / Amplifier Watts (RMS)	2 x 10 / 2 x 8
Voltage and power consumption	AC 220V ~ 240V; 50/60Hz 31/45/70 (home mode/standard/max) (<0.5W in Standby)
Dimensions including stand (mm)	733W x 467H x 160D
Net weight (Kgs)	4.5
Wall Mounting	VESA 200 x 100 (mm)

TECHNICAL SPECIFICATION

Product fiche

Trademark	Sharp
Model ID	LC-40CFE6131K
Energy efficiency class	A+
Visible screen size (diagonal)	100 cm / 40 inches
On-mode average power consumption	45.0 W
Annual energy consumption *1	66 kWh
Standby power consumption *2	<0.50 W
Off mode power consumption	n/a
Screen resolution	1920 (H) x 1080 (V)
*1: Energy consumption XYZ kWh per year, based on the power consumption of the television operating 4 hours per day for 365 days. The actual energy consumption will depend on how the television is used.	
*2: When the TV is turned off with the remote control/standby button and no function is active.	

Additional technical information

RF	75 ohm Antenna / Analog / DVB
Inputs	3 x HDMI, 1 x SCART, 1 x VGA/PC, 2 x USB, 1 x RJ45 (Ethernet), 1 x 3.5mm jack for PC audio input, 1 x Mini Component/YPbPr, 1 x Mini Composite/Video & L/R Audio shared for Composite/Video & Component/YPbPr,
Sound Outputs	1 x 3.5mm Headphone/Audio out, 1 x Digital Optical Audio Out
Speaker / Amplifier Watts (RMS)	2 x 10 / 2 x 8
Voltage and power consumption	AC 220V ~ 240V; 50/60Hz 45/65/80W (home mode/standard/max) (<0.5W in Standby)
Dimensions including stand (mm)	906W x 554H x 184D
Net weight (Kgs)	7
Wall Mounting	VESA 200 x 100 (mm)

TECHNICAL SPECIFICATION

Product fiche

Trademark	Sharp
Model ID	LC-43CFE6131K
Energy efficiency class	A+
Visible screen size (diagonal)	109 cm / 43 inches
On-mode average power consumption	41.0 W
Annual energy consumption *1	60 kWh
Standby power consumption *2	<0.50 W
Off mode power consumption	n/a
Screen resolution	1920 (H) x 1080 (V)
*1: Energy consumption XYZ kWh per year, based on the power consumption of the television operating 4 hours per day for 365 days. The actual energy consumption will depend on how the television is used.	
*2: When the TV is turned off with the remote control/standby button and no function is active.	

Additional technical information

RF	75 ohm Antenna / Analog / DVB
Inputs	3 x HDMI, 1 x SCART, 1 x VGA/PC, 2 x USB, 1 x RJ45 (Ethernet), 1 x 3.5mm jack for PC audio input, 1 x Mini Component/YPbPr, 1 x Mini Composite/Video & L/R Audio shared for Composite/Video & Component/YPbPr,
Sound Outputs	1 x 3.5mm Headphone/Audio out, 1 x Digital Optical Audio Out
Speaker / Amplifier Watts (RMS)	2 x 10 / 2 x 8
Voltage and power consumption	AC 220V ~ 240V; 50/60Hz 41/50/70W(home mode/standard/max) (<0.5W in Standby)
Dimensions including stand (mm)	966W x 596H x 184D
Net weight (Kgs)	8
Wall Mounting	VESA 400 x 200 (mm)

TECHNICAL SPECIFICATION

Product fiche

Trademark	Sharp
Model ID	LC-49CFE6031K
Energy efficiency class	A+
Visible screen size (diagonal)	123 cm / 49 inches
On-mode average power consumption	67.0 W
Annual energy consumption *1	98 kWh
Standby power consumption *2	<0.50 W
Off mode power consumption	n/a
Screen resolution	1920 (H) x 1080 (V)
*1: Energy consumption XYZ kWh per year, based on the power consumption of the television operating 4 hours per day for 365 days. The actual energy consumption will depend on how the television is used.	
*2: When the TV is turned off with the remote control/standby button and no function is active.	

Additional technical information

RF	75 ohm Antenna / Analog / DVB
Inputs	3 x HDMI, 1 x VGA/PC, 1 x USB, 1 x RJ45 (Ethernet), 1 x 3.5mm jack for PC audio input, 1 x Mini Component/YPbPr, 1 x Mini Composite/Video & L/R Audio shared for Composite/Video & Component/YPbPr,
Sound Outputs	1 x 3.5mm Headphone/Audio out, 1 x Digital Optical Audio Out
Speaker / Amplifier Watts (RMS)	2 x 10 / 2 x 8
Voltage and power consumption	AC 220V ~ 240V; 50/60Hz 67/95/110W (home mode/standard/max) (<0.5W in Standby)
Dimensions including stand (mm)	1104W x 688H x 229D
Net weight (Kgs)	11.4
Wall Mounting	VESA 200 x 200 (mm)

TECHNICAL SPECIFICATION

Product fiche

Trademark	Sharp
Model ID	LC-49CFE6032K
Energy efficiency class	A+
Visible screen size (diagonal)	123 cm / 49 inches
On-mode average power consumption	67.0 W
Annual energy consumption *1	98 kWh
Standby power consumption *2	<0.50 W
Off mode power consumption	n/a
Screen resolution	1920 (H) x 1080 (V)
*1: Energy consumption XYZ kWh per year, based on the power consumption of the television operating 4 hours per day for 365 days. The actual energy consumption will depend on how the television is used.	
*2: When the TV is turned off with the remote control/standby button and no function is active.	

Additional technical information

RF	75 ohm Antenna / Analog / DVB / Satellite
Inputs	3 x HDMI, 1 x VGA/PC, 1 x USB, 1 x RJ45 (Ethernet), 1 x 3.5mm jack for PC audio input, 1 x Mini Component/YPbPr, 1 x Mini Composite/Video & L/R Audio shared for Composite/Video & Component/YPbPr,
Sound Outputs	1 x 3.5mm Headphone/Audio out, 1 x Digital Optical Audio Out
Speaker / Amplifier Watts (RMS)	2 x 10 / 2 x 8
Voltage and power consumption	AC 220V ~ 240V; 50/60Hz 67/95/110W (home mode/standard/max) (<0.5W in Standby)
Dimensions including stand (mm)	1104W x 688H x 229D
Net weight (Kgs)	11.4
Wall Mounting	VESA 200 x 200 (mm)

TECHNICAL SPECIFICATION

Product fiche

Trademark	Sharp
Model ID	LC-50CFE6131K
Energy efficiency class	A+
Visible screen size (diagonal)	127 cm / 50 inches
On-mode average power consumption	58.0 W
Annual energy consumption *1	85 kWh
Standby power consumption *2	<0.50 W
Off mode power consumption	n/a
Screen resolution	1920 (H) x 1080 (V)
*1: Energy consumption XYZ kWh per year, based on the power consumption of the television operating 4 hours per day for 365 days. The actual energy consumption will depend on how the television is used.	
*2: When the TV is turned off with the remote control/standby button and no function is active.	

Additional Technical Information

RF	75 ohm Antenna / Analog / DVB
Inputs	3 x HDMI, 1 x VGA/PC, 1 x USB, 1 x RJ45 (Ethernet), 1 x 3.5mm jack for PC audio input, 1 x Mini Component/YPbPr, 1 x Mini Composite/Video & L/R Audio shared for Composite/Video & Component/YPbPr,
Sound Outputs	1 x 3.5mm Headphone/Audio out, 1 x Digital Optical Audio Out
Speaker / Amplifier Watts (RMS)	2 x 10 / 2 x 8
Voltage and power consumption	AC 220V ~ 240V; 50/60Hz 58/80/100W (home mode/standard/max) (<0.5W in Standby)
Dimensions including stand (mm)	1130W x 703H x 229D
Net weight (Kgs)	12.4
Wall Mounting	VESA 200 x 200 (mm)

TECHNICAL SPECIFICATION

Compatible files in USB Mode

Media	File Ext.	Video Decoder		Remark
		Video	Audio	
Movie	.mpg/.mpeg .dat	MPEG-1, MPEG-2	MP3, WMA, AAC, LPCM, AC3, E-AC3, DTS	Max Solution: 1920×1080 Max Data Rate: 40 Mbps
	.ts/.trp/.tp/. m2ts	MPEG-2, H.264,VC1,AVS		
	.vob	MPEG-2		
	.mp4	MPEG-4, Xvid, H.264		
	.rm/.rmvb	Rm codec		
	.mkv	MPEG-1, MPEG-2, MPEG-4, H.264		Max Solution: 640×480 Max Data Rate: 10 Mbps
	.avi	MPEG-2, MPEG-4, Xvid, H.264		
	Motion JPEG	JPEG		Max Solution: 1920×1080 Max Data Rate: 40 Mbps
	.asf,wmv	VC1		
Music	.flv/.swf	H.264, AVC, Sorenson H.263		
	.mp3	--	MPEG1/2 (Layer1, Layer2, Layer3)	Sample Rate: 16KHz~48KHz BitRate: 32K~448Kbps
	.wma/.asf	--	WMA	BitRate: 128Kbps~320Kbps Sampling rate : 8KHz-48KHz
			WMA pro	BitRate: <768Kbps Sampling rate : ~96KHz
	.ogg	--	OGG	Sample Rate: ~48KHz
Photo	.m4a/.aac	--	AAC HEAAC	Sample Rate: 8K~48KHz Bit Rate: 24K~384Kbps
	.jpg/ .jpeg	Progressive JPEG		Max Resolution: 1024×768
		Baseline JPEG		Max Resolution: 1920×8×1088×8
	.bmp	BMP		Max Resolution: 9600×6400
	.png	Non-Interlaced		Max Resolution: 9600×6400
		Interlaced		Max Resolution: 1200×800

UMC Poland sp. z o.o.

Ostaszewo 57B, 87-148 Łysomice,
Poland

Assembled in Europe

This is Why

www.sharp.eu

SHARP

CE



SHA-MAN-0005