 




# Russell Hobbs

## **Turbo Lite Corded Handheld Stick Vacuum**

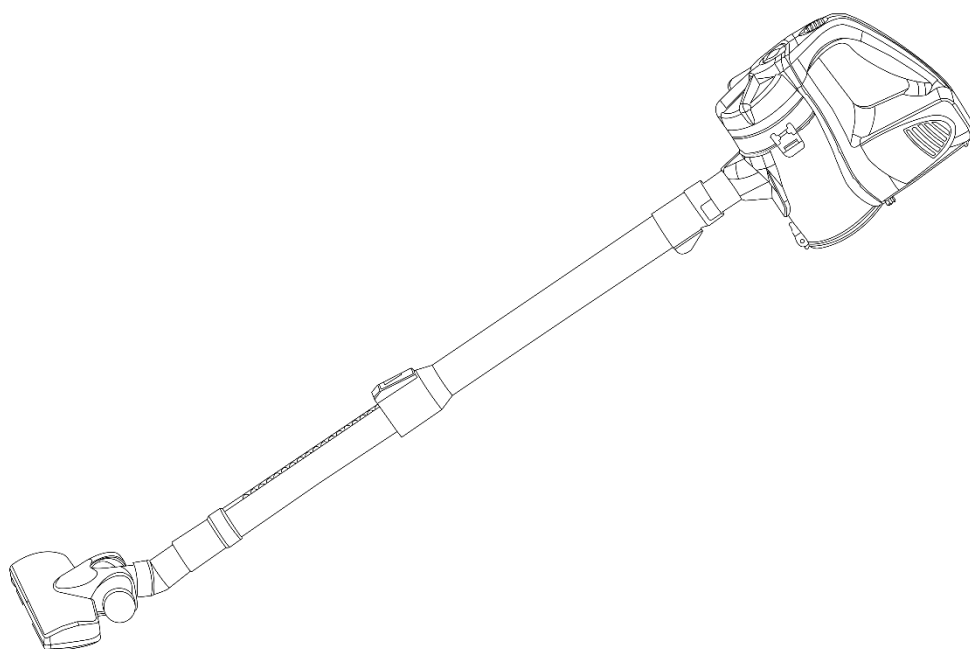

**Model Number: RHCHS1001**

For Customer Services & Spare Parts please call **0345 209 7461**  
Opening times: Monday - Friday 8am – 8pm & Saturday 9am – 1pm  
Or visit us at **[www.productcare.co.uk](http://www.productcare.co.uk)**

**PLEASE RETAIN  
FOR FUTURE REFERENCE**

# Contents

	Page
Safety instructions .....	3
Energy Performance Label .....	6
Feature diagram .....	7
Unpacking your vacuum cleaner .....	8
Assembling your vacuum cleaner .....	9
How to empty the dust container .....	11
How to clean the filter .....	12
How to change the fuse .....	13
Troubleshooting .....	14
Connection to the mains supply .....	15
Notes .....	16
Guarantee & Customer Services .....	18
Spare Parts .....	19

Thank you for purchasing your Turbo Lite Corded Handheld Stick Vacuum.

To get the best from your new cleaner, take a few moments to read these instructions and keep them in a safe place for future reference.

Should you require any further assistance, our friendly Product Care team will be happy to help.

For Customer Services & Spare Parts please call **0345 209 7461**  
Opening times: Monday - Friday 8am – 8pm & Saturday 9am – 1pm  
Or visit us at **[www.productcare.co.uk](http://www.productcare.co.uk)**

# Safety instructions

**IMPORTANT SAFETY INSTRUCTIONS**  
**READ CAREFULLY AND KEEP FOR FUTURE REFERENCE**

## **WARNING:**

- **It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to electrical parts.**
- **If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.**
- **This product is intended for household use only. Do not use outdoors.**
- **This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children should not play with the appliance. Cleaning and user maintenance should not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children less than 8 years.**
- **Do not operate this appliance for anything other than its intended use.**
- **Do not immerse in water or other liquids for cleaning.**

# Safety instructions

---

 
- **Do not direct at people, animals, electrical outlets, or equipment containing electrical components.**
- **Unplug from outlet when not in use. Do not leave the cleaner unattended while plugged in.**
- **Do not use with damaged cord or plug.**
- **Do not use vacuum cleaner if it has been dropped, damaged, left outdoors or dropped into water.**
- **Keep the vacuum cleaner away from water; do not allow it to get wet. If unit is wet, do not plug unit into wall socket or turn unit on.**
- **Do not handle the vacuum cleaner with wet hands.**
- **Do not pull or carry by cord, use cord as a handle, close door on cord, pull cord around sharp corners or edges, or expose cord to heated surfaces.**
- **Do not unplug by pulling on cord.**
- **To protect against electrical shock do not immerse cord, plug, or appliance in water or other liquid.**
- **Unplug from the mains outlet when not in use, before putting on and taking off parts, and before cleaning.**
- **The use of accessory attachments not recommended by the appliance manufacturer may cause fire, electric shock or injury. Only use the accessories supplied by the manufacturer.**
- **Do not let the cord hang over the edge of the worktop, or touch hot surfaces.**

# Safety instructions

---


- This cleaner is intended for internal household use only, do not use outside or for anything other than its' intended purpose.
- Do not use this vacuum to pick up water or any other liquids, combustible substances or hot/burning objects.
- Only use the unit when fully assembled.
- Never place your fingers or other objects into any part of the cleaner. Be aware that loose clothing or hair may become trapped in the cleaner if improperly used.
- Before use, ensure that all of the air vents of the cleaner are clear and there is no restriction of air flow.
- Caution: Exhaust air discharged from the sides of the cleaner may extinguish a gas fire, pilot light, or disturb ashes in an open fire. Always avoid directing the cleaner toward naked flames.
- Important: This cleaner has a thermal safety device which automatically cuts off the power supply in case of over heating. If the safety device has switched the cleaner off, unplug from the mains and allow the cleaner to cool down. Once the cleaner has cooled it can be plugged back in to the mains and used as normal. This takes approximately 15 minutes to reset.

# Energy Performance Label

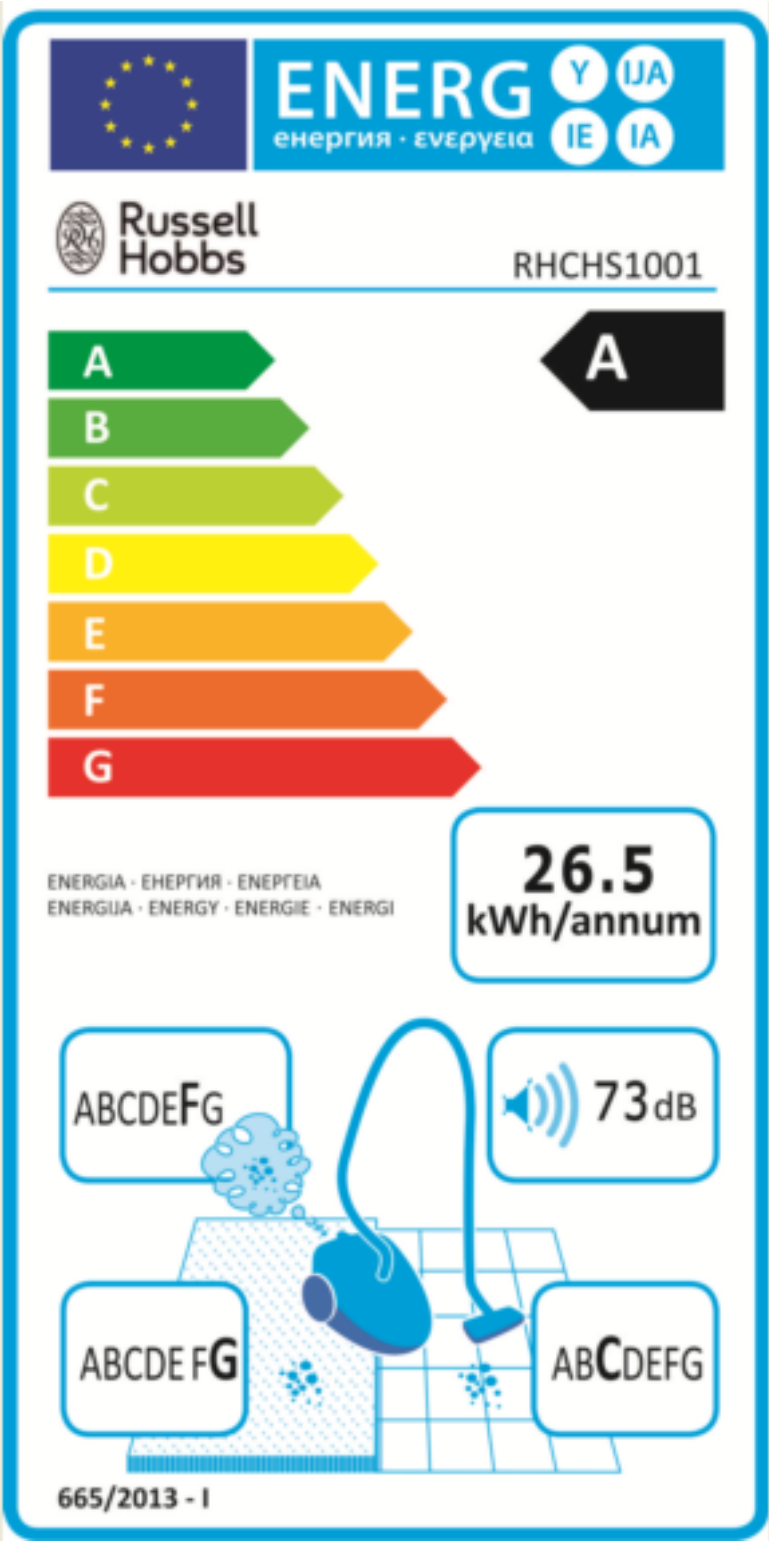

# Feature diagram

 ---

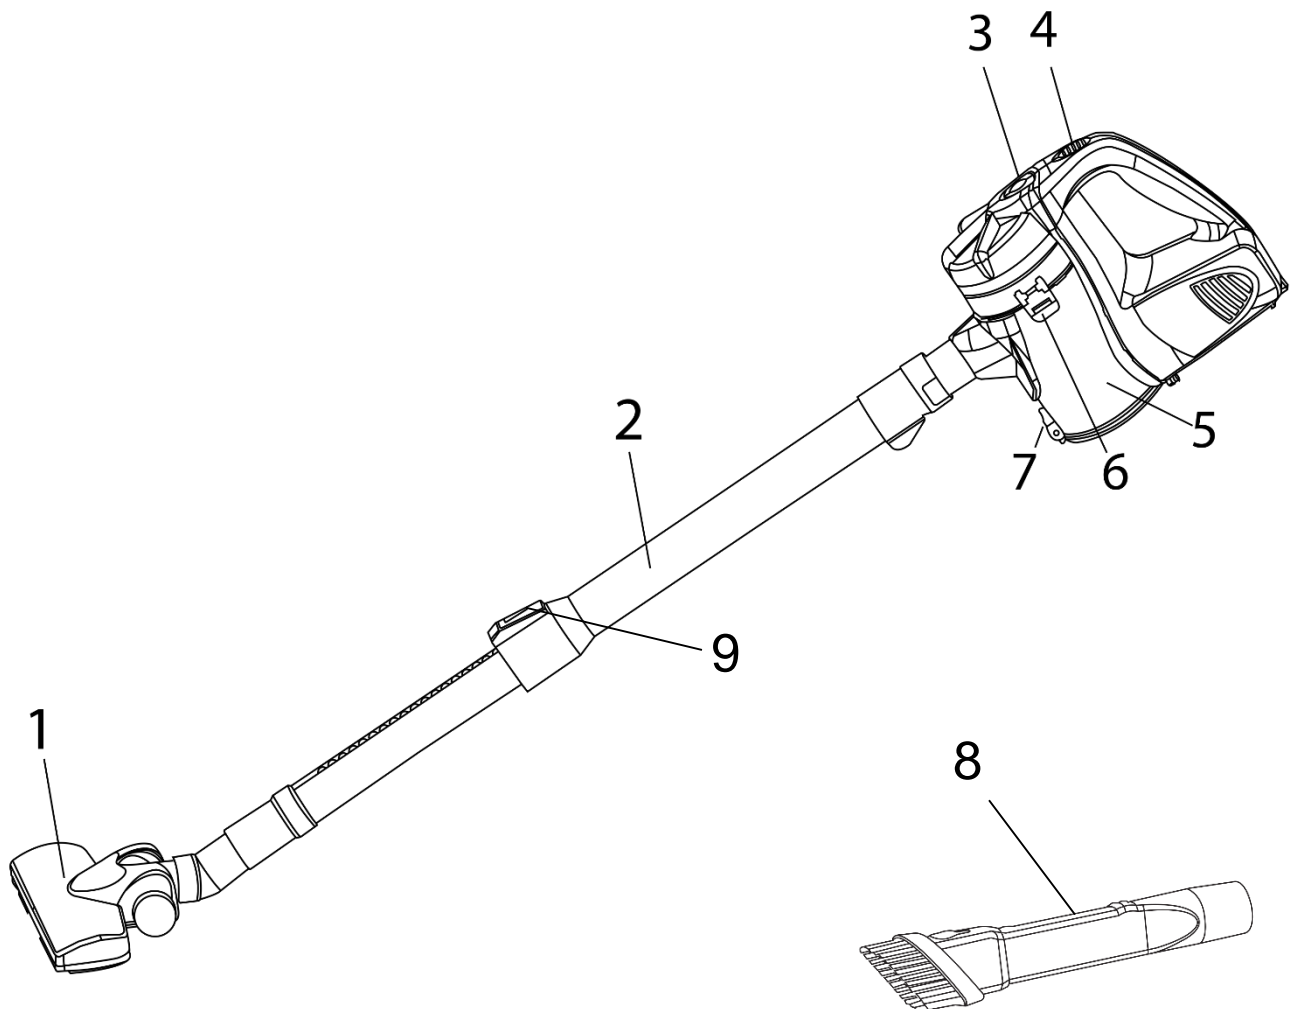

1. Cleaning Head
2. Extension Tubes
3. Dust Container Release
4. Power Switch
5. Dust tank
6. Filter release clip
7. Lower Dust Container Release Button
8. 2 in 1 crevice and brush tool
9. Tube Extension Button

# Unpacking your vacuum cleaner

## Before using your vacuum cleaner

Remove all packaging and lay out the separate components.

 
Check the unit after unpacking for any visual damage such as:

- Misaligned or damaged parts
- Damage to the main body and separate components
- Damage to the plug or cable.


If you can see any damage do not use the vacuum cleaner and contact customer services

## Powering the cleaner

Plug the power cord into a wall socket.

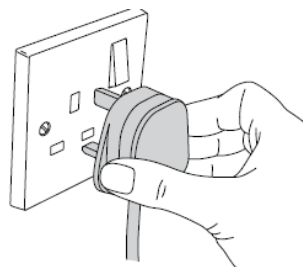

 Slide the power switch on the top of the machine to switch the cleaner on and off.

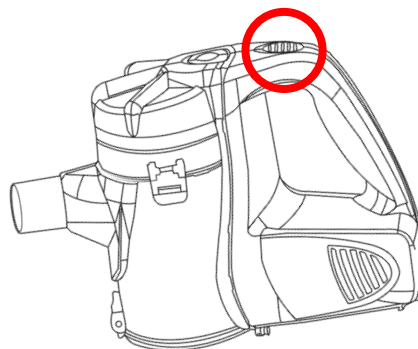





# Assembling your vacuum cleaner

1. Place the extension tube onto the cleaner's nozzle, ensuring that the protruding tabs are lined up with the grooves in the telescopic tube (1).

 
Rotate the tube from the "OPEN" to the "LOCK" position (2).

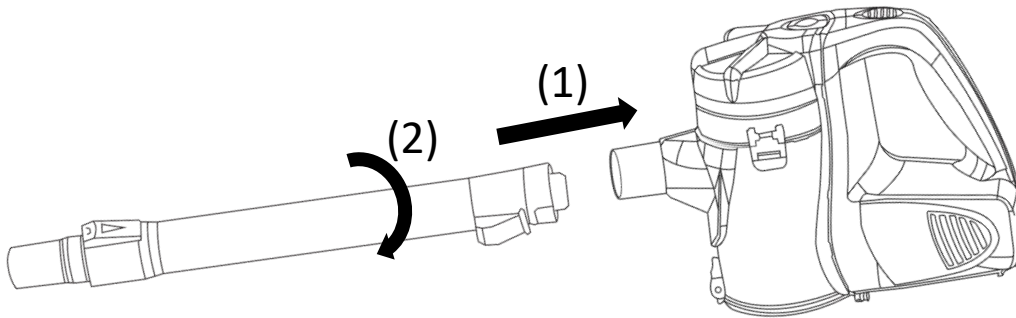

 2. Slot the cleaning head on to the end of the extension tube.

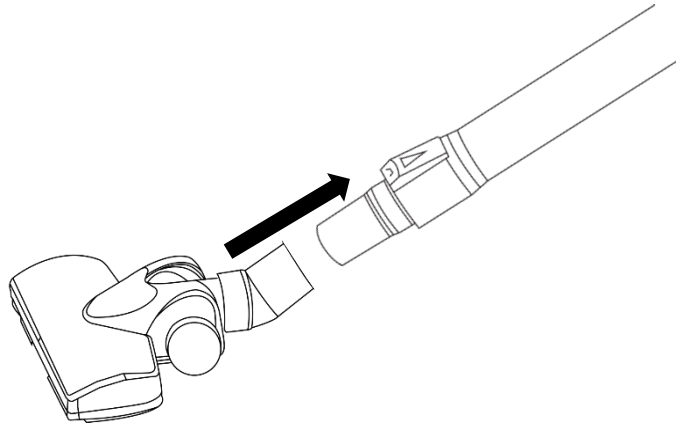

 3. Adjust the telescopic tube to the desired height by pushing the tube extension button upwards (3) and pulling the inner tube downwards (4).

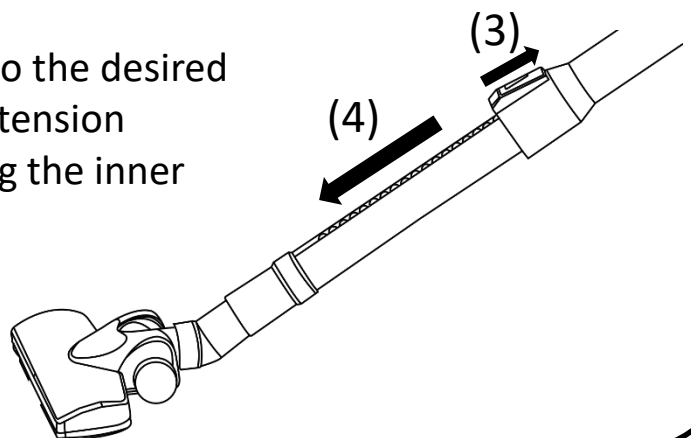

# Assembling your vacuum cleaner

 
## Attaching the tools

### Brush Tool

The brush tool can be used for dusting and cleaning delicate surfaces.

To use the brush tool, push the 2 in 1 attachment into the nozzle.

Slide the brush to the end of the tool until it clicks into place

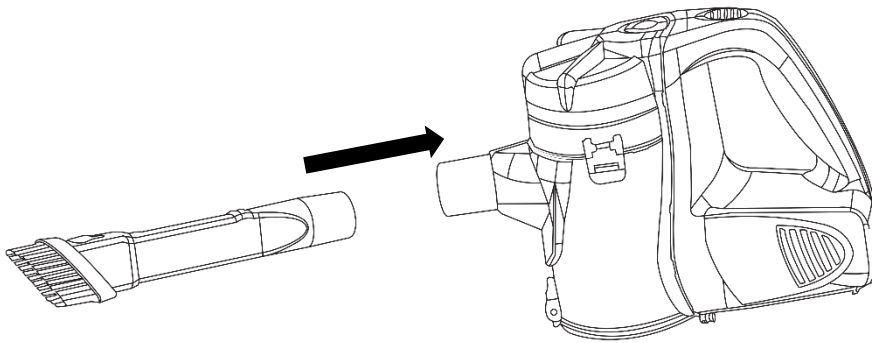


### Crevice Tool

The crevice tool is for narrow gaps and hard to reach places.


To use the crevice tool, push the 2 in 1 attachment into the nozzle (as above).

 Push the button on the end of the brush tool (1) and slide the brush back to expose the crevice tool until the brush clicks in to place.

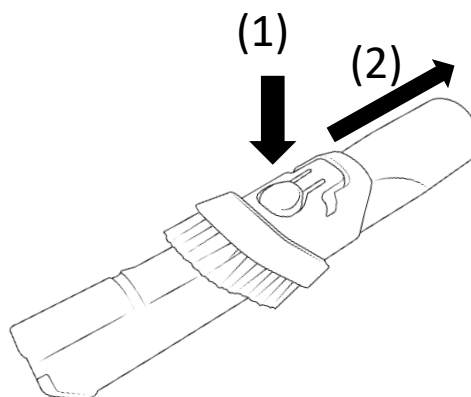


# How to empty the dust container

 Make sure to empty the dust container before the 'MAX' fill line is reached. Press the release button on the top of the vacuum cleaner (1), and lift the dust container clear of the base.

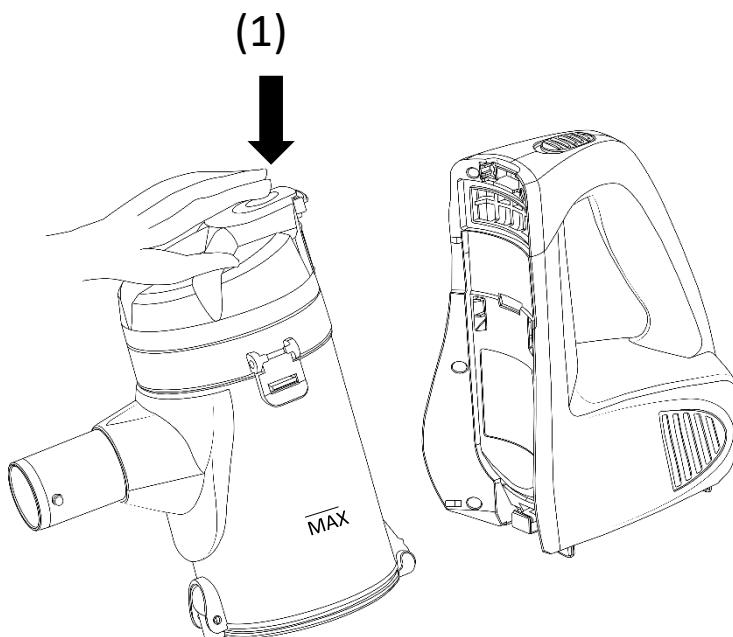

Whilst holding over a bin or inside a bin bag, press down the button on the side of the dust container below the nozzle to open the bottom and release the dust (2).

 **Important:** You may wish to empty the dust container outdoors as emptying may create a dust cloud.

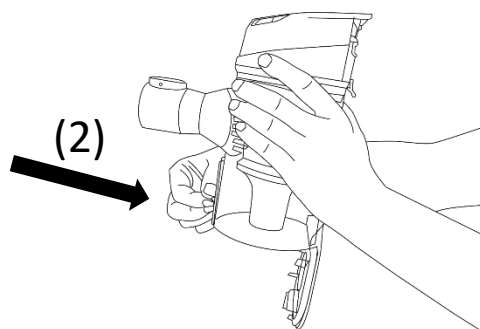


Once empty, close the bottom of the dust container then clip the dust container back into the vacuum cleaner unit, ensuring the bottom of the dust container is correctly located before the release button clicks back into place.


# How to remove and clean the filter

 Turn off and unplug the cleaner. Remove the dust container as per instructions on page 11.

Remove the filter assembly by unclipping the filter release clips on both sides of the dust container.

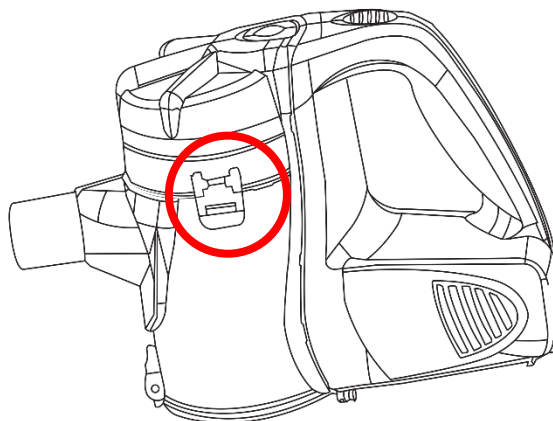

 Twist the lid of the dust container assembly to the UNLOCK position and remove (1).

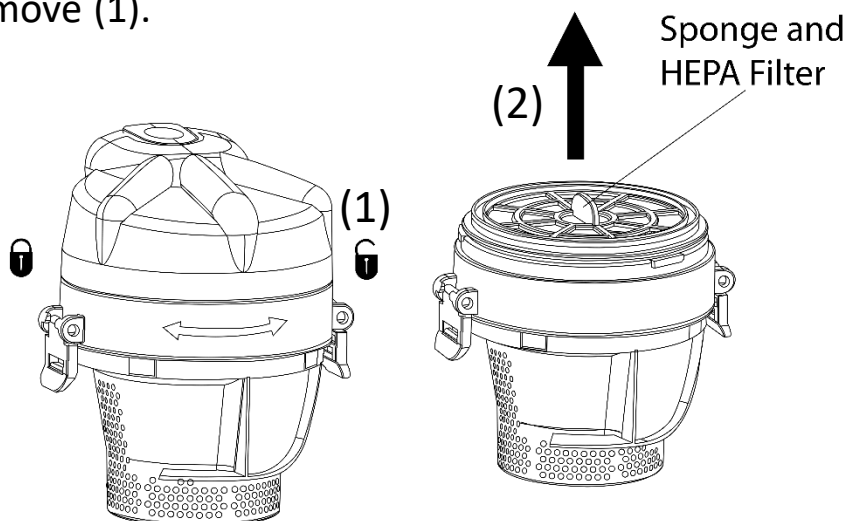


Remove the sponge and HEPA filters (2). To clean, remove excess dust from the filter using a soft brush. Wash in warm water and allow to dry for 24 hours.

Replace the filters, then twist the lid of the dust container to the LOCK position. Refit the dust container as per the instructions on page 11.

# How to change the fuse

 - 1. Slot the end of a screwdriver into the recess in the fuse holder of the plug.
- 2. Pull the fuse holder upwards until free of the plug and slide the fuse out.
- 3. Replace the fuse and replace fuse holder, pushing down until locked into place.

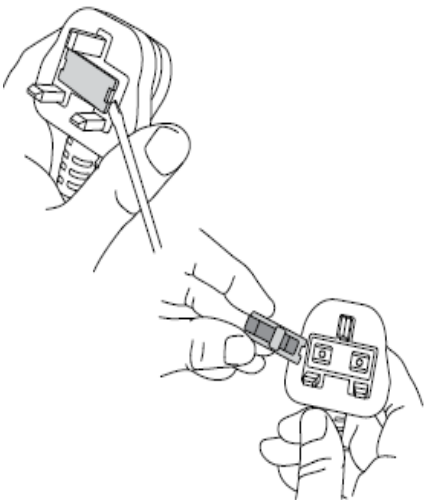

**Important:** Only ever use 13 amp fuses.

Supplier Trade Mark	Russell Hobbs	
Model Number	RHCHS1001	
Annual Energy Consumption (kWh/annum)	26.5	A
Rate Input Power (W)	450W	-
Dust Pick Up on Carpet (dpu)	0.71	G
Dust Pick Up on hard floor (dpu)	1.05 – 1.08	C
Dust Re-emission(%)	0.6 – 1.0	F
Sound Power Level (dB(A))	73	-

# Troubleshooting

---

Problem	Solutions
The vacuum cleaner is plugged in but does not work.	<ul style="list-style-type: none"><li>• Check the power cord and plug are not damaged.</li><li>• Check and replace the fuse in the plug.</li></ul>
The suction is decreasing and the vacuum cleaner is not picking dirt up.	<ul style="list-style-type: none"><li>• Check if the dust container is full, if so, empty it.</li><li>• Clean the filters.</li><li>• Check that there are no blockages in the hose or cleaning head, if so, clear the blockage.</li></ul>
Vacuum cleaner is over heating.	<ul style="list-style-type: none"><li>• Check that the filters are not blocked, if so, clean them following the instructions in this booklet.</li></ul>
Dust is coming out of the vacuum cleaner.	<ul style="list-style-type: none"><li>• The dust container has not been fitted correctly. Refit the container following the instruction in this booklet.</li></ul>
The air coming out of the vacuum cleaner smells.	<ul style="list-style-type: none"><li>• Clean the filters. Also clean the hose and dust container.</li><li>• Ensure the filters have been left to dry for 24 hours before refitting back into the vacuum cleaner and using.</li></ul>

# Connection to the mains supply

---

## **WARNING:**

This appliance is designed to operate from a mains supply of AC230V - 240V ~ 50/60HZ.

Check that the voltage marked on the product corresponds with your supply voltage.

This product is fitted with a 13A plug complying with BS1363.  
If this plug is unsuitable or needs to be replaced, please note the following:

Important: The wires in the mains lead are coloured in accordance with the following code:

BLUE-NEUTRAL

BROWN-LIVE



# Notes

---



# Notes

---

# **GUARANTEE AND CUSTOMER SERVICES**

At Russell Hobbs, we take all our customer feedback seriously.

**Feel free to contact our Product Care Team, on 0345 209 7461**

**Monday – Friday: 8am-8pm & Saturday: 9am – 1pm,  
who will be more than happy to assist you.**

This product is guaranteed for **12 months** from the date of the original purchase. If any defect arises due to faulty materials or workmanship, the faulty product must be returned to the place of purchase.

Refund or replacement is at the discretion of the retailer.

## **The following conditions apply:**

- The product must be returned to the retailer with the original proof of purchase.
- The product must be installed and used in accordance with the instructions contained in this instruction guide and any other instructions for use which are supplied.
- It must be used for domestic purposes only and for its intended use.
- This warranty does not cover wear and tear, damage, misuse or consumable parts.

**This does not affect your statutory rights.**

For Customer Services & Spare Parts please call **0345 209 7461**  
Opening times: Monday - Friday 8am – 8pm & Saturday 9am – 1pm  
Or visit us at **[www.productcare.co.uk](http://www.productcare.co.uk)**

# SPARE PARTS

To check the availability of the following spare parts, simply contact our friendly Customer Services team using the details provided at the bottom of this page.

Sponge and HEPA Filters

2 in 1 Crevice / Brush  
Tool

Extension Tube

Floor Head

For Customer Services & Spare Parts please call **0345 209 7461**  
Opening times: Monday - Friday 8am – 8pm & Saturday 9am – 1pm  
Or visit us at **[www.productcare.co.uk](http://www.productcare.co.uk)**



# Russell Hobbs

For Customer Services & Spare  
Parts please call

**0345 209 7461**

Opening times: Monday - Friday  
8am – 8pm & Saturday 9am – 1pm

Or visit us at


**[www.productcare.co.uk](http://www.productcare.co.uk)**

Revision 4

Model: **RHCHS1001**

Made by G2S Ltd under license.  
G2S Limited, Wigan, WN2 4AY

 Russell Hobbs is the registered trademark of  
Spectrum Brands (UK) Ltd.

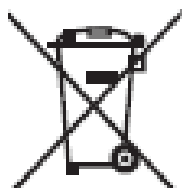

This symbol is known as the 'Crossed-out wheellie bin Symbol'. When this symbol is marked on a product/batteries, it means that the product/batteries should not be disposed of with your general household waste. Only discard electrical/electronic/battery items in separate collection schemes, which cater for the recovery and recycling of materials contained within. Your co-operation is vital to ensure the success of these schemes and for the protection of the environment. For your nearest disposal facility, visit [www.recycle-more.co.uk](http://www.recycle-more.co.uk) or ask in store for details.

We reserve the right, due to possible changes to design, to alter the instruction manual without prior notice.