



# Russell Hobbs

## Microwave USER'S GUIDE



**Model No: RHM2565BCG**

For Customer Services & Spare Parts please call **0345 209 7461**

Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit  
us at **[www.productcareuk.com](http://www.productcareuk.com)**

**IMPORTANT: RETAIN FOR FUTURE  
REFERENCE**

# Contents

	Page
Safety instructions .....	3
Product Overview .....	12
About this microwave oven .....	13
Unpacking the microwave .....	14
Microwave oven installation .....	15
Control Panel .....	17
Setting the clock .....	18
Microwave cooking .....	19
Grill cooking .....	20
Combination cooking .....	21
Convection cooking .....	22-23
Multi-stage cooking .....	24
Quick start cooking .....	25
Defrosting .....	26
Auto Menus .....	26
Cleaning & Care .....	29
General Information .....	30
Connection to the mains supply .....	32
Problem Solving .....	34
Guarantee .....	35
Technical Specification .....	36
Spare Parts .....	37
Notes .....	38

For Customer Services & Spare Parts please call **0345 209 7461**  
Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit  
us at **[www.productcareuk.com](http://www.productcareuk.com)**

# Safety instructions

## **IMPORTANT SAFETY INSTRUCTIONS** **READ CAREFULLY AND KEEP FOR FUTURE REFERENCE**

**WARNING:** This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.

Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.

Cleaning and user maintenance shall not be made by children unless they are aged from 8 years and above and supervised.

**WARNING:** Do not use the microwave when it is empty. This could damage the oven.

For Grill and combination models

**WARNING:** The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements.

# Safety instructions

**WARNING:** If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.

**WARNING:** It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.

**WARNING:** Liquids and other foods must not be heated in sealed containers since they are liable to explode.

**WARNING:** Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.

For Customer Services & Spare Parts please call **0345 209 7461**

Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit us at

**[www.productcareuk.com](http://www.productcareuk.com)**

## Safety instructions

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.

Only use utensils that are suitable for use in microwave ovens.

You should clean the outside of the oven with a damp cloth. Do not allow water to seep into the ventilation openings.

Do not allow the control panel to become wet. Clean with a soft, damp cloth. Do not use detergents, abrasives or spray-on cleaners on the control panel.

If steam builds up inside or around the outside of the oven door, wipe with a soft cloth. This may happen when the microwave oven is used in humid conditions.

Regularly remove the glass turntable to clean it, and wash it in warm soapy water. Regularly clean the turntable support and oven floor. Simply wipe the bottom surface of the oven with mild detergent and water, then dry. You can wash the turntable support in mild soapy water.

# Safety instructions

The rear surface of appliance may be placed against a wall. Leave a minimum clearance of 30cm above the oven, a minimum clearance of 20cm is required between the oven and the two side place.

The microwave oven should be used freestanding only and must not be built-in or used in a cabinet.

If smoke is emitted , switch off or unplug the appliance and keep the door closed in order to stifle any flames.

Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.

For Customer Services & Spare Parts please call **0345 209 7461**

Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit us at  
**[www.productcareuk.com](http://www.productcareuk.com)**

# Safety instructions

Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.

The oven should be cleaned regularly and any food deposits removed. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.

Before you clean the oven, turn it off and unplug it. Keep the inside of the oven clean. When food or liquids stick to the oven walls, wipe with a damp cloth. We recommend that you do not use harsh detergent or abrasives.

The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption in order to avoid burns.

For Customer Services & Spare Parts please call **0345 209 7461**  
Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit us at  
**[www.productcareuk.com](http://www.productcareuk.com)**

# Safety instructions

Do Not obstruct the ventilation  
from the microwave



Only use thermometers that are approved for microwave ovens.

For Customer Services & Spare Parts please call **0345 209 7461**  
Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit us at  
**[www.productcareuk.com](http://www.productcareuk.com)**



# Safety instructions

- Food containing a mixture of fat and water (for example, stock) should stand for 30 to 60 seconds in the oven after it has been turned off. This is to allow the mixture to settle and to prevent it from bubbling when a spoon is placed in it, or a stock cube is added.
- When heating or cooking food or liquid, remember that there are certain foods (such as, jam, Christmas puddings and mincemeat) which heat up very quickly.
- When heating or cooking foods that contain a lot of fat or sugar, do not use plastic containers.
- Always have the glass tray and turntable support in place when using the oven.
- Never remove parts from the oven such as the feet, screws and so on.
- Do not cook food directly on the glass tray. Put food on a suitable plate or in a bowl before putting it in the oven.

To reduce the risk of fire in the oven cavity:

- Do not overcook food.
- Do not leave the microwave oven unattended while you are using it and if using paper or plastic containers check regularly to ensure they do not ignite.
- Remove wire twist-ties from bags before putting the bag in the oven.
- If materials inside the oven smoke or catch fire, keep the oven door closed to stifle the flames, turn the oven off at the wall switch, or shut the power off at the fuse or circuit-breaker panel.

For Customer Services & Spare Parts please call **0345 209 7461**

Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit us at  
**[www.productcareuk.com](http://www.productcareuk.com)**

# Safety instructions

- The microwave is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, wheat bags, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.
- Heat from the contents of a container may be transmitted to the container itself, so please be careful when removing it from the oven. Please remember that the food or liquid inside may be releasing some steam or may be spitting. Never cover any container fully, always leave a gap for steam to escape.
- Cooking utensils may become hot because of heat transferred from the heated food. This is especially true if plastic wrap has been covering the top and handles of the utensil. You may need oven gloves to handle the utensil.
- Ensure you do not use any corrosive chemicals or vapours in the appliance. It is not designed for industrial or laboratory use.
- Never put any objects into the openings on the outer case.
- On the right hand side wall of the cavity is the wave guide cover, microwaves are passed through this to enable your food to cook. It is important that this wave guide cover is kept clean at all times. To do this wipe with mild detergent and water, then dry.
- When removing the turntable support of the oven, make sure you put it back properly.
- If the inside of the oven smells, put a cup of water with the juice and skin of one lemon in a deep microwave bowl. Microwave it for three minutes, wipe thoroughly and then dry with a soft cloth.
- Do not try to deep-fry foods in this oven.

For Customer Services & Spare Parts please call **0345 209 7461**

Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit us at  
**[www.productcareuk.com](http://www.productcareuk.com)**


# Safety instructions

- Do not use metal pans or dishes with metal handles.
- Do not use anything with a metal trim.
- Do not use paper covered wire twist-ties on plastic bags.
- Do not use melamine dishes as they contain a material which will absorb microwave energy. This may cause the dishes to crack or burn, and will slow down the cooking speed.
- Use only cookware that is approved to be used in a microwave oven.
- Do not cook using containers with restricted openings, such as bottles, as they may explode.
- Do not heat baby bottles with the teat left on. Remove it if replacing the bottle back into the oven.
- Do not use the microwave oven for heating utensils.
- Do not use the oven for any reason other than preparing food, such as for drying clothes, paper or any other non-food items, or for sterilising purposes.
- Do not store anything in the oven, such as paper, or cook books .
- Do not cook any food surrounded by a membrane, such as egg yolks, potatoes, chicken livers, sausages, ready meals and so on without piercing them several times with a fork.
- Never put any objects into the openings on the outer case.
- You should use microwave utensils only in line with these instructions.
- Only use the accessories supplied by the manufacturer.


This appliance is intended to be used in the household and similar applications. It is not intended to be used in the following:

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential environments;
- bed and breakfast type environments.

# Product overview

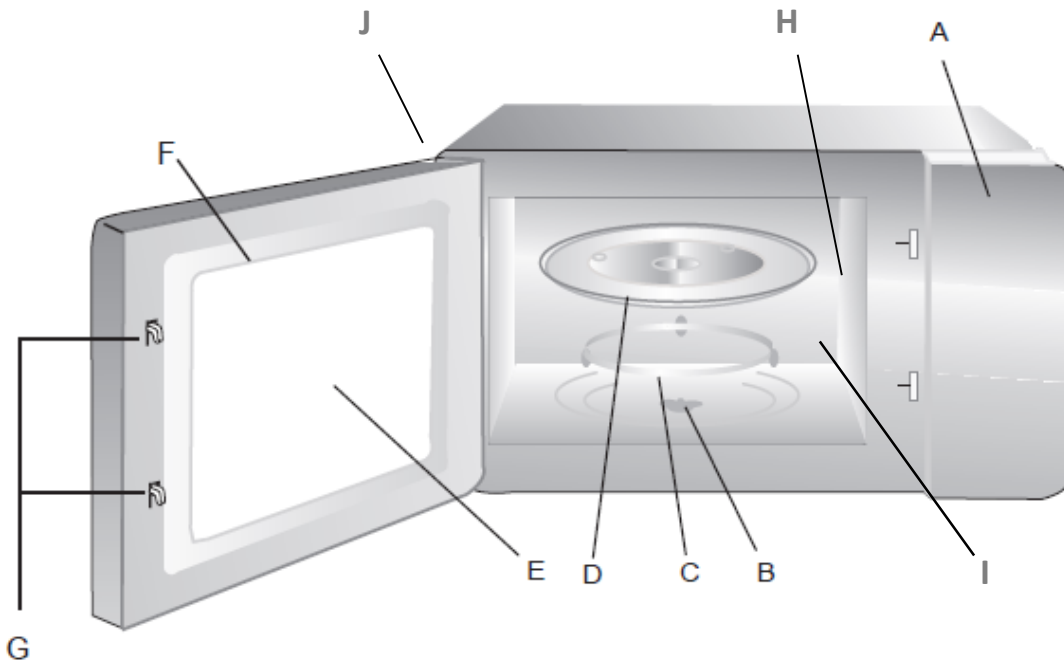

- A. Control panel (including door release button)
- B. Turntable shaft
- C. Turntable ring assembly
- D. Glass turntable
- E. Observation window
- F. Door assembly
- G. Safety interlock latches
- H. Waveguide cover
- I. Oven cavity
- J. Ventilation slots

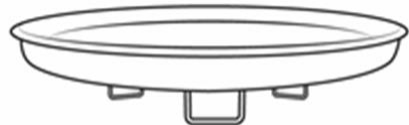

Grill rack & baking tray to be used for grilling & convection cooking only, Use oven gloves to remove.

**WARNING: Do not use the oven when empty or for warming plates. Always keep the oven cavity, door assembly and waveguide cover clean**

For Customer Services & Spare Parts please call **0345 209 7461**  
Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit us at  
**[www.productcareuk.com](http://www.productcareuk.com)**

# About this microwave oven

Microwaves are high-frequency electromagnetic waves similar to radio waves. While radio waves may vary in length from one metre to many kilometres, microwaves are very short (less than 12.5 centimetres). Microwaves do not make any heat themselves but only cause water molecules in food to vibrate. This vibration produces heat that cooks the food. This is why your food will come out of the microwave piping hot, when your utensils inside the oven stay much cooler. The microwaves do not stay in the air or in the food when you open the microwave oven door.

The microwave oven will work using an ordinary household electrical socket. Inside the microwave oven is the magnetron, which turns the electrical energy into microwaves.

Microwaves cannot go through metal, so the inside of the oven is lined with metal. The door is lined with a fine metal mesh which stops microwaves getting through. This means that when the microwave oven door is shut, there is no possibility that microwaves can be released. This is why the microwave oven has been made so that it will not work when the door is open.

For Customer Services & Spare Parts please call **0345 209 7461**

Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit us at  
**[www.productcareuk.com](http://www.productcareuk.com)**

# Unpacking the microwave

Before you use your microwave oven

1. Remove all the packaging. **Do not** remove the small piece of card from the right hand side of the cavity wall. This is called a wave-guide cover and allows the microwaves to pass through to cook the food.

**Please ensure you keep this cover clean at all times.**

2. Check the oven after unpacking for any visual damage such as:

- A misaligned door
- Damage to the door
- Dents or holes in the door window and screen
- Dents in the inside
- If you can see any damage **do not use the oven**

This microwave oven weighs approximately 18kg so you must put it on a horizontal surface that is strong enough to support this weight.

The oven must be placed away from high temperatures and steam.

Do not put anything on the top of the microwave oven.


For Customer Services & Spare Parts please call **0345 209 7461**

Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit us at  
**[www.productcareuk.com](http://www.productcareuk.com)**

# Microwave oven installation

- Select a level surface that provides enough space for the outlet vents.
- The minimum installation height is 85cm.
- A minimum clearance of 20cm is required between the oven and the two sides. Leave a minimum clearance of 30cm above the oven.
- Place the oven as far away from radios and TV's as possible. Using the oven may cause interference with the reception.
- Plug the oven into a suitable 13 amp mains socket, make sure the voltage is the same as on the rating label (do not use extension cables or mains socket adaptors).
- The microwave oven should be used freestanding only and must not be built-in or used in a cabinet.

**WARNING:** do not install the oven over a cooker or other heat producing appliance. This will damage the oven.

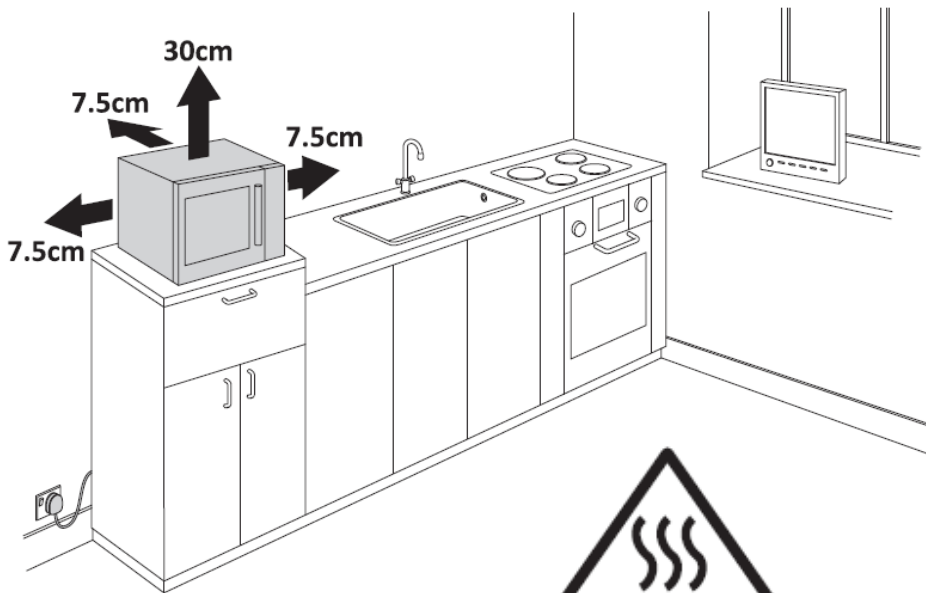


Do Not obstruct  
The ventilation  
From the microwave

For Customer Services & Spare Parts please call **0345 209 7461**

Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit us at  
**[www.productcareuk.com](http://www.productcareuk.com)**

# Turn table installation

- Before first use, check that any securing tape has been removed from the glass tray and turntable ring assembly. These parts must never be restricted from rotating.
- Never place the glass tray upside down.
- Both the glass tray and turntable ring assembly must always be used during cooking.
- Do not place the food directly onto the glass tray, always place on or in a suitable microwaveable cookware.
- If the glass tray or turntable ring assembly has been damaged in anyway, please contact the spares helpline number detailed on the back of this instruction manual.

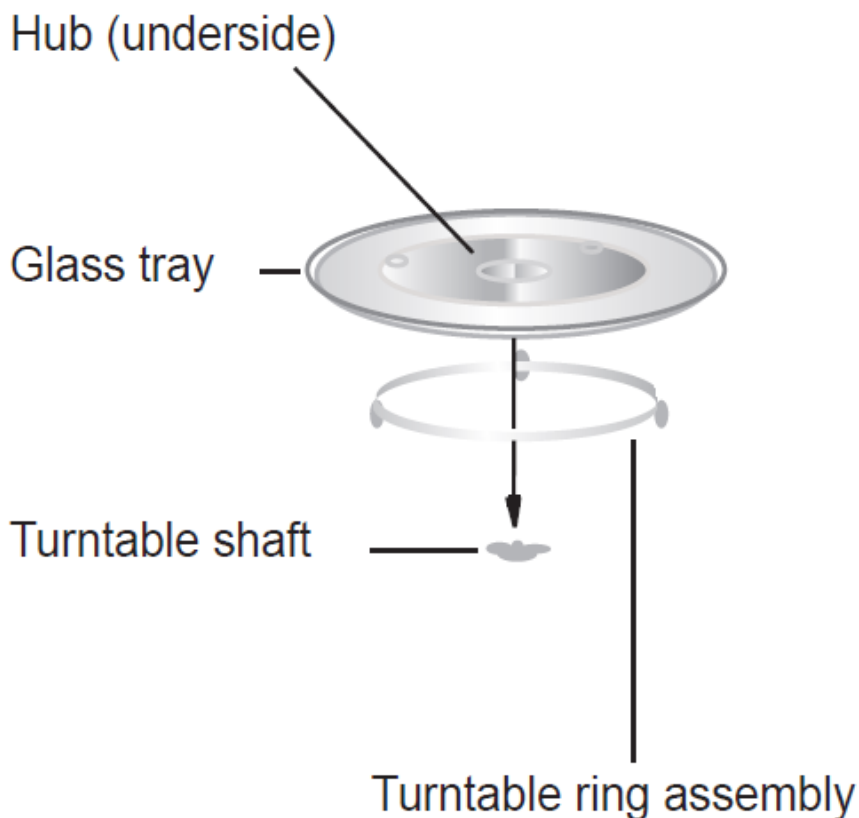

For Customer Services & Spare Parts please call **0345 209 7461**  
Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit us at  
**[www.productcareuk.com](http://www.productcareuk.com)**



# Control panel



**MENU ACTION SCREEN** Cooking time, power, action indicators, and clock time are displayed.

**CLOCK/PRESET** Press this button to set the clock.

**MICROWAVE/GRILL/COMBI/CONVE** Press this button to select which functions you want to use, or a combination of the three.

**WEIGHT/TIME DEFROST** Press this button for the defrost function.

**CLOCK/TIMER** Press this to set the clock or use the timer function

**STOP/CLEAR** Press the Stop/Clear button to stop the cooking process or timer, then again to clear any settings.

**START/+30 SEC/CONFIRM** Press this button to start the cooking process, or confirm a menu selection.

**TIMER/WEIGHT/AUTO MENU** Use this dial to set the cooking time, select the weight or choose an auto menu.

For Customer Services & Spare Parts please call **0345 209 7461**  
Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit us at  
**[www.productcareuk.com](http://www.productcareuk.com)**

# Using the microwave oven

## Clock Setting

When the microwave oven is first turned on, the oven will display "0:00", the buzzer will ring once.

- 1) Press "**CLOCK/TIMER**" button to choose hours or minutes for alteration. The hour figures will flash. When altering the hours the "00" on the left hand side will flash.
- 2) Turn the "**TIMER/WEIGHT/AUTO MENU**" dial to adjust the hour figures, the input time should be within 00 – 23 (this is a 24-hour clock).
- 3) Press "**CLOCK/TIMER**" button again and the minute figures will flash.
- 4) Turn the "**TIMER/WEIGHT/AUTO MENU**" dial to adjust the minute figures, the input time should be within 00 - 59.
- 5) Press "**CLOCK/TIMER**" button to finish the clock setting procedure. The ":" will then flash.

### Note:

During the process of clock setting, if you press the "**STOP/CLEAR**" button, the clock will return to the previous setting.

## Using the Kitchen Timer

- 1) Press the "**CLOCK/TIMER**" button twice, "00:00" will be displayed.
- 2) Turn the "**TIMER/WEIGHT/AUTO MENU**" dial to select the desired time.
- 3) Press the "**START/+30 SEC/CONFIRM**" button to start the timer. The time will count down without activating the microwave power.

For Customer Services & Spare Parts please call **0345 209 7461**

Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit us at  
**[www.productcareuk.com](http://www.productcareuk.com)**

# Using the microwave oven

## Microwave Cooking

- 1) Press the “ **MICROWAVE/GRILL/COMBI/CONVE**” button once, and “P100” will display and flash.
- 2) Turn the “**TIMER/WEIGHT/AUTO MENU**” dial to select the microwave power. "P100", "P80", "P50", "P30", or "P10“ will be displayed.  
or  
Press the “**MICROWAVE**” button to scroll through the power levels.
- 3) Press “**START/+30SEC/CONFIRM**” button to select the desired power.
- 4) Turn the “**TIMER/WEIGHT/AUTO MENU**” dial to adjust the cooking time.
- 5) Press "**START/+30SEC/CONFIRM**" button to start the cooking process.

Power Display	Cooking power	Equivalent power rating
P100	100%	900 W
P80	80%	720 W
P50	50%	450 W
P30	30%	270W
P10	10%	90W

To stop the cooking process at anytime press the “**STOP/CLEAR**” button.

For Customer Services & Spare Parts please call **0345 209 7461**  
Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit us at  
**[www.productcareuk.com](http://www.productcareuk.com)**

# Using the microwave oven

## Grill Cooking



**Please note:** This function is only recommended for browning food as it is not as powerful as a household grill. The grill element should be preheated to ensure optimum operation and cooking. The recommended preheat time is 10-15 minutes. To preheat simply run the microwave on grill setting using the steps shown below for the desired preheat time.

- 1) Press the **“MICROWAVE/GRILL/COMBI/CONVE”** button then turn the **“TIMER/WEIGHT/AUTO MENU”**, until **“G-1”** is displayed on the screen.
- 2) Press the **“START/+30 SEC/CONFIRM”** button to confirm.
- 3) Turn **“TIMER/WEIGHT/AUTO MENU”** dial to adjust the cooking time.
- 4) Press **“START/+30 SEC./CONFIRM”** button to start the cooking process.

**Note:** Half way through the grill time, the unit will sound twice to tell you to turn the food over. In order to achieve more even grilling , you should open the door, turn the food over, close the door, and then press the **“START/+30 SEC/CONFIRM”** button to continue cooking.

For Customer Services & Spare Parts please call **0345 209 7461**

Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit us at  
**[www.productcareuk.com](http://www.productcareuk.com)**

# Using the microwave oven

Combination Cooking (Microwave + Convection + Grill)   

- 1) Press the **“MICROWAVE/GRILL/COMBI/CONVE”** button then turn the **“TIMER/WEIGHT/AUTO MENU”**, until **“C-1”**, **“C-2”**, **“C-3”** and **“C-4”** appear on the display.
- 3) Press the **“START/+30 SEC./CONFIRM”** button to confirm which combination setting you would like.
- 4) Turn the **“TIMER/WEIGHT/AUTO MENU”** dial to adjust the cooking time.
- 5) Press **“START/+30 SEC./CONFIRM”** button to start the cooking process.

For the various settings the cooking time is divided as below;

	Microwave	Grill	Convection
C-1	X		X
	900W		165°C
	Duration: 14 seconds		Duration: 15 seconds
C-2	X	X	
	900W	165°C	
	Duration: 14 seconds	Duration: 29 seconds	
C-3		X	X
		200°C	200°C
		Duration: 29 seconds	Duration: 29 seconds
C-4	X	X	X
	900W	200°C	200°C
	Duration: 8 seconds	Duration: 21 seconds	Duration: 21 seconds

# Using the microwave oven

## Convection Cooking (with preheating function)



The convection cooking allows you to cook food using the unit as a traditional oven, the microwave function is not used. It is recommended that you preheat the oven to the appropriate temperature before placing the food in the oven.

- 1) Press the **“MICROWAVE/GRILL/COMBI/CONVE”** button then turn the **“TIMER/WEIGHT/AUTO MENU”** dial, until **“150”** is displayed on the screen.
- 2) Continue to turn the **“TIMER/WEIGHT/AUTO MENU”** dial to select the desired convection temperature. Note: the temperature can be chosen from 150 degrees to 240 degrees, in 10 degree intervals.
- 3) Press the **“START/+30 SEC./CONFIRM”** button to confirm the chosen temperature.
- 4) Press the **“START/+30 SEC./CONFIRM”** button again to start the preheating. When the preheating temperature is reached, the buzzer will sound twice to remind you to place the food in the oven. The preheated temperature will display and flash. Open the door and place the food in the microwave oven, then close the door.
- 5) Turn **“TIMER/WEIGHT/AUTO MENU”** dial to adjust the cooking time. The maximum time available is 95 minutes.
- 6) Press the **“START/+30 SEC./CONFIRM”** button to start cooking.

### Note:

- a. The cooking time cannot be put in until the preheating temperature is achieved, Once the temperature is achieved the door must be opened to input the cooking time.
- b. If the time is not put in within 5 minutes of reaching the temperature, the oven will stop preheating. The buzzer sound five times and turn back to the waiting state.

# Using the microwave oven

## Convection Cooking (Without pre-heating function)



- 1) Press the **"MICROWAVE/GRILL/COMBI/CONVE"** button then turn the **"TIMER/WEIGHT/AUTO MENU"**, until **"150"** is displayed on the screen.
- 2) Turn the **"TIMER/WEIGHT/AUTO MENU"** dial to select the desired convection function temperature. Note: the temperature can be chosen from 150 degrees to 240 degrees, in 10 degree intervals.
- 3) Press the **"START/+30 SEC./CONFIRM"** button to confirm the chosen temperature.
- 4) Turn the **"TIMER/WEIGHT/AUTO MENU"** dial to adjust the cooking time. (The maximum setting time is 95 minutes.)
- 5) Press the **"START/+30SEC./CONFIRM"** key to start cooking.

For Customer Services & Spare Parts please call **0345 209 7461**

Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit us at  
**[www.productcareuk.com](http://www.productcareuk.com)**

# Using the microwave oven

## Multi-Stage Cooking

Two stages can be set in sequence. If one of the stages is for defrosting this should be programmed to come on first. The buzzer will ring once after each stage and then the next stage will proceed.

Note: The Auto menu or the pre heating functions cannot be set as one of the multi-stage cooking.

Example: if you want to defrost the food for 5 minutes, then to cook with 80% microwave power for 7 minutes. The steps are as following:

- 1) Press **"WEIGHT/TIME DEFROST"** button twice, the screen will display "d-2";
- 2) Turn the **"TIMER/WEIGHT/AUTO MENU"** dial to adjust the defrost time to 5 minutes;
- 3) Press the **"MICROWAVE/GRILL/CONV/COMBI"** button once;
- 4) Turn the **"TIMER/WEIGHT/AUTO MENU"** dial to choose 80% microwave power till "P80" display (see earlier instructions for power levels)
- 5) Press **"START/+30SEC./CONFIRM"** button to confirm;
- 6) Turn the **"TIMER/WEIGHT/AUTO MENU"** dial to adjust the cooking time of 7 minutes;
- 7) Press **"START/+30SEC./CONFIRM"** button to start cooking.

For Customer Services & Spare Parts please call **0345 209 7461**

Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit us at  
**[www.productcareuk.com](http://www.productcareuk.com)**



# Using the microwave oven

## Quick Start cooking

- 1) Press the "**START/+30SEC./CONFIRM**" button to cook with 100% power level for 30 seconds. Each press on the same key can increase the cooking time by 30 seconds. The maximum cooking time is 95 minutes.
- 2) During the microwave, grill, convection and combination cooking process, press the "**START/+30SEC./CONFIRM**" button to add 30 seconds to the cooking time. Each press on the same key can increase the microwave cooking by 30 seconds.

Note: this function cannot work under defrost and auto menu cooking.

## Timed Quick Start cooking

- 1) Turn the "**TIMER/WEIGHT/AUTO MENU**" dial anti-clockwise to display the cooking time selection screen. Then turn the dial clockwise to select a cooking time.
- 2) Press the "**START/+30SEC./CONFIRM**" button to start the cooking process on 100% power level.

For Customer Services & Spare Parts please call **0345 209 7461**

Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit us at  
**[www.productcareuk.com](http://www.productcareuk.com)**

# Using the microwave oven

## Defrosting by Weight



- 1) Press **"WEIGHT/TIME DEFROST"** button once, the oven will display "d-1".
- 2) Turn the **"TIMER/WEIGHT/AUTO MENU"** dial to select the weight of the food. At the same time, "g" will illuminate in red. The weight should be set between 100-2000g.
- 3) Press the **"START/+30SEC./CONFIRM"** button to start defrosting.

## Defrosting by Time

- 1) Press **"WEIGHT/TIME DEFROST"** button twice and the oven will display "d-2".
- 2) Turn the **"TIMER/WEIGHT/AUTO MENU"** dial to select the cooking time. The maximum setting time is 95 minutes.
- 3) Press **"START/+30SEC./CONFIRM"** button to start the defrosting process.

## Auto Menu

- 1) Press the **"AUTO MENU"** button, turn the **"TIMER/WEIGHT/AUTO"** dial clockwise to choose the required function. "A1", "A2", "A3"...."A10" will be displayed.
- 2) Press the **"START/ +30 SEC./CONFIRM"** button to confirm the menu you need.
- 3) Turn the **"TIMER/WEIGHT/AUTO"** dial to choose the weight of menu, and "g" indicator will light.
- 4) Press **"START/ +30 SEC./CONFIRM"** to start the cooking process.

Note: When you choose A9 cake, please do not put the cake mix in to the oven immediately.

The oven needs to be preheated to 180 degree first. After several minutes, the buzzer sounds twice to remind you to put the cake into the oven. After putting the cake in the oven, please press start again.

The timer will count down, and the cake will be cooked perfectly.

# Using the microwave oven

Menu	Quantity	Display	Power
A1 Reheat	150g	150g	100%
	250g	250g	
	350g	350g	
	450g	450g	
	600g	600g	
A2 Potato	Approx. 230g	1	100%
	Approx. 460g	2	
	Approx. 690g	3	
A3 Meat	150g	150g	100%
	300g	300g	
	450g	450g	
	600g	600g	
A4 Vegetables	150g	150g	100%
	350g	350g	
	500g	500g	
A5 Fish	150g	150g	80%
	250g	250g	
	350g	350g	
	450g	450g	
	650g	650g	
A6 Pasta	50g (plus 450ml water)	50g	80%
	100g (plus 800ml water)	100g	
	150g (plus 1200ml water)	150g	
A7 Soup	Approx. 1/2 can (200ml)	200	100%
	Approx. 1 full can (400ml)	400	
	Approx. 1.5 cans (600ml)	600	
A8 Cake	475g	475g	180°C (Preheat)
A9 Pizza	200g	200g	Combination setting C-4
	300g	300g	
	400g	400g	
A10 Chicken	500g	500g	Combination setting C-4
	750g	750g	
	1kg	1000g	
	1.2kg	1200g	

# Using the microwave oven

## Checking Functions

- 1) During the cooking cycle, press the **"MICROWAVE/GRILL/COMBI/CONVE"** button and the current power will be displayed for 2-3 seconds.
- 2) During the cooking cycle, press the **"CLOCK/TIMER"** button to check the current time. It will be displayed for 2-3 seconds.

For Customer Services & Spare Parts please call **0345 209 7461**

Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit us at

**[www.productcareuk.com](http://www.productcareuk.com)**

# Cleaning and care

- Before you clean the oven, turn it off and unplug it.
- Keep the inside of the oven clean. When food or liquids stick to the oven walls, wipe with a damp cloth. We recommend that you do not use harsh detergent or abrasives.
- On the right hand side wall of the cavity is the wave guide cover, microwaves are passed through this to enable your food to cook. It is important that this wave guide cover is kept clean at all times. To do this wipe with mild detergent and water, then dry.
- You should clean the outside of the oven with a damp cloth. Don't allow water to seep into the ventilation openings.
- Do not allow the control panel to become wet. Clean with a soft, damp cloth. Do not use detergents, abrasives or spray-on cleaners on the control panel.
- If steam builds up inside or around the outside of the oven door, wipe with a soft cloth. This may happen when the microwave oven is used in humid conditions.
- Regularly remove the glass turntable to clean it, and wash it in warm soapy water. Regularly clean the turntable support and oven floor. Simply wipe the bottom surface of the oven with mild detergent and water, then dry. You can wash the turntable support in mild soapy water.
- When removing the turntable support of the oven, make sure you put it back properly.
- If the inside of the oven smells, put a cup of water with the juice and skin of one lemon in a deep microwave bowl. Microwave it for three minutes, wipe thoroughly and then dry with a soft cloth.
- Failure to maintain the oven in a clean condition, especially if liquid is left under the turntable, could lead to deterioration of the surface that will adversely affect the life of the appliance that may result in a hazardous condition.

# General information

## Child lock



Lock on: In waiting state, press "**STOP/CLEAR**" for 3 seconds, there will be a long "beep" as the lock activates a red key will illuminate in the display.

Lock off: In locked state, press "**STOP/CLEAR**" for 3 seconds, there will be a long "beep" denoting that the lock is released, the lock symbol will disappear.

## General information

- The buzzer will sound once when turning the knob at the beginning;
- The "**START/+30SEC/CONFIRM**" button must be pressed again to continue cooking if the door is opened during a cooking cycle.
- Once the cooking programme has been set, if the "**START/+30SEC/CONFIRM**" button is not pressed in 1 minute. The current time will display and the setting will be cancelled.
- The buttons will beep if they are pressed correctly, if not pressed correctly they will not beep.
- The buzzer will sound five times to remind you when cooking is finished
- The volume of the beeps is set, and cannot be increased or decreased

For Customer Services & Spare Parts please call **0345 209 7461**

Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit us at  
**[www.productcareuk.com](http://www.productcareuk.com)**

# Important utensil information

- Do not use metal pans or dishes with metal handles on any microwave setting.
- Do not use anything with a metal trim on any microwave setting.
- Do not use paper covered wire twist-ties on plastic bags.
- Do not use melamine dishes as they contain a material which will absorb microwave energy. This may cause the dishes to crack or burn, and will slow down the cooking speed.
- Use only cookware that is approved to be used in a microwave oven.
- Do not cook using a container with a restricted opening, such as bottles, as they may explode.
- Do not heat baby bottles with the teat left on. Remove it if replacing the bottle back into the oven.
- Only use thermometers that are approved for microwave ovens.
- Do not use the microwave oven for heating utensils.

For Customer Services & Spare Parts please call **0345 209 7461**

Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit us at

**[www.productcareuk.com](http://www.productcareuk.com)**

# Connection to the mains supply

## **WARNING-** THIS APPLIANCE MUST BE EARTHED

This appliance is designed to operate from a mains supply of AC240V ~ 50HZ.

Check that the voltage marked on the product corresponds with your supply voltage.

This product is fitted with a 13A plug complying with BS1363.

If this plug is unsuitable or needs to be replaced, please note the following:

Important: The wires in the mains lead are coloured in accordance with the following code:

GREEN/YELLOW-EARTH

BLUE-NEUTRAL

BROWN-LIVE



**DANGER**  
**Electric**  
**Shock Risk**

For Customer Services & Spare Parts please call **0345 209 7461**

Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit us at

**[www.productcareuk.com](http://www.productcareuk.com)**



# Connection to the mains supply

For UK use only – Plug fitting details (where applicable):

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The GREEN/YELLOW wire is the EARTH and must be connected to the terminal which


is marked with the letter E or by the earth symbol or coloured GREEN or GREEN/YELLOW.

The BLUE wire is the NEUTRAL and must be connected to the terminal marked with the letter N or coloured BLACK.

The BROWN wire is the LIVE wire and must be connected to the terminal marked with the letter L or coloured RED.

Always ensure that the plug cord grip is fastened correctly.

If a 13A (BS1363) fused plug is used it must be fitted with a 13amp fuse conforming to BS1362 and be BSI or ASTA approved.

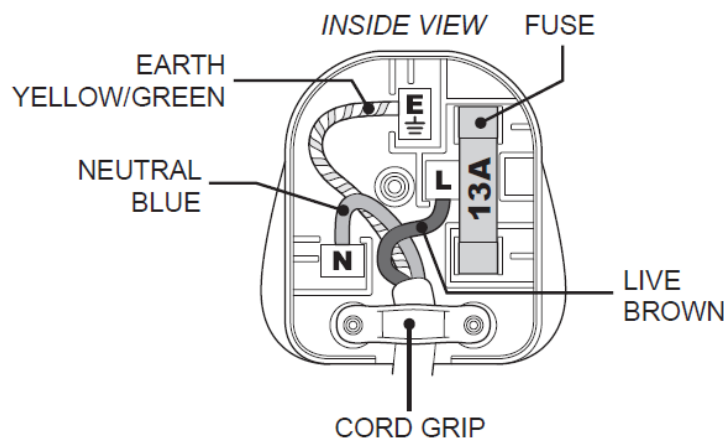

For Customer Services & Spare Parts please call **0345 209 7461**

Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit us at

**[www.productcareuk.com](http://www.productcareuk.com)**

# Problems solving & plug

## Problem solving

The microwave oven may cause interference to your radio, TV or similar equipment. If it does, you can get rid of the interference by moving the radio, TV or equipment as far away from your microwave oven as possible.

If the oven doesn't work -

- Make sure the mains plug is plugged in securely. If it is not, remove the plug from the socket, wait 10 seconds and plug it in again securely.
- Check the premises for a blown circuit fuse or a tripped main circuit breaker. If these seem to be working properly, test the socket with another appliance that you know works.

If the microwave power will not work –

- Check to see whether the timer is set, or the child lock is on.
- Make sure the door is securely closed. Otherwise, the microwave energy will not flow into the oven

## Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead you will find that it incorporates a fuse, the value of which is indicated either on the base of the plug or on the fuse carrier.

Should the fuse need replacing, you must use an ASTA approved fuse (conforming to BS1362) of the same rating.

If the fuse cover is lost the plug must not be used until a replacement is obtained from an electrical supplier.

If you need to remove the plug, cut it from the mains lead and dispose of it. Never attempt to re-use this plug or insert it into a socket outlet, as there is a very great risk of an electric shock.

For Customer Services & Spare Parts please call **0345 209 7461**

Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit us at

**[www.productcareuk.com](http://www.productcareuk.com)**

# Guarantee

This product is guaranteed for 12 months from the date of the original purchase. If any defect arises due to faulty materials or workmanship the faulty product must be returned to the place of purchase.

Refund or replacement is at the discretion of the store.

**The following conditions apply:**

- The product must be returned to the retailer with the original proof of purchase.
- The product must be installed and used in accordance with the instructions contained in this instruction guide and any other instructions for use which has been supplied.
- It must be used for domestic purposes only and for its intended use.
- This guarantee does not cover wear and tear, damage, misuse or consumable parts.

**This does not affect your statutory rights.**

Produced for;

**G2S Ltd.**

**Wigan**

**WN2 4EZ**

For Customer Services & Spare Parts please call **0345 209 7461**

Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit us at

**[www.productcareuk.com](http://www.productcareuk.com)**

# Technical Specification

Rated Voltage	240V ~ 50Hz
Rated Input Power(Microwave)	1450 W
Rated Output Power(Microwave)	900W
Rated Power (Grill)	1100W
Rated Power (Convection)	2500W
Oven Capacity	25L
Turntable Diameter	315 mm
External Dimensions(HxWxD)	520mm x 510mm x 335mm
Net Weight; Approx	19.9 kg

For Customer Services & Spare Parts please call **0345 209 7461**


Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit us at

**[www.productcareuk.com](http://www.productcareuk.com)**


# Spare parts

The following spare parts are available from  
[www.productcareuk.com](http://www.productcareuk.com)


**Turntable coupling**

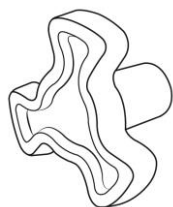


**Turntable Ring**

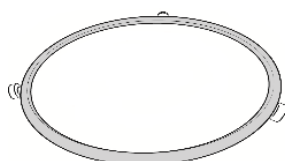


**Glass turntable**

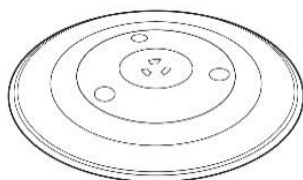


**Wave Guide cover**

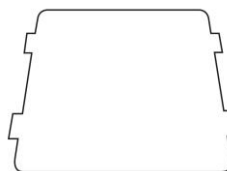

**Baking tray**

 

**Grill rack**

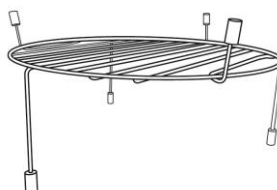

For Customer Services & Spare Parts please call **0345 209 7461**  
Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit us at  
[www.productcareuk.com](http://www.productcareuk.com)

# Notes

For Customer Services & Spare Parts please call **0345 209 7461**  
Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit us at  
**[www.productcareuk.com](http://www.productcareuk.com)**

# Notes

For Customer Services & Spare Parts please call **0345 209 7461**  
Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit us at  
**[www.productcareuk.com](http://www.productcareuk.com)**

For Customer Services &  
Spare Parts please call

**0345 209 7461**

Opening times:

Monday - Friday

8am – 6pm &

Saturday 9am – 1pm

or visit us at

**[www.productcareuk.com](http://www.productcareuk.com)**

Revision 1



This symbol is known as the 'Crossed-out wheellie bin Symbol'. When this symbol is marked on a product/batteries, it means that the product/batteries should not be disposed of with your general household waste. Only discard electrical/electronic/battery items in separate collection schemes, which cater for the recovery and recycling of materials contained within. Your co-operation is vital to make sure the success of these schemes and for the protection of the environment. For your nearest disposal facility, visit [www.recycle-more.co.uk](http://www.recycle-more.co.uk) or ask in store for details.

We reserve the right due to possible changes to design to alter the instruction manual without prior notice.