



Swan *Retro*

designed for life



retro 600w stand mixer

Model: SP25010 (all colours)

HELP LINE: 01703 404703

v1.0





IMPORTANT INFORMATION - RETAIN FOR FUTURE USE

When using any electrical appliance, basic safety precautions should always be followed including the following:

- Always ensure that the voltage on the rating label corresponds to the mains voltage in your home
- Incorrect operation and improper use can damage the appliance and cause injury to the user.
- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years. Check the power cord and plug regularly for any damage. If the cord or the plug is damaged, it must be replaced by the manufacturer or qualified person in order to avoid an electrical hazard.
- Do not use the appliance if it has been dropped or damaged in any way. In case of damage, take the unit in for examination and/or repair by an authorised service agent.
- Never immerse the unit in water or any other liquid for cleaning purposes.
- Remove the plug from the socket by gripping the plug. Do not pull on the cord to disconnect the appliance from the mains. Always unplug the unit when not in use, before cleaning or when adding or removing parts.
- The use of accessory attachments that are not recommended or supplied by the manufacturer may result in injuries, fire or electric shock.
- Do not let the cord hang over the edge of a table or counter. Ensure that the cord is not in a position where it can be pulled on inadvertently.
- Do not allow the cord to touch hot surfaces and do not place on or near a hot gas or electric burner or in a heated oven.
- Do not use the appliance on a gas or electric cooking top or over or near an open flame.
- Use of an extension cord with this appliance is not recommended. However, if it is necessary to use an extension lead, ensure that the lead





IMPORTANT INFORMATION - RETAIN FOR FUTURE USE

is suited to the power consumption of the appliance to avoid overheating of extension cord, appliance or plug point. Do not place the extension cord in a position where it can be pulled on by children or animals or tripped over.

- This appliance is not suitable for outdoor use. Do not use the appliance for anything other than its intended use.
- Do not carry the appliance by the power cord.
- Do not leave the appliance unattended during use. Always unplug the unit when not in use or before cleaning.
- Always operate the appliance on a smooth, even, stable surface. Do not place the unit on a hot surface.
- Ensure that the unit is switched off after use.
- The manufacturer does not accept responsibility for any damage or injury caused by improper or incorrect use, or for repairs carried out by unauthorised personnel.
- In case of technical problems, switch off the product and do not attempt to repair it yourself. Return the appliance to an authorised service facility for examination, adjustment or repair. Always insist on the use of original spare parts. Failure to comply with the above mentions precautions and instructions, could affect the safe operation of this product.
- Your appliance must never be switched on through an external timer or any kind of separate remote control system
- This appliance is intended to be used in household and similar applications such as: staff kitchen areas, in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.
- Do not touch moving parts with fingers or any utensil during operation!



TECHNICAL DATA

Description: Professional Mixer & Bowl

Model: SP25010 (all colours)

Input Voltage: 220-240V

Frequency: 50/60Hz

Power consumption: 600 Watts

Operation time: 5 mins

 
Weight: 4.1kg






HOW TO USE

GETTING TO KNOW YOUR MIXER

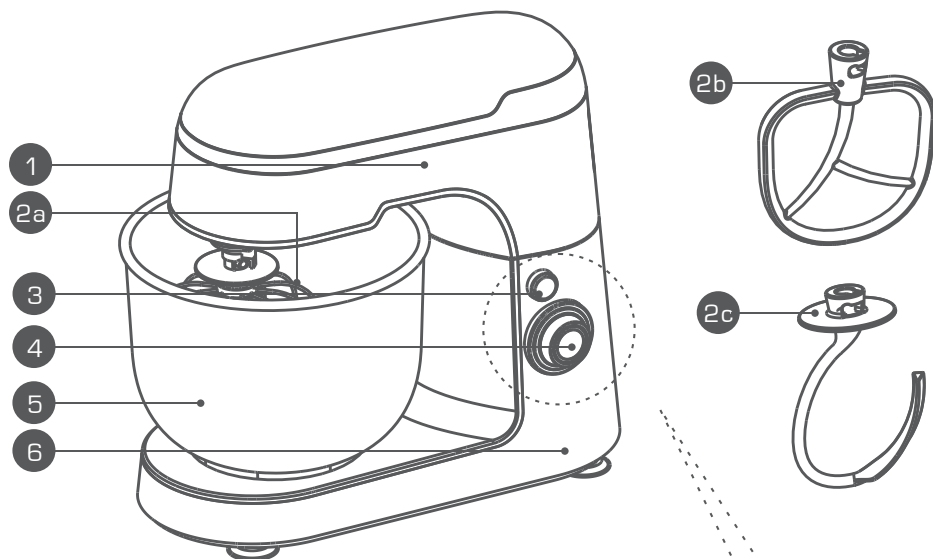

 - 1 Motor housing
- 2a Egg whisk
- 2b Spatula beater
- 2c Dough hook
- 3 Head release button
- 4 Speed control knob
- 5 Mixing bowl
- 6 Mixer base

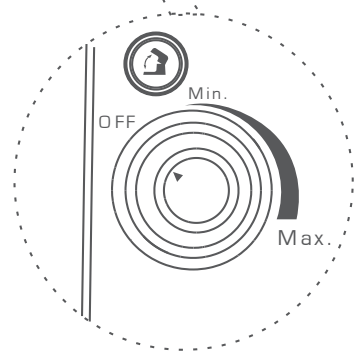

BEFORE USE

Remove all packaging. Wash the bowl and accessories in warm, soapy water. Rinse and dry thoroughly.





HOW TO USE

- Press head release button, ease the mixer head backwards until it locks into its tilt position. (Fig. 1)
- Select the desired attachment depending on the mixing task to be performed:



A. Egg whisk for whisking cream, egg whites, light batters.



B. Spatula beater for smaller amount of mixture or for folding ingredients.



C. Dough hook for kneading dough and heavy mixtures.

- Attach the selected attachment onto the drive outlet using the bayonet attachment. Place the attachment into position with the feeder roll at the back. Simply push the roller back down to lock into position. (Fig. 2)
- Put your ingredients into the mixing bowl. Place the bowl on the base then gently rotate the bowl in a clockwise direction until it locks into position. The bowl should feel firm with no movement. (Fig. 3)
- **Do not overfill the appliance, the max amount for ingredients is 2 Kg.**
- Press the release button to lower the arm. Press the arm down to lock in the lowest position. (Fig. 4)
- Connect the device to a properly installed 220-240V~50Hz wall outlet. Turn the speed control knob clockwise to commence mixing. (Fig. 5)
- When mixing is complete, turn the speed control knob anti-clockwise to OFF position. (Fig. 6)
- **To protect the powerful motor, the maximum mixing time for this product is 5 minutes. It is unlikely that any type of food would require any more mixing time than that. In the unlikely event that your ingredients need more than 5 minutes mixing, switch off the machine and allow the motor to cool for 3 minutes before starting again.**



HOW TO USE

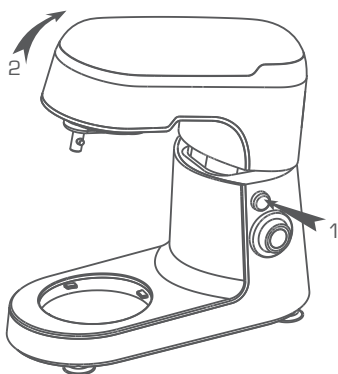 


Figure 1



Figure 2

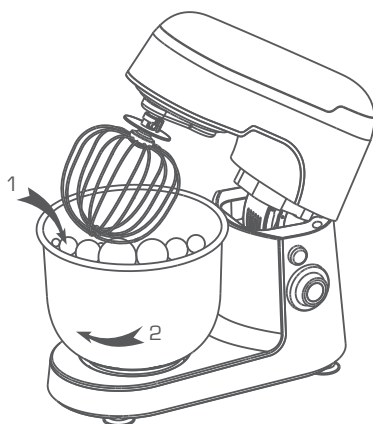 


Figure 3

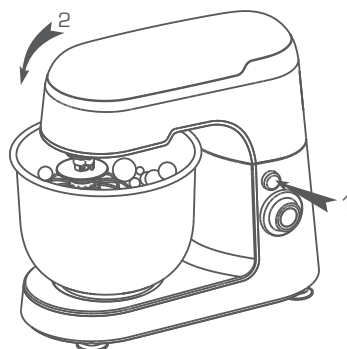 


Figure 4

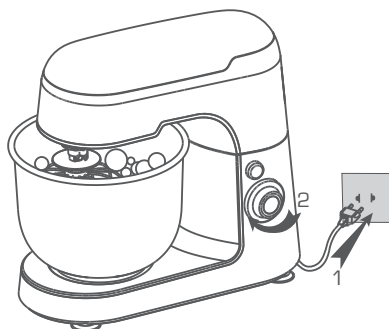 


Figure 5

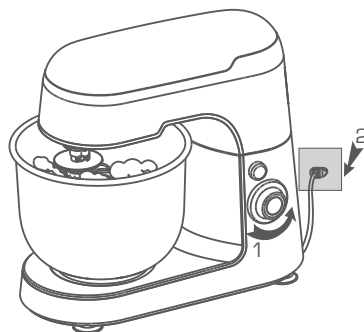 


Figure 6





HOW TO USE

Food type	Tool	Capacity	Time
Pasta/dough	Dough hook	Max 0.85kg	30s on low speed then 3 mins on high speed
Mashed potato	Spatula/beater	Max 1kg	5 mins on high speed
Egg white	Egg whisk	Max 10 eggs	3 mins on high speed



CLEANING

- Disconnect from mains power supply before cleaning.
- Do not submerge the appliance in water. This may lead to electric shock or fire.
- Do not use a wire brush or other abrasive utensils for cleaning.
- Do not use aggressive or abrasive cleaning agents.
- Motor housing: Clean the housing only with a damp cloth and a squirt of washing-up liquid.
- Mixing bowl, kneading and mixing attachments: The attachments are not suitable for dishwasher. Heat and aggressive cleaning agents may warp or discolour the attachments.
- Parts which have come into contact with food can be rinsed out with water
- Leave the parts to dry properly before re-assembling the appliance.



DOCUMENTATION

We Swan Products Ltd declare that this product conforms to the following product legislation in accordance with the following directive(s):

- 2004/108/EEC The EMC Directive [the Electromagnetic Compatibility Directive].
- 2006/95/EC. The LVD Directive [Low Voltage Directive].
- 2011/65/EU. The RoHS directive [Restriction of Hazardous Substances Directive]
- EC 1935/2004 Food Contact
- 2009/125/EC Eco Design Directive



WARRANTY

This product is guaranteed for 2 years from the date of original purchase. If any defect arises due to faulty materials or workmanship the faulty products must be returned to the place of purchase. Refunds or replacement is at the discretion of the store.

The following conditions apply:

- The product must be returned to the retailer with proof of purchase.
- The product must be installed and used in accordance with the instructions contained in this instruction guide.
- It must be used only for domestic purposes.
- It does not cover wear and tear, damage, misuse or consumable parts.
- Swan Products Ltd has limited liability for incidental or consequential loss or damage.
- This guarantee is valid in the UK and Eire Only.





BS PLUG

The wires in the mains lead are coloured in accordance with the following code:

BLUE	NEUTRAL
BROWN	LIVE

As the colours of the wire in the mains lead of this appliance may not correspond with the colour markings identifying the terminals on your plug, proceed as follows:

The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured red.

WARNING: THIS APPLIANCE IS DOUBLE INSULATED. DO NOT CONNECT ANY WIRE TO THE EARTH TERMINAL



DISPOSAL OF UNIT



Appliances bearing the symbol shown here may not be disposed of in domestic rubbish. You are required to dispose of old electrical and electronic appliances like this separately. Please visit www.recycle-more.co.uk or www.recyclenow.co.uk for access to information about the recycling of electrical items. Please visit www.weeeireland.ie for access to information about the recycling of electrical items purchased in Ireland. The WEEE directive, introduced in August 2006, states that all electrical items must be recycled, rather than taken to landfill. Please arrange to take this appliance to your local Civic Amenity site for recycling, once it has reached the end of its life.





SWAN BRAND HERITAGE



In 1933 Swan were the first to develop an electric heating element that could be immersed in water. This led to the Swan kettle range that could boil up to six pints of water in just over nine minutes - pretty hot for the time! These days it takes about two minutes for a Swan kettle to boil.





PARTS ORDERING

When ordering spare parts, use the references below:

SP25010N001 Bowl

SP25010N002 Spatular beater

SP25010N003 Egg whisk

SP25010N004 Dough hook



NOTES





www.swan-brand.co.uk



Scan this QR code
to hear about
our story



We love
what we do



we're proud
of our quality



Find us on Facebook

* on selected products

Copyright © Swan Products Ltd.
PO Box 3117, Stoke-on-Trent ST4 9GD

