



Swan

designed for life



Blender & Mill

Model: SP26050N

Helpline

01733 404703

v1.0





IMPORTANT INFORMATION - RETAIN FOR FUTURE USE

When using any electrical appliance, basic safety precautions should always be followed including the following:

- Always ensure that the voltage on the rating label corresponds to the mains voltage in your home
- Incorrect operation and improper use can damage the appliance and cause injury to the user.
- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years. Check the power cord and plug regularly for any damage. If the cord or the plug is damaged, it must be replaced by the manufacturer or qualified person in order to avoid an electrical hazard.
- Do not use the appliance if it has been dropped or damaged in any way. In case of damage, take the unit in for examination and/or repair by an authorised service agent.
- Never immerse the unit in water or any other liquid for cleaning purposes.
- Remove the plug from the socket by gripping the plug. Do not pull on the cord to disconnect the appliance from the mains. Always unplug the unit when not in use, before cleaning or when adding or removing parts.
- The use of accessory attachments that are not recommended or supplied by the manufacturer may result in injuries, fire or electric shock.
- Do not let the cord hang over the edge of a table or counter. Ensure that the cord is not in a position where it can be pulled on inadvertently.
- Do not allow the cord to touch hot surfaces and do not place on or near a hot gas or electric burner or in a heated oven.
- Do not use the appliance on a gas or electric cooking top or over or near an open flame.
- Use of an extension cord with this appliance is not recommended. However, if it is necessary to use an extension lead, ensure that the lead is suited to the power consumption of the appliance to avoid overheating of extension cord, appliance or plug point. Do not place the extension cord in a position where it can be pulled on by children or animals or tripped over.
- This appliance is not suitable for outdoor use. Do not use the appliance for anything other than its intended use.
- Do not carry the appliance by the power cord.
- Do not leave the appliance unattended during use. Always unplug the unit when not in use or before cleaning.
- Always operate the appliance on a horizontal, even, stable surface. Do not place the unit on a hot surface.
- Ensure that the unit is switched off after use.
- The manufacturer does not accept responsibility for any damage or injury caused by improper or incorrect use, or for repairs carried out by unauthorised personnel.
- In case of technical problems, switch off the product and do not attempt to repair it yourself. Return the appliance to an authorised service facility for examination, adjustment or repair. Always insist on the use of original spare parts. Failure to comply with the above mentioned precautions and instructions, could affect the safe operation of this product.





IMPORTANT INFORMATION - RETAIN FOR FUTURE USE

- Your appliance must never be switched on through an external timer or any kind of separate remote control system
- This appliance is intended to be used in household and similar applications such as: staff kitchen areas, in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.
- Do not touch moving parts with fingers or any utensil during operation!



TECHNICAL DATA

Description: Blender & Mill

Model: SP26050N

 
 
Input Voltage: 230V

Frequency: 50Hz


Power consumption: 400 Watts



PARTS

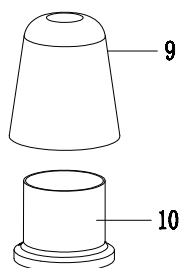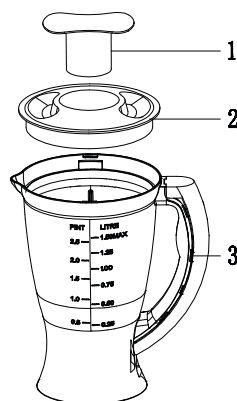


 1. Cap
2. Plastic lid with feeding hole
3. Jar
4. Plastic ring
5. Blades and spin base
6. Motor drive coupling
7. Motor housing
8. Switch
9. Mill cover
10. Blade base

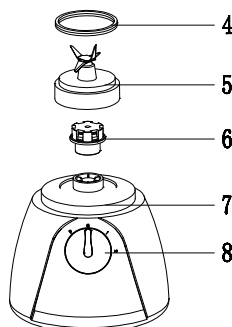



HOW TO USE

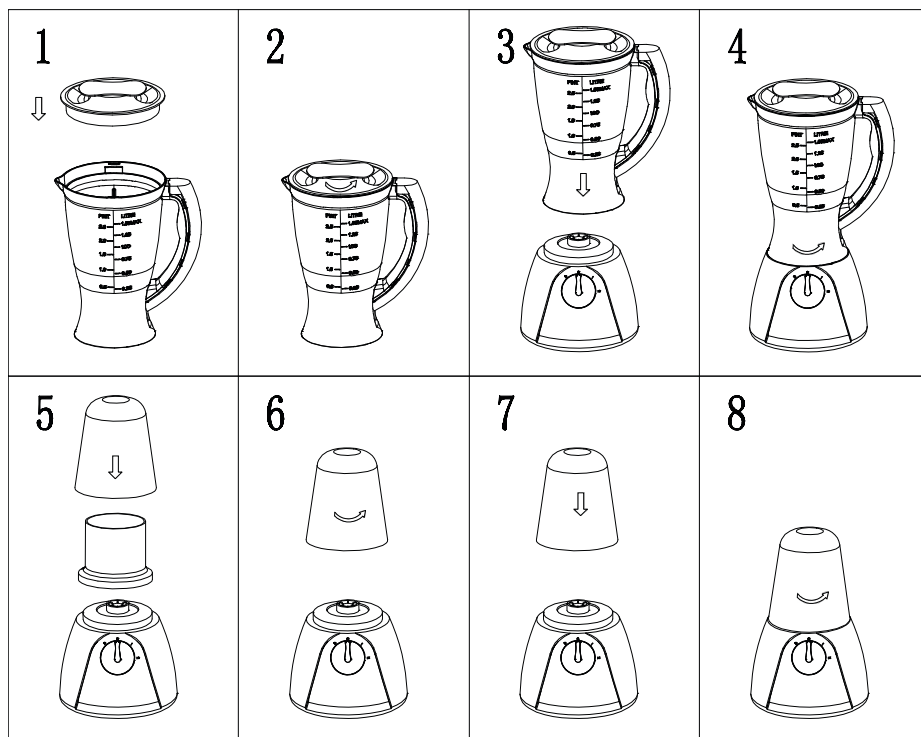 

Before first use, ensure all packaging materials are removed and wash jar & mill in warm soapy water. Rinse & dry thoroughly. Before attaching anything to the base, make sure the power cord is unplugged from the power outlet and the speed selector is in "O" position

- On a stable work surface, set lid onto jar and turn it anti-clockwise until you hear it click. To remove the cap from feeding hole, turn it clockwise.
- Put the assembled blender jar with lid into the appliance base and turn it tightly anti-clockwise. The interlock safety switch will then be connected automatically. **NOTE: The blender will not operate unless the jug is correctly attached to the base.**
- Turn the jar clockwise and remove it from the Base. Turn the lid clockwise and remove it from the blender jar.
- The jar has a capacity of 1.5 litres. Do not overload the Jar or exceed the MAX level





HOW TO USE

- NEVER RUN EMPTY THIS MAY BURN THE MOTOR OR DAMAGE THE BEARINGS.
- Turn the Speed selector to “1” or “2” position and within repeat the operation until desired results are reached.
- The pulse level gives you fingertip control over short food processing jobs, when turn the Speed selector to “P”, the machine will run at high speed .
- Turn to “O” to stop the machine.

Using the Mill

- Set the capsule and put coffee beans, seed, herbs or spices that you want to mill into the capsule and cover it. Don't fill the mill more than 80% full.
- Set the Speed Knob to the desired speed position, turning it clockwise.
- Turn the capsule clockwise and remove it from the base.
- Remove the Cover. Pour out the coffee or other powder that you milled.

Notes:

- The appliance should only be run for 60 seconds when using the blender and 30 seconds when using the grinder mill. This should be more than adequate for any use.
- Before it's used again, allow the motor to cool for at least 2 minutes
- Turn the Speed Selector to “O” position once the blending/milling is completed and unplug the cord from the wall outlet.
- This appliance can also mix around 500g of ice with care.

Cleaning

NEVER IMMERSE THE BASE IN WATER OR ANY OTHER LIQUID. ALWAYS SWITCH OFF AND UNPLUG THE APPLIANCE BEFORE CLEANING

- The blender jar, lid and mill attachments can be washed in warm soapy water, rinsed and dried thoroughly. We don't recommend washing in the dishwasher because the high temperatures can dull the clear plastic parts.
- The base can be cleaned with a soft cloth moistened with a mild detergent solution.
- Do not use strong chemical or abrasive cleaning agents



DOCUMENTATION

We Swan Products Ltd declare that this product conforms to the following product legislation in accordance with the following directive(s):

- 2004/108/EEC The EMC Directive (the Electromagnetic Compatibility Directive).
- 2006/95/EC. The LVD Directive (Low Voltage Directive).
- 2011/65/EU. The RoHS directive (Restriction of Hazardous Substances Directive)
- EC 1935/2004 Food Contact
- 2009/125/EC Eco Design Directive





WARRANTY

This product is guaranteed for 2 years from the date of original purchase. If any defect arises due to faulty materials or workmanship the faulty products must be returned to the place of purchase. Refunds or replacement is at the discretion of the store.

The following conditions apply:

- The product must be returned to the retailer with proof of purchase.
- The product must be installed and used in accordance with the instructions contained in this instruction guide.
- It must be used only for domestic purposes.
- It does not cover wear and tear, damage, misuse or consumable parts.
- Swan Products Ltd has limited liability for incidental or consequential loss or damage.
- This guarantee is valid in the UK and Eire Only.



BS PLUG

The wires in the mains lead are coloured in accordance with the following code:

BLUE NEUTRAL
BROWN LIVE

As the colours of the wire in the mains lead of this appliance may not correspond with the colour markings identifying the terminals on your plug, proceed as follows:

The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured red.

WARNING: THIS APPLIANCE IS DOUBLE INSULATED. DO NOT CONNECT ANY WIRE TO THE EARTH TERMINAL



DISPOSAL OF UNIT



Appliances bearing the symbol shown here may not be disposed of in domestic rubbish. You are required to dispose of old electrical and electronic appliances like this separately. Please visit www.recycle-more.co.uk or www.recyclenow.co.uk for access to information about the recycling of electrical items. Please visit www.weeeireland.ie for access to information about the recycling of electrical items purchased in Ireland. The WEEE directive, introduced in August 2006, states that all electrical items must be recycled, rather than taken to landfill. Please arrange to take this appliance to your local Civic Amenity site for recycling, once it has reached the end of its life.





SWAN BRAND HERITAGE



In 1933 Swan were the first to develop an electric heating element that could be immersed in water. This led to the Swan kettle range that could boil up to six pints of water in just over nine minutes - pretty hot for the time! These days it takes about two minutes for a Swan kettle to boil.





www.swan-brand.co.uk



Scan this QR code
to hear about
our story



We love
what we do



we're proud
of our quality



Find us on Facebook

* on selected products

Copyright © Swan Products Ltd.
PO Box 3117, Stoke-on-Trent ST4 9GD

