

Operating instructions

Heat pump dryer



To avoid the risk of accidents or damage to the appliance it is **essential** to read these instructions before it is installed and used for the first time.

Caring for the environment


Disposal of the packing material

The packaging is designed to protect the appliance from damage during transportation. The packaging materials used are selected from materials which are environmentally friendly for disposal and should be recycled.

Recycling the packaging reduces the use of raw materials in the manufacturing process and also reduces the amount of waste in landfill sites.

Disposal of your old appliance

Electrical and electronic appliances often contain valuable materials. They also contain materials which, if handled or disposed of incorrectly, could be potentially hazardous to human health and to the environment. They are, however, essential for the correct functioning of your appliance. Please do not therefore dispose of it with your household waste.

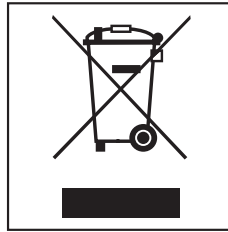


Please dispose of it at your local community waste collection / recycling centre.

Ensure that it presents no danger to children while being stored for disposal.


Caring for the environment	2
Warning and Safety instructions	6
Operating the tumble dryer	17
Control panel	17
Display	18
Before using for the first time	21
Energy saving tips	23
EcoFeedback	24
1. Notes on correct laundry care	25
Points to note regarding washed laundry	25
Preparing the laundry before drying	25
Garment care label symbols	26
Laundry care when drying in a tumble dryer	26
2. Load the tumble dryer	27
3. Select a programme and start it	28
Select a programme	28
Select any options or delay start (if required)	31
Start the programme	31
4. Remove the laundry	32
End of programme/Anti-crease	32
Remove the laundry	32
Options	33
Gentle tumble	33
Freshen up	33
Auto load control	33
Anti-crease	33
Buzzer	33
Favourites	35
Mixed items	37
Delay start	38
Programme chart	39
Changing the programme sequence	46

Contents

Cleaning and care	47
Emptying the condensed water container	47
Preparing the condensed water container for Steam smoothing.....	48
Fluff filters.....	49
Removing visible fluff	49
Cleaning the fluff filters and air flow openings thoroughly	50
Plinth filter.....	51
Removing the plinth filter	51
Cleaning the plinth filter.....	51
Cleaning the plinth filter panel.....	52
Checking the condenser unit	52
Replacing the plinth filter.....	53
Fragrance flacon	55
Inserting a fragrance flacon.....	55
Replacing the fragrance flacon.....	57
Problem solving guide	59
Messages in the display	59
Unsatisfactory drying results.....	62
Other problems	63
Fluff filter in the condensed water container.....	65
Steam smoothing spray jet	66
After sales service	67
Repairs	67
Optional accessories.....	67
Guarantee: U.K.	67
Guarantee: Other countries.....	67
Installation and connection	68
Front view	68
Rear view.....	69
Transporting the dryer	69
Installation	70
Levelling the dryer	70
Ventilation.....	70
Before moving the tumble dryer again (e.g. when moving house).....	70
Additional installation requirements	71
External condensed water outlet.....	72
Installation conditions requiring a non-return valve	72
Arranging the drain hose	73
Examples.....	74
Electrical connection U.K.	76

Consumption data	77
Technical data	78
Settings menu	79
Calling up settings	79
Language 	79
Time of day	80
Drying levels	80
Extended cool down	80
Airways indicator	80
Buzzer volume	81
Keypad tone	81
Conductivity	81
Total consumption	81
Code	82
Display brightness	82
Display switch-off	82
Appliance switch-off	83
Memory	83
Anti-crease	83
Delay start	83

Warning and Safety instructions

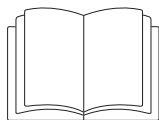

- It is essential to read these instructions.

This tumble dryer complies with current safety requirements. Inappropriate use can, however, lead to personal injury and damage to property.

To avoid the risk of accidents and damage to the tumble dryer, please read these instructions carefully before using it for the first time. They contain important information on its safety, installation, use and maintenance.

Keep these instructions in a safe place and ensure that new users are familiar with the content. Pass them on to any future owner.

Correct application

- This tumble dryer is intended for use in domestic households and similar working and residential environments.
- This tumble dryer is not intended for outdoor use.
- It must be used only as a domestic appliance to dry items which have been washed in a water solution and which are marked on the manufacturer's care label as being suitable for tumble drying. If using dry cleaning kits, do so at your own risk, and follow the instructions provided on the packaging. Any other applications may be dangerous. Miele cannot be held liable for damage resulting from incorrect or improper use or operation.

► This tumble dryer can only be used by people with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, if they are supervised whilst using it or have been shown how to use it in a safe way and understand and recognise the consequences of incorrect operation.

Safety with children

- Children under 8 years of age must be kept away from the tumble dryer unless they are constantly supervised.
- Children 8 years and older may only use the tumble dryer unsupervised if they have been shown how to use it safely and recognise and understand the consequences of incorrect operation.
- Children must not be allowed to clean or maintain the tumble dryer unsupervised.
- Please supervise children in the vicinity of the tumble dryer and do not let them play with it.

Technical safety

- Before setting up the tumble dryer, check it for any externally visible damage.
Do not install or use a damaged tumble dryer.
- Before connecting the tumble dryer, ensure that the connection data on the data plate (fuse rating, voltage and frequency) match the mains electricity supply. If in any doubt, consult a qualified electrician.
- Reliable and safe operation of this tumble dryer can only be assured if it has been connected to the mains electricity supply.

Warning and Safety instructions

- ▶ The electrical safety of this tumble dryer can only be guaranteed when correctly earthed. It is essential that this standard safety requirement is met. If in any doubt, please have the household wiring system tested by a qualified electrician. Miele cannot be held liable for the consequences of an inadequate earthing system (e.g. electric shock).
- ▶ Do not connect the appliance to the mains electricity supply by an extension lead, multi-socket adapter or similar. These can overheat and are a fire hazard.
- ▶ If the electrical connection cable is faulty it must only be replaced by a Miele authorised service technician to protect the user from danger.
- ▶ Unauthorised repairs could result in unforeseen dangers for the user, for which Miele cannot accept liability. Repairs should only be undertaken by a Miele approved service technician, otherwise any subsequent damage will not be covered by the guarantee.
- ▶ Faulty components must only be replaced by genuine Miele original spare parts. The manufacturer can only guarantee the safety of the appliance when Miele replacement parts are used.
- ▶ The tumble dryer must be isolated from the electricity supply in the event of a fault and during cleaning and maintenance.

Warning and Safety instructions

- ▶ This tumble dryer must not be used in a non-stationary location (e.g. on a ship).
- ▶ Do not make any alterations to the tumble dryer, unless authorised to do so by Miele.

▶ Heat pump technology and refrigerant:

The heat pump in this tumble dryer uses a refrigerant which is condensed by the compressor and led in a closed circuit through the heat exchanger unit where heat exchange with the circulating drying air takes place.

- The humming noises caused by the heat pump during the drying process are normal and do not impair the efficient functioning of the dryer.
- The refrigerant is not flammable or explosive.
- In general it is not necessary to leave the dryer standing for any length of time after it has been installed provided it has been transported correctly (see "Installation and connection").
If it has not been transported as described, ensure that the recommended standing time prior to first operation is observed.
Otherwise the heat pump can be damaged.
- This tumble dryer contains fluorinated greenhouse gases (F-Gas).
They are hermetically sealed.
Designation of refrigerant: R134a
Amount of refrigerant: 0.48 kg
Global warming potential of refrigerant: 1430 kg CO₂ e
Global warming potential of appliance: 686 kg CO₂ e

Warning and Safety instructions

- ▶ Please observe the instructions in "Installation and connection" and the "Technical data".
- ▶ The accessibility of the plug must always be ensured, in order to disconnect the tumble dryer from the mains.
- ▶ Do not block the gap between the bottom of the tumble dryer and the floor with plinth facings, deep pile carpet etc. This would hinder a sufficient flow of air to the dryer.
- ▶ Make sure the dryer door can be opened without hindrance after installation.
- ▶ This tumble dryer is supplied with a special lamp to cope with particular conditions (e.g. temperature, moisture, chemical resistance, abrasion resistance and vibration). This special lamp must only be used for the purpose it is intended for. It is not suitable for room lighting. Replacement lamps may only be fitted by a Miele authorised person or the Miele Service Department.

Correct use

- ▶ The maximum load for this tumble dryer is 9.0 kg (dry weight). The maximum recommended loads for individual programmes are given in the Programme chart.
- ▶ To prevent the risk of fire, do not connect the tumble dryer via a controllable socket (e.g. a timer or a peak-load switch-off device). If the drying programme is interrupted before the end of the cooling down phase, this could cause the laundry to self-ignite.

Warning and Safety instructions

► To prevent the risk of fire, the following textiles must not be dried in this tumble dryer:

- Items which have not been washed.
- Items, such as workwear, which have not been thoroughly cleaned and which are still soiled with grease, oil or other deposits (such as cosmetics, lotions etc). If items have not been thoroughly cleaned there is a danger that these might ignite when heated, even after they have been removed from the dryer at the end of the programme.
- Items (e.g. mops and floor cloths) which have been treated with inflammable cleaning agents or which contain residues of acetone, alcohol, benzene, petrol, kerosene, stain remover, turpentine, wax and wax remover or other chemicals.
- Items which have been splashed with hair lacquer, hair spray, nail varnish remover or similar substances.

When washing such heavily soiled items ensure that you use sufficient detergent and select a high temperature. If in doubt, wash the items several times.

Warning and Safety instructions

- ▶ Remove all items from pockets (e.g. lighters, matches).
- ▶ **Warning:** Do not switch the dryer off before the drying programme has finished. If this is done, the laundry must be hung up or spread out to cool it down.
- ▶ Fabric conditioner and similar products must be used according to the instructions on the manufacturer's packaging.
- ▶ To prevent the risk of fire, the following textiles must not be dried in this tumble dryer:
 - Items which have been cleaned using chemicals (e.g. professional dry-cleaning agents).
 - Items which contain a large proportion of rubber, foam rubber or rubber-like materials. For example, products made from latex foam rubber, shower caps, waterproof textiles, rubberised articles and items of clothing and pillows with foam rubber filling.
 - Damaged items which contain padding or fillings (e.g. pillows, jackets). When damaged, the filling can get out with the risk of it igniting in the dryer.

Warning and Safety instructions

► In many programmes, the heating phase is followed by a cooling down phase to ensure that the items are not too hot to handle when you remove them (this also avoids the danger of the laundry self-igniting). The programme is not finished until the cooling down phase has been completed.

As soon as the programme has finished, remove all laundry from the drum.

► Do not let anyone sit or lean on the door, as this can cause the tumble dryer to tip up.

► Always close the door after use. This way you will avoid the danger of:

- Children climbing onto or into the dryer or hiding things in it.
- Pets or other small animals climbing into it.

► The tumble dryer must not be used without fluff filters or

- with damaged fluff filters, or
- with a damaged plinth filter.

This would cause an excessive build-up of fluff which in turn would cause a fault.

► The fluff filters must be cleaned after every drying cycle.

► The fluff filters and the plinth filter must be thoroughly dried after cleaning. Do not replace them if they are damp or wet. Damp or wet filters could cause operational faults.

► Do not install the tumble dryer in a room where there is a risk of frost occurring. At temperatures around freezing point the tumble dryer may not be able to operate properly. There is a risk of damage if the condensed water is allowed to freeze in the pump and hoses.

Warning and Safety instructions

- ▶ If the water is drained externally through the drain hose instead of being collected in the condensed water container, make sure the drain hose is securely attached if you hang it in a sink or basin to avoid the hose slipping and the water causing damage.
- ▶ Condensed water is not drinking water.
It can cause health problems in both people and animals if consumed.
- ▶ Always keep the area around the tumble dryer free of dust and fluff.
Dust drawn into the tumble dryer can cause blockages in the heat exchanger over time.
- ▶ The tumble dryer must not be hosed down.


Using a fragrance flacon (optional accessory)

- ▶ Only use genuine Miele original fragrance flacons.
- ▶ The fragrance flacon must be stored in its packaging so please make sure you retain this.
- ▶ Caution. The fragrance can leak out of the flacon. Make sure that you always keep the flacon, or the fluff filter with the flacon inserted in it, in a horizontal position when carrying and do not tip or place down on any surface.
- ▶ Use an absorbent cloth to wipe up any fragrance which has leaked out of the flacon onto the floor, the dryer or any dryer components (e.g. the fluff filter) immediately.
- ▶ If fragrance which has leaked out of a flacon: comes into contact with the **skin** - wash the skin thoroughly with soap and water; comes in contact with the **eyes** - rinse the eyes with clean water for at least 15 minutes; is swallowed - rinse out the **mouth** thoroughly with clean water. Seek medical advice in the case of contact with the eyes or if fragrance has been swallowed.
- ▶ If fragrance which has leaked out of a flacon comes in contact with clothing, change the clothing immediately. Wash the clothing or any cloths used for mopping up fragrance thoroughly with plenty of water and detergent.
- ▶ There is the risk of fire or damage to the tumble dryer if the following instructions are not observed:
 - Never refill a flacon with fragrance.
 - Never use a faulty fragrance flacon.
- ▶ Dispose of an empty fragrance flacon with the household waste and never use it for any other purpose.
- ▶ Please also observe the information supplied with the fragrance flacon.


Warning and Safety instructions

Accessories

- ▶ Only use genuine Miele original spare parts and accessories with this appliance. If non-Miele parts are used, guarantee, performance and product liability claims will be invalidated.
- ▶ The tumble dryer can be combined with a Miele washing machine in a washer-dryer stack. The appropriate "WTV" stacking kit (available to order) to match your tumble dryer and washing machine is required.
- ▶ If you order a plinth for this tumble dryer (available from Miele as an optional accessory - depending on country), make sure it is the correct one.

 Miele cannot be held liable for damage caused by non-compliance with these Warning and Safety instructions.

Control panel

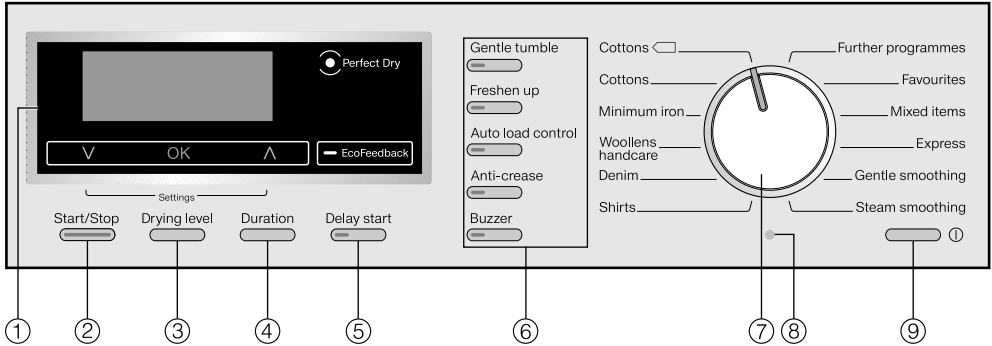

① Display with sensors

See the following page for more information.

② Start/Stop button

For starting the programme selected and cancelling a programme once it has started.

③ Drying level button

For all programmes with a selectable drying level.

④ Duration button

For selecting the duration for timed drying programmes.

⑤ Delay start button

For selecting delay start.

⑥ Option buttons

Various options can be added to the programmes.

⑦ Programme selector

For selecting the programme.

⑧ Optical interface


For service technicians.

⑨ ⓘ button

For switching the tumble dryer on and off. To save energy the tumble dryer will switch off automatically 15 minutes after the end of the programme/anti-crease phase or after being switched on if no other selection is made.

Operating the tumble dryer

Display

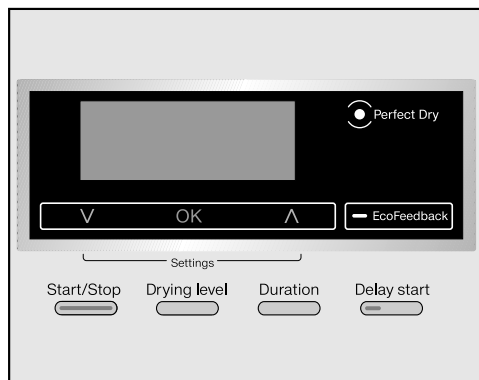

∇, OK, ^ sensors

These sensors are used to operate the display when the symbols light up.

- ∇ sensor
Scrolls down the list to the next option or decreases a value.
- OK sensor
Confirms the programme selected, a value set or opens a sub-menu.
- ^ sensor
Scrolls up the list to the next option or increases a value.

The sensor symbols will go out if no selection is made. They will also go out if a selection is not confirmed with OK.

EcoFeedback sensor

See "EcoFeedback" for more information.

Settings

The Settings menu is opened by touching the ∇ and ^ sensors at the same time.

Settings can be changed to alter the dryer's electronics to suit different requirements. Please refer to "Settings menu" at the end of this booklet for more information.

The following programmes are selected using the programme selector at the "Further programmes" position:

- Automatic plus
- Delicates
- Silks handcare
- Sportswear
- Standard pillows
- Outerwear
- Proofing
- Warm air
- Cool air
- Basket programme
- Cottons hygiene

Perfect Dry indicator

With programmes with a selectable drying level, the Perfect Dry system calculates the residual moisture present in the laundry to ensure a precise drying result.

The *Perfect Dry* indicator . . .

. . . will flash after the programme has started and go out when the programme duration appears in the display.

. . . will light up again when the selected drying level is reached and remain on until the end of the programme.

. . . will remain dark with the following programmes: *Woollens handcare*, *Silks handcare*, *Cool air*, *Warm air*, *Basket programme*.

Estimated time remaining

After the programme has started the estimated programme duration will appear in the display in hours and minutes.

The programme duration displayed for programmes with a selectable drying level may vary or "jump". The following factors, among others, affect the programme duration displayed: the quantity of the laundry, the type of fabric and the residual moisture in the laundry. The electronics continually access conditions in the appliance and adjust the programme duration with increasing accuracy.

Operating the tumble dryer

Examples on how to operate the appliance

Scrolling through a list

The option which can be selected will be highlighted with a white bar.



Touching the ∇ sensor scrolls down the list to the next option and touching the \wedge sensor scrolls up the list to the next option.


The OK sensor is used to confirm your selection.

A dotted line will appear at the beginning and the end of a list.

The bar on the right hand side moves with you as you scroll through the list to show you which option you have reached.

Identifying options selected

There will always be one value selected. This will have a tick \checkmark beside it. The other values are deselected automatically.

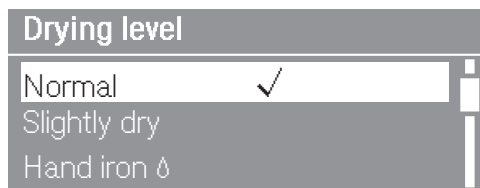


The ∇ sensor highlights the next value and the \wedge sensor highlights the previous value.

The OK sensor is used to confirm selection of the highlighted value.

If no selection is made the display will revert to the previous menu.

Setting numerical values

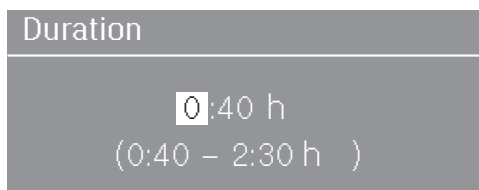

The value which can be changed is highlighted in white.

The time is decreased with the ∇ sensor and increased with the \wedge sensor.

The hours and then the minutes are confirmed with the OK sensor.

Exiting a sub-menu

Select *Back* \hookleftarrow to exit a sub-menu.

Removing the protective foil and stickers

- Remove
 - the protective foil from the door.
 - any stickers from the front and the lid.

⚠ Please do not remove any labels (e.g. the data plate), visible when you open the door.


After installing the dryer

⚠ Before using the tumble dryer for the first time, ensure that it is installed and connected to the electricity supply correctly. If it has not been transported as described in "Installation and connection" then it must be left to stand for at least 1 hour before it is connected to the electricity supply.

When the tumble dryer is switched on the welcome display *Miele Willkommen* will appear briefly.

Setting the language

You will be asked to select the language you want for the display. It is possible to change the language at any time via *Settings*.

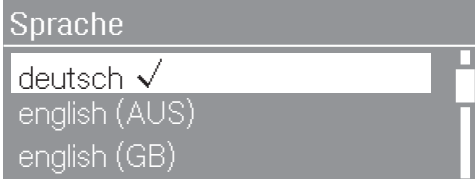


- You can scroll through the list by touching the ∨ and ∧ sensors until the language you want is highlighted in the display.
- Confirm your choice of language by touching the OK sensor.

Before using for the first time

Setting the time of day (if necessary)

Only touch the ∇ sensor if you would like a 12 hour clock display.

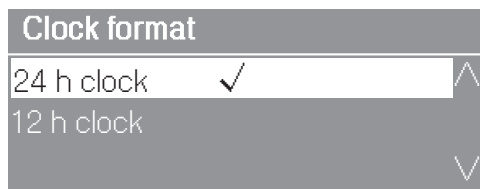

- Confirm by touching the *OK* sensor.



- Touch the ∇ sensor to decrease or the \wedge sensor to increase the hour.
- Confirm the hour selected with the *OK* sensor. Then set the minutes in the same way.

If you have selected *12 h clock*, you can then select *am* or *pm*.

The time of day will then appear at the top right hand side of the display each time you select a programme.

Completing the procedure for using for the first time outlined in these instructions

i Information

Follow the instructions in the operating instruction booklet for setting the machine up for the first time.

- Confirm by touching the *OK* sensor.
- Read "1. Notes on correct laundry care" and "2. Load the tumble dryer".
- You can then load the dryer and select a programme as described in "3. Select a programme and start it".

The procedure for using for the first time is completed when a programme lasting longer than one hour has been carried out in full.

To avoid unnecessarily long drying times and high consumption of energy:

- Make sure that your laundry is thoroughly spun before drying. The higher the spin, the greater the savings that can be made in energy and time during drying.
- Observe the maximum recommended loading capacity for the relevant programme for optimum energy consumption and for excellent results.
- Make sure the room temperature is not too high. If there are other heat producing appliances in the room in which the dryer is located, make sure the room is well ventilated and switch the other appliances off, if possible.
- Clean the fluff filters in the door opening after every drying cycle.

Please refer to "Cleaning and care" for information on cleaning the fluff filters and the plinth filter.

- If possible, make use of time-variable, low-cost electricity tariffs. Ask your energy supplier for information. Your tumble dryer's delay start function will be useful as you can select when during the next 24 hours you want drying to start automatically.

EcoFeedback

You can use the *EcoFeedback* sensor to call up information about the energy consumption of your dryer.

Touching the *EcoFeedback* sensor will call up two types of information:

- an estimate of the consumption before the programme begins
- the energy *consumption* during the programme.

The *EcoFeedback* sensor will light up and information will appear in the display.

Both will go out automatically a few seconds later or alternatively they can be confirmed with *OK*.

At the end of the programme, before opening the door, you can also call up the following in the display:

- the energy consumption and
- the degree of soiling of the fluff filters and the plinth filter (0 % = light, 50 % = medium, 100 % = heavy).

Accumulating fluff and soiling will cause the programme duration to increase which in turn will increase energy consumption.

1. Estimate

- After selecting a programme, touch the *EcoFeedback* sensor.

For a few seconds bars which indicate the estimated consumption will appear:

Energy ■■■■■_-----

The more bars visible, the higher the energy consumption.

The estimate will vary depending on the programme and any options selected.

2. Actual consumption

- Touch the *EcoFeedback* sensor.

You can view the actual amount of energy used.

Example:

Energy 2.0 kWh

< 0.1 kWh will be displayed if the energy consumption is very low.

The consumption will vary depending on the programme stage and residual moisture present.

If the door is opened or the tumble dryer has switched off automatically at the end of the programme, the data will revert to the estimated consumption.

Total consumption setting

- shows consumption data for the programme which has just been run and
- shows total energy consumption to date.


See "Settings menu" for more detailed information.


1. Notes on correct laundry care

Points to note regarding washed laundry

- When washing very heavily soiled items ensure that you use sufficient detergent and select a high temperature. If in doubt, wash the items several times.
- Do not put soaking wet items into the tumble dryer. Make sure your laundry is thoroughly spun before drying. The higher the spin speed, the greater the savings that can be made in energy and time during drying.
- New dark coloured garments should be washed and dried separately from light coloured garments to avoid the danger of colours running and discolouring other garments or even plastic components in the dryer. Dark coloured fibres can also settle on light coloured garments and vice versa.
- Starched laundry can be dried in the tumble dryer. To achieve the usual finish, double the amount of starch should be used.

Preparing the laundry before drying

 Make sure that any objects, e.g. detergent dosing balls, lighters etc. have been removed from the laundry. They could melt or explode and cause damage to the dryer or the laundry.








 See "Warning and Safety" instructions for further information.

Loading or using the tumble dryer incorrectly could cause a fire.

- Sort the laundry according to the type of fibre and weave, size, garment care label symbol and the drying level required.
- Check the seams of padded or down-filled items to prevent the risk of fillings coming out. These could catch fire when being dried.
- Disentangle the laundry.
- Tie together textile belts and ties.
- Fasten . . .
. . . duvet covers and pillow cases to prevent small items from being trapped inside them.
. . . hooks and eyes.
- Sew in or remove underwiring from bras.
- Leave jackets open and undo any long zips so that textiles dry evenly.
- Minimum iron fabrics tend to crease more, the greater the load. This is also the case for garments made from very fine weave fabric, such as shirts or blouses. If necessary, reduce the size of the load for these types of fabric.

1. Notes on correct laundry care

Garment care label symbols

Drying	
	Normal/higher temperature
	Reduced temperature: Select <i>Gentle tumble</i> (for delicate textiles)
	Do not tumble dry
Ironing	
	Very hot
	Hot
	Warm
	Do not iron

Laundry care when drying in a tumble dryer

See the "Programme chart".
This describes the programmes and gives their maximum load.

- Load according to the optimum amount of laundry recommended for the programme being used. Underloading is uneconomical. Overloading gives a poorer quality of drying and may cause unnecessary creasing.
- With half loads you can select the *Auto load control* option.
- Select an appropriate drying level, e.g. . . .
. . . *Normal plus*, if you want to fold and put away the laundry after you take it out of the dryer.
. . . *Machine iron*, if the laundry, e.g. table linen, requires further processing after drying.

- Down-filled garments have linings which have a tendency to shrink, depending on the quality of the item. They can be partially dried using the *Gentle smoothing* programme.
- Pure linen should only be machine dried if specified as suitable by the manufacturer on the care label, as the surface of the fabric may otherwise become rough. They can be partially dried using the *Gentle smoothing* programme.
- Woollens and wool blends tend to become matted and shrink if dried in a tumble dryer. They can, however, be "fluffed up" in the *Woollens handcare* programme.
- Loopknit garments (e.g. T-shirts and underwear) tend to shrink depending on their quality. Do not over-dry these textiles. When purchasing these garments it is advisable to take their shrinkage properties into account.
- Select the *Gentle tumble* option for fabric which is particularly heat-sensitive or susceptible to creasing.


2. Load the tumble dryer

⚠ It is essential to read "1. Notes on correct laundry care" first of all.

- Press the ① button to switch the dryer on.


The interior drum lighting will come on.

The interior drum lighting will automatically go out after a few minutes and/or after the start of a programme to save energy.

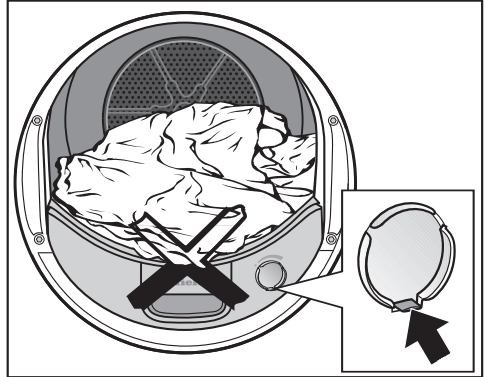

If you are not using a fragrance flacon: the tab must be pushed down completely (see arrow).

Open the door

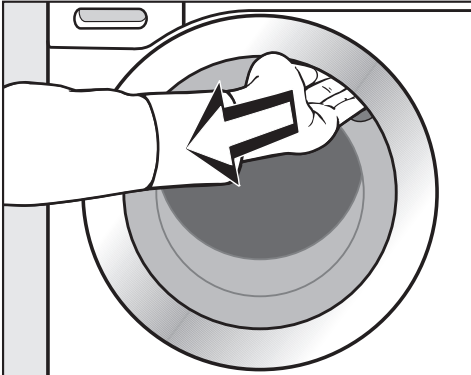


- Reach under the door grip and pull the door open.
- Unfold the laundry and load loosely into the drum.

Do not overload the drum. Overloading can cause unnecessary wear and tear to the laundry, give a disappointing drying result and cause more creasing.

When closing the door make sure that laundry does not get trapped in the door opening. This could damage the laundry.

Close the door

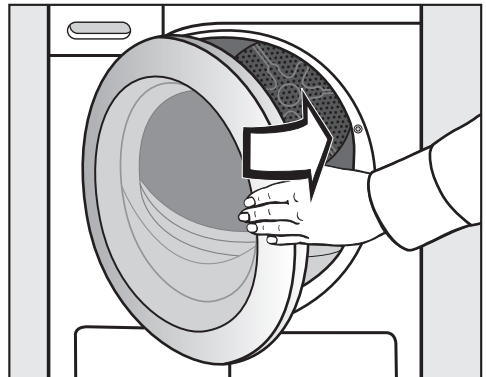


- Shut the door with a gentle swing.

3. Select a programme and start it

Select a programme

You can use the programme selector to select the following:

- one of the programme names on the control panel, or
- *Further programmes* or
- *Favourites* or
- *Mixed items*

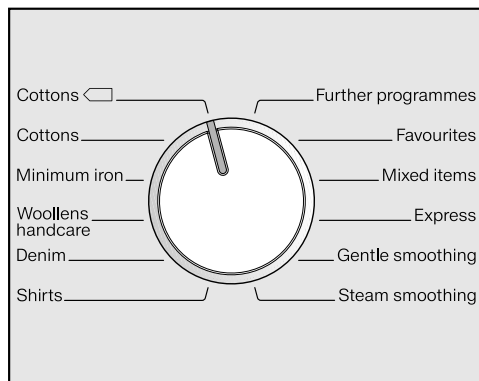

- Turn the programme selector.

Different programmes and setting options will light up in the display, depending on the position of the programme selector.


When a programme is selected, the maximum load (weight of dry laundry) possible for the programme will appear in the display for a few seconds.

You can confirm with *OK* or wait until the pre-set drying level or programme duration lights up.

If you think you have loaded too much laundry, remove a few items.

Further programmes

The further programmes can be selected via the display.

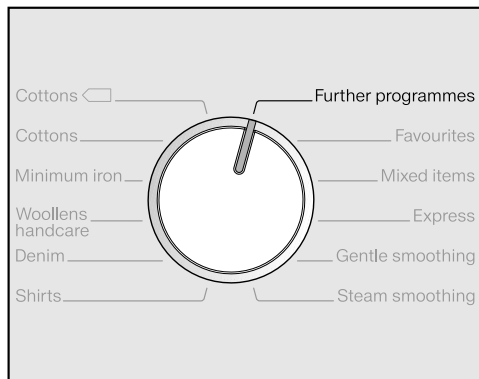

Further programmes

Automatic plus

Delicates

Silks handcare

- Touch the ∇ or \wedge sensor to scroll through the list until the programme you want appears in the display.
- Confirm by touching the *OK* sensor.


3. Select a programme and start it

Programmes with drying levels

- ***Cottons, Minimum iron, Delicates, Denim, Shirts, Express, Gentle smoothing, Steam smoothing, Automatic plus, Sportswear, Outerwear***


The drying level can be altered after selecting one of these programmes.

The duration and the pre-set drying level will be displayed in addition to the programme name.

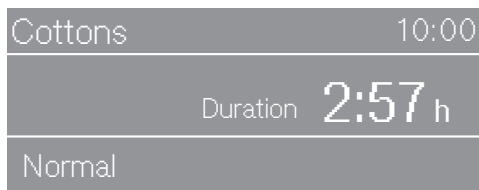

- Press the *Drying level* button.


The currently selected drying level will appear marked with a ✓ in the display.

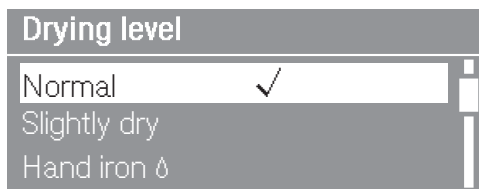

- Select a drying level by touching the ✓ or △ sensor.


Any drying level can be selected for the *Cottons* and *Express* programmes. A more limited range is available when using the other programmes.

- Confirm by touching the *OK* sensor.

 Important: When selecting the *Steam smoothing* programme, you must make sure that the condensed water container has been filled as described in these operating instructions (see "Cleaning and care").

3. Select a programme and start it

Other programmes and the timed drying programmes

- **Cottons** , **Woollens handcare**, **Silks handcare**, **Standard pillows**, **Proofing**, **Cottons hygiene**

The programme duration is pre-set and cannot be altered.

- **Cool air**, **Warm air**, **Basket programme**

You can select the duration in ten-minute stages.


Cool air: 20 min - 1:00 h

Warm air: 20 min - 2:00 h

Basket programme: 40 min - 2:30 h



- Press the *Duration* button.

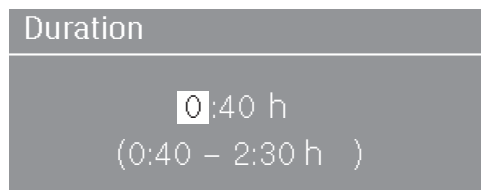

- Increase / decrease the hour(s) by touching the ∇ or \wedge sensor.
- Confirm by touching the *OK* sensor.
- Alter the minutes in the same way.

Favourites

You can customise up to 10 programmes and save these under names of your choice. These programmes can then be selected from a list.

- See "Favourites".

Tip: You can also save a programme after it has started as a favourite. See "Changing the programme sequence".

Mixed items


If you want to dry a mixed load you can select from a list of 19 different items. The dryer will use the list to select the correct programme setting.

- See "Mixed items".

3. Select a programme and start it

Select any options or delay start (if required)

Options

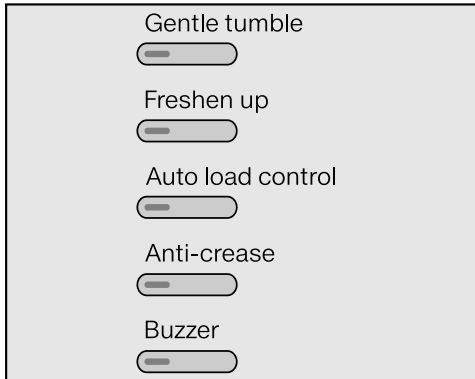

- Press a button.

The button will light up when the option is selected.

An option can only be selected when the load indication has gone out in the display.

Not all options can be combined or can be selected/deselected: see "Options".

Please see "Options" for further information.

Delay start

- Press the *Delay start* button to select delay start.

Please see "Delay start" for more information.

Start the programme.

- Press the flashing *Start/Stop* button.

The *Start/Stop* button will now light up constantly.

Drying and the programme duration will light up in the display. The drying level reached will light up instead of *Drying* later on, during programmes with a selectable drying level.

The *Perfect Dry* indicator will only flash/light up with programmes with selectable drying levels (see also "Operating the tumble dryer").

Cooling down will light up in the display shortly before the end of the programme. The laundry will be cooled down, however the programme is not yet finished.

4. Remove the laundry

End of programme/Anti-crease

At the end of the programme: *Anti-crease* (if selected) or *Finish* will light up. The *Start/Stop* button will no longer be lit up.


To save energy, 10 minutes after the end of the programme the *Start/Stop* button will begin to flash slowly and the display will go out.

The dryer will switch off automatically 15 minutes after the end of the anti-crease phase (with programmes without an anti-crease phase it will switch off 15 minutes after the end of the programme).

Remove the laundry

⚠ Never open the door before the drying process has finished.

- Reach under the door grip and pull the door open.

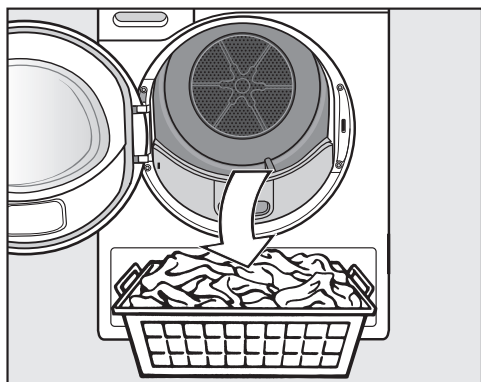

- Remove the laundry.

Check that all items have been removed from the drum.

If items are left in the dryer, they could be damaged by overdrying when the dryer is next used.

 
If the dryer is switched on at the mains and the door is opened, the drum lighting will come on. It will go out a few minutes later to save energy.


- If the dryer is still switched on, switch it off with the ① button.

A buzzer will sound.

- Remove the fluff from the 2 fluff filters in the door opening: see "Cleaning and care - Fluff filters".
- Shut the door with a gentle swing.
- Empty the condensed water container.

Tip: The condensed water can be used for the *Steam smoothing* programme. See "Cleaning and care - Preparing the condensed water container for Steam smoothing".


We recommend that you drain the condensed water externally through the drain hose when drying a full load using the *Cottons* and *Cottons*  programmes. This will avoid having to empty the condensed water container during the programme.

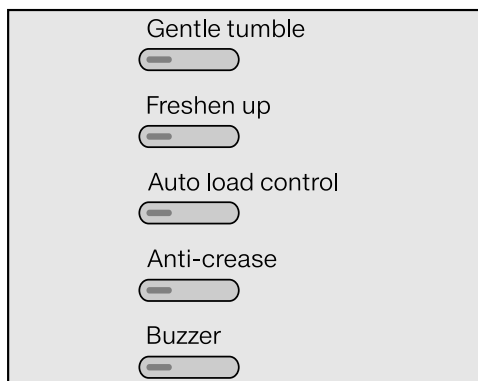

The options are switched on or off by pressing the appropriate button. Not all options can be combined or can be selected/deselected

The button will light up when the option is selected.

Gentle tumble

Delicate fabric (with the  symbol on the care label, e.g. acrylic garments) is dried at a lower temperature. The programme duration is longer.

Freshen up

You can use the *Freshen up* option to help remove or reduce odours in clean (dry or damp) clothing.

The drying air is heated for a specific length of time. After this, the garments are aired to the *Normal* drying level without any more heat being added. The drying level cannot be altered.

The option will be more effective if you dampen the garments a little beforehand, use a fragrance flacon and reduce the load. Please note that

odours will not be removed as effectively from parts of garments made of synthetic fibres.

Auto load control

This option should be used if you only want to dry half the load given in the display and quoted in the "Programme chart". In this case, by pressing this button, you can both shorten and optimise the drying process.

Anti-crease


Depending on the programme selected, the drum will continue to rotate in a special rhythm for up to 2 hours at the end of the programme, to reduce creasing, if you do not wish to remove the laundry immediately.

Buzzer

A buzzer (four beeps at intervals for a maximum of 1 hour) will sound to let you know that the programme has finished. The continuous buzzer which sounds when there is a fault is not dependent on the setting for the buzzer at the end of the programme.

Options

The following options can be selected in addition to the programme:

	Gentle tumble ¹	Freshen up ¹	Auto load control ¹	Anti-crease	Buzzer
Cottons 	–	–	–	X	X
Cottons	X	X	X	X	X
Minimum iron	X	X	X	X	X
Woollens handcare	–	–	–	–	X
Denim	X	X	–	X	X
Shirts	X	X	–	X	X
Express	–	–	–	X	X
Gentle smoothing	O	–	–	X	X
Steam smoothing	–	–	–	X	X
Automatic plus	O	–	–	X	X
Delicates	O	–	–	X	X
Silks handcare	–	–	–	X	X
Sportswear	O	–	–	X	X
Standard pillows	–	–	–	X	X
Outerwear	O	–	–	X	X
Proofing	–	–	–	X	X
Warm air	X	–	–	X	X
Cool air	–	–	–	X	X
Basket programme	–	–	–	–	X
Cottons hygiene	–	–	–	X	X

¹ = These options cannot be combined with one another

X = Can be selected

O = Cannot be changed/always active

– = Cannot be selected

You can save your own customised programmes under names of your choice.

These favourite programmes will be sorted alphabetically.

- Turn the programme selector to *Favourites*.

1. Create

Favourite programmes

Create

- Confirm *Create* with the *OK* sensor.
- Touch the ∇ or \wedge sensor to highlight the programme you want.
- Confirm with the *OK* sensor.
- If appropriate, select a drying level or duration with the ∇ or \wedge sensor and confirm with *OK*.

Extras

Select "Extras"

Continue without "Extras"

- Choose *Select "Extras"* or *Continue without "Extras"*.

Selecting extra options

Extras

- ☐ Gentle tumble
- ☐ Freshen up
- ☐ Auto load control

- Select and confirm the one you want.

Extras

- ☒ Gentle tumble
- ☐ Freshen up
- ☐ Auto load control

A ☒ will appear next to the extra option and the following will light up in the display:

Extras

- Change / add to selection
- Finish selection
- Display selection

Change / add to selection

- Confirm *Change / add to selection*, if you want to select another one.

Finish selection

- You must confirm *Finish selection* once you have selected the ones you want.

Display selection

- You can view your selection again.

Clear selection

- You can delete the extra options.

Favourites

Summary





- Select *Accept* and confirm.

2. Entering a name

You can enter a name of up to 10 characters.



- Touch the \vee or \wedge sensor to move along the characters until the character you want is highlighted.
- Confirm selection of each character by touching the OK sensor.
- characters can also be saved, deleted or changed by selecting one of the symbols:
_123 abc  

3. Saving a name



- Touch the \vee or \wedge sensor to highlight the \checkmark symbol.
- Confirm by touching the OK sensor.

The programme will be saved as a favourite.

Changing a favourite programme



- Select *Change*.
- Select the favourite programme you want to change.
- Change the favourite programme and
 - save it under the same name or
 - change the name.

The altered parameters will be active the next time the favourite programme is started.

Deleting a favourite programme

If you have already saved ten favourite programmes, you will need to delete one of these before you can save a new one.

- Select *Delete*.
- Select the favourite programme you want to delete.
- Confirm the deletion.

For drying a mixed load of items which can be compiled from a list.

- Turn the programme selector to *Mixed items*.
- Touch the \vee or \wedge sensor to highlight items.

A list of 19 items will appear in alphabetical order in the display.

- Confirm the items you want by touching the *OK* sensor.

The item selected will have a ☒ next to it and the following will appear in the display:

Mixed items

Change / add to selection

Finish selection

Display selection

- Touch the \vee or \wedge sensor to highlight an option ...
- ... and confirm by touching the *OK* sensor.

Changing or adding to the selection

- You can select more items in the same way as described previously.
- Select more items if required.
Confirming a previously selected item will deselect it and the tick ☒ will go out.

Displaying the items selected

- You can view the items selected again.

Clearing a selection

- You can delete all the items.

Back ↩

- This returns you to *Select items*.

Finish selection (saving)

- Once you have made your selection and are ready to start drying, confirm with the *OK* sensor.

The dryer has put together the optimum programme.

Caution: Switching off the dryer will delete the list of items you have just made.

- You can still change the *Drying level* and select the *Anti-crease* function or the *Buzzer*.
- Press the flashing *Start/Stop* button to start the programme.

The list of items selected will be deleted at the end of the programme and the list will need to be selected again the next time you use this programme.


Delay start

To select delay start

With delay start you can delay the start of the programme by up to a maximum of 24 hours.

Please note that the time of day must be entered correctly for the delay start function to work.

- After selecting the programme, press the *Delay start* button.

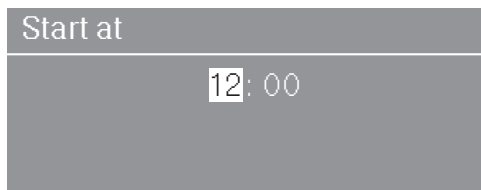

- The \wedge sensor increases the time by 1 hour up to 24 hours. The \vee sensor reduces the time.

- Confirm by touching the *OK* sensor.

The cursor will change from the hours to the minutes.

- Set the minutes in the same way. The minutes are selected in 15 minute increments.
- Confirm by touching the *OK* sensor.

To change delay start (if necessary)

- Press the *Delay start* button.
- Select *Change the time* and change it.

To delete delay start (if necessary)

- Press the *Delay start* button.
- Select *Cancel the time* and confirm this with *OK*.

To begin delay start

- Press the *Start/Stop* button.

The time at which the programme will start automatically will appear in the display.

The drum will turn briefly every hour until the start of the programme to reduce creasing.

To change delay start after it has started counting down

- Press the *Delay start* button.

You can either start the programme immediately or change the time:

- To do this touch the \wedge or \vee sensor.
- Confirm by touching the *OK* sensor.



To add/remove laundry after delay start has started counting down

- You can open the door to add/remove laundry.
- Press the *Start/Stop* button so that the delay start time continues to count down.

To cancel delay start


- Press the *Start/Stop* button.
- Confirm *Cancel delay start* with *OK*.

Programme chart

Cottons  **		Max. load 9.0 kg*
Use for	Cotton items such as those described under <i>Cottons Normal</i> with normal residual moisture.	
Note	<ul style="list-style-type: none">– Items are dried to a <i>Normal</i> level only.– The <i>Cottons</i>  programme is the most energy-efficient for drying cotton items with normal residual moisture levels.	
Cottons		Max. load 9.0 kg*
Extra dry, Normal plus, Normal, Slightly dry		
Use for	Single and multi-layered cotton fabric such as towelling, jerseywear, T-shirts, underwear, workwear, covers, flannelette bed linen and baby clothes.	
Notes	<ul style="list-style-type: none">– Select <i>Extra dry</i> for multi-layered and very thick fabric.– Do not use <i>Extra dry</i> for jersey fabric (e.g. T-shirts, underwear), as they have a tendency to shrink.	
Hand iron Δ , Hand iron $\Delta\Delta$, Machine iron		
Use for	Cotton or linen fabric requiring further processing, e.g.: table linen, bed linen, starched laundry.	
Note	To prevent laundry from drying out it should be rolled up until you are ready for ironing.	

* Weight of dry laundry

** Note for test institutes:

- Test programme in accordance with Regulation 392/2012/EU for energy labelling, measured in accordance with EN 61121 (without any options selected)
- With the *Cottons* and *Cottons*  programme settings, drain the condensed water externally through the drain hose.

Programme chart

Minimum iron		Max. load 4.0 kg*
Normal plus, Normal, Slightly dry, Hand iron Δ, Hand iron ΔΔ		
Use for	Minimum iron items made of cotton, synthetic or mixed fibre, e.g.: workwear, tunics, tops, dresses, trousers, table linen and socks.	
Woollens handcare		Max. load 2.0 kg*
Use for	Woollen garments and fabric containing wool blends, e.g. pullovers, jackets and socks.	
Note	<ul style="list-style-type: none"> – Wool and wool blend items are only fluffed up; they are not dried completely. – Remove garments as soon as the programme has finished. 	
Denim		Max. load 3.0 kg*
Normal plus, Normal, Slightly dry, Hand iron Δ, Hand iron ΔΔ		
Use for	Denim garments, e.g. jeans, jackets, skirts, shirts	
Shirts		Max. load 2.0 kg*
Normal plus, Normal, Slightly dry, Hand iron Δ, Hand iron ΔΔ		
Use for	Shirts and blouses.	

* Weight of dry laundry

Programme chart

Express		Max. load 4.0 kg*
Extra dry, Normal plus, Normal, Slightly dry, Hand iron δ, Hand iron $\delta\delta$, Machine iron		
Use for	Garments suitable for the Cottons programme.	
Note	The programme duration is shorter.	
Gentle smoothing		Max. load 1.0 kg*
Normal, Hand iron δ		
Use for	<ul style="list-style-type: none"> – Cotton and linen fabric – Minimum iron items made of cotton, synthetic or mixed fibre, e.g. trousers, jackets, shirts. 	
Notes	<ul style="list-style-type: none"> – Suitable for dry and damp laundry. – Select <i>Hand iron δ</i> if the items are to be ironed after drying. – Smooths out creasing caused during the spin cycle in the washing machine. – Remove garments as soon as the programme has finished. 	


* Weight of dry laundry

Programme chart

Steam smoothing		Max. load 1.0 kg*
Normal, Hand iron Δ		
Use for	<ul style="list-style-type: none"> – Cotton and linen fabric – Minimum iron items made of cotton, synthetic or mixed fibre, e.g. trousers, jackets, shirts. 	
Notes	<ul style="list-style-type: none"> – For all items which require <ul style="list-style-type: none"> – dampening before ironing. – creasing to be removed. – Select <i>Hand iron Δ</i> if the items are to be ironed after drying. – Water will be taken from the condensed water container during this programme. This water will then be sprayed into the drum from a jet in the door opening. The condensed water container must therefore be filled with water up to at least the –min– marker. – You will be aware of more operating noise because the condensed water pump is running. 	
Automatic plus		Max. load 5.0 kg*
Normal plus, Normal, Slightly dry, Hand iron Δ, Hand iron $\Delta\Delta$		
Use for	Mixed loads of garments suitable for the <i>Cottons</i> and <i>Minimum iron</i> programmes.	

* Weight of dry laundry

Programme chart

Delicates		Max. load 2.5 kg*
Normal plus, Normal, Slightly dry, Hand iron Δ, Hand iron ΔΔ		
Use for	Delicate items with the  symbol on the care label made of synthetic fibre, mixed fibre, rayon and easy care cotton, e.g. shirts, blouses, lingerie and applied garments.	
Note	Reducing the load will reduce creasing.	
Silks handcare		Max. load 1.0 kg*
Use for	Silk garments which are suitable for drying in the tumble dryer, e.g. blouses and shirts	
Note	<ul style="list-style-type: none">– This programme reduces creasing. Items are not dried completely by this programme.– Remove garments as soon as the programme has finished.	
Sportswear		Max. load 3.0 kg*
Normal plus, Normal, Slightly dry, Hand iron Δ, Hand iron ΔΔ		
Use for	Sportswear which is suitable for drying in a tumble dryer.	
Pillows		1-2 pillows up to 80x40 cm 1 pillow up to 80x80 cm
Normal		
Use for	Pillows suitable for drying in a tumble dryer, with feather, down or synthetic fillings.	
Important	Please observe the instructions on the care label. Pillows can still feel damp after being dried. You can use this programme several times until the pillow feels dry.	


* Weight of dry laundry

Programme chart

Outerwear		Max. load 2.5 kg*
Normal, Hand iron Δ		
Use for	Outerwear which is suitable for drying in a tumble dryer.	
Proofing		Max. load 2.5 kg*
Normal		
Use for	Drying microfibre fabric, skiwear, outerwear, fine, closeweave cotton garments (poplin) or tablecloths which are suitable for drying in a tumble dryer and have been treated to provide a water and dirt resistant finish.	
Notes	<ul style="list-style-type: none"> – This programme includes a proofing fixing phase. – Only use proofing agents containing fluorochemical compounds which are stated by the manufacturer as being "suitable for use on membrane textiles". – Do not dry items which have been treated with proofing agents containing paraffin. Fire hazard! 	
Warm air		Max. load 8.0 kg*
Use for	<ul style="list-style-type: none"> – Multi-layered fabric whose layers have different drying characteristics, e.g. jackets, pillows, sleeping bags and other voluminous items. – Drying individual items, e.g. bath towels, swimwear, tea-towels. 	
Note	Do not select the longest drying time to start with. Check the items as you are drying them to find the optimum time.	
Cool air		Max. load 8.0 kg*
Use for	Any item which only needs airing.	

* Weight of dry laundry

Programme chart

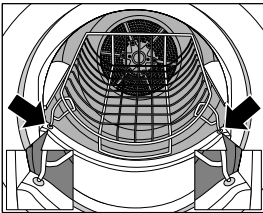Basket programme		Max. load for basket 3.5 kg
Notes	<ul style="list-style-type: none"> – This programme may only be used with the Miele drying basket (optional accessory) fitted. – Use this programme to dry or air items which are suitable for drying in a tumble dryer but which are not suitable for drying using mechanical action. – It is essential to observe the operating instructions for the drying basket. 	
Use for	See the operating instructions supplied with the drying basket.	
Cottons hygiene		Max. load 4.0 kg*
Normal		
Use for	Cotton and linen fabric which will be in direct contact with the skin, e.g. underwear, baby clothes, bed linen, towelling.	
Important	The temperature is held constant for a longer period of time (longer temperature holding time) to deactivate micro-organisms, e.g. bacteria or house dust mites, and also to reduce the number of allergens in the laundry. To ensure that micro-organisms are deactivated, do not interrupt the programme.	

* Weight of dry laundry

Changing the programme sequence

You cannot change to another programme once a programme has started (this prevents unintentional alterations).

If you move the programme selector, *Programme cannot be changed* will light up in the display until you move the programme selector back to the original programme.

You will need to cancel the current programme before you can select a new one.

Once a programme has started ...

... cancelling the programme and then selecting a new programme

- Press the *Start/Stop* button.
- Confirm *Cancel programme* with the OK sensor.
- *Cooling down* will light up in the display, depending on the drying duration and the drying temperature reached.
- Wait until *Finish* lights up in the display or press the *Start/Stop* button again until *Finish* lights up.
- Press the ⓘ button to switch the dryer off.
- Press the ⓘ button to switch the dryer on.
- Select and start a new programme straight away.

... saving the programme as a favourite

- Press the *Start/Stop* button.

- Select and confirm *Save programme*.

You can save this programme under *Favourites*. See "Favourites, 2. Entering a name".

Adding or removing laundry after a programme has started

- Press the *Start/Stop* button.
- Select *Cancel programme*.
- Confirm by touching the OK sensor.
- *Cooling down* will light up in the display, depending on the drying duration and the drying temperature reached.
- Wait until *Finish* lights up in the display or press the *Start/Stop* button again until *Finish* lights up.



Danger of burning.

Do not touch the back of the drum when adding or removing items. The drum and the items can be very hot.

- Add or remove items.
- Close the door.

To continue with the programme:

(change the drying level first of all, if necessary)

- Press the *Start/Stop* button.

Programme duration

Altering the programme sequence can cause the programme duration shown in the display to be adjusted.

Emptying the condensed water container


The condensed water is collected in the condensed water container.

Empty the condensed water container after every drying programme.


Empty the container will light up if the maximum level of the condensed water container is reached.

To delete *Empty the container*: open and close the door with the dryer switched on.

⚠ To prevent damaging the door and the front of the condensed water container when pulling the container out of the dryer: always close the door completely.

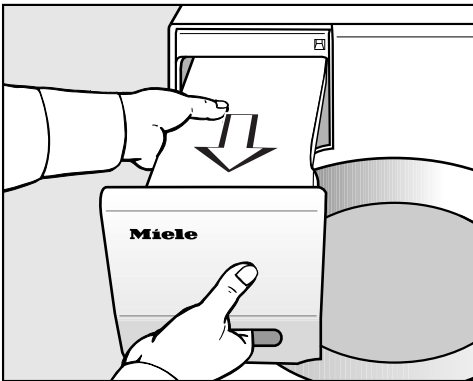

- Pull out the condensed water container.
- To prevent water running out, hold it at the front and towards the back and keep it in a horizontal position when carrying it.

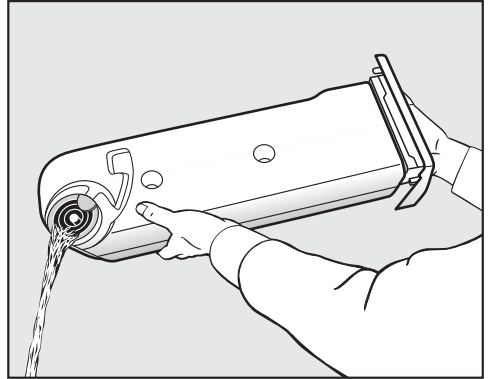

- Empty the container.
- Replace the container in the dryer.

⚠ Condensed water should not be consumed. It could lead to health problems for people and animals.

The condensed water can be used for the *Steam smoothing* programme. The condensed water container must be filled to use this programme, see the following section.

Cleaning and care

Preparing the condensed water container for Steam smoothing

⚠ Condensed water which has collected in the condensed water container is directed into the drum in the *Steam smoothing* programme. The condensed water container must therefore be filled with water up to at least the **-min-** marker.




The **-min-** marker is at the front left-hand side of the container.

- Make use of the condensed water which collects during the drying process.

If the condensed water container is empty

- You can fill the condensed water container with commercially available condensed water (ironing water).

You should only use tap water in exceptional circumstances. If tap water is used frequently, the Steam smoothing spray jet (in the door opening) can become calcified.

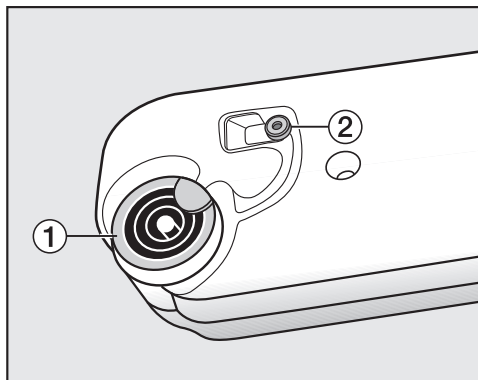

1 spout, 2 rubber seal

- Pour the water in through the rings of the spout 1.

⚠ Only use clean water. The water must not contain any fragrance, detergent or other substances.

Check the rubber seal from time to time.

If tap water is used frequently, white limescale deposits can build up on the rubber seal 2.

- Use a damp cloth to carefully remove any limescale deposits from the rubber seal 2.
- After cleaning the rubber seal, push the condensed water container fully into the dryer.

Fluff filters

This tumble dryer has 2 fluff filters in the door opening: the upper and lower fluff filters trap fluff produced during the drying process.


Removing visible fluff

Remove any fluff after every drying cycle.


Tip: You can also use a vacuum cleaner so that you can remove the fluff without touching it.

- Open the door.


⚠ You must remove the fragrance flacon (if present) beforehand. See "Fragrance flacon".

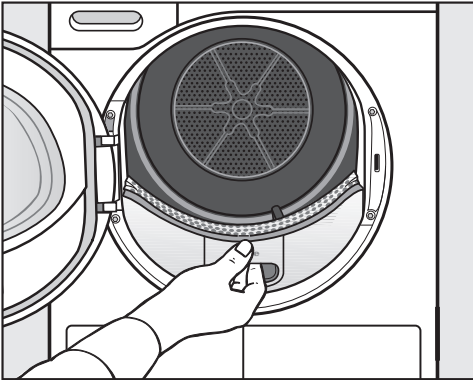

- Pull the upper fluff filter forwards to remove it.

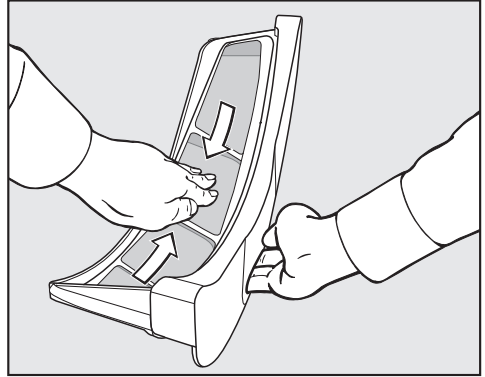

- Remove the fluff (see arrows) . . .

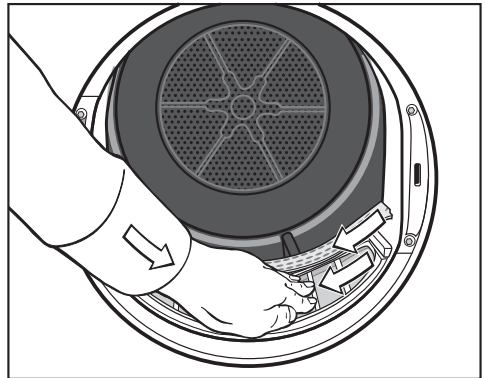

- . . . from the surfaces of all the fluff filters.
- . . . from the perforated laundry deflector.
- Push the upper fluff filter back into position until it clicks.
- Close the door.

If there is a great deal of compacted fluff carry out the following procedure.


Cleaning and care

Cleaning the fluff filters and air flow openings thoroughly


If the drying duration has become longer or the surface of the filters is visibly compacted with fluff, you should carry out the following cleaning procedure.

⚠ If using a fragrance flacon make sure you remove it beforehand.


- Pull the upper fluff filter forwards to remove it.

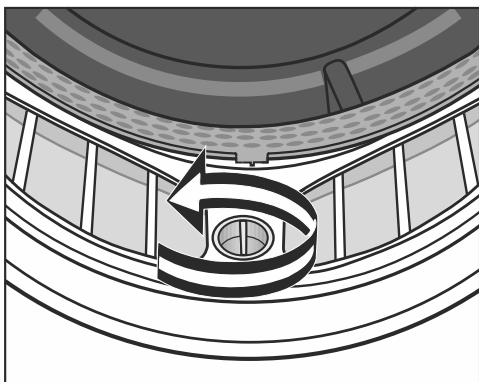

- Turn the yellow dial on the lower fluff filter in the direction of the arrow (until you hear it click).

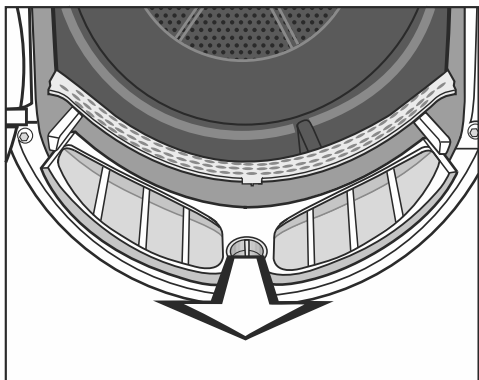

- Hold the dial and pull the fluff filter forwards to remove it.

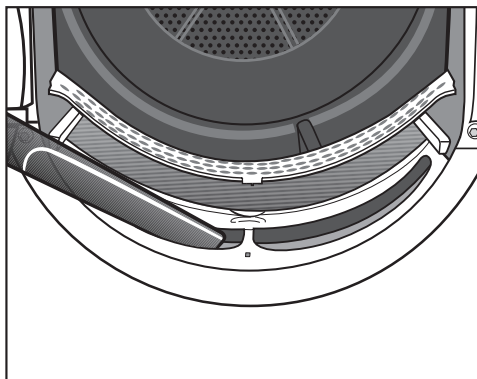

- Use a vacuum cleaner with a long crevice nozzle attached to remove any visible fluff from the upper air flow openings.

Cleaning the fluff filters with water

- Flush the fluff filters through with hot running water.
- Shake the fluff filters thoroughly and then dry them carefully.

⚠ Ensure the filters are dry before replacing them. Wet filters could cause operational faults.


- Push the lower fluff filter in completely and lock it with the yellow dial.
- Push the upper fluff filter in completely.
- Close the door.

Plinth filter

Only clean the plinth filter when *Clean out airways* lights up.


To delete *Clean out airways*: Switch the dryer off and back on again / confirm OK.

Removing the plinth filter

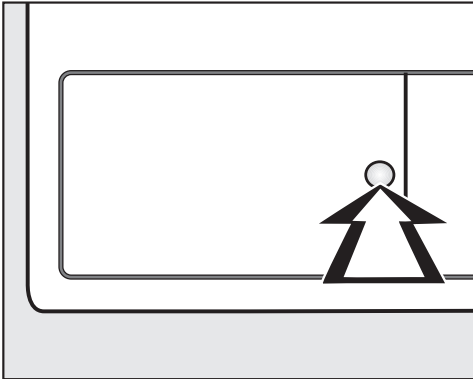

- Press the round, indented area on the heat exchanger access panel to open it.


The panel will spring open.

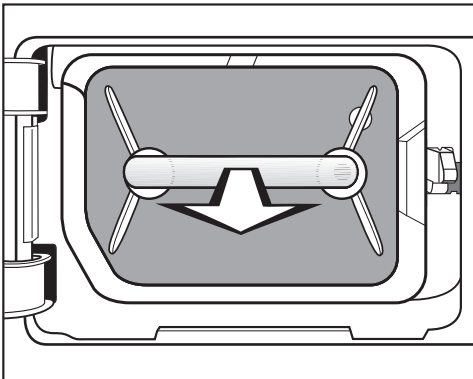


- Pull the plinth filter out by the handle.

Removing the plinth filter will cause the right hand guide pin in the dryer to come out. This pin ensures that the heat exchanger access panel can only be closed if the plinth filter is inserted the right way round.

Cleaning the plinth filter

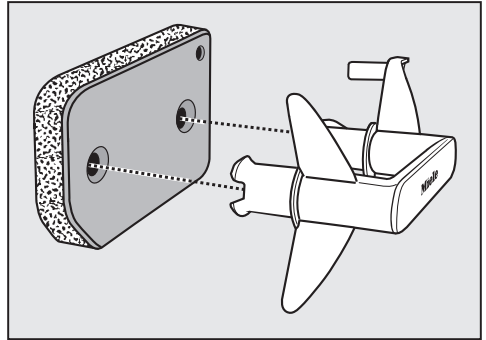


- Pull the handle out of the plinth filter.
- Clean the filter thoroughly under running water.
- Squeeze the plinth filter thoroughly.

 The plinth filter must not be replaced dripping wet as this can cause a fault.

- Use a damp cloth to remove any fluff from the handle.

Cleaning and care

Cleaning the plinth filter panel

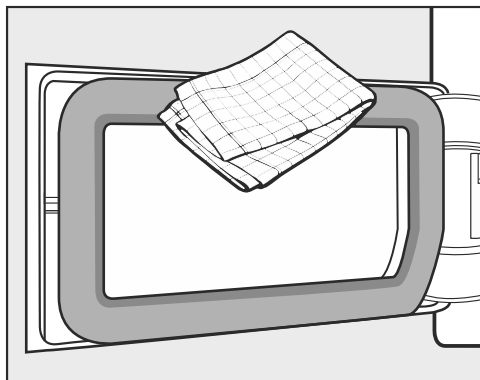

- Use a damp cloth to remove any fluff. Make sure that you do not damage the rubber seal when doing this.
- Check whether the cooling fins are blocked with fluff (as follows).


Checking the condenser unit

⚠ Danger of injury. Do not touch the cooling fins. You could cut yourself.

- Look to see if fluff has accumulated.


If there is visible soiling:

⚠ Clean using a vacuum cleaner with a dusting brush attached. Carefully pass the vacuum cleaner brush over the heat exchanger cooling fins without applying any pressure. Otherwise the cooling fins could be bent out of shape or become damaged.

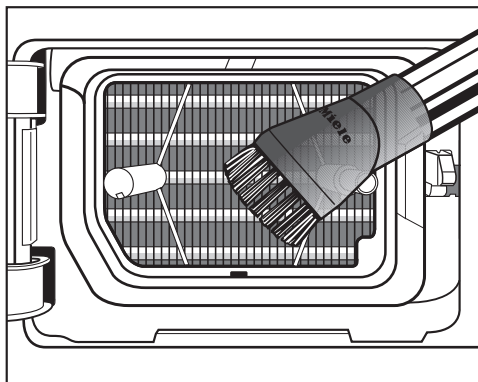


- Carefully vacuum up any visible fluff or soiling.

Replacing the plinth filter

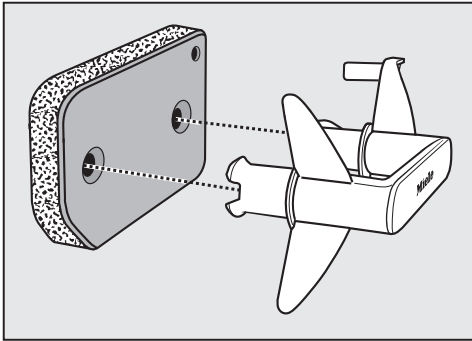

- Fit the filter back on the handle. Make sure it is the correct way round.


To ensure that the filter is positioned correctly in the front of the heat exchanger unit:

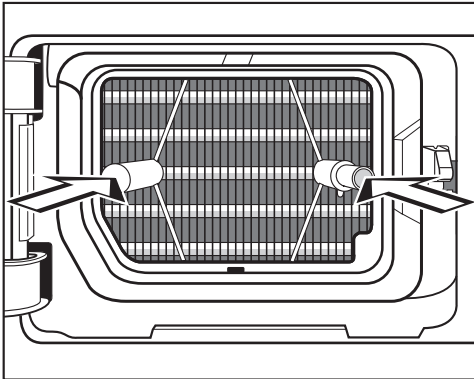

- First insert the handle with the plinth filter attached over the two guide pins.
- The word Miele on the handle must be the correct way up.
- Push the plinth filter in completely.

The act of pushing in the plinth filter will also push in the right hand guide pin.

- Close the heat exchanger access panel.

 The dryer can only be operated with the plinth filter fitted correctly and the heat exchanger access panel closed. The access panel must be closed correctly to ensure that water cannot leak from the condenser system and to ensure that the dryer functions efficiently.


Cleaning and care

Tumble dryer

⚠ Disconnect the tumble dryer from the mains electricity supply.

⚠ Do not use solvents, abrasive cleaners, glass cleaners or all-purpose cleaners.
These could damage plastic surfaces and other parts.


- Clean the tumble dryer with a slightly damp cloth and a mild non-abrasive cleaning agent or a solution of washing-up liquid and water.

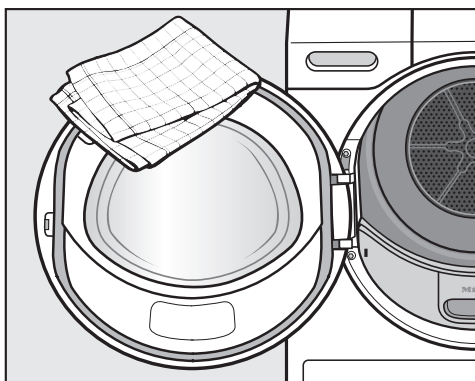

- Clean the seal around the inside of the door with a damp cloth.
- Dry all parts with a soft cloth.
- The drum and other stainless steel parts can be cleaned with a suitable proprietary stainless steel cleaner following the manufacturer's instructions.


Fragrance flacon

Using a fragrance flacon (optional accessory) will add a pleasant fragrance to your laundry.

 Before using a fragrance flacon, please read "Warning and safety instructions - Using a fragrance flacon (optional accessory)".

Inserting a fragrance flacon


Only hold the fragrance flacon as illustrated. Do not hold it at an angle or tip it as the fragrance will leak out of the flacon.

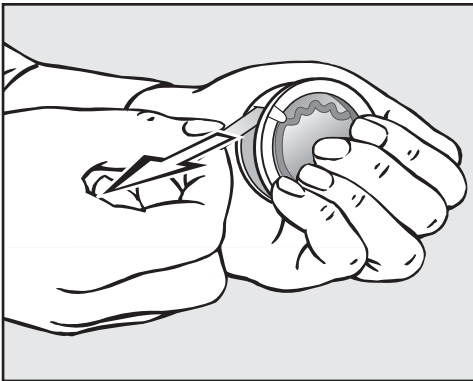


- Hold the flacon securely to prevent opening it by mistake.
- Pull off the protective seal.
- Open the door of the tumble dryer.

The fragrance flacon is inserted in the upper fluff filter in the opening on the right hand side beside the grip.

If you are not using a fragrance flacon: the cover must always remain closed (push the cover down completely with the tab).

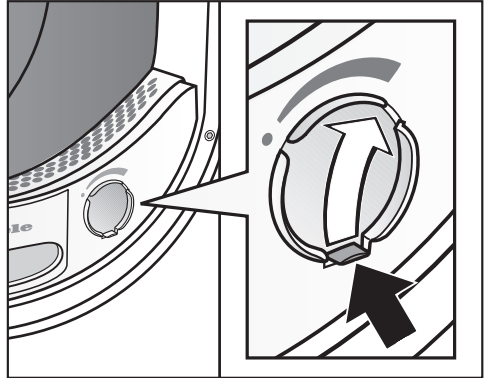


- Open the cover using the tab until the tab is at the top right hand side as shown.

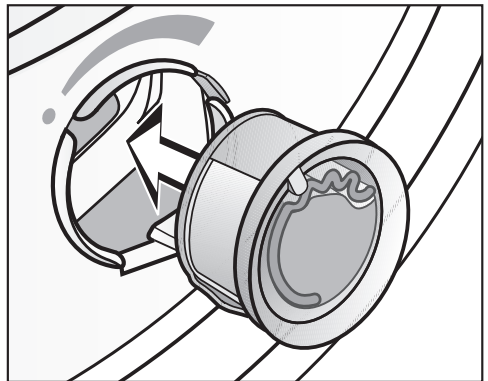


- Insert the flacon in the opening as far as it will go.


Fragrance flacon

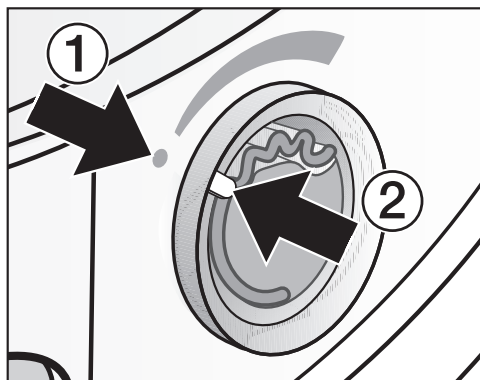

Markers ① and ② must line up with one another.

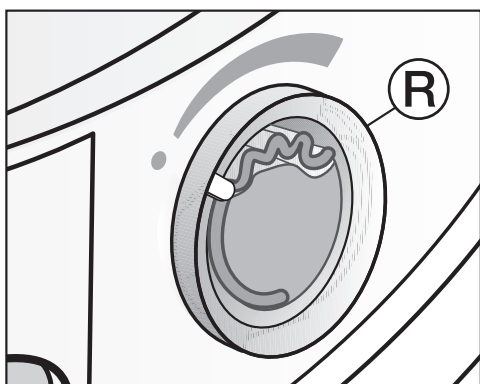

- Turn the outer ring **R** clockwise a little.

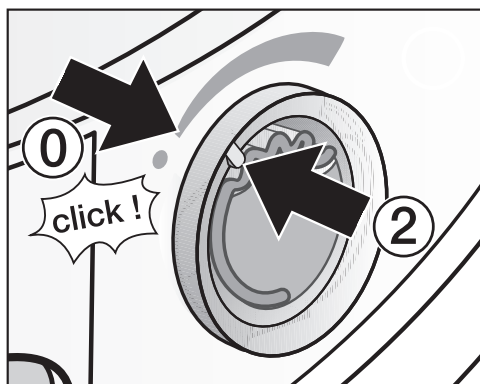


- You will feel a slight resistance and hear a soft click.

Marker ② must be in position ①: this is the position at which you can feel a resistance.

Before drying

You can select the intensity of the fragrance.

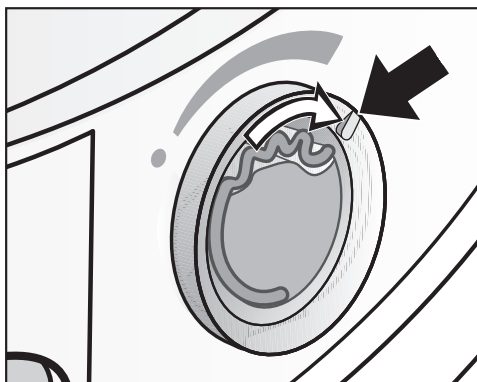


- Turn the outer ring clockwise: the further you open the flacon, the more intense the fragrance.

Damp laundry and longer drying durations with sufficient heat transfer are needed for the fragrance to be released into the laundry effectively. The fragrance will also be noticeable in the room air during the process. Fragrance is not released when using the *Cool air* programme.

After drying

To avoid the fragrance escaping needlessly:

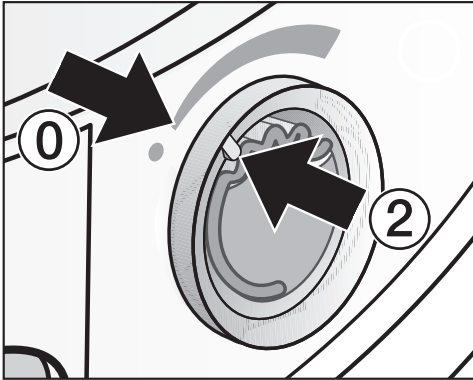


- Turn the outer ring anti-clockwise until marker ② is in position ①.
- You will feel a slight resistance.


If you want to dry laundry without adding fragrance occasionally: remove the fragrance flacon and store it in its original packaging until you want to use it again. See the following section.

Replacing the fragrance flacon

When the fragrance is no longer sufficiently intense:

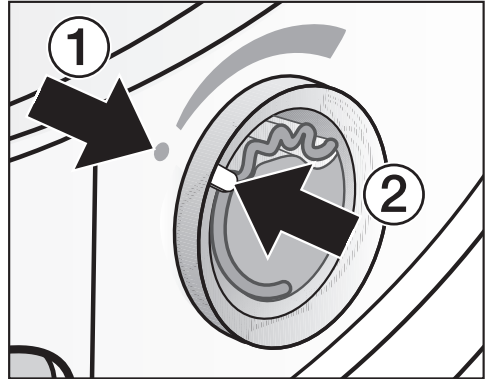


- Turn the outer ring anti-clockwise until markers ① and ② line up.

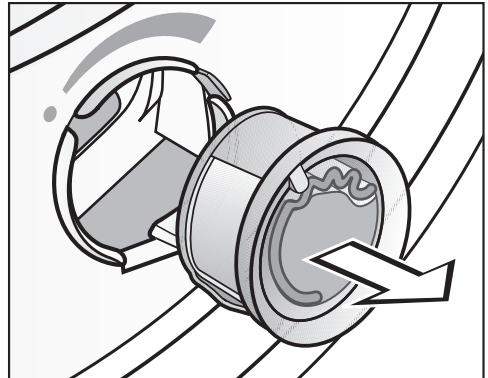

- Replace the fragrance flacon with a new one.


Fragrance flacons are available to order from Miele or online at www.miele-shop.com.

Fragrance flacon

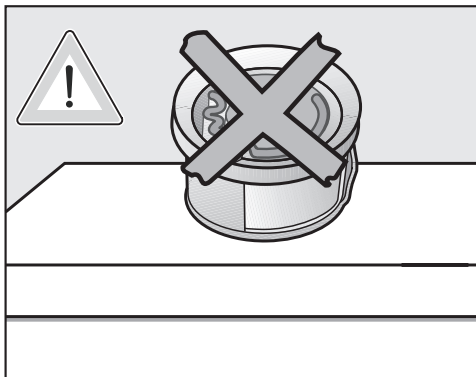

⚠ Never lay the fragrance flacon down on any surface as the fragrance will leak.

Only store the fragrance flacon in its original packaging

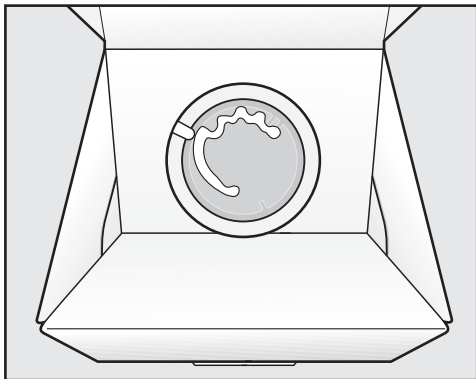

- when storing the fragrance flacon in its original packaging whilst you are not using it, e.g. whilst cleaning the tumble dryer: to prevent the fragrance leaking do not store the packaging upright on its edge or upside down.
- store in a cool, dry place
- store away from direct sunlight

- when purchasing new fragrance flacons: only remove the protective seal just before use

Cleaning the fluff filters


The intensity of the fragrance will be diminished if the fluff filters and the plinth filter are not cleaned.

⚠ The fragrance filter must be removed before cleaning the fluff filter.



⚠ To prevent any fragrance leaking out of the flacon: when not in use, the fragrance flacon must only be stored in its original packaging as illustrated.

- Clean the fluff filters and the plinth filter: see "Cleaning and care".






With the help of the following notes minor faults in the performance of the appliance, some of which may result from incorrect operation, can be put right without contacting the Service Department.

 Repair work to electrical appliances must only be carried out by a suitably qualified person in strict accordance with current local and national safety regulations. Repairs and other work by unqualified persons could be dangerous. The manufacturer cannot be held liable for unauthorised work.

Messages in the display

Problem	Cause and remedy
Code 000 lights up after switching on	Access via a code has been activated. ■ See "Settings menu, Code".
 Adjust the load The drum is empty or the laundry is too dry. lights up after a programme is cancelled	This is not a fault. In some programmes, if the drum has been underloaded or is empty, the programme will be cancelled. This can also happen if the items are already dry. ■ Open and close the door to resume drying. ■ Dry individual items using the <i>Warm air</i> timed drying programme.
 Technical fault F If restart is unsuccessful call Service. lights up after a programme is cancelled	No obvious cause. ■ Switch the dryer off and then on again. ■ Start a programme. If the programme is cancelled again and an error message appears, there is a fault. Contact the Miele Service Department.

Problem solving guide

Problem	Cause and remedy
<p> Information Clean out airways lights up at the end of a programme</p>	<p>There is a build-up of fluff in the airways.</p> <ul style="list-style-type: none"> ■ Clean the fluff filters. ■ Clean the plinth filter. <p>See "Cleaning and care".</p> <p>To switch off the message:</p> <ul style="list-style-type: none"> ■ Confirm with OK.
<p> Clean out airways Clean the fluff filter and check the airways. lights up after a programme is cancelled</p>	<p>An excessive amount of fluff has built up.</p> <ul style="list-style-type: none"> ■ Clean the fluff filters. ■ Clean the plinth filter. <p>Clean the airways:</p> <ul style="list-style-type: none"> ■ clean the area underneath the plinth filter ■ clean the heat exchanger. <p>To switch off the messages:</p> <ul style="list-style-type: none"> ■ Switch the dryer off and back on again.
<p> Empty the container Empty the container or check the drain hose. lights up after a programme is cancelled</p>	<p>The condensed water container is full or there is kink in the drain hose.</p> <ul style="list-style-type: none"> ■ Empty the container. ■ Check the drain hose. <p>To switch off the message:</p> <ul style="list-style-type: none"> ■ Open and close the door while the dryer is switched on or switch the dryer off and back on again.
<p> Information Fill condensate container</p>	<p>This is to remind you that water is taken from the condensed water container when the <i>Steam smoothing</i> programme is being used.</p> <p>The condensed water container must be filled with water to at least the -min- marker.</p> <ul style="list-style-type: none"> ■ Confirm with OK.
<p> Information Please open and close the door</p>	<p>This is to remind you to load the laundry when the <i>Steam smoothing</i> programme is selected.</p> <ul style="list-style-type: none"> ■ Load the laundry in the drum.

Problem solving guide

Problem	Cause and remedy
Comfort cooling	<p>The programme has finished but the laundry has not yet cooled down.</p> <ul style="list-style-type: none">■ Either remove the laundry and spread it out to cool down or leave it in the tumble dryer to cool down during the cooling phase.

Problem solving guide

Unsatisfactory drying results

Problem	Cause and remedy
The laundry is not sufficiently dry	<p>The load consisted of different types of fabric.</p> <ul style="list-style-type: none">■ Finish drying using the <i>Warm air</i> timed drying programme.■ Select a different programme next time. <p>Tip: You can alter the residual moisture level for some programmes. See "Settings menu".</p>
Laundry or feather filled pillows smell after drying	<p>The laundry was washed with insufficient detergent Feathers are a natural product and this is quite normal.</p> <ul style="list-style-type: none">■ Laundry: use sufficient detergent next time.■ Pillows: take out of the tumble dryer and air them.■ Use a fragrance flacon (available as an optional accessory) for your favourite fragrance.
Items made of synthetic fibres are charged with static electricity after drying	<p>Synthetic fibres tend to attract static charge.</p> <ul style="list-style-type: none">■ Static charge can be reduced by adding a fabric conditioner to the final rinse in the washing programme.
There is a build-up of fluff	<p>Fluff is principally the result of friction when garments are being worn and to some extent when they are being washed. Machine drying hardly causes any fluff to form.</p> <p>Fluff is collected by the fluff filters and the plinth filter and can be removed easily.</p> <ul style="list-style-type: none">■ See "Cleaning and care".

Other problems


Problem	Cause and remedy
The drying process goes on too long or even switches off *	The room in which the dryer is located is too warm. ■ Ventilate the room thoroughly.
	Detergent residues, hair and fine fluff can clog the filters. ■ Clean the fluff filters and the plinth filter. ■ Remove any visible fluff behind the panel in the heat exchanger cavity (see "Cleaning and care - Plinth filter").
	The cool air intake (bottom right grille) is blocked. ■ Move any objects, such as a laundry basket, away from the dryer.
	The fluff filters and the plinth filter were wet when replaced. ■ The fluff filters and the plinth filter must be dry.
	The laundry is too damp. ■ Spin using a higher spin speed in the washing machine.
	The tumble dryer has been overloaded ■ Do not exceed the maximum load for the programme selected.
	Metal zips have prevented the dryer from registering the correct moisture level. ■ Open the zips next time. ■ If the problem recurs, dry these items using the <i>Warm air</i> timed drying programme.
	* Before starting another programme: ■ Switch the dryer off and then on again.
There are humming noises	This is not a fault. The compressor (heat pump) is operating or you have selected the <i>Steam smoothing</i> programme. ■ No action is required. These noises are quite normal and can be heard when the compressor or the condensed water pump is operating.

Problem solving guide


Problem	Cause and remedy
A programme does not start	<p>No obvious cause.</p> <ul style="list-style-type: none"> ■ Connect the tumble dryer to the mains ■ Turn on the tumble dryer ■ Close the door ■ Check whether the mains fuse has tripped
	<p>Has there been a power cut? When power is restored any previously running programme will restart automatically.</p>
The display is dark and the <i>Start/Stop</i> button is flashing slowly	<p>The dryer is in standby mode. This is quite normal and does not indicate a fault. The drum will turn at intervals in the anti-crease phase.</p> <ul style="list-style-type: none"> ■ See "Settings menu, Display switch-off".
The dryer is switched off at the end of the programme	<p>The dryer switched off automatically. This is quite normal and does not indicate a fault.</p> <ul style="list-style-type: none"> ■ See "Settings menu, Appliance switch-off".
The interior drum lighting does not come on	<p>The drum lighting will switch off automatically when the door is closed. ... after a few minutes when the door is open (to save energy). If the dryer is switched on, the drum lighting will come on when the door is opened.</p>
Insufficient spray for Steam smoothing	<p>The filter in the condensed water container is blocked.</p> <ul style="list-style-type: none"> ■ Clean the filter in the condensed water container (optional accessory): see end of this section.
	<p>The spray jet in the door opening is heavily calcified.</p> <ul style="list-style-type: none"> ■ Replace the spray jet (optional accessory): see end of this section. ■ Only use condensed water. Do not use tap water.

Fluff filter in the condensed water container

If you are experiencing problems running the *Steam smoothing* programme, the fluff filter at the end of the hose which is connected to the rubber seal in the condensed water container could be blocked.

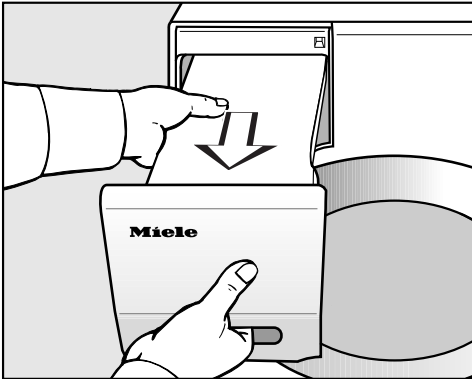


- Pull out the condensed water container.

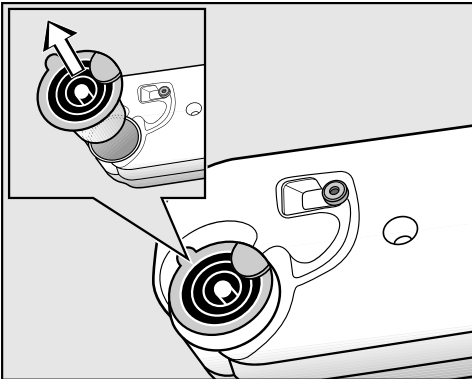

- Remove the spout by holding the side lug and pulling upwards.

To avoid detaching the hose be careful not to tug on it.

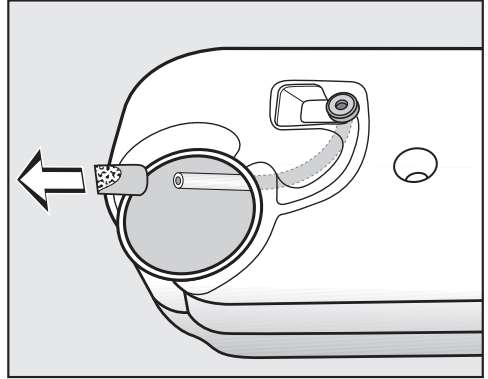

- Guide the end of the hose through the opening and hold it securely with one hand.
- Use your other hand to pull the fluff filter off the hose.
- Rinse the fluff filter with a jet of water until all the fluff has been removed.
- Refit the cleaned fluff filter onto the hose.
- Now feed the hose with its fluff filter attached into the condensed water container.
- Replace the spout in the condensed water container. Make sure it is the correct way round (see the illustration).

Problem solving guide

Steam smoothing spray jet

⚠ Limescale deposits will impair the spray jet.

In this case, the spray jet must be removed and replaced with a new one (see "Optional accessories").


The spray jet can only be replaced using the special tool supplied with the new spray jet.

⚠ Do not use any other tool as this would damage the spray jet or the dryer.

⚠ Steam smoothing must never be used without the spray jet fitted and screwed in correctly.

- Open the door of the tumble dryer.

The spray jet is located in the top left of the door opening.

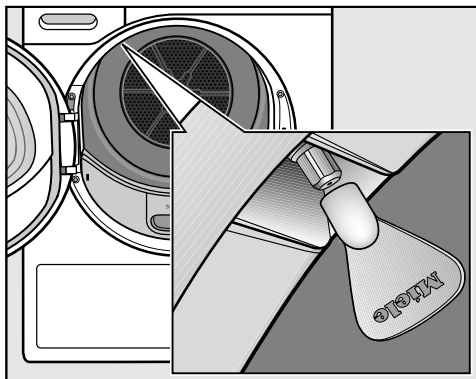


- Attach the tool to the spray jet.
- Turn the tool anti-clockwise to unscrew the spray jet.
- Insert the new spray jet in the tool.
- Turn the tool clockwise to screw the spray jet securely in position.

Repairs

In the event of any faults which you cannot remedy yourself, please contact your Miele Dealer or the Miele Service Department.

Contact details for Miele are given at the end of this booklet. N.B. A call-out fee will be charged for service visits where the problem could have been resolved as described in these instructions.

When contacting the Service Department, please quote the model and serial numbers both of which are given on the data plate (visible when the door is open).

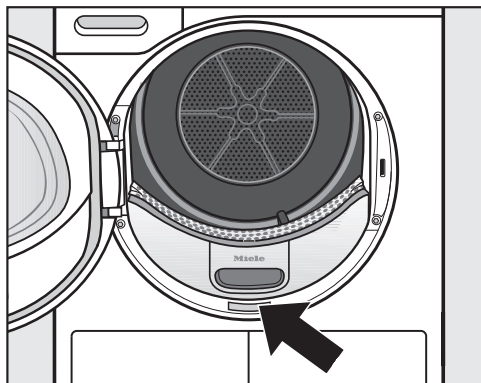

Please note that telephone calls may be monitored or recorded for training purposes.

Optional accessories

Optional accessories for this tumble dryer are available from Miele, your Miele dealer or via the internet at:

Dryer basket

The dryer basket is suspended in the drum and does not rotate with the drum. This enables items which must not be subjected to mechanical action to be dried or aired.

Fragrance flacon

A fragrance flacon can be used in your tumble dryer to add a pleasant fragrance to your laundry.

Guarantee: U.K.

In the U.K. the appliance is guaranteed for 2 years from the date of purchase.


However, you must activate your cover by calling 0330 160 6640 or registering online at www.miele.co.uk.

Guarantee: Other countries

For information on the appliance guarantee specific to your country please contact Miele. See end of this booklet for contact details.


Installation and connection

Front view

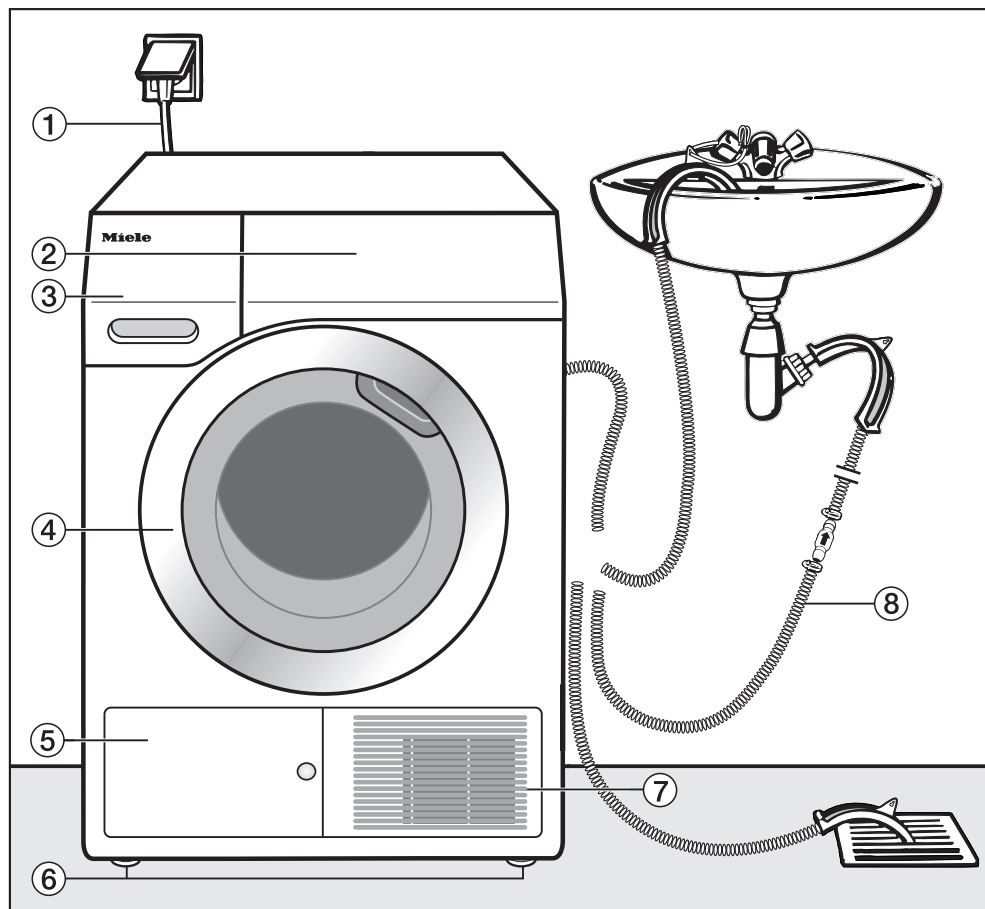

- | | |
|-----------------------------------------------------------------|-----------------------------------------------------------------------------------------|
| ① Mains connection cable | ⑤ Heat exchanger access panel
– do not open during drying |
| ② Control panel | ⑥ Four height adjustable screw feet |
| ③ Condensed water container
– empty after every drying cycle | ⑦ Cool air intake grille
– do not obstruct with a laundry
basket or other objects |
| ④ Door
– do not open during drying | ⑧ Hose for external drainage of
condensed water |

Rear view

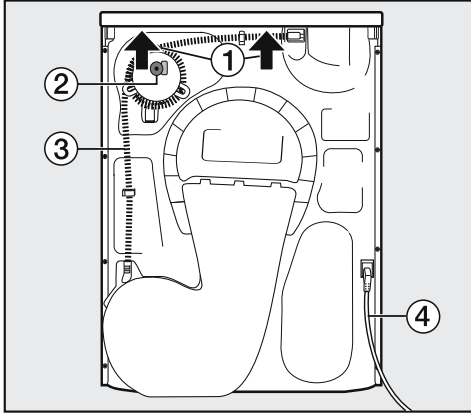

- ① Protruding lid for holding when moving the dryer (see arrows)
- ② Accessories for external drainage of condensed water: hose clip, adapter and hose holder
- ③ Hose for external drainage of condensed water
- ④ Mains connection cable



Transporting the dryer

To manoeuvre the dryer out of its packing case to its installation site, hold it by

- the front feet
- and the lid where it protrudes at the back of the appliance.

! Only transport the dryer as shown in the following illustrations.

! If transporting the dryer at an angle, only tip towards the left side.

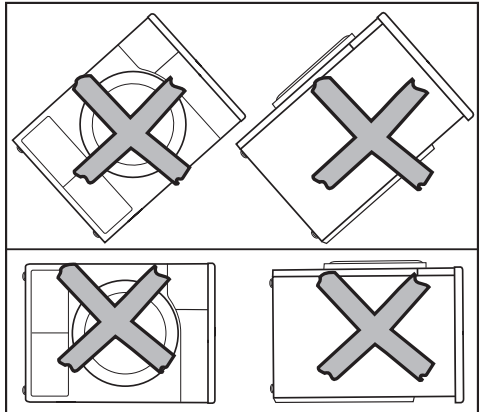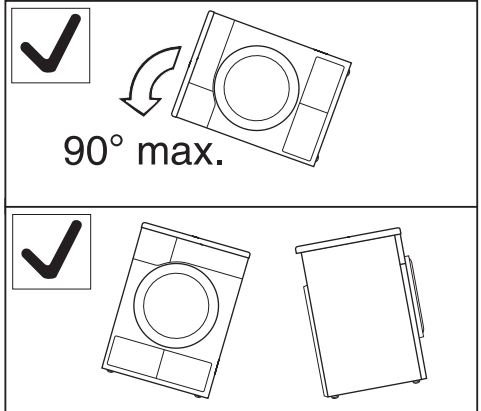


! If the tumble dryer has not been transported as described, then it must be left to stand for at least 1 hour before it is connected to the electricity supply. Otherwise the heat pump can be damaged.

Installation and connection


Installation

Levelling the dryer

⚠ Make sure the dryer door can be opened without hindrance after installation.

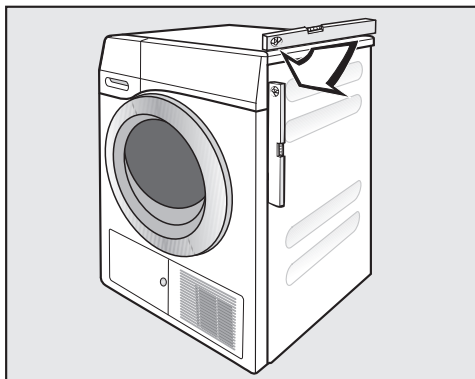

The appliance must stand perfectly level to ensure safe and proper operation.

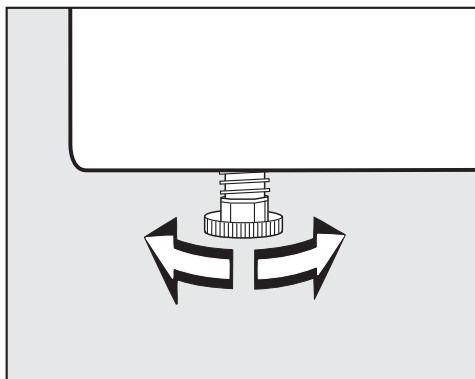

The screw feet can be adjusted to compensate for any unevenness in the floor.

Ventilation

⚠ The cool air intake at the front of the dryer must not be blocked or covered. This would hinder a sufficient intake of cool air for the heat exchanger.

⚠ Do not block the gap between the bottom of the tumble dryer and the floor with plinth facings, deep pile carpet etc. This would hinder a sufficient flow of air to the dryer.

Air which is taken in to cool the heat exchanger is then blown back out of the dryer and warms up the air in the room. It is therefore very important to ensure adequate ventilation, e.g. by opening a window. Otherwise drying durations may be longer (increased energy requirement).


Before moving the tumble dryer again (e.g. when moving house)

After each use a small quantity of condensed water will collect in the area of the pump. This water can run out if the tumble dryer is tipped up when it is being moved. Recommendation: run the *Warm air* programme for approximately 1 minute before moving the tumble dryer. Any remaining condensed water will then be fed into the condensed water container or out through the drain hose.

Additional installation requirements

Pushing the dryer under a worktop

This tumble dryer is suitable for pushing under a worktop.

 It is very important to avoid a build-up of heat. The warm air which is expelled from the dryer must be able to dissipate. Warm air which cannot dissipate could cause a fault.

- The appliance lid cannot be removed.
- The electrical socket must be located in an accessible position near the appliance.
- Drying durations may increase slightly.

Optional accessories

– Washer-dryer stack

The tumble dryer can be combined with a Miele washing machine in a washer-dryer stack. The appropriate Miele washer-dryer stacking kit is required.

– Plinth

The tumble dryer can be fitted on a plinth with drawer (please note the plinth may not be available in all countries).

Installation and connection

External condensed water outlet

Notes

When drying is in progress, condensed water is pumped into the condensed water container through the drain hose which is located at the back of the dryer.


The condensed water can also be drained away via the drain hose so that the condensed water container does not have to be emptied.

Drain hose length: 1.60 m
Maximum delivery head: 1.50 m
Maximum drain hose length: 4.00 m

The following optional accessories are available:

- an extension hose,
- a non-return valve kit for connection to an external water outlet. The kit includes an extension hose.

Installation conditions requiring a non-return valve

 There is a risk of back-flow into the dryer if a non-return valve is not fitted.


Back-flow could damage the dryer and also the room in which it is located.

Certain installation conditions, such as those described below, require the fitting of a non-return valve.

Maximum delivery head with non-return valve fitted: 1.00 m

Installation conditions requiring the fitting of a non-return valve:

- Drainage into a sink or floor gully where the end of the hose is immersed in water.
- Connection to a sink drain outlet.
- Connection to a drainage system already in use by another appliance, e.g. a dishwasher or washing machine.



 The non-return valve has to be fitted with the arrow pointing in the direction of flow.
Otherwise water will not drain out of the appliance.

Arranging the drain hose

⚠ Do not pull on the drain hose and do not stretch it or allow it to become kinked.

This could damage the hose.

There will be a small amount of residual water left in the drain hose. Have a container ready to collect this.

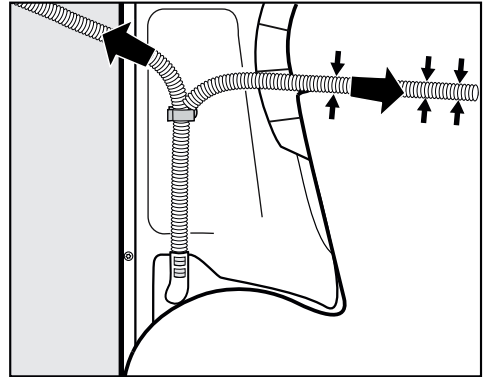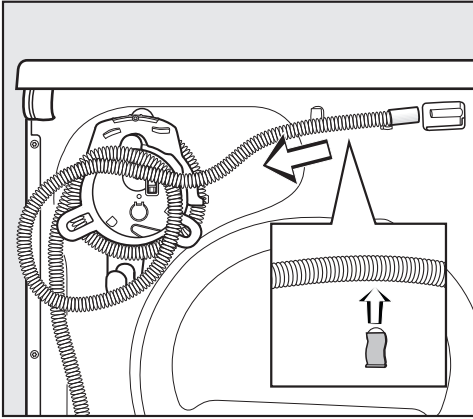

- Guide the hose to the right or left side of the dryer, as required.
 - If you are guiding it to the right you can fit the hose into the groove.
 - Leave the hose in the lower holder to prevent it from being kinked by mistake.


- Pull the drain hose off its connection.
- Unwind the hose and pull it carefully out of the holders.
- Allow any residual water to run into the container.

Installation and connection

Examples

– Drainage into a sink or floor gully

Use the hose holder to prevent the drain hose from becoming kinked.

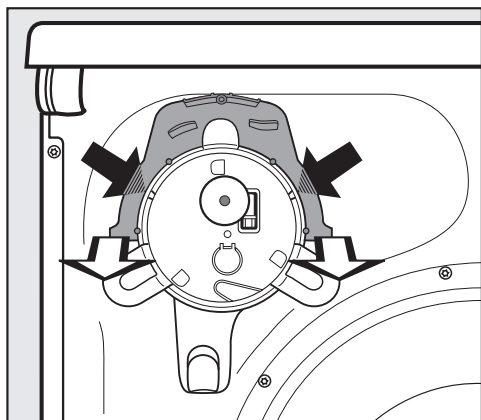

- Press the small catches on the left and right of the hose holder with your thumbs (black arrows) and ...
- ... pull the hose holder forwards to remove it (white arrows).*


⚠ If you want to drain the water off into a sink or basin, you will need to secure the hose carefully, e.g. by tying it to a tap, to make sure it cannot slip during use (see the drawing under "Installation and connection - Front view").

Overflowing water can cause damage.

- The non-return valve can be fitted in the end of the hose.


* You can refit the hose holder at a later stage if you decide that you no longer want to drain the condensed water externally.

Direct connection to a sink drain outlet

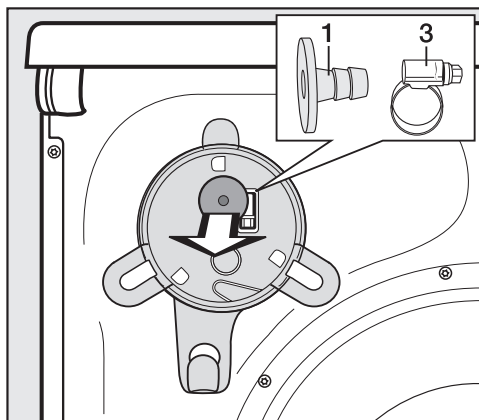

- Remove the following from the back of the dryer at the top: Adapter **1** and hose clip **3** behind it.
- Connect the drain hose as described below.

Installation and connection

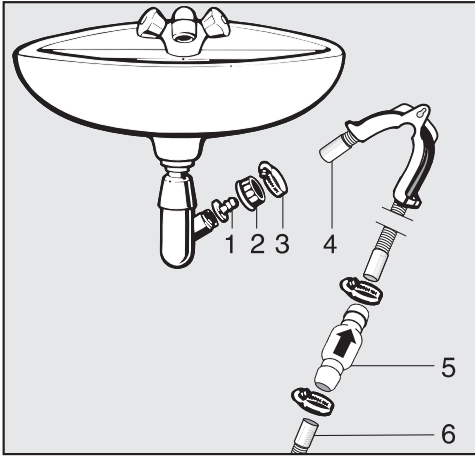

1. Adapter
2. Nut
3. Hose clip
4. End of the hose (secured with the hose holder)
5. Non-return valve
6. Tumble dryer drain hose

- Fit adapter **1** to the sink drain outlet using nut **2**.
The nut is usually fitted with a washer which must be removed.
- Attach the end of the hose **4** to adapter **1**.
- Use the hose holder.
- Use a screwdriver to tighten hose clip **3** up close to the nut.
- Fit non-return valve **5** to tumble dryer drain hose **6**.

Non-return valve **5** has to be fitted so that the arrow points in the direction of flow (i.e. towards the sink).

- Secure the non-return valve using hose clips.

Installation and connection

Electrical connection U.K.

All electrical work should be carried out by a suitably qualified and competent person, in strict accordance with current national and local safety regulations (BS 7671 in the UK).

Ensure power is not supplied to the appliance until after installation work has been carried out.

The appliance is supplied with a mains cable with moulded plug ready for connection to a 230-240V mains supply.

Please ensure the connection data quoted on the data plate match the household mains supply.

Connection should be made via a suitable switched socket which is easily accessible after installation.

For extra safety it is advisable to protect the appliance with a suitable residual current device (RCD). Contact a qualified electrician for advice.

Do not connect via an extension lead. Extension leads do not guarantee the required safety of the appliance (e.g. danger of overheating).


Non-rewireable plugs BS 1363

The fuse cover must be refitted when changing the fuse, and if the fuse cover is lost, the plug must not be used until a suitable replacement is obtained. The colour of the correct replacement cover is that of the coloured insert in the base of the plug, or the colour that is embossed in words on the base of the plug (as applicable to the design of plug fitted).

Replacement fuses should be ASTA approved to BS 1362 and have the correct rating. Replacement fuses and fuse covers may be purchased from your local electrical supplier.


**WARNING: THIS APPLIANCE
MUST BE EARTHED**

Consumption data

	Load ¹ kg	Final spin speed in a domestic washing machine rpm	Residual moisture %	Energy kWh	Duration min
Cottons  ²	9.0	1000	60	1.63	206
	4.5	1000	60	0.88	121
Cottons Normal	9.0	1200	53	1.45	186
	9.0	1400	50	1.40	177
	9.0	1600	44	1.25	158
Cottons Normal + Gentle tumble + Freshen up	9.0	1000	60	1.79	195
	2.0	1000	60	0.66	85
Cottons Hand iron ∆∆	9.0	1000	60	1.29	164
	9.0	1200	53	1.15	144
	9.0	1400	50	1.05	134
	9.0	1600	44	0.90	114
Minimum iron Normal + Gentle tumble + Freshen up	4.0	1200	40	0.48	64
	4.0	1200	40	0.50	65
	4.0	1200	40	0.65	85
Minimum iron Hand iron ∆∆	4.0	1200	40	0.40	56
Automatic plus Normal	5.0	900	50	1.05	105
Shirts Normal	2.0	600	60	0.49	62
Delicates Normal	2.5	800	50	0.50	65
Sportswear Normal	3.0	800	50	0.60	75
Outerwear Normal	2.5	800	50	0.65	85
Denim Normal	3.0	900	60	0.95	120
Express Normal	4.0	1000	60	0.95	95
¹ Weight of dry laundry					
² Test programme in accordance with Regulation 392/2012/EU for energy labelling, measured in accordance with EN 61121					
All data was calculated using EN 61121 unless otherwise stated.					
Power consumption when switched off				0.10 W	
Power consumption when not switched off				2.50 W	

Note for test institutes:

For testing in accordance with EN 61121, before testing, dry a 3 kg load of cotton laundry with 70% residual moisture as per the above standard using the *Cottons Normal* programme without any options selected.

With the *Cottons*  programme setting, drain the condensed water externally through the drain hose.

Consumption data can vary from the nominal values given above depending on the size of the load, type of fabric, residual moisture level after spinning, fluctuations in the electricity supply and any options selected.

The consumption data shown in the **EcoFeedback** display can vary from the consumption data quoted here. The variations arise from the way the data is measured in the dryer. For example, the programme duration may vary depending on the residual moisture present in the laundry and the type of fabric which will affect the energy requirement.

Technical data

Height	850 mm
Width	596 mm
Depth	636 mm
Depth with door open	1054 mm
Suitable for pushing under a worktop	Yes
Suitable for stacking	Yes
Weight	approx. 62 kg
Drum volume	120 litres
Load size	9.0 kg (weight of dry laundry)
Capacity of condensed water container	4.8 l
Hose length	1.60 m
Maximum delivery head	1.50 m
Maximum drain hose length	4.00 m
Length of connection cable	2.00 m
Voltage	See data plate
Connected load	See data plate
Fuse rating	See data plate
Test certificates awarded	See data plate
Energy consumption	See "Consumption data"
LEDs	Class 1

Calling up settings

You can use the Settings menu to alter the dryer's electronics to suit different requirements. Settings can be altered at any time.


Opening the Settings menu

- Switch the dryer on.

The programme selector must not be at the *Further programmes/Favourites/Mixed items* positions.

- Touch the ∨ and ∧ sensors at the same time.

The following will light up in the display:

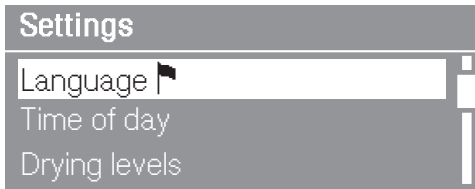

You are now in the Settings menu.

Selecting a setting

- Touch the ∨ or ∧ sensor until the setting you want appears in the display.
 - The ∨ sensor scrolls down the list.
 - The ∧ sensor scrolls up the list.
- Confirm by touching the OK sensor.

Changing a setting

- Touching the ∨ or ∧ sensor will call up the different options for the setting.

For example, you can

- select a value. If the option is marked with a ✓, it is active,
- change a bar chart,
- change numbers.


- Confirm by touching the OK sensor.

Closing the Settings menu

- Touch the ∨ or ∧ sensor repeatedly until *Back* ↩ appears in the display.
- Confirm by touching the OK sensor.

Language

The display can be set to appear in one of several different languages.

The flag  after the word Language acts as a guide to prevent a language which will not be understood from being set.

Settings menu

Time of day

First select either a 24 hour or 12 hour clock. You can then set the current time of day.

Clock format

- 24 h clock
- 12 h clock

■ Select the clock format you want with the ∇ or \wedge sensor and confirm with the OK sensor.

Set the time of day

- Use the ∇ or \wedge sensor to enter the hour and confirm your entry with the OK sensor.
- Use the ∇ or \wedge sensor to enter the minutes and confirm your entry with the OK sensor.

Drying levels

You can alter the drying levels for the *Cottons*, *Minimum iron* and *Automatic plus* programmes.

The setting selected is shown in a bar chart.

Factory default: a medium setting

- Damper ■■■■■■□
The programme duration is shorter.
- Drier ■■■■■■■■
The programme duration is longer.

Exception:

The *Cottons* □ programme will remain unchanged.

Extended cool down

The automatic cooling down phase which takes place before the end of a programme can be extended for all programmes with selectable drying levels in 2 minute increments up to 18 minutes. This makes the garments easier to handle.

Options

- 00 minutes (factory default)
- 02, 04, 06 ... 18 minutes

Airways indicator

Fluff should be removed after drying. The *Clean out airways* message will remind you to clean the filters when a certain amount of fluff has collected in them. You can decide at what level of fluff this reminder should be given.

You will have an idea of how often this should be done after a few drying programmes.

Options

- Off
Clean out airways does not appear. In cases of a very severe blockage in the airways, the programme will be cancelled and the *Clean out airways* message will appear regardless of this option.
- Heavy
Clean out airways only appears when there is a heavy build-up of fluff.
- Normal (factory default)
- Light
Clean out airways appears when there is only a small build-up of fluff.

Buzzer volume

The buzzer can be set to be louder or quieter.

The setting selected is shown in a bar chart.

Factory default: a medium setting.

– Quieter ■■■■■■

– Louder ■■■■■■

You will hear the buzzer change as the setting is selected.

Keypad tone

When this function is activated a tone will sound each time a button is pressed.

Options

- On
- Off (factory default)

Conductivity

⚠ The *Low* option should only be selected if the residual moisture reading in your laundry is incorrect due to extremely soft water.

Options

- Normal (factory default)
- Low

Conditions

The *Low* option should only be set if the water used for washing the laundry is extremely soft with a conductivity reading (electrical conductivity) of less

than 150 μS . Contact your local water authority for the conductivity level of your mains water supply.

⚠ Only activate the *Low* option for the conditions described above. Otherwise drying results can be unsatisfactory.

Total consumption

You can display the total consumption.

Options

- Display
The total consumption is displayed in kWh.
- Reset function
The total consumption to date will be deleted with the *Reset* option.


Settings menu

Code

The code prevents your dryer being used without your knowledge.

Options

- Activate
The code is 250 and can be activated.
When the code has been activated, you have to enter the code after switching the dryer on. Otherwise the dryer cannot be operated.
- Deactivate
For using the dryer without entering the code. This only appears if the code has been activated previously.
- Change
You can enter a code of your own.

 Important. Make a note of your new code. If you forget the code, the dryer will need to be unlocked by the Miele Service Department.

Display brightness

The brightness of the display can be altered.

The setting selected is shown in a bar chart.

Factory default: a medium setting.

- Darker ■■■■■■□
- Brighter ■■■■■■■■

You will see the brightness change as the setting is selected.

Display switch-off

To save energy the display and buttons will go out after 10 minutes and the *Start/Stop* button will flash slowly. You can alter this setting.

Options

- On (factory default)
The display will go out (after 10 minutes):
 - if a programme is not selected after the dryer has been switched on
 - during the current programme
 - after the end of a programme.
- On (not in current programme)
The display will go out (as described above) but will remain on while the programme is running.
- Off
The display will remain on (i.e. it will never go out).

You can switch the display and buttons back on again by pressing any button.

Appliance switch-off

To save energy the dryer will switch off automatically after 15 minutes. You can lengthen or shorten the time.

The dryer will switch off automatically after 10, 15 or 20 minutes,

- if no further selection is made after switching the dryer on
- at the end of the anti-crease phase
- after a programme without an anti-crease phase has finished.

However, there is no automatic switch-off in the event of a fault.

Options

- after 10 minutes
- after 15 minutes (factory default)
- after 20 minutes.

Memory

The electronics will store in memory a drying level or options for a selected programme. The duration selected for a timed drying programme will also be stored in memory. These settings will then appear the next time the programme is chosen.

Options

- Off (factory default)
- On

Exception:

The *Cottons*  programme will remain unchanged.

Anti-crease

If you have pressed the *Anti-crease* button:
the drum will continue to rotate in a special anti-crease rhythm for a maximum of 2 hours after the end of the drying process. This helps prevent creasing if laundry is not going to be removed immediately. You can reduce the duration of the anti-crease phase.

Options

- 1 hr
- 2 hr (factory default)

Delay start

With the delay start function you can delay the time at which the programme should start (see "Delay start").
You can choose whether you want the display to prompt you to enter the time at which the programme should begin (Start at) or the time at which it should end (Finish at).

Options

- Start at (factory default)
- Finish at

United Kingdom

Miele Co. Ltd.
Fairacres, Marcham Road
Abingdon, Oxon, OX14 1TW
Customer Contact Centre Tel: 0330 160 6600
E-mail: mielecare@miele.co.uk
Internet: www.miele.co.uk

Australia

Miele Australia Pty. Ltd.
ACN 005 635 398
ABN 96 005 635 398
1 Gilbert Park Drive, Knoxfield, VIC 3180
Tel: 1300 464 353
Internet: www.miele.com.au

China

Miele (Shanghai) Trading Ltd.
1-3 Floor, No. 82 Shi Men Yi Road
Jing' an District
200040 Shanghai, PRC
Tel: +86 21 6157 3500, Fax: +86 21 6157 3511
E-mail: info@miele.cn, Internet: www.miele.cn

Miele (Hong Kong) Limited

41/F - 4101, Manhattan Place
23 Wang Tai Road
Kowloon Bay, Hong Kong
Tel: (852) 2610 1025, Fax: (852) 3579 1404
Email: customerservices@miele.com.hk
Website: www.miele.hk

India

Miele India Pvt. Ltd.
Ground Floor, Copia Corporate Suites
Plot No. 9, Jasola, New Delhi - 110025
Tel: 011-46 900 000, Fax: 011-46 900 001
E-mail: customercare@miele.in, Internet: www.miele.in

Ireland

Miele Ireland Ltd.
2024 Bianconi Avenue
Citywest Business Campus, Dublin 24
Tel: (01) 461 07 10, Fax: (01) 461 07 97
E-Mail: info@miele.ie, Internet: www.miele.ie

Manufacturer: Miele & Cie. KG

Carl-Miele-Straße 29, 33332 Gütersloh, Germany

Miele

Malaysia

Miele Sdn Bhd
Suite 12-2, Level 12
Menara Sapura Kencana Petroleum
Solaris Dutamas No. 1, Jalan Dutamas 1
50480 Kuala Lumpur, Malaysia
Phone: +603-6209-0288
Fax: +603-6205-3768

New Zealand

Miele New Zealand Limited
IRD 98 463 631
Level 2, 10 College Hill
Freemans Bay, Auckland 1011, NZ
Tel: 0800 464 353
Internet: www.miele.co.nz

Singapore

Miele Pte. Ltd.
163 Penang Road
04 - 03 Winsland House II
Singapore 238463
Tel: +65 6735 1191, Fax: +65 6735 1161
E-Mail: info@miele.com.sg
Internet: www.miele.sg

South Africa

Miele (Pty) Ltd
63 Peter Place, Bryanston 2194
P.O. Box 69434, Bryanston 2021
Tel: (011) 875 9000, Fax: (011) 875 9035
E-mail: info@miele.co.za
Internet: www.miele.co.za

United Arab Emirates

Miele Appliances Ltd.
Gold & Diamond Park
Office No. 217-6, Sheikh Zayed Road
P.O. Box 11 47 82 - Dubai
Tel: +971 4 3044 999
Fax: +971 4 3418 852
800-MIELE (64353)
E-Mail: info@miele.ae
Internet: www.miele.ae

TKR 850 WP



en-GB

M.-Nr. 10 275 840 / 01