



Contents

Safety information	4
What you need to know about the safety instructions	4
Important safety symbols	4
Important safety precautions	[
Instructions about the WEEE	15
Installation	16
What's included	16
Installation requirements	18
Step-by-step installation	20
Before you start	28
Initial settings	28
Laundry guidelines	28
Detergent drawer guidelines	31
Operations	34
Control panel	34
Simple steps to start	36
Cycle overview	38
Special features	42
Settings	44
SmartThings	45





45



Maintenance	50
Eco drum clean	50
Smart Check (19)	51
Using Dry course	52
Emergency drain	53
Cleaning	54
Mesh filter	55
Recovery from freezing	58
Care against an extended time of disuse	58
Troubleshooting	59
Checkpoints	59
Information codes	62
Specifications	66
Fabric care chart	66
Protecting the environment	67
Specification sheet	68

•







Safety information

Congratulations on your new Samsung washing machine. This manual contains important information on the installation, use and care of your appliance. Please take some time to read this manual to take full advantage of your washing machine's many benefits and features.

What you need to know about the safety instructions

Please read this manual thoroughly to ensure that you know how to safely and efficiently operate the extensive features and functions of your new appliance. Please store the manual in a safe location close to the appliance for future reference. Use this appliance only for its intended purpose as described in this instruction manual.

Warnings and Important Safety Instructions in this manual do not cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution and care when installing, maintaining and operating your washing machine. Because the following operating instructions cover various models, the characteristics of your washing machine may differ slightly from those described in this manual and not all warning signs may be applicable. If you have any questions or concerns, contact your nearest service centre or find help and information online at www.samsung.com.

Important safety symbols

What the icons and signs in this user manual mean:



Hazards or unsafe practices that may result in **severe personal injury**, **death and/or property damage**.

! CAUTION

Hazards or unsafe practices that may result in personal injury and/or property damage.

NOTE

Indicates that a risk of personal injury or material damage exists.

Read the instructions





These warning signs are here to prevent injury to yourself and others. Please follow them explicitly.

After reading this manual, store it in a safe place for future reference.

Read all instructions before using the appliance.

As with any equipment that uses electricity and moving parts, potential hazards exist. To safely operate this appliance, familiarize yourself with its operation and exercise care when using it.

Important safety precautions

↑ WARNING

To reduce the risk of fire, electric shock, or injury to persons when using your appliance, follow basic precautions, including the following:

- 1. This appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 2. For use in Europe: This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- **3.** Children should be supervised to ensure that they do not play with the appliance.
- **4.** If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.





Safety information

- **5.** The new hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused.
- **6.** For appliances with ventilation openings in the base, that a carpet must not obstruct the openings.
- **7.** For use in Europe: Children of less than 3 years should be kept away unless continuously supervised.
- **8. CAUTION:**In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.
- **9.** The tumble dryer is not to be used if industrial chemicals have been used for cleaning.
- **10.** The lint trap has to be cleaned frequently, if applicable.
- **11.** Lint must not to be allowed to accumulate around the tumble dryer. (not applicable for appliances intended to be vented to the exterior of the building)
- **12.** Adequate ventilation has to be provided to avoid the back flow of gases into the room from appliances burning other fuels, including open fires.
- **13.** Do not dry unwashed items in the tumble dryer.
- **14.** Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.
- **15.** Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.
- **16.** Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.





- **17.** The final part of a tumble dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that the items will not be damaged.
- **18.** Remove all objects from pockets such as lighters and matches.
- **19. WARNING:** Never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.
- **20.** Exhaust air must not be discharged into a flue which is used for exhausting fumes from appliances burning gas or other fuels.
- **21.** The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the tumble dryer, in such a way that a full opening of the tumble dryer door is restricted.
- **22. WARNING:** The appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by a utility.





(



Safety information

Critical installation warnings

⚠ WARNING

The installation of this appliance must be performed by a qualified technician or service company.

• Failure to do so may result in electric shock, fire, an explosion, problems with the product, or injury.

The appliance is heavy, therefore take care when lifting it.

Plug the power cord into an AC 220 - 240 V / 50 Hz wall socket or higher and use the socket for this appliance only. Never use an extension cord.

- Sharing a wall socket with other appliances using a power strip or extending the power cord may result in electric shock or fire.
- Ensure that the power voltage, frequency, and current are the same as those of the product specifications. Failure to do so may result in electric shock or fire. Plug the power plug into the wall socket firmly.

Remove all foreign substances such as dust or water from the power plug terminals and contact points using a dry cloth on a regular basis.

- Unplug the power plug and clean it with a dry cloth.
- Failure to do so may result in electric shock or fire.
- Plug the power plug into the wall socket so that the cord is running towards the floor.
 If you plug the power plug into the socket in the opposite direction, the electric wires within the cable may be damaged and this may result in electric shock or fire.

Keep all packaging materials out of the reach of children as these may be dangerous.

If a child places a bag over its head, it may suffocate.
 When the appliance, power plug or power cord is damaged, contact your nearest service centre.

This appliance must be properly grounded.

Do not ground the appliance to a gas pipe, plastic water pipe, or telephone line.

- This may result in electric shock, fire, an explosion, or problems with the product.
- Never plug the power cord into a socket that is not grounded correctly and make sure that it is in accordance with local and national regulations.

Do not install this appliance near a heater or any inflammable material.

Do not install this appliance in a humid, oily or dusty location, or in a location exposed to direct sunlight or water (rain drops).

Do not install this appliance in a location exposed to low temperatures.

Frost may cause the tubes to burst.

8 English -







Do not install this appliance in a location where gas may leak.

• This may result in electric shock or fire.

Do not use an electric transformer.

• This may result in electric shock or fire.

Do not use a damaged power plug, damaged power cord, or loose wall socket.

This may result in electric shock or fire.

Do not pull or excessively bend the power cord.

Do not twist or tie the power cord.

Do not hook the power cord over a metal object, place a heavy object on the power cord, insert the power cord between objects, or push the power cord into the space behind the appliance.

This may result in electric shock or fire.

Do not pull the power cord when unplugging the power plug.

- Unplug the power plug by holding the plug.
- Failure to do so may result in electric shock or fire.

This appliance should be positioned so that the power plug, the water supply taps, and the drain pipes are accessible.







Safety information

Installation cautions

! CAUTION

This appliance should be positioned in such a way that the power plug is easily accessible.

• Failure to do so may result in electric shock or fire due to electric leakage.

Install your appliance on a solid, level floor that can support its weight.

 Failure to do so may result in abnormal vibrations, movement, noise, or problems with the product.

Critical usage warnings

№ WARNING

If the appliance is flooded, turn off the water & power supplies immediately and contact your nearest service centre.

- Do not touch the power plug with wet hands.
- Failure to do so may result in electric shock.

If the appliance generates a strange noise, a burning smell, or smoke, unplug the power plug immediately and contact your nearest service centre.

Failure to do so may result in electric shock or fire.

In the event of a gas leak (such as propane gas, LP gas, etc.), ventilate immediately without touching the power plug. Do not touch the appliance or power cord.

- Do not use a ventilating fan.
- A spark may result in an explosion or fire.

Do not let children play in or on the washing machine. In addition, when disposing of the appliance, remove the washing machine door lever.

• If trapped inside the product, children may suffocate to death.

Make sure to remove the packaging (sponge, styrofoam) attached to the bottom of the washing machine before using it.

Do not wash items contaminated with gasoline, kerosene, benzene, paint thinner, alcohol or other inflammable or explosive substances.

• This may result in electric shock, fire, or an explosion.







Do not open the washing machine door by force while it is operating (high-temperature washing/drying/spinning).

- Water flowing out of the washing machine may result in burns or cause the floor to be slippery. This may result in injury.
- Opening the door by force may result in damage to the product or injury.

Do not insert your hand under the washing machine while an operation is in progress.

• This may result in injury.

Do not touch the power plug with wet hands.

• This may result in electric shock.

Do not turn the appliance off by unplugging the power plug while an operation is in progress.

• Plugging the power plug into the wall socket again may cause a spark and result in electric shock or fire.

Do not let children or the infirm use this washing machine without proper supervision. Do not let children climb in or onto the appliance.

This may result in electric shock, burns or injury.

Do not insert your hand or a metal object under the washing machine while it is operating.

• This may result in injury.

Do not unplug the appliance by pulling the power cord. Always grip the plug firmly and pull it straight out of the outlet.

Damage to the power cord may cause a short-circuit, fire and/or electric shock.

Do not attempt to repair, disassemble, or modify the appliance yourself.

- Do not use a fuse (such as copper, steel wire, etc.) other than a standard fuse.
- When the appliance needs to be repaired or reinstalled, contact your nearest service centre.
- Failure to do so may result in electric shock, fire, problems with the product, or injury.

If the water supply hose comes loose from the water tap and floods the appliance, unplug the power plug.

Failure to do so may result in electric shock or fire.

Unplug the power plug when the appliance is not being used for long periods of time or during a thunder or lightning storm.

• Failure to do so may result in electric shock or fire.

If any foreign substance enters into the appliance, unplug the power plug and contact you nearest Samsung Customer Service.

• This may result in electric shock or fire.

Do not let children (or pets) play in or on your washing machine. The washing machine door does not open easily from the inside and children may be seriously injured if trapped inside.





Safety information

Usage cautions

! CAUTION

When the washing machine is contaminated by a foreign substance such as detergent, dirt, food waste, etc., unplug the power plug and clean the washing machine using a damp, soft cloth.

• Failure to do so may result in discolouration, deformation, damage, or rust.

The front glass may be broken by a strong impact. Take care when using the washing machine.

If the glass is broken, it may result in injury.

After a water supply failure or when reconnecting the water supply hose, open the water tap slowly.

Open the water tap slowly after a long period of non-use.

• The air pressure in the water supply hose or the water pipe may damage a product part or result in a water leak.

If a draining error occurs during an operation, check if there is a draining problem.

 If the washing machine is used when it is flooded because of a draining problem, it may result in electric shock or fire.

Insert the laundry into the washing machine completely so that the laundry does not get caught in the door.

• If laundry gets caught in the door, it may result in damage to the laundry or the washing machine, or result in a water leak.

Turn the water supply off when the washing machine is not being used.

Ensure that the screws on the water supply hose connector are properly tightened.

Failure to do so may result in property damage or injury.

Ensure that the rubber seal and front door glass are not contaminated by a foreign substance (e.g. waste, thread, hair, etc.).

• If a foreign substance is caught in the door or the door is not completely closed, it may cause a water leak.

Open the water tap and check if the water supply hose connector is firmly tightened and that there is no water leak before using the product.

• If the screws on the water supply hose connector are loose, it may result in a water leak.

The product you have purchased is designed for domestic use only.



WD90N645OOX_03924A-01_EN(Add 8kg model).indd 12





Using the product for business purposes qualifies as a product misuse. In this case, the product will not be covered by the standard warranty provided by Samsung and no responsibility can be attributed to Samsung for malfunctions or damages resulting from such misuse.

Do not stand on the appliance or place objects (such as laundry, lighted candles, lighted cigarettes, dishes, chemicals, metal objects, etc.) on the appliance.

• This may result in electric shock, fire, problems with the product, or injury.

Do not spray volatile material such as insecticide onto the surface of the appliance.

 As well as being harmful to humans, this may result in electric shock, fire or problems with the product.

Do not place objects that generate electromagnetic fields near the washing machine.

• This may result in injury due to a malfunction.

Water drained during a high-temperature wash or drying cycle is hot. Do not touch the water.

This may result in burns or injury.

Do not wash, spin, or dry water-proof seats, mats, or clothing (*) unless your appliance has a special cycle for washing these items.

(*): Woollen bedding, rain covers, fishing vests, ski pants, sleeping bags, diaper covers, sweat suits, and bicycle, motor cycle and car covers, etc.

- Do not wash thick or hard mats even if the washing machine mark is on the care label. This may result in injury or damage to the washing machine, walls, floor, or clothing due to abnormal vibrations.
- Do not wash throw rugs or doormats with rubber backing. The rubber backing may come
 off and stick to inside the drum, and this may result in malfunction such as a drainage
 error.

Do not operate the washing machine when the detergent drawer is removed.

• This may result in electric shock or injury due to a water leak.

Do not touch the insides of the drum during or just after drying as it is hot.

This may result in burns.

Do not insert your hand into the detergent drawer.

- This may result in injury as your hand may be caught by the detergent input device.
- The liquid detergent guide (applicable models only) is not used for powder detergent. Remove the guide when using powder detergent.

Do not place any objects (such as shoes, food waste, animals) other than laundry into the washing machine.

• This may result in damage to the washing machine, or injury and death in the case of pets due to the abnormal vibrations.





Safety information

Do not press the buttons using sharp objects such as pins, knifes, fingernails, etc.

This may result in electric shock or injury.

Do not wash laundry contaminated by oils, creams or lotions usually found in skincare shops or massage clinics.

This may cause the rubber seal to become deformed and result in a water leak.

Do not leave metal objects such as safety pins, hair pins or bleach in the drum for long periods of time.

- This may cause the drum to rust.
- If rust starts appearing on the surface of the drum, apply a (neutral) cleansing agent to the surface and use a sponge to clean it. Never use a metal brush.

Do not use dry cleaning detergent directly and do not wash, rinse, or spin laundry contaminated by dry cleaning detergent.

• This may result in spontaneous combustion or ignition due to the heat from the oxidation of the oil.

Do not use water from water cooling/heating devices.

• This may result in problems with the washing machine.

Do not use natural hand-washing soap for the washing machine.

• If it hardens and accumulates inside the washing machine, it may result in problems with the product, discolouration, rust, or bad odours.

Place socks and brassieres in a washing net and wash them with the other laundry.

Do not wash large laundry items such as bedding in the washing net.

Failure to do so may result in injury due to abnormal vibrations.

Do not use hardened detergent.

If it accumulates inside the washing machine, it may result in a water leak.

Make sure that the pockets of all the clothing items to be washed are empty.

 Hard, sharp objects such as coins, safety pins, nails, screws, or stones can cause extensive damage to the appliance.

Do not wash clothing with large buckles, buttons or other heavy metal objects.

Sort the laundry by color on the basis of its colorfastness and select the recommended cycle, water temperature and additional functions.

This may result in discoloration or fabric damage.

Take care that children's fingers are not caught in the door when you close it.

• Failure to do so may result in injury.







Critical cleaning warnings

⚠ WARNING

Do not clean the appliance by spraying water directly onto it.

Do not use the a strong acidic cleaning agent.

Do not use benzene, thinner or alcohol to clean the appliance.

• This may result in discolouration, deformation, damage, electric shock or fire.

Before cleaning or performing maintenance, unplug the appliance from the wall socket.

Failure to do so may result in electric shock or fire.

Instructions about the WEEE



Correct Disposal of This Product (Waste Electrical & Electronic Equipment)

(Applicable in countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

For information on Samsung's environmental commitments and product specifi regulatory obligations e.g. REACH visit: samsung.com/uk/aboutsamsung/samsungelectronics/corporatecitizenship/data_corner.html






Installation

Follow these instructions carefully to ensure proper installation of the washing machine and to prevent accidents when doing laundry.

What's included

Make sure all the parts are included in the product package. If you have a problem with the washing machine or the parts, contact a local Samsung customer centre or the retailer.

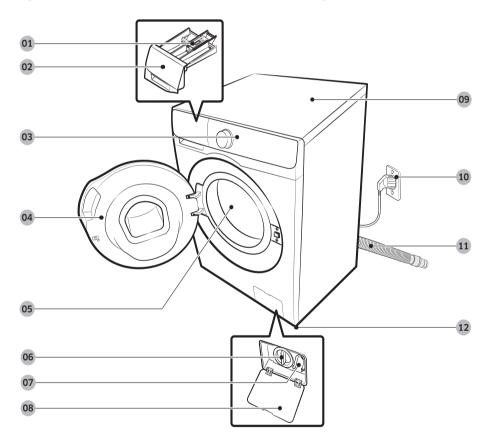

01 Releas	se lever
------------------	----------

02 Detergent drawer

03 Control panel

04 Door

05 Drum

06 Pump filter

07 Emergency drain tube

08 Filter cover

09 Worktop

10 Power plug


11 Drain hose

12 Levelling feet

16 English -





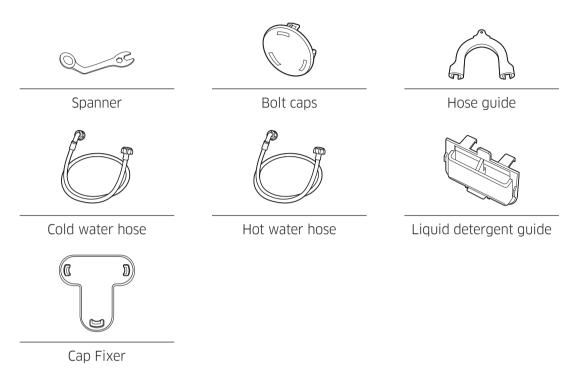

■ NOTE

- Bolt caps: The provided number (3 to 6) of bolt caps depends on the model.
- Hot water hose: Applicable models only.
- Liquid detergent guide: Applicable models only.





Installation

Installation requirements

Electrical supply and grounding

- AC 220-240 V / 50 Hz fuse or circuit breaker is required
- Use an individual branch circuit specific to the washing machine

To ensure proper grounding, the washing machine comes with a power cord featuring a three-prong grounding plug for use in a properly installed and grounded outlet. Check with a qualified electrician or serviceperson if you are not sure about the grounding.

Do not modify the provided plug. If it does not fit the outlet, call a qualified electrician to install a proper outlet.

↑ WARNING

- Do NOT use an extension cord.
- Use only the power cord that comes with the washing machine.
- Do NOT connect the ground wire to plastic plumbing, gas lines, or hot water pipes
- Improperly connected grounding conductors may cause electric shock.

Water supply

A proper water pressure for this washing machine is between 50 kPa and 800 kPa. Water pressure less than 50 kPa may cause the water valve not to close completely. Or, it may take longer to fill the drum, causing the washing machine to turn off. Water taps must be within 120 cm from the rear of the washing machine so that the provided inlet hoses reach the washing machine.

To reduce the risk of leaks:

- Make sure water taps are easily accessible.
- Turn off the taps when the washing machine is not in use.
- Check for any leaks at the water inlet hose fittings on a regular basis.

! CAUTION

Before using the washing machine for the first time, check all connections at the water valve and taps for any leaks.

Drain

Samsung recommends a standpipe in height of 60-90 cm. The drain hose must be connected through the hose clip to the standpipe, and the standpipe must fully cover the drain hose.







Flooring

For best performance, the washing machine must be installed on a solid floor. Wood floors may need to be reinforced to minimize vibration and/or unbalanced loads. Carpeting and soft tile surfaces are not a good resistance to vibrations and may cause the washing machine to move slightly during the spin cycle.



Do NOT install the washing machine on a platform or a poorly supported structure.

Water temperature

Do not install the washing machine in areas where water may freeze as the washing machine always retains some water in its water valves, pumps, and/or hoses. Frozen water left in the connection parts may cause damage to belts, the pump, and other components of the washing machine.

Alcove or closet installation

Minimum clearance for stable operation:

Sides	25 mm
Тор	25 mm
Rear	50 mm
Front	550 mm

If both the washing machine and a dryer are installed in the same location, the front of the alcove or closet must have at least a 550 mm unobstructed air opening. Your washing machine alone does not require a specific air opening.







Installation


Step-by-step installation

STEP 1 Select a location

Location requirements:


- Solid, level surface without carpeting or flooring that may obstruct ventilation
- Away from direct sunlight
- Adequate room for ventilation and wiring
- The ambient temperature is always higher than the freezing point (0 °C)
- Away from a heat source

STEP 2 Remove the shipping bolts

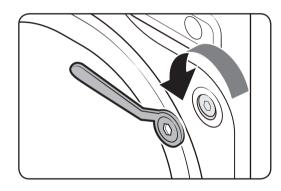

Unpack the product package and remove all shipping bolts.

1. Loosen all shipping bolts on the rear of the machine using the supplied spanner.

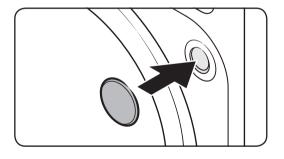


- **2.** Fill the holes with the supplied plastic bolt caps.
 - Keep the shipping bolts for future use.







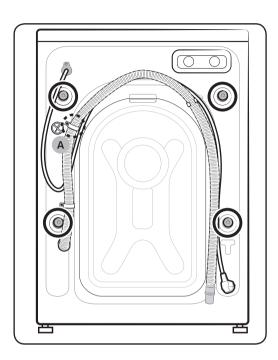

3. Close all plastic bolt caps on the rear of the washing machine.

! CAUTION

Do not remove the **screw (A)** that fixes the hose clip.




Packaging materials can be dangerous to children. Dispose all packaging material (plastic bags, polystyrene, etc.) out of children's reach.






Installation

STEP 3 Adjust the levelling feet

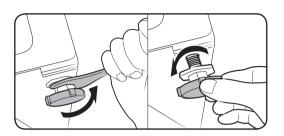


- **1.** Gently slide the washing machine into position. Excessive force may damage the levelling feet.
- **2.** Level the washing machine by manually adjusting the levelling feet.

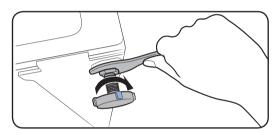

3. When levelling is complete, tighten the nuts using the spanner.


STEP 4 Connect the water hose

The provided hose adaptor may differ with the model. This step guides you through connecting the connector-type adaptor. If you are provided with the screw-type adaptor, go to 7.

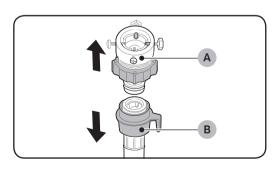

Connect the water hose to the water tap.


1. Remove the adaptor (A) from the water hose (B).

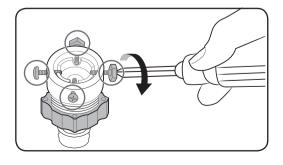


2. Use a Philips screwdriver to loosen four screws on the adaptor.

22 English




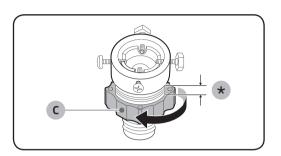


3. Holde the adaptor and turn part (C) in the arrow direction to loosen it by 5 mm (*).

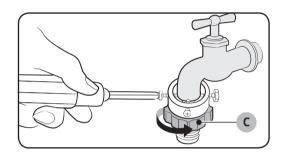

- **4.** Insert the adaptor into the water tap, and tighten the screws while lifting up the adaptor.
- **5.** Turn part (C) in the arrow direction to tighten it.

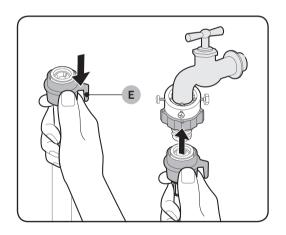

6. While holding down part (E), connect the water hose to the adaptor. Then, release part (E). The hose fits into the adaptor with a clicking sound.

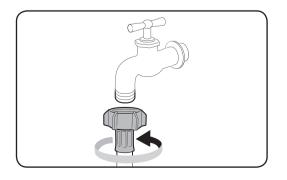


7. If you are using a screw type of water tap, use the provided screw-type adaptor to connect to the water tap as shown.








Installation

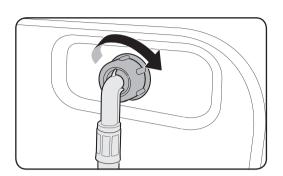

8. Connect the other end of the water hose to the inlet valve on the back of the washing machine. Turn the hose clockwise to tighten.

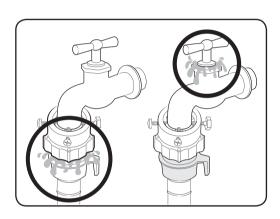

9. Open the water tap and check if there are any leaks around the connection areas. If there are water leaks, repeat the steps above.

WARNING

Stop using the washing machine if there is a water leak, and contact a local Samsung service centre. Otherwise, this may cause electric shock.

! CAUTION

Do not stretch the water hose by force. If the hose is too short, replace the hose with a longer, high-pressure hose.


■ NOTE

- After connecting the water hose to the adaptor, check if it is connected properly by pulling the water hose downwards.
- Use a popular type of water taps. If the tap is square-shaped or too big, remove the spacer ring before inserting the tap into the adaptor.






For models with an additional hot water inlet:

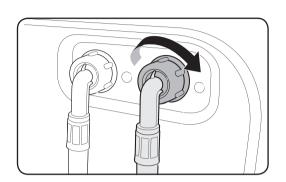

- **1.** Connect the red end of the hot water hose to the hot water inlet on the back of the machine.
- **2.** Connect the other end of the hot water hose to the hot water tap.

Aqua hose (applicable models only)

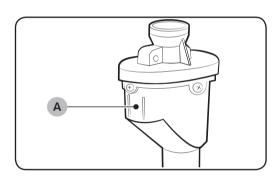

The aqua hose alerts users of a risk of water leaks. It senses the water flow and turns red on the centre **indicator** (A) in case of a leak.



The end of the aqua stop hose must be fitted to the water tap and not the machine.








Installation


STEP 5 Position the drain hose

The drain hose can be positioned in three ways:

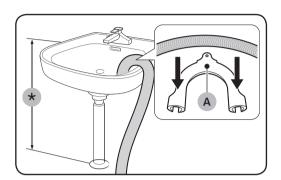

Over the edge of a wash basin

The drain hose must be placed at a height of between 60 cm and 90 cm (*) from the floor. To keep the spout of the drain hose bent, use the supplied **plastic hose guide (A)**. Secure the guide to the wall using a hook to ensure stable drainage.

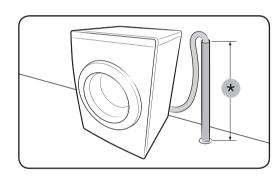

In a drain pipe

The drain pipe should be between 60 cm and 90 cm high (*). It is advisable to use a 65 cm high vertical pipe. Make sure the drain hose is connected to the stand pipe at a slant.


Drain standpipe requirements:

- Minimum diameter of 5 cm
- Minimum carry-away capacity of 60 litres per minute







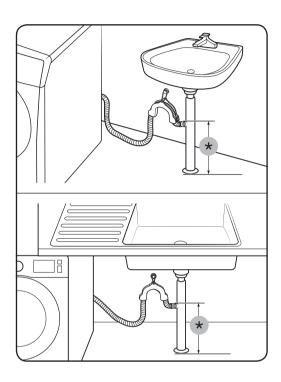

In a sink drain pipe branch

The drain pipe branch mush be above the sink siphone so that the end of the hose is at least 24 in. (60 cm) above the ground.

(*): 24 in. (60 cm)

STEP 6 Power on

Plug the power cord into a wall socket featuring an AC 220-240 V / 50 Hz approved electrical outlet protected by a fuse or circuit breaker. Then, press **Power** to turn on the washing machine.







Before you start

Initial settings

Run Calibration (recommended)

Calibration ensures accurate weight detection by the washing machine. Make sure the drum is empty before running Calibration.

- 1. Power off, and then power on the washing machine.
- **2.** Hold down **Temp.** and **Delay End +** simultaneously for 3 seconds to enter Calibration mode. The "**Cb**" message appears.
- **3.** Press Start/Pause (Hold to Start) to run the Calibration cycle.
- **4.** The drum will rotate clockwise and counter-clockwise for about 3 minutes.
- **5.** When the cycle is complete, "0" appears on the display and the washing machine will turn off automatically. The washing machine is now ready for use.

Laundry guidelines

STEP 1 Sort

Sort the laundry according to these criteria:

- Care Label: Sort the laundry into cottons, mixed fibres, synthetics, silks, wools, and rayon.
- Colour: Separate whites from colours.
- Size: Mixing different-sized items together in the drum improves the washing performance.
- Sensitivity: Wash delicate items separately for pure, new woollen items, curtains, and silk items. Check the labels on the items.

NOTE

Make sure to check the care label on the clothing, and sort them accordingly before starting the wash.





STEP 2 Empty pockets

Empty all the pockets of your laundry items

 Metal objects such as coins, pins, and buckles on clothing may damage other laundry items as well as the drum.

Turn clothing with buttons and embroideries inside out

- If pants or jacket zippers are open while washing, the drum may be damaged. Zippers should be closed and fixed with a string.
- Clothing with long strings may become entangled with other clothes. Make sure to tie the strings before starting the wash.

STEP 3 Use a laundry net

- Brassieres (water washable) must be placed in a laundry net. Metal parts of the brassieres may break through and tear other laundry items.
- Small, light clothing such as socks, gloves, stockings, and handkerchiefs may become caught around the door. Place them inside a fine laundry net.
- Do not wash the laundry net by itself without other laundry. This may cause abnormal vibrations that could move the washing machine and result in injury.

STEP 4 Prewash (if necessary)

Select the Prewash option for the selected course if the laundry is heavily soiled. Do not use the Prewash option when detergent is manually added into the drum or if applying liquid detergent.

STEP 5 Determine the load capacity

Do not overload the washing machine. Overloading may cause the washing machine to not wash properly. For the load capacity for the type of clothing, see page **37**.

NOTE

When washing bedding or bedding covers, the wash time may be lengthened or the spin efficiency may be reduced. For bedding or bedding covers, the recommended maximum spin cycle speed is 800 rpm, and the load capacity is 2.0 kg or less.

! CAUTION

- Unbalanced laundry may reduce the spinning performance.
- Make sure the laundry is fully inserted in the drum and not caught in the door.
- Do not slam the door. Close the door gently. Otherwise, the door may not be closed properly.





Before you start

STEP 6 Apply a proper detergent type

The type of detergent depends on the type of fabric (cotton, synthetic, delicate items, wool), colour, wash temperature, and degree of soiling. Make sure to use the laundry detergent that is designed for automatic washing machines.

NOTE


- Follow the detergent manufacturer's recommendations based on the weight of the laundry, the degree of soiling, and the hardness of the water in your local area. If you are not sure about the water hardness, contact a local water authority.
- Do not use detergent that tends to be hardened or solidified. This detergent may remain after the rinse cycle, blocking the drain outlet.
- If too many bubbles occur during a cycle, a message of 'Sud' will be displayed.

! CAUTION


When washing wool using the **WOOL** & cycle, use a detergent dedicated to wool items. If used with the **WOOL** & cycle, powder detergent may remain on the laundry and discolour the laundry.

Laundry capsules

To get the best results from using laundry capsules, please follow these instructions.

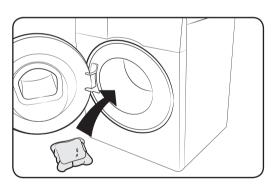

1. Put the capsule in the bottom of the empty drum towards the rear.

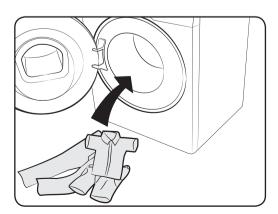

2. Put the laundry in the drum on top of the capsule.










/ CAUTION

For cycles using cold water or cycles that complete in less than one hour, the capsule may not dissolve completely.

Detergent drawer guidelines

The washing machine provides a three-compartment dispenser: the left compartment for the main wash, the centre for fabric softeners, and the right for the preliminary wash.

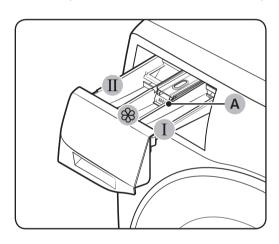

- **01** Prewash compartment: Apply prewash detergent or starch.
- **02 II** Main-wash compartment: Apply main-wash detergent, water softener, soaking detergent, bleach, and/or stain removers.
- **03** Softener compartment: Apply additives such as fabric softener. Do not exceed the max line (A).

CAUTION

- Do not open the detergent drawer while the washing machine is operating.
- Do not use the following types of detergent:
 - Tablet or capsule types
 - Ball or net types
- To prevent the compartment clogging, concentrated or highly-enriched agents (fabric softener or detergent) must be diluted with water before being applied.
- Before moving the washing machine, make sure to empty the detergent drawer that might contain detergent and/or fabric softener. The content in the drawer may spill out on the floor.






2018/2/22 14:39:59




Before you start


To apply washing agents to the detergent drawer

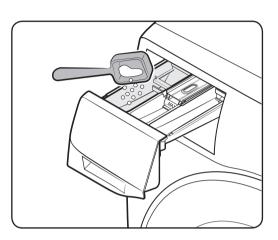

- 1. Slide open the detergent drawer.
- **2.** Apply laundry detergent to the II main-wash compartment as instructed or recommended by the manufacturer. To use liquid detergent, see page 33.

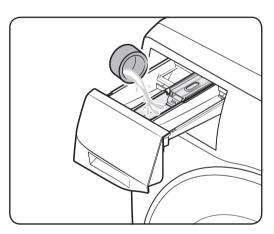


3. Apply fabric softener to the softener compartment. Do not exceed the max line.

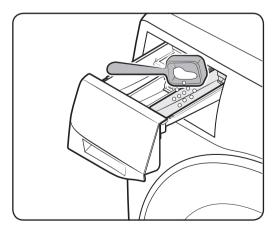

- **4.** If you want to prewash, apply prewash detergent to the **1 prewash compartment** as instructed or recommended by the manufacturer.
- **5.** Close the detergent drawer.






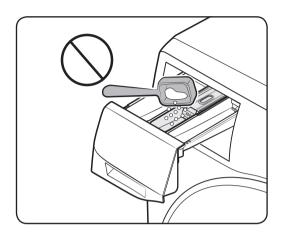

CAUTION

- Do not apply powder detergent to the liquid detergent guide.
- Concentrated fabric softener must be diluted with water before applied.
- Do not apply main-wash detergent to the **Softener compartment**.

To use liquid detergent (applicable models only)

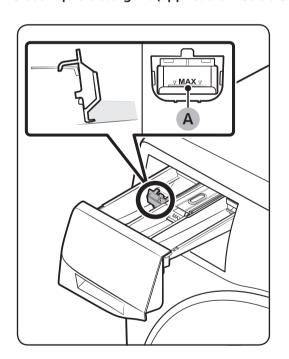

First insert the provided liquid detergent container in the II main-wash compartment. Then, apply liquid detergent to the container below the marked max line (A).








Operations

Control panel

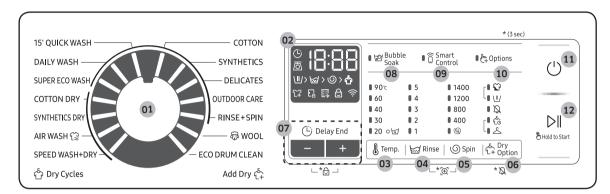

01 Cycle Selector	Turn the dial to select a cycle.
02 Display	The display shows current cycle information and estimated time remaining, or an information code when a problem occurs. For buttons and icons, refer to the corresponding page.
03 Temp.	Press to change the water temperature for the current cycle.
04 Rinse	Press to change the rinse count for the current cycle. You can set the rinse count to a max of 5, depending on the cycle.
05 Spin	 Press to change the spinning speed for the current cycle. The revolutions per minute (RPM) differs with the model. Rinse Hold(No indicator): The final rinse process is suspended so that the laundry remains in the water. To unload the laundry, run a drain or spin process. To use the Rinse Hold option, press Spin repeatedly until all rpm numeric indicators turn off. Not available for the DRAIN/SPIN cycle. No Spin: The drum does not rotate after the final drain process. To use the No Spin option, press Spin repeatedly until the No Spin (Spin (Spin indicator turns on. Spin Only: To run the Spin Only cycle, press Spin for 3 seconds. When the cycle time and spinning speed appear, press Spin repeatedly until a desired spinning speed is selected. Then, press and hold Start/Pause (Hold to Start) to start the cycle. The spinning time depends on the selected cycle.







06 Dry Option	 Press to select a drying level: Cupboard > Time Dry (30 min > 1:00 h) > 1:30 h > 2:00 h > 2:30 h > 3:00 h > 3:30 h > 4:00 h > 4:30 h) > No Dry Cupboard Dry: Use this option to dry laundry such as cotton, underwear, and linen. Time Dry: Use this option to dry the laundry for the specified period of time depending on the fibres, amount of laundry quantity and moisture. No Dry: Use this option if not using a drying cycle.
07 Delay End	Delay End lets you set the end time of the current cycle. Based on your settings, the start time of the cycle will be determined by the machine's internal logic. For example, this setting is useful for programming your machine to finish a wash at the time you normally return home from work. • Press to choose a preset unit of hours.
08 Bubble Soak	 Press to activate/deactivate the Bubble Soak function. This function helps remove a wide variety of stubborn stains. Bubble Soak helps remove a variety of stubborn stains. With Bubble Soak selected, laundry is thoroughly soaked in water bubbles for effective washing. Bubble Soak is available with and adds up to 30 minutes to these cycles: Cotton, Synthetics, Daily Wash and Speed Wash+Dry.
09 Smart Control	Press to activate/deactivate the Smart Control function. When the Smart Control function is activated, you can control your washing machine using your mobile device. For more information, see the SmartThings section on page 45.
10 Options	Press to select the options. Availability of the options depends on the cycle.
11 Power	Press to turn on/off the washing machine.
12 Start/Pause (Hold to Start)	Press and hold to start an operation, or press to stop an operation temporarily.

For more information on the options, see the Special features section.








Operations

Simple steps to start

Standard steps

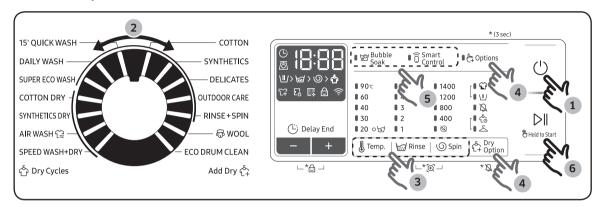

- 1. Press Power to turn on the washing machine.
- **2.** Select a cycle in the cycle panel.
- **3.** Change the cycle settings (**Temp.**, **Rinse**, and **Spin**) as necessary.
- **4.** Press **Options** or **Dry Option** to add desired options. Available options differ depending on the selected cycle.
- **5.** The machine supports the options of **Bubble Soak** and **Smart Control** for easy access. To use an option item, press the corresponding button.
- **6.** Press and hold **Start/Pause** (Hold to Start).

To change the cycle during operation

- 1. Press Start/Pause (Hold to Start) to stop operation.
- 1. Select a different cycle.
- 2. Press Start/Pause (Hold to Start) again to start the new cycle.








Drying only

Follow these steps to dry damp laundry or laundry that has just finished washing.

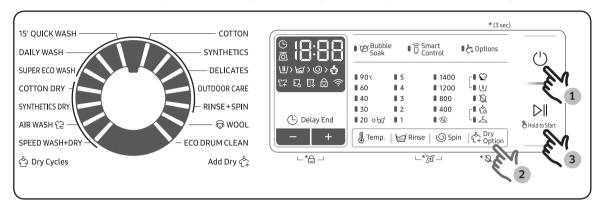

- 1. Press Power to turn on the washing machine.
- 2. Press Dry Option repeatedly until a desired dry level is set.
- **3.** Press and hold Start/Pause (Hold to Start).

To change the course during operation

- 1. Press Start/Pause (Hold to Start) to stop operation.
- 2. Select a different cycle.
- **3.** Press **Start/Pause** (**Hold to Start**) again to start the new cycle.







Operations

Cycle overview

Standard cycles

Cycle	Description & Max load (kg)		
COTTON	For cottons, bed linens, table linens, underwear, towels, or shirts. The washing time and the rinse count are automatically adjusted according to the load.	Max	
SYNTHETICS	For blouses or shirts that are made of polyester (diolen, trevira), polyamide (perlon, nylon), or the like.	4.0	
DELICATES	 For sensitive fabrics as rayon, viscose and synthetics blended fiber. For best performance, use liquid detergent. 	2.0	
OUTDOOR CARE	For outdoor clothes, skiwear, and sportswear that are made of functional materials such as spandex, stretch, and micro-fibre	2.0	
RINSE+SPIN	Featuring an additional rinse process after applying fabric softener to the laundry.	Max	
₩OOL	 Specific for machine-washable wool for loads less than 2.0 kg. The wool cycle features fine pulsating and soaking to protect the wool fibres from shrinkage/distortion. A neutral detergent is recommended. 	2.0	
ECO DRUM CLEAN	 Cleans the drum by removing dirt and bacteria from it. Cleans the rubber door gasket by removing dirt from the gasket. Perform once every 40 washes with no detergent or bleach applied. It notifies automatically after every 40 washes. Make sure the drum is empty. Do not use any cleaning agents for cleaning the drum. 	-	









Cycle	Description & Max load (kg)	
15' QUICK WASH	 For lightly soiled items in less than 2.0 kg that you want to wash quickly. Use less than 20 g of detergent. Using more than 20 g of detergent may leave detergent residue. For liquid detergent, use a max of 20 ml of liquid detergent. 	2.0
DAILY WASH	For everyday items such as underwear and shirts.	4.0
SUPER ECO WASH	Low temperature ecobubble cycle helps reduce power consumption.	4.0

Dry cycles

Cycle	Description & Max load (kg)	
COTTON DRY	For general drying.	5.0
SYNTHETICS DRY	A low temperature drying cycle for heat-sensitive garments.	3.0
AIR WASH ੴ	This cycle is useful for removing bad odours. Turning the Cycle Selector cycles through the following operating modes.	1.0
	Additional drying may be needed depending on the item's volume and thickness.	
SPEED WASH+DRY	Maximum load (4.5 kg) was tested in compliance with IEC standard (4 Cotton pillows, 3 Cotton towels, 5 easy care pillows, 10 easy care shirts).	4.5







Operations

Options

	Option	Description	
~	Intensive	For badly soiled laundry. The operation time for each cycle is longer than normal.	
Ш	Pre Wash	This will add a preliminary washing cycle before the main wash cycle.	

Dry Option

	Option	Description	
ڪ	Cupboard dry	• Select to dry laundry automatically by detecting the amount and weight of the laundry. Select this to dry cotton clothing such as cotton trousers, T-shirts, and cotton underwear.	
£0	Time Dry	 Use to dry the laundry for a specified period of time according to the material, load, and moisture. 	







Delay End 🕒

You can set the washing machine to finish your wash automatically at a later time, choosing a delay of between 1 to 24 hours (in 1 hour increments). The hour displayed indicates the time the wash will finish.

- **1.** Select a cycle with necessary settings.
- 2. Press Delay End (or the +/- button) repeatedly until a desired end time is set.
- 3. Press and hold Start/Pause (Hold to Start). The Delay End indicator blinks and the washing machine tumbles the drum to sense the weight of the load if load sensing is preset for the selected cycle. When complete, it displays your set time with the timer runnina.
- **4.** To cancel the Delay End, restart the washing machine by pressing **Power**.

Real-life case

You want to finish a two-hour cycle 3 hours later from now. For this, you add the Delay End option to the current cycle with the 3-hour setting, and Press and hold Start/Pause (Hold to Start) at 2:00 p.m. Then, what happens? The washing machine starts operating at 3:00 p.m., and ends at 5:00 p.m. Provided below is the time line for this example.



Load sensor 向

The load sensor icon lights up when you select a cycle that supports load sensing. Some cycles may not support loading sensing. Once you start the cycle, the icon blinks or stays solid during the load sensing process, and turns off when the process is complete.





English 41




Operations


Special features

AddWash ₩

When the AddWash indicator \mathfrak{T} is on, you can stop operation of the machine and put additional laundry or softener into the drum. The Add Door opens by more than 130° for easy access.

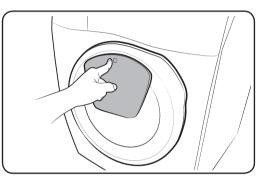

- **1.** Press **Start/Pause** (**Hold to Start**) to stop operation.
- **2.** Press the upper area of the Add Door until you hear a clicking sound to unlock. Pull the handle of the Add Door to open.

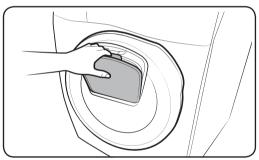

- **3.** Open the Add Door and put additional laundry or softener into the drum.
- **4.** Push the Add Door until you hear a clicking sound to close.
- **5.** Press and hold **Start/Pause** (**Hold to Start**) to resume operation.

A CAUTION

Do not put excessive force on the Add Door. It may break.

■ NOTE

The water inside the drum does not leak if the Add Door is closed properly. Water drops may form around the window, but they do not leak from inside the drum.





! CAUTION

- Do not open the Add Door if suds have formed inside the drum that rise above the level of the Add Door.
- Do not attempt to open the Add Door while the machine is operating without first pressing **Start/Pause** (**Hold to Start**). Please note that the Add Door can be opened unintentionally (without pressing **Start/Pause** (**Hold to Start**)) when the wash is complete.
- Do not add an excessive load through the Add Door. Performance may be degraded.
- Do not use the lower area of the Add Door as a handle. Your fingers may be caught.
- Make sure that no laundry is caught in the Add Door.
- Keep your pets out of the washing machine, especially the Add Door.
- When using hot water for the wash, the Add Door may appear to leak water after opening and closing the Add Door. This is normal, simply because steam emerging from the open Add Door has cooled and formed water drops on the surface.
- When the Add Door closes, the door seals up and no water can leak. However, you may encounter what appears to be water leak around the door some residual water remaining around the Add Door may form water drops. This is normal.
- Neither the main door or the Add Door can opened when the water temperature is over 50 °C. If the water level inside the drum is over a certain point, the main door cannot be opened.
- If an information code of "DDC" appears on the display, see the **Information codes** section for further actions.
- Keep the Add door and its surroundings clean at all times. Debris or detergent on or around the seals of the Add door may cause a leak.







Operations

Settings

Child Lock ⊖

To prevent children or infants from accidentally starting or setting the washing machine, Child Lock locks all buttons except for the **Power** button.

To activate Child Lock

Press and hold - and + (of the Delay End option) simultaneously for 3 seconds.
 Then, press and hold Start/Pause (Hold to Start) to activate. The door locks and the Child Lock indicator turns on.

To deactivate Child Lock temporarily

You can deactivate Child Lock temporarily for 1 minute. The door is unlocked for 1 minute and the Child Lock indicator blinks.

 Press and hold - and + (of the Delay End option) simultaneously for 3 seconds.

NOTE

- If you open the door 1 minute or more after deactivating Child Lock, an alarm sounds for up to 2 minutes.
- If you close the door within 2 minutes, the door locks and Child Lock is reactivated. If you do not close the door or the door is not properly closed, the alarm keeps sounding for 2 minutes.
- To add laundry after activating Child Lock, first deactivate Child Lock or restart the washing machine.

To cancel the Child Lock

 Press and hold - and + (of the Delay End option) simultaneously for 3 seconds to deactivate, and then press and hold the buttons again for 3 seconds to cancel Child Lock. The door unlocks and the Child Lock indicator turns off.

Sound On/Off 🔌

You can turn on or off the sound from the washing machine. When this function is set to Off, the AddWash alarm, the melody of cycle completion, and the power-off beep will not sound. However, the other sounds stay active.

- To mute the sound, press and hold Dry Option for 3 seconds.
- To unmute the sound, press and hold again for 3 seconds.
- Your setting will be kept even after restarting the machine.







SmartThings

Wi-Fi connection

On your smartphone, go to the Settings and turn on the wireless connection and select an AP (Access Point).

NOTE

- This device is designed for household use only (Class B), and can be used in all residential areas
- This device may cause wireless interference, and neither the manufacturer or the installer of this device can provide a safety measure of any kind.
- Recommended encryption methods are WPA/TKIP and WPA2/AES. Newly developed Wi-Fi protocols or unapproved Wi-Fi protocols are not supported.
- The reception sensitivity of a wireless network may be affected by surrounding wireless environments.
- If your Internet provider has registered the MAC address of your PC or the modem module for permanent use, your Samsung washing machine fails to connect to the Internet. If this is the case, contact your Internet provider.
- The Internet firewall may interrupt your Internet connection. If this happens, contact your Internet provider.
- If Internet failure continues after following the measurement of your Internet provider, contact a local Samsung retailer or service centre.
- For installing wired and wireless routers, refer to the user manual of the router you use.
- Samsung washing machine supports the Wi-Fi 2.4 GHz protocols.
- Samsung washing machine supports the IEEE802.11 b/g/n (2.4 GHz), Soft-AP protocols.
- (IEEE802.11n is recommended)
- An unapproved wired/wireless router may fail to connect to Samsung washing machine.

Download

On an app market (Google Play Store, Apple App Store, Samsung Galaxy Apps), find the SmartThings app with a search term of "SmartThings". Download and install the app on your device.

NOTE

- The SmartThings app is available on third-party devices with Android OS 6.0 (Marshmallow) or higher, Samsung devices with Android OS 5.0 (Lollipop) or higher, and iOS devices with iOS 10.0 or higher. For iPhones, it must be iPhone 6 or higher. The app is optimised for Samsung smartphones (Galaxy S and Note series).
- Some functions of the app may operate differently on third-party devices.
- The app is subject to change without notice for improved performance.





Operations

Log in

You must first log into SmartThings with your Samsung account. To create a new Samsung account, follow the instructions on the app. You don't need a separate app to create your account.

■ NOTE

If you have a Samsung account, use the account to log in. A registered Samsung smartphone user automatically logs in.

To register your device to SmartThings

- **1.** Make sure your smartphone is connected to a wireless network. If not, go to the **Settings** and turn on the wireless connection and select an AP (Access Point).
- **2.** Select to run **SmartThings** on your smartphone.
- **3.** When a message of "A new device is found.", select Add.
- **4.** If no message appears, select + and select your washing machine in a list of devices available. If your washing machine is not listed, select **Device Type** > **Specific Device Model**, and then add your washing machine manually.
- **5.** Register your washing machine to the SmartThings app as follows.
 - **a.** Log into SmartThings with your Samsung account.
 - **b.** Turn a Wi-Fi connection on.
 - **c.** Add your washing machine to SmartThings. Make sure your washing machine is connected to SmartThings.
 - **d.** When registration is complete, your washing machine appears on your smartphone.

Washing Machine app

Integrated control: You can monitor and control your washing machine both at home and on the go.

- Select the Washing Machine icon on SmartThings. The Washing Machine page appears.
- Check the operation status or notifications related to your washing machine, and change options or settings if necessary.





SmartThings

Category	Checkpoint	Description
	Washing status	You can check the current cycle and its options, and the remaining cycle time.
Monitoring	Smart Control	The Smart Control status is shown for the washing machine.
Monitoring	Self Check	Use this to check if the washing machine operates normally.
	Energy monitoring	Use this to monitor the energy consumption status.
Control	Start/Pause/Cancel	Select a cycle and necessary options, and then select Start/Pause/ Cancel to start an operation, to stop temporarily, or to cancel the current operation.
	My Favorite	Add frequently used cycles and options to My Favorite for later use.
	Cycle completed	Notifies you the current cycle is complete.
Notification	AddWash alarm (applicable models only)	Notifies you of the addition of a new load.
	Remaining laundry (applicable models only)	Notifies you of any laundry left after a cycle is complete.







Operations

Category	Checkpoint	Description
Q-Rator	Laundry Recipe *	You can select the fabric type, color, and the soil level to get recommended options and wash cycles that you can start right away.
	Laundry Planner *	You can set the desired time for a wash cycle to finish. After you set the desired time, you will get a recommended cycle that will end within the time you set, and you can start or reserve the recommended cycle.
	HomeCare Wizard *	Provides a regular report with an analysis of the machine operation state in a userset frequency (every week/month). You can use this regular report to check your usage pattern, maintenance requirements, and energy consumption ** for the set period of time.
	* Requires 'SmartThings', avail Registration required. ** Indicative results only.	lable on Android and iOS.







Open Source Announcement

The software included in this product contains open source software. You may obtain the complete corresponding source code for a period of three years after the last shipment of this product by sending an email to mailto:oss.request@samsung.com.

It is also possible to obtain the complete corresponding source code in a physical medium such as a CD-ROM; a minimal charge will be required.

The following URL http://opensource.samsung.com/opensource/SMART_AT_051/seq/0 leads to the download page of the source code made available and open source license information as related to this product. This offer is valid to anyone in receipt of this information.





Hereby, Samsung Electronics, declares that the radio equipment type appliance is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: The official Declaration of conformity may be found at http://www.samsung.com, go to Support > Search Product Support and enter the model name.

Wi-Fi max transmitter power: 20 dBm at 2.412GHz - 2.472GHz





Maintenance

Keep the washing machine clean to prevent deteriorated performance and to preserve its life cycle.

Eco drum clean 🗐

Perform this cycle regularly to clean the drum by removing bacteria from it. This cycle heats the water between 60 $^{\circ}$ C and 70 $^{\circ}$ C, and it also removes accumulated dirt from the rubber door gasket.

- 1. Press Power to turn on the washing machine.
- **2.** Turn the Cycle Selector to select ECO DRUM CLEAN.
- 3. Press and hold Start/Pause (Hold to Start).

! CAUTION

Do not use any cleaning agents for cleaning the drum. Chemical residue in the drum may cause damage to the laundry or the drum of the washing machine.

ECO DRUM CLEAN reminder

- The **ECO DRUM CLEAN** reminder appears on the main screen once every 40 washes. It is advisable to perform the **ECO DRUM CLEAN** regularly.
- When you first see this reminder, you can ignore the reminder for 6 consecutiv washes. From the 7th wash, the reminder no longer appears. However, it appears again on the second 40th wash.







Smart Check (19)

To enable this function, you must first download the Samsung Smart Washer app at the Play Store or the App Store, and install it on a mobile device featuring a camera function.

The Smart Check function has been optimised for Galaxy & iPhone series (applicable models only).

- **1.** When the washing machine detects an issue to check, an information code appears on the display. To enter Smart Check mode, press and hold **Rinse** and **Spin** simultaneously for 3 seconds.
- **2.** The washing machine starts the self-diagnosis procedure and displays an information code if a problem is detected.
- **3.** Run the Samsung Smart Washer app on your mobile device, and tap Smart Check.
- **4.** Put the mobile device close to the washing machine's display so that the smartphone camera and the washing machine face each other. Then, the information code will be recognised automatically by the app.
- **5.** When the information code is recognised correctly, the app provides detailed information about the problem with applicable solutions.

■ NOTE

- The function name, Smart Check, may differ depending on the language.
- If the washing machine reflects light on the display, the app may fail to recognise the information code.
- If the app fails to recognise the Smart Check code consecutively, enter the information code manually onto the app screen.







Maintenance

Using Dry course

All drying options except for the Time Dry option detect the weight of the laundry in order to display a more accurate drying time and dry the laundry more effectively.

Refer to the chart below to select the appropriate drying option according to the type and amount of laundry and the moisture you want to leave.

Made During option		Heare	Load capacity(kg)	
Mode	Drying option	Usage	Cotton Dry	Synthetics Dry
Auto Drying	& Cupboard	Use this option to dry laundry such as cotton, underwear, and linen.	5 kg	3 kg
Manual Drying	ද් _{ලි} Time Dry	Use this option to dry the laundry for the specified peiod of time depending on the fibes, amount of laundry quantity and moisture.	30 ~ 270 min. (in 30 minutes increments).	30 ~ 270 min. (in 30 minutes increments).



- The drying result may differ depending on the selected washing cycle and the type/amount of laundry.
- If both washing and drying cycles are selected, the spin speed is automatically set to enhance the drying efficiency.
- In case you want to dry laundry after a hand wash, turn the cycle selector to select the spin cycle, and then select a drying option for best performance.
- When drying is complete, dust from the dry surface of the clothes may remain on the diaphragm due to the ironing effect that prevents wrinkles. The dus will be washed away during the following wash. Alternatively, you can easily remove it with a damp towel or cloth.

! CAUTION

- Do not use the drying function after applying a chlorine bleach agent to the laundry during a wash or drying cycle. Otherwise, the laundry may become discolored or the material may be damaged.
- Do not use the drying function for clothing with fur lining or made from acrylic material. This may result in the drying function being degraded.
- Do not touch the insides of the drum or the washing machine surface during or just after drying as it may be hot. This may result in burns.








52 English




Emergency drain


In case of a power failure, drain the water inside the drum before taking out the laundry.

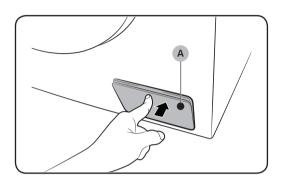

- **1.** Power off and unplug the washing machine from the electrical outlet.
- **2.** Gently press the top area of the **filte** cover (A) to open.

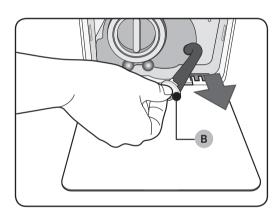

3. Put an empty, spacious container around the cover, and stretch the emergency drain tube to the container while holding the **tube cap (B)**.

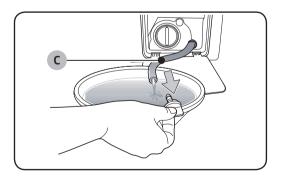

- **4.** Open the tube cap and let water in the emergency drain tube (C) flow into the container.
- **5.** When done, close the tube cap, and reinsert the tube. Then, close the filter cover.



Use a spacious container because the water in the drum may be more than expected.







Maintenance

Cleaning

Surface of the washing machine

Use a soft cloth with a nonabrasive household detergent. Do not spray water onto the washing machine.

Add Door



- **1.** Open the Add Door.
- 2. Use a wet cloth to clean the Add Door.
 - Do not use cleaning agents.
 Discolouration may occur.
 - Use caution when cleaning the rubber packing and the locking mechanism (A).
 - Dust off the window area regularly.
- **3.** Wipe up and close the Add Door until you hear a clicking sound.

!CAUTION

- Do not apply force on the Add Door. It may break.
- Do not leave the Add Door open while the machine is operating.
- Do not put heavy objects on the Add Door at any time.
- To prevent physical injury, do not touch the Add Door while the drum is rotating.
- Do not open the Add Door while the machine is operating. This may cause physical injury.
- Do not manipulate the feature panel while the Add Door is open. This may cause physical injury or system failure.
- Do not input objects other than laundry.
- Do not input bulky items to the drum through the Add Door.
- Do not pull out the rubber packing of the Add Door when cleaning. This may cause damage.









Mesh filter

Clean the mesh filter of the water hose once or twice a year.

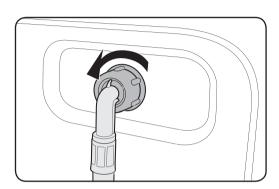

- **1.** Turn off the washing machine, and unplug the power cord.
- **2.** Close the water tap.
- **3.** Loosen and disconnect the water hose from the back of the washing machine. Cover the hose with a cloth to prevent water from gushing out.

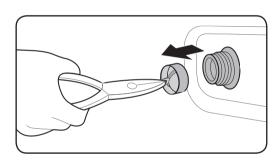


- **4.** Use pliers to pull out the mesh filter from the inlet valve.
- **5.** Submerge the mesh filter deeply in water so that the threaded connector is also submerged.
- **6.** Dry the mesh filter completely in the shade.
- **7.** Reinsert the mesh filter into the inlet valve, and reconnect the water hose to the inlet valve.
- **8.** Open the water tap.

NOTE

 If the mesh filter is clogged, an information code of "4C" appears on the screen.








Maintenance


Pump filter


It is advisable to clean the pump filter 5 or 6 times a year to prevent its clogging. A clogged pump filter may reduce the bubble effect.

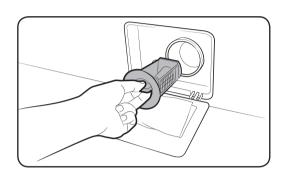


- **1.** Turn off the washing machine, and unplug the power cord.
- **2.** Drain the remaining water inside the drum drum. See the "Emergency drain" section.
- **3.** Gently press the top area of the **filte** cover to open.
- **4.** Turn the pump filter knob to the left, and drain off the remaining water.



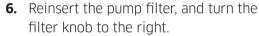

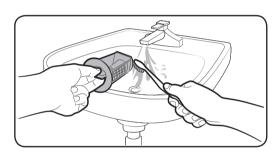

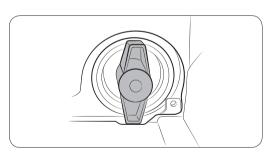

■ NOTE

- Some pump filters feature a safety knob that is designed to prevent accidents by children. To open the safety knob of the pump filter, push in and turn it anticlockwise. The spring mechanism of the safety knob helps open the filter.
- To close the safety knob of the pump filter, turn it clockwise. The spring makes a rattling sound, which is normal.

NOTE

If the pump filter is clogged, an information code of "5C" appears on the screen.

! CAUTION


- Make sure the filter knob is closed properly after cleaning the filter. Otherwise, this may cause a leak.
- Make sure the filter is inserted properly after cleaning it. Otherwise, this may cause an operational failure or a leak.









Detergent Drawer

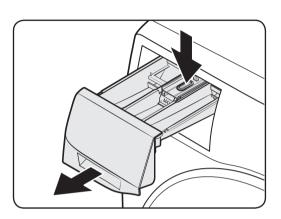

1. While holding down the **release lever** inside the drawer, slide open the drawer.

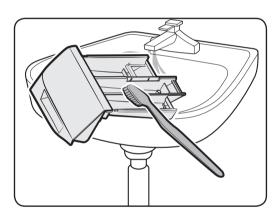

2. Clean the drawer components in flowing water using a soft brush.

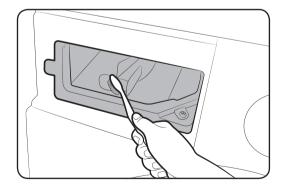

- **3.** Clean the drawer recess using a soft brush.
- **4.** Reinsert the release lever and the Liquid detergent guide to the drawer.
- **5.** Slide the drawer inward to close it.



To remove remaining detergent, perform the RINSE+SPIN cycle with the drum being empty.





Maintenance

Recovery from freezing

The washing machine may freeze when it drops below 0 °C.

- 1. Turn off the washing machine, and unplug the power cord.
- **2.** Pour warm water over the water tap to loosen the water hose.
- **3.** Disconnect the water hose, and soak it in warm water.
- **4.** Pour warm water into the drum and leave it for about 10 minutes.
- **5.** Reconnect the water hose to the water tap.



If the washing machine still doesn't operate normally, repeat the above steps until it operates normally.

Care against an extended time of disuse

Avoid leaving the washing machine unused for an extended time. If this is the case, drain the washing machine and unplug the power cord.

- 1. Turn the Cycle Selector to select a RINSE+SPIN.
- **2.** Empty the drum, and press and hold **Start/Pause** (Hold to Start).
- **3.** When the cycle is complete, close the water tap and disconnect the water hose.
- **4.** Turn off the washing machine, and unplug the power cord.
- **5.** Open the door to let air circulate through the drum.







Checkpoints

If you encounter a problem with the washing machine, first check the table below and try the suggestions.

Problem	Action
Does not start.	 Make sure the washing machine is plugged in. Make sure the door is properly closed. Make sure the water taps are open. Make sure to press or tap Start/Pause (Hold to Start) to start the washing machine. Make sure Child Lock ⊕ is not activated. Before the washing machine starts to fill, it will make a series of clicking noises to check the door lock and does a quick drain. Check the fuse or reset the circuit breaker.
Water supply is insufficient, or no water is supplied.	 Fully open the water tap. Make sure the door is properly closed. Make sure the water supply hose is not frozen. Make sure the water supply hose is not kinked or clogged. Make sure there is sufficient water pressure.
After a cycle, detergent remains in the detergent drawer.	 Make sure the washing machine is running with sufficient water pressure. Make sure the detergent is added to the centre of the detergent drawer. Make sure the rinse cap is inserted properly. If using granular detergent, make sure the detergent selector is in the upper position. Remove the rinse cap and clean the detergent drawer.
Excessive vibrations or makes noise.	 Make sure the washing machine is installed on a level, solid floor that is not slippery. If the floor is not level, use the levelling feet to adjust the height of the washing machine. Make sure the shipping bolts are removed. Make sure the washing machine is not contacting any other object. Make sure the laundry load is balanced. The motor can cause noise during normal operation. Overalls or metal-decorated clothes can cause noise while being washed. This is normal. Metal objects such as coins can cause noise. After washing, remove these objects from the drum or filter case.









Problem	Action	
Does not drain and/ or spin.	 Make sure the drain hose is straightened all the way to the drain system. If you encounter a drain restriction, call for service. Make sure the debris filter is not clogged. Close the door and press or tap Start/Pause (Hold to Start). For your safety, the washing machine will not tumble or spin unless the door is closed. Make sure the drain hose is not frozen or clogged. Make sure the drain hose is connected to a drain system that is not clogged. If the washing machine is not supplied with sufficient power, the washing machine temporarily will not drain or spin. As soon as the washing machine regains sufficient power, it will operate normally. 	
The door does not open.	 Press or tap Start/Pause (Hold to Start) to stop the washing machine. It may take a few moments for the door lock mechanism to disengage. The door will not open until 3 minutes after the washing machine has stopped or the power turned off. Make sure all the water in the drum is drained. The door may not open if water remains in the drum. Drain the drum and open the door manually. Make sure the door lock light is off. The door lock light turns off after the washing machine has drained. 	
Excessive suds.	 Make sure you use the recommended types of detergent as appropriate. Use high efficiency (HE) detergent to prevent oversudsing. Reduce the detergent amount for soft water, small loads, or lightly soiled loads. Non-HE detergent is not recommended. 	
Cannot apply additional detergent.	Make sure the remaining amount of detergent and fabric softener is not over the limit.	









Problem	Action	
Stops.	 Plug the power cord into a live electrical outlet. Check the fuse or reset the circuit breaker. Close the door and press the Start/Pause (Hold to Start) button to start the washing machine. For your safety, the washing machine will not tumble or spin unless the door is closed. Before the washing machine starts to fill, it will make a series of clicking noises to check the door lock and does a quick drain. There may be a pause or soak period in the cycle. Wait briefly and the washing machine may start. Make sure the mesh filter of the water supply hose at the water taps are not clogged. Periodically clean the mesh filter. If the washing machine is not supplied with sufficient power, the washing machine temporarily will not drain or spin. As soon as the washing machine regains sufficient power, it will operate normally. 	
Fills with the wrong water temperature.	 Fully open both taps. Make sure the temperature selection is correct. Make sure the hoses are connected to the correct taps. Flush water lines. Make sure the water heater is set to supply a minimum 120 °F (49 °C) hot water at the tap. Also, check the water heater capacity and recovery rate. Disconnect the hoses and clean the mesh filter. The mesh filter may be clogged. While the washing machine fills, the water temperature may change as the automatic temperature control feature checks incoming water temperature. This is normal. While the washing machine fills, you may notice just hot and/or just cold water going through the dispenser when cold or warm temperatures are selected. This is a normal function of the automatic temperature control feature as the washing machine determines the water temperature. 	
Load is wet at the end of a cycle.	 Use the High or Extra High spin speed. Use high efficiency (HE) detergent to reduce oversudsing. Load is too small. Small loads (one or two items) may become unbalanced and not spin completely. Make sure the drain hose is not kinked or clogged. 	









Problem	Action
Leaks water.	 Make sure the door is properly closed. Make sure all hose connections are tight. Make sure the end of the drain hose is correctly inserted and secured to the drain system. Avoid overloading. Use high efficiency (HE) detergent to prevent oversudsing.
Has odours.	 Excessive suds collect in recesses and can cause foul odours. Run cleansing cycles to sanitize periodically. Clean the door seal (diaphragm). Dry the washing machine interior after a cycle has finished.
No bubbles are seen (Bubbleshot models only).	Overloading may screen bubbles.Severely contaminated laundry may not generate bubbles.
Can I open the Add Door at any time?	 The Add Door can be opened only when the ¼ indicator appears. However, it does not open in the following cases: When the boiling or drying process is running and the internal temperature becomes high. If you set the Child Lock for safety reasons. When the drum wash or drum drying cycle is running that does not involve additional laundry.

If a problem persists, contact a local Samsung service centre.







Information codes

If the washing machine fails to operate, you may see an information code on the screen. Check the table below and try the suggestions.

Code	Action	
4C	 Water is not supplied. Make sure the water taps are open. Make sure the water hoses are not clogged. Make sure the water taps are not frozen. Make sure the washing machine is operating with sufficient water pressure. Make sure that the cold water tap and the hot water tap are properly connected. Clean the mesh filter as it may be clogged. NOTE When the washer displays the "4C" code, the washer do draining for 3 minutes. During this time, the Power button is inoperative. 	
4C2	Make sure the cold water supply hose is firmly connected to the cold water tap. If it is connected to the hot water tap, the laundry may be deformed with some cycles.	
5C	 Water is not draining. Make sure the drain hose is not frozen or clogged. Make sure the drain hose is positioned correctly, depending or the connection type. Clean the debris filter as it may be clogged. Make sure the drain hose is straightened all the way to the drain system. If the information code remains, contact a customer service centre. 	
DC	 Operating the washer with the door open. Make sure the door is properly closed. Make sure laundry is not caught in the door. 	
DC1	 The Main Door lock/unlock is not working properly. Turn the machine off, and restart the cycle. If the information code remains, contact a customer service centre. 	









Code	Action
DC3	 The Add Door lock/unlock is not working properly. Turn the machine off, and restart the cycle. If the information code remains, contact a customer service centre.
OC	 Water is overflowed. Restart after spinning. If the information code remains on the display, contact a local Samsung service centre.
LC, LC1	 Check the drain hose. Make sure the end of the drain hose is placed on the floor. Make sure the drain hose is not clogged. If the information code remains, contact a customer service centre. NOTE When the washer displays the "LC,LC1" code, the washer do draining for 3 minutes. During this time, the Power button is inoperative.
FC	Check the fan motor.Power off and power the machine on after 2-3 minutes, and then try again.
UB	 Spinning does not work. Make sure laundry is spread out evenly. Make sure the washing machine is on a flat, stable surface. Redistribute the load. If only one item of clothing needs washing, such as a bathrobe or pair of jeans, the final spin result might be unsatisfactory, and an "UB" check message will be shown in the display.
3C	 Check the motor for operation. Try restarting the cycle. If the information code remains, contact a customer service centre.
ЗСР	 Check the pulsator motor for operation. Try restarting the cycle. If the information code remains, contact a customer service centre.

(









Code	Action	
UC	 The electronic control needs to be checked (Over Voltage Error). Check the PCB and wire harness. Check if power is supplied properly. If the information code remains, contact a customer service centre. 	
	 Low voltage detected Check if the power cord is plugged in. If the information code remains, contact a customer service centre. 	
НС	 High temperature heating check If the information code remains, contact a customer service centre. 	
1C	 The Water Level sensor is not working properly. Try power off and restarting the cycle. Check WaterLevel Sensor wire harness. If the information code remains, contact a customer service centre. NOTE When the washer displays the "1C" code, the washer do draining for 3 minutes. During this time, the Power button is inoperative. 	
8C	 The MEMS sensor is not working properly. Turn the machine off, and restart the cycle. If the information code remains, contact a customer service centre. 	
AC	 Check communications between main and sub PBAs. Try power off and restarting the cycle. If the information code remains, contact a customer service centre. 	
AC6	 Check communications between main and inverter PBAs. Depending on the state, the machine may automatically returns to normal operation. Turn the machine off, and restart the cycle. If the information code remains, contact a customer service centre. 	









Code	Action
DDC, ddC	 This message appears when you open the Add Door without pressing Start/Pause (Hold to Start). If this happens, do one of the following: Press the Add Door to close properly. Then, press and hold Start/Pause (Hold to Start) and try again. To add laundry, open the Add Door and input laundry. Close the Add Door properly. Then, press and hold Start/Pause (Hold to Start) to resume operation.

If any information code keeps appearing on the screen, contact a local Samsung service centre.









Specifications

Fabric care chart

The following symbols provide garment care directions. The care labels include four symbols in this order: washing, bleaching, drying and ironing (and dry cleaning when necessary). The use of symbols ensures consistency among garment manufacturers of domestic and imported items. Follow the care label directions to maximize garment life and reduce laundry problems.

	Resistant material	\boxtimes	Do not iron
	Delicate fabric	A	Can be dry cleaned using any solvent
95 95	Item can be washed at 95 °C	0	Dry Clean
60 60	Item can be washed at 60 °C	Р	Dry clean with perchloride, lighter fuel, pure alcohol or R113 only
40/40/	Item can be washed at 40 °C	F	Dry clean with aviation fuel, pure alcohol or R113 only
30 30	Item can be washed at 30 °C	\otimes	Do not dry clean
	Hand wash only		Dry flat
\bowtie	Dry clean only		Can be hung to dry
CI	Can be bleached in cold water		Dry on clothes hanger
×	Do not bleach	\odot	Tumble dry, normal heat
	Can be ironed at 200 °C max	<u></u>	Tumble dry, reduced heat
	Can be ironed at 150 °C max		Do not tumble dry
	Can be ironed at 100 °C max		









Specifications

Protecting the environment

- This appliance is manufactured from recyclable materials. If you decide to dispose of this
 appliance, please observe local waste disposal regulations. Cut off the power cord so that
 the appliance cannot be connected to a power source. Remove the door so that animals
 and small children cannot get trapped inside the appliance.
- Do not exceed the detergent quantities recommended in the detergent manufacturer's instructions.
- Use stain removal products and bleaches before the wash cycle only when strictly necessary.
- Save water and electricity by only washing full loads (the exact amount depends upon the program used).









Specification sheet

" * " Asterisk(s) means variant model and can be varied (0-9) or (A-Z).


Туре		Front loading washing machine		
М	Model name		WD90N64****	WD80N64****
D	imensions		W600 x D600 x H850 (mm)	
Wa	ter pressure		50-80	00 kPa
Net weight		81.0 kg	81.0 kg	
Wash and spin capacity		9.0 kg	8.0 kg	
Dry capacity		5.0 kg	5.0 kg	
	Washing 220 V		2000 W	
Power	and heating 240 V		240	0 W
consumption	Draina	220 V	160	0 W
	Drying -	240 V	1900 W	
Spin revolutions		1400 rpm		








Specifications

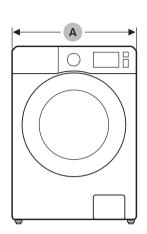

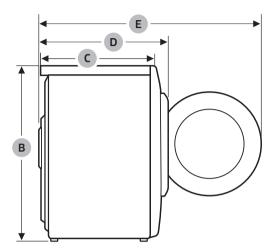

А	600 mm
В	850 mm
С	600 mm
D	680 mm
Е	1115 mm

■ NOTE

The design and specifications are subject to change without notice for quality improvement purposes.







Sheet of household combined washer-dries

According to Regulation (EU) No. 96/60/EC

" * " Asterisk(s) means variant model and can be varied (0-9) or (A-7)

Samsung		
Model Name	WD90N64****	
Energy Efficiency Class		
A (most efficient) to G (least efficient)		А
Energy Consumption		
Washing, spinning, and drying	kWh	6.12
Washing and spinning only	kWh	1.17
Washing Performance Class		
A (most efficient) to G (least efficient)		А
Water Extraction Efficiency Class		
A (most efficient) to G (least efficient)		А
Residual moisture	%	44
Maximum Spin Speed	rpm	1400
Capacity		
Washing	kg	9.0
Drying	kg	5.0
Water Consumption		
Washing, spinning, and drying	l	126
Washing and spinning only	l e	54
Program time for complete operating cycle (6 washing and 'dry cotton' drying for rated was		
Washing, spinning, and drying	min	689
Washing and spinning only	min	254
Programs to which the information on the	Wash	Cotton 60 °C + Intensive
label and the Sheet relate	Dry	Cotton Dry
Estimatd annual consumption for a 4-person ho always using the dries (200 cycles)	ousehold,	
Energy Consumption	kWh/yr	1224
Water Consumption	l	25200
Estimatd annual consumption for a 4-person hone never using the drier (200 cycles)	ousehold,	
Energy Consumption	kWh/yr	234
Water Consumption	l	10800
Noise using standard 60°C cotton washing cycle	and 'dry cotton	drying cycle

English 71







Specifications

Washing	dB (A) re 1 pW	49
Spinning	dB (A) re 1 pW	73
Drying	dB (A) re 1 pW	62

The drying energy consumption data has been measured under the conditions specified in Standard EN50229.

- First drying should be performed with 5 kg load (the load consist: 2 sheets and 6 pillowcases and 18 towels) by selecting Cotton Dry;
- Second drying should be performed with 4 kg load (the load consist: 2 sheets and 8 pillowcases and 5 towels) by selecting Cotton Dry;

(1 or 2 towels can be added or removed for setting weight.)









Sheet of household combined washer-dries

According to Regulation (EU) No. 96/60/EC

" * " Asterisk(s) means variant model and can be varied (0-9) or (A-Z).

Samsung		
Model Name		WD80N64****
Energy Efficiency Class		
A (most efficient) to G (least efficient)		А
Energy Consumption		
Washing, spinning, and drying	kWh	5.44
Washing and spinning only	kWh	1.04
Washing Performance Class		
A (most efficient) to G (least efficient)		А
Water Extraction Efficiency Class		
A (most efficient) to G (least efficient)		А
Residual moisture	%	44
Maximum Spin Speed	rpm	1400
Capacity		
Washing	kg	8.0
Drying	kg	5.0
Water Consumption		
Washing, spinning, and drying	l	112
Washing and spinning only	l	48
Program time for complete operating cycle (6 washing and 'dry cotton' drying for rated was		
Washing, spinning, and drying	min	664
Washing and spinning only	min	254
Programs to which the information on the	Wash	Cotton 60 °C + Intensive
label and the Sheet relate	Dry	Cotton Dry
Estimatd annual consumption for a 4-person ho always using the dries (200 cycles)	ousehold,	
Energy Consumption	kWh/yr	1088
Water Consumption	l	22400
Estimatd annual consumption for a 4-person honeover using the drier (200 cycles)	ousehold,	
Energy Consumption	kWh/yr	208
Water Consumption	l	9600
Noise using standard 60°C cotton washing cycle	e and 'dry cotton	' drying cycle



Specifications

Washing	dB (A) re 1 pW	49
Spinning	dB (A) re 1 pW	73
Drying	dB (A) re 1 pW	62

The drying energy consumption data has been measured under the conditions specified in Standard EN50229.

- First drying should be performed with 5 kg load (the load consist: 2 sheets and 6 pillowcases and 18 towels) by selecting Cotton Dry;
- Second drying should be performed with 3 kg load (the load consist: 1 sheets and 6 pillowcases and 7 towels) by selecting Cotton Dry;

(1 or 2 towels can be added or removed for setting weight.)









(

Memo







SAMSUNG

QUESTIONS OR COMMENTS?

COUNTRY	CALL	OR VISIT US ONLINE AT
UK	0330 SAMSUNG (7267864)	www.samsung.com/uk/support
IRELAND (EIRE)	0818 717100	www.samsung.com/ie/support





