

Washing machine

siemens-home.bsh-group.com/welcome

en Instruction Manual and Installation Instructions

Register your product online

Your new washing machine

You have chosen a Siemens washing machine.

Please take a few minutes to read and become familiar with the advantages of your washing machine.

To meet the high quality demands required by Siemens, every washing machine that leaves our factory is carefully checked to ensure that it functions correctly and is in perfect condition.

For more information on our products, accessories, replacement parts and services, see our website www.siemens-home.bsh-group.com or contact our after-sales service centres.

If the operating and installation instructions describe different models, any differences will be pointed out at the relevant points in the text.



Read these operating and installation instructions before switching on the washing machine.

Display rules

▲ Warning!

This combination of symbol and signal word indicates a possibly dangerous situation. Not heeding the warning can cause death or injuries.

Caution!

This signal word indicates a possibly dangerous situation. Not heeding the caution can cause property and/or environmental damage.

Note/tip

Information about the optimum use of the appliance/any other useful information.

1. 2. 3. / a) b) c)

The steps are represented by numbers or letters.

/ -

Lists are represented by a small box or a dash.

Contents

\$ _₿	Intended use	4
Child Insta Oper Clear	Safety instructions Iren/people/pets Ilation ration ning/Maintenance	5 6 8 .10
Pack Tips	Environmental protection aging/used appliance on economical use	.11 . 11 . 11
Stand Safel Insta Joist Insta draw Insta kitch Hose Wate Wate Align Elect Befor Trans	Positioning and connecting dard accessories	.12 .12 .13 .13 .14 .14 .14 .14 .15 .16 .17 .18 .18 .19 .19
Appli Cont Touc	Get to know your appliance iance	.21 .21 .22 .22
Switc selec Puttir Prog Prog Optic Start	Operating the appliance ching on the appliance/ cting a programme ng the washing in the drum ramme settings ramme features the programme	.24 .24 .25 .27 .29 .30

Adding more laundry or removing laundry Cancel the programme Programme end	.31 .31 .31
Appliance menu. Childproof lock <	. 31 .32 .32 .32
Home Connect	. 35
Calling up the Home Connect menu Connecting to the home network and the Home Connect app	.35 .36
Energy management	.38 .38 .39 .39 .39 .39 .39
Laundry	. 40
Protecting your laundry and appliance Sorting laundry Starching Dyeing/bleaching	.40 .40 .41 .41
Detergent	. 41 .41
Saving energy and detergent	.42
Selectable programme	. 43 .43
Sensors Unbalanced load detection system. Aqua-Sensors	. 47 .47 .47
Cleaning and maintenance Appliance housing/control panel Drum	. 47 . 47 . 47

Descaling	}
blocked)
blocked 50)
Faults and what to do about	
them	
Emergency release 51 Faults and what to do about them 52	2
After-sales service 55	5
Consumption values table 56	5
Technical data 57	,
Aqua Stop warranty 58	3

[§]_≫ Intended use

- This appliance is intended for private domestic use only.
- Do not install or operate this appliance anywhere that is liable to experience frost and/or outdoor conditions. There is a risk that the appliance will be damaged if residual water in it freezes. If hoses freeze up, they may crack/burst.
- This appliance must only be used for washing domestic laundry, consisting of machine-washable items and hand-washable woollens (see label on item). Using the appliance for any other purpose is outside of the scope of its intended application and is forbidden.
- This appliance is suitable for operation with mains water and commercially available detergents and care products (must be suitable for use in washing machines).
- This appliance is intended for use up to a maximum height of 4000 metres above sea level.

Before you switch on the appliance:

Check that there is no visible damage to the appliance. Do not operate the appliance if it is damaged. Should you have any problems, please contact your specialist dealer or our customer service.

Read and follow the operating and installation instructions and all other information provided with this appliance.

Retain the documents for subsequent use or for subsequent owners.

A Safety instructions

The following safety information and warnings are provided to protect you from injury and to prevent material damage to your surroundings.

It is nevertheless important to take the necessary precautions and to proceed with care when installing, maintaining, cleaning and operating the appliance.

Children/people/pets

▲ Warning Risk of death!

Children and other people who are unable to assess the risks involved when using the appliance may injure themselves or may find themselves in life-threatening situations. Therefore please note:

- The appliance may be used by children over the age of 8 years and by persons with reduced physical, sensory or mental capacity or by persons with a lack of experience or knowledge as long as they are supervised or have received instruction on how to use the appliance safely and they have understood the potential risks of using the appliance.
- Children must not play with this appliance.

- Do not allow children to clean or maintain this appliance unsupervised.
- Keep children under 3 years and pets away from this appliance.
- Do not leave the appliance unattended when children or other people who are unable to assess the risks are in the vicinity.

▲ Warning Risk of death!

Children may lock themselves inside appliances and find themselves in a life-threatening situation.

- Do not position the appliance behind a door, as this may obstruct the appliance door or prevent it from opening completely.
- Once an appliance has reached the end of its life, pull the mains plug from the socket **before** severing the mains cable, and then destroy the lock on the appliance door.

Marning Risk of suffocation!

If allowed to play with the packaging/plastic film or packing components, children may become caught in these or pull them over their heads and suffocate.

Keep packaging, plastic film and packing components away from children.

▲ Warning Risk of poisoning!

Detergents and care products may result in poisoning if consumed.

If accidentally swallowed, seek medical advice. Keep detergents and care products out of the reach of children.

▲ Warning Risk of burns!

When washing at high temperatures, the glass in the appliance door becomes hot. Stop children from touching the appliance door when it is hot.

Marning Eye/skin irritation!

Contact with detergents or care products may cause eye/skin irritation.

Rinse eyes/skin thoroughly if they/it come(s) into contact with detergents or care products. Keep detergents and care products out of the reach of children.

Installation

Warning Risk of electric shock/fire/ material damage/damage to the appliance!

If the appliance is not installed properly, this may lead to a dangerous situation. Ensure the following:

- The mains voltage on your power socket must match the rated voltage specified on the appliance (identification plate). The connected loads and the required fuse protection are specified on the identification plate.
- The mains plug and the protective contact socket must match and the earthing system must be correctly installed.
- The installation must have an adequate cross section.

- The mains plug must be freely accessible at all times. If this is not possible, in order to comply with the relevant safety regulations, a switch (all pole disconnection) must be built into the permanent installation in accordance with electrical installation regulations.
- If using a residual current circuit breaker, only use one that bears the following mark: A line presence of this mark is the only way to be sure that it fulfils all the applicable regulations.

\Lambda Warning

Risk of electric shock/fire/ material damage/damage to the appliance!

If the appliance's mains cable is altered or damaged, this may result in electric shock, short circuiting or fire due to overheating.

The mains cable must not be kinked, crushed or altered, and must not come into contact with any heat sources.

\Lambda Warning

Risk of fire/material damage/ damage to the appliance!

The use of extension cords or power strips may result in fire due to overheating or short circuiting. Connect the appliance directly to an earthed socket that has been correctly installed. Do not use extension cords, power strips or multi-way couplers.

Warning Risk of injury/material damage/damage to the appliance!

- The appliance may vibrate or move when in operation, potentially resulting in injury or material damage.
 Place the appliance on a clean, even, solid surface and, using a spirit level to guide you, level it with the screw-in feet.
- If you take hold of any of the appliance's protruding parts (e.g. the appliance door) in order to lift or move it, these parts may break off and cause injury.

Do not take hold of any of the appliance's protruding parts in order to move the appliance.

▲ Warning Risk of injury!

 The appliance is very heavy. Lifting it may result in injury. Do not lift the appliance on your own.

- The appliance has sharp edges on which you could cut your hands.
 Do not take hold of the appliance by its sharp edges. Wear protective gloves to lift it.
- If the hoses and mains cables are not correctly routed, they may constitute a tripping hazard, which may result in injury.
 Route hoses and cables such that they do not constitute a tripping hazard.

Caution!

Material damage/damage to the appliance

 If the water pressure is too high or too low, the appliance may not be able to operate properly, and it may also result in material damage or damage to the appliance.
 Make sure that the water pressure in the water supply facility is at least

facility is at least 100 kPa (1 bar), and does not exceed

1000 kPa (10 bar).

 If the water hoses are altered or damaged, this may result in material damage or damage to the appliance. The water hoses must not be kinked, crushed, altered or severed.

- The use of hoses supplied by other brands to connect to the water supply may result in material damage or damage to the appliance. Use the hoses supplied with the appliance or genuine spare part hoses only.
- The appliance is secured for transportation by transport locking devices. If the transport locking devices are not removed before the appliance is operated, this may result in damage to the appliance.

It is important to completely remove all transport locking devices before using the appliance for the first time. Make sure that you retain these transport locking devices separately. It is important to refit the transport locking devices if the appliance is to be transported, in order to prevent the appliance from being damaged in transit.

Operation

▲ Warning Risk of explosions/fire!

Laundry that has been pretreated with cleaning agents that contain solvents, e.g. stain remover/cleaning solvent, may cause an explosion in the drum. Rinse the laundry thoroughly with water before washing it in the machine.

▲ Warning Risk of poisoning!

Poisonous fumes may be given off by cleaning agents that contain solvents, e.g. cleaning solvent.

Do not use cleaning agents that contain solvents.

▲ Warning Risk of injury!

 If you support your weight/sit on the appliance door when it is open, the appliance may tip over, which may result in injury.

Do not support your weight on the appliance door when it is open.

 If you climb onto the appliance, the worktop may break, which may result in injury.

Do not climb onto the appliance.

 If you reach into the drum while it is still rotating, you risk injuring your hands. Wait until the drum has stopped rotating.

▲ Warning Risk of scalding!

When washing at high temperatures, there is a risk of scalding if you come into contact with hot detergent solution (e.g. when draining hot detergent solution into a washbasin). Do not reach into the hot detergent solution.

Warning Irritation of the respiratory tract/eyes!

This appliance runs programmes that use active oxygen. Active oxygen can irritate the mucosa and cause eyes to water.

Do not open the door using the emergency release if a programme is running with active oxygen. Wait until the door has been released.

Marning Eye/skin irritation!

Detergent and care products may spray out if the detergent drawer is opened while the appliance is in operation. Rinse eyes/skin thoroughly if they/it come(s) into contact with detergents or care products. If accidentally swallowed, seek medical advice.

Caution!

Material damage/damage to the appliance

 If the amount of laundry in the appliance exceeds its maximum load capacity, it may not be able to operate properly, or this may result in material damage or damage to the appliance.

Do not exceed the maximum load capacity of dry laundry. Make sure you comply with the maximum load capacities specified for each of the programs.

 If you pour the wrong quantity of detergent or cleaning agent into the appliance, this may result in material damage or damage to the appliance. Use detergents/care products/cleaning agents and softeners in accordance with the manufacturers' instructions.

Cleaning/Maintenance

▲ Warning Risk of death!

The appliance is powered by electricity. There is a risk of electric shock if you come into contact with live components. Therefore please note:

 Switch off the appliance. Disconnect the appliance from the power supply (pull out the plug).

- Never take hold of the mains plug with wet hands.
- When removing the mains plug from the socket, always take hold of the plug itself and never the mains cable, otherwise this may damage the mains cable.
- Do not make any technical modifications to the appliance or its features.
- Repairs and any other work on the appliance must only be conducted by our customer service or by an electrician. The same applies for replacing the mains cable (when necessary).
- Spare mains cables can be ordered from our customer service.

▲ Warning Risk of poisoning!

Poisonous fumes may be given off by cleaning agents that contain solvents, e.g. cleaning solvent.

Do not use cleaning agents that contain solvents.

\land Warning

Risk of electric shock/material damage/damage to the appliance!

If moisture penetrates the appliance, this may cause it to short circuit.

Do not use a pressure washer, steam cleaner, hose or spray gun to clean your appliance.

A Warning Risk of injury/material damage/damage to the appliance!

The use of spare parts and accessories supplied by other brands is dangerous and may result in injury, material damage or damage to the appliance. For safety reasons, use genuine spare parts and accessories only.

Caution!

Material damage/damage to the appliance

Cleaning agents and agents for pretreating laundry (e.g. stain removers, prewash sprays, etc.) may cause damage if they come into contact with the surfaces of the appliance. Therefore please note:

- Do not allow these agents to come into contact with the surfaces of the appliance.
- Clean the appliance with nothing but water and a soft, damp cloth.
- Remove any detergent, spray or other residues immediately.

Environmental protection

Packaging/used appliance

Dispose of packaging in an environmentally-responsible manner.

This appliance is labelled in accordance with European Directive 2012/19/EU concerning used electrical and electronic appliances (waste electrical and electronic equipment - WEEE). The guideline determines the framework for the return and recycling of used appliances as applicable throughout the

Tips on economical use

FU.

- Always fill the appliance with the maximum amount of laundry for each programme. → Page 43
- Wash normally soiled laundry without pretreating.
- For light and normal soiling in laundry, you can save energy and detergent.
- The selectable temperatures apply to the care labels on the textiles. The temperatures in the appliance may deviate from this so that you get the optimum mix of energy-saving and washing results.

- Energy-saving mode: If the appliance is not operated for a prolonged period (approx. 5 minutes), the Touch-Display lighting goes out before the programme starts and when the programme has ended to save energy, ▷II flashes. Touch any area of Touch-Display to activate the display backlighting. When the programme is running, most of the Touch-Display lighting goes out. Touch any area of Touch-Display to re-activate the lighting.
- Automatic standby: If the appliance is not operated for a prolonged period (at least 20 minutes, depending on the water level inside of appliance), it will automatically be put in standby mode before the programme starts or after the programme has ended. Press the power button (b) again to switch on the appliance.

Note: If Wi-Fi is switched on at the appliance, when it is in Energy saving mode, the appliance will not automatically be put in standby mode.

 If the washing will be dried in a dryer, select the spin speed according to the dryer manufacturer's instructions.

Positioning and connecting

Standard accessories

Note: Check the appliance for transport damage. Never use a damaged appliance. If you have any complaints, contact the dealer from whom you purchased the appliance or our Customer Service.





- A Mains lead
- B Bag:
 - Installation and operating instructions
 - Customer Service location directory*
 - Warranty*
 - Supplementary sheet for the installation and operating instructions*
 - Cover caps for openings after the transport braces have been removed
 - Home Connect Installation Guides*
- C Water inlet hose on aquaStop models
- D Water outlet hose
- E Elbow for securing the water outlet hose
- F Cold water inlet hose on Standard/Aqua-Secure models
- * Depending on the model

In addition, a hose clamp (24 - 40 mm diameter, available from specialist retailers) is required to connect the water outlet hose to a siphon.

Useful tool

- Spirit level for aligning
- Wrench with:
 - WAF13 for loosening the transport braces and
 - WAF17 for aligning the appliance feet

Safety instructions

Marning Risk of injury!

 The appliance is very heavy. Be careful when lifting/transporting the appliance.

- When the appliance is lifted by its protruding parts (e.g. the appliance door), the components may break off and cause injuries.
 Do not lift the appliance by protruding parts.
- If the hose and mains cables are not routed properly, there is a risk of tripping and injury.
 Lay hoses and cables in such a way that there is no risk of tripping.

Caution!

Damage to the appliance

Frozen hoses may rip/burst. Do not install the appliance in areas exposed to frost or outdoors.

Caution! Water damage

The connection points for the water supply hose and water drain hose are under high water pressure. To prevent leaks and water damage, you must follow the instructions in this section.

Notes

- In addition to the safety information listed here, the local water and electricity supplier may have special requirements.
- If in doubt, have the appliance connected by a specialist.

Installation surface

Note: The appliance must be stable aligned so that it does not move around.

- The installation surface must be firm and level.
- Soft floors/floor coverings are not suitable.

Installation on a base or a wooden joist floor

Caution!

Damage to the appliance

The appliance may "wander" and tip/ topple from the base when spinning. The feet of the appliance must be secured with holding brackets. Order no. WMZ 2200, WX 975600, CZ 110600, Z 7080X0.

Note: On wooden joist floors, install the appliance:

- In a corner, if possible,
- On a water-resistant wooden board (min. 30 mm thick) which is screwed tightly to the floor.

Installation on a platform with drawer*

Platform order no.: WZ20495.

Installing the appliance in a kitchenette

Warning Risk of death!

There is a risk of electric shock if you touch live components.

Do not remove the appliance covering plate.

Notes

- Recess width of 60 cm required.
- Only install the appliance underneath a continuous worktop that is securely connected to adjacent cabinets.

Removing the transport locks

Caution! Damage to the appliance

 The appliance is secured for transportation using transport locks. If the transport locks are not removed, the appliance may become damaged when it is operated.

Before using the appliance for the first time, make sure that you completely remove all four transport locks. Keep the locks in a safe place.

To prevent transport damage from occurring if the appliance is moved at a later date, you must refit the transport locks before transporting the appliance.

Note: Keep the screws and sleeves in a safe place.



1. Take the hoses out of the holders.



* Depending on the model

2. Unscrew and remove all four transport brace screws.



a) Remove the mains cable from the holders.



b) Remove the sleeves.



4. Lock the covers firmly in place by applying pressure to the snap-in hooks.



Hose and cable lengths

Connection on left side



- <u>1</u> ~ 105 cm
- 2 ~ 100 cm
- <u>3</u> ~ 150 cm
- 4 0-max. 100 cm

3. Fit the covers.



or

Connection on right side



- 1 ~ 75 cm 2 ~ 145 cm
 - <u>3</u> ~ 190 cm
 - 4 0-max. 100 cm

Tip: The following are available from specialist dealers/the after-sales service:

- An extension for Aqua-Stop or cold water supply hose (approx. 2.50 m); order no. WMZ2380, WZ10130, CZ11350, Z7070X0.
- A longer supply hose (approx. 2.20 m) for standard model.

Water inlet

Warning Risk of death!

There is a risk of electric shock if you touch live components.

Do not immerse the Aqua-Stop safety valve* in water (it contains an electric valve).

* Depending on the model

Observe the following when connecting the appliance:

Notes

- Only operate the appliance using cold mains water.
- Do not connect the appliance to the mixer tap of an unpressurised hotwater boiler.

- Do not use a used supply hose. Only use the supply hose supplied or one that was purchased from an authorised specialist retailer.
- Do not bend, squash, modify or cut through the water supply hose (otherwise its strength is no longer guaranteed).
- Only tighten the screw connections by hand. If the screw connections are tightened too much with a tool (pliers), the thread may be damaged.

Optimum water pressure in the supply network

At least 100 kPa (1 bar)

Maximum 1000 kPa (10 bar)

When the tap is open, the water flow is at least 8 l/min.

If the water pressure is higher than this, a pressure-reducing valve must be installed.

Connection

- Connect the water supply hose to the water tap (³/₄" = 26.4 mm) and to the appliance:
 - Model: Standard



Model: Aqua-Secure



- Model: Aqua-Stop



Tip: Connect also an external water filter (depending on the model) between water supply hose and tap. The filter filters dirt particles out of the water.

Water filter must be cleaned regularly to remove contaminants. This will prevent blockages. See also \rightarrow separate installation and cleaning instruction for water filter.

2. Open the water tap carefully, checking the leak tightness of the connection points. The screw connection is under mains water pressure.

Water outlet

Warning Risk of scalding!

When you are washing at high temperatures, there is a risk of scalding if you come into contact with hot water (e.g. when draining hot water into a washbasin).

Do not reach into the hot water.

Caution! Water damage

If the drain hose slips out of the washbasin or the connection point during draining due to high water pressure, any escaping water may cause water damage.

Secure the drain hose so that it cannot slip out.

Caution!

Damage to the appliance/fabrics

If the end of the drain hose is immersed in the drained water, water may be sucked back into the appliance and may damage the appliance/fabrics. Make sure that:

- The plug does not block drainage from the washbasin.
- The end of the drain hose is not immersed in the drained water.
- The water drains away quickly enough.

Note: Do not kink the water drain hose or put strain on it lengthways.

Connection

Drainage into a washbasin



Drainage into a siphon

The connection point must be secured using a hose clamp with a diameter of 24 - 40 mm (available from specialist dealers).



Note: The hose clamp is not standard accessory, available from specialist dealers.

 Drainage into a plastic pipe with rubber bushing or into a drainage pit



Note: The plastic pipe is not standard accessory, available from specialist dealers.

Alignment

Level the appliance using a spirit level. Incorrect levelling may result in intense noise, vibrations and "wandering".

1. Loosen the lock nuts using a wrench, by turning it in a clockwise direction.



 Check the alignment of the appliance with a spirit level, and adjust it if necessary. Change the height by turning the appliance feet. All four appliance feet must stand firmly on the ground.



 Tighten the lock nut against the housing.
 In doing so, hold the foot tight and do not adjust its height.
 The lock nuts on all four appliance feet must be screwed tightly against the

must be screwed tightly against the housing.



Electrical connection

Marning Risk of death!

There is a risk of electric shock if you touch live components.

- Never touch or hold the mains plug with wet hands.
- Only pull out the mains cable by the plug and never by the cable, as this could damage it.

Observe the following information and ensure that:

Notes

- The mains voltage and voltage indicated on the appliance (rating plate) are the same. The connected load and fuse required are specified on the rating plate.
- The appliance is only connected to an alternating current via a properly installed earthed socket.
- The mains plug fits the socket.
- The earthing system is properly installed.
- The mains cable is only replaced by a qualified electrician (if this is necessary). Replacement mains cables are available from the aftersales service.
- No multiple plugs/couplings or extension cables are used.
- If an earth-leakage circuit breaker is used, only a type which displays this symbol is used: A Only this symbol guarantees compliance with the currently applicable regulations.
- The mains plug can be accessed at all times.
- The mains cable is not bent, squashed, modified, cut through, or in contact with heat sources.

Before washing for the first time

The appliance was inspected thoroughly before leaving the factory. To remove any residual test water, run the Drum Clean programme the first time without laundry.

Note:

- The appliance must have been installed and connected properly. → "Positioning and connecting" on page 12
- Never switch on a damaged appliance.

- 1. Insert mains plug.
- Turn the water tap on.
 Press the button till the indicator lamp lights up, release the button. The appliance is switched on.
- 4. Close the door. Do not load any laundry.
- 5. Select the Drum Clean programme.
- 6. Open the detergent drawer.
- 7. Pour approx. 1 litre of water into dispenser II.
- 8. Add standard detergent to dispenser II according to manufacturer's instructions for light soiling. Note: To prevent over sudsing, use

only half the recommended amount of detergent. Do not use any woollens or mild detergents.

- 9. Close the detergent drawer.
- 10. Select ▷III.
- 11. When the programme ends, press the U button till the indicator lamp turns off, release the button.

Your appliance is now ready for use.

Transportation

e.g. when moving home

Preparatory work:

- 1. Turn off the water tap.
- 2. Reduce the water pressure in the supply hose. \rightarrow Page 50
- 3. Drain any residual water. \rightarrow Page 49
- 4. Disconnect the appliance from the mains.
- 5. Remove the hoses.
- 6. Empty the dispensers. → "Detergent drawer and housing" on page 48

Installing the transport locks:

 Remove the covers and keep them in a safe place. Note: Use a screwdriver if necessary.





2. Insert all four sleeves.



a) Clip the hoses securely in the holders.



b) Clip the mains cable securely in the holders.



c) Insert and tighten the screws.



Before switching on the appliance again:

Notes

- The transport braces **must** be removed.
 - → "Removing the transport locks" on page 14
- Pour approx. 1 litre of water into dispenser II, select the **Rinse**, **Spin** or **Drain** programme and start. This will prevent detergent from flowing straight into the drain during the next wash.

Get to know your appliance

Appliance





Detergent drawer Control panel/touch display Loading door

Service flap

Control panel

	\bigcirc	\bigcirc
1 Touch diaplay	2	3

Touch lightly to select settings.

Door opening

Press to open the door.

You will only be able to open the door if the appliance is switched on and the programme progress allows it.

3 Main switch

Press to switch the appliance on or off (standby).

Touch display

Operating logic

Caution!

Material damage/damage to the appliance.

Exerting excessive pressure on the display may damage it. Do not use a sharp object on the display or exert excessive pressure on it.

Note: If you touch the screen near the edge, the appliance may not detect this if you have touched it outside of the detection area.



Touch the touch display with your finger to open or select an element.

Swiping



Swipe your finger over the touch display to scroll through a list, either from left to right or top to bottom.

What the symbols mean



Setting is not selected



Setting selected



Return to the higher-level screen

What the colours mean



Setting cannot be selected

White

Setting can be selected or has already been selected

Blue

Setting has been selected

Menu

After switching on the appliance:



- **1** Programmes or favourites
- 2 Time \rightarrow Page 33
- 3 Options \rightarrow Page 29
- 4 Start or Pause
- 5 Appliance menu \rightarrow Page 31
- 6 Programmes

After selecting a programme:



- 1 Programme
- 2 **Programme settings** \rightarrow *Page* 25
- 3 **Options** \rightarrow Page 29
- 4 Start or Pause
- **5** Appliance menu \rightarrow Page 31
- 6 **Programme features** \rightarrow *Page* 27

Section 2 Sectio

Switching on the appliance/ selecting a programme

Note: The appliance must be correctly installed and connected.

- 1. Switch on the appliance. Notes
 - It may take a few seconds for the appliance to switch on.
 - If you are switching the appliance on for the first time, you will need to select the language you require (you will not need to do this every time). → Page 34
- 2. Scroll through the options to find the programme you require.



Note: If you have saved programmes as favourites, switch to **Favourites** and select the programme you require from there. \rightarrow Page 29 3. Touch the required programme.



Your programme has now been selected and the associated **programme settings** and **programme features** will be displayed.

Note: If the childproof lock has been activated, you may need to deactivate it before you can make any changes on the touch display or start the programme. \rightarrow Page 32

Putting the washing in the drum

- 1. Prepare and sort the laundry.



Notes

- You can only open the door if the appliance is switched on.
- If the door will not open (e.g. due to a power cut), you can open the door manually. \rightarrow Page 51

3. Load the laundry unfolded into the drum.



Close the door.



Caution!

Exerting excessive pressure on the door may damage it.

Do not apply a high amount of pressure on the door. Caution!

Risk of material damage to the appliance or laundry.

Make sure that laundry is not trapped in the door.



Programme settings

Once you have selected a programme, you will be shown preset programme settings. Preset programme settings are recommendations for the programme you have selected and will vary.

You can find further programme settings by touching + **More**.

You can do the following to programme settings:

- Adjust them .
- Activate/deactivate them

Adjusting

1. Touch the programme setting.



The setting options will be displayed. 2. Touch or swipe your finger along the bar until the required value is selected.



Notes

- The changes will be applied immediately and do not need to be confirmed.
- The changes will not be saved permanently for the programme.

3. Touch the programme setting to return to the programme settings overview.



Activating/deactivating

- 1. Touch the programme setting.
- 2. Touch the programme setting to
- activate or deactivate it.



If a tick appears, this means that the programme setting has been activated. If there is no tick, this means that the programme setting is deactivated.

Notes

- Touch ← to return to the higher-level screen.
- Not all programme settings are available for every programme.
- Once you have started a programme, depending on how far through the programme the appliance is, it may not still be possible to select certain programme settings.

Temperature

Before and after the programme starts, you can change the set temperature depending on how far through the programme the appliance is.

The maximum temperature that can be set depends on the programme that has been selected.

Touch **I** Temperature and adjust it.

Spin

Before and after the programme starts, you can change the spin speed (in rpm; revolutions per minute) depending on how far through the programme the appliance is.

The maximum speed that can be set depends on the model and programme that has been selected.

Touch Spin and adjust it.

😅 Extra Rinse

Additional rinse cycle for particularly sensitive skin and/or for areas with very soft water.

Touch 🗟 Extra Rinse and adjust it.

Note: Additional rinse cycles extend the duration of the programme.

L Prewash

Prewash for heavily soiled laundry.

Less Ironing

Reduces creasing by means of a special spin sequence followed by fluffing and reduced spin speed.

Touch @ Less Ironing and activate or deactivate it.

Note: If *A* **Less Ironing** has been activated, the laundry will have retained a higher than average level of moisture after spinning.

🗄 Water Plus

Increased water level for gentler treatment of the laundry.

Touch 🗄 Water Plus to activate or deactivate it.

P Silent Wash

Reduced noise values thanks to a special wash and spin cycle and deactivated end signal. Especially suitable for washing at night.

Touch *** Silent Wash** to activate or deactivate it.

🖙 Soaking

Before the main wash cycle starts, the laundry remains in the water for longer to remove bad soiling. To be used for particularly stubborn soiling.

Touch 🖙 Soaking and adjust it.

Note: To avoid discolouration, only soak laundry of the same colour together.

Transe Hold

The laundry remains in the rinsing water after it has been washed.

Touch - **Rinse Hold** and activate or deactivate it.

Note: If you have selected rac Rinse Hold, the laundry remains in the rinsing water after it has been washed. You either have to spin the laundry or drain the water in order to end the programme. Only then can you remove the laundry.

AutoStains

Adjusts the washing temperature, drum movement and soaking time to the specific type of stain.

Hot or cold water, gentle or intensive washing and long or short soaking ensure that the wash programme sequence is specially adapted to each type of stain.

Touch 🕅 **AutoStains** and select the appropriate type of stain.



Note: The programme duration, number of rinse cycles and water level may vary, depending on the type of stain selected.

Programme features

Once you have selected a programme, look at the programme features.

Touch the required feature.



Delayed start

Before the programme starts, you can set the time at which you want the programme to finish.

- 1. Touch ^(C).
- 2. Slide your finger along the bar until the required number of hours and minutes are shown/the time at which you want the programme to end is shown.

Note: Once you have set the time on your appliance, you can set the time at which you want the programme to end.

If you have not set the time, you will only be able to set when the programme ends in hours and 30 minute increments.

3. Touch ⊳₪.

The programme end has now been set and your programme will start after a delay.

Note: As long as the programme has not yet started, you will still be able to load more laundry or remove some from the drum.

d Flex start

Activate the Flex start function to allow your smart energy system (Energy manager) to start your appliance once your home photovoltaic system is able to provide sufficient energy or the energy tariff is good.

Note: Your smart energy system (Energy manager) cannot start your appliance until it is connected to the appliance.

Activating Flex start

- Touch O.
 Slide your finger along the bar until the required time period is shown in hours or as a clock time. **Note:** Once you have set the time on your appliance, you can use this to set the time period. If you have not set the time or if you have deactivated it, you will only be
 - able to set the time period in hours.
- 3. Touch $\triangleright \mathbf{II}$.
- 4. Touch D.

The Flex start function has now been activated and the appliance will wait to be started by the smart energy system (Energy manager).

Notes

If the smart energy system (Energy manager) does not start the appliance, the programme will still be started before the set time period ends.

The programme will then end when the time period ends.

- To prevent the build-up of odours, the appliance is always started with Flex start such that the laundry never remains in the drum for more than 6 hours after the programme has ended.
- Any action on the appliance (such as adjusting the programme selector) will deactivate Remote start and in turn the Flex start function. If the Flex start function is deactivated by an action being performed on the appliance, the (9) Delayed start will remain active.

Adding more laundry or removing laundry

If the **Flex start** function has already been activated but the programme has not yet started, you will still be able to load more laundry or remove some from the drum.

- 1. Touch ▷II.
- 2. Open the door.
- 3. Add more laundry or remove laundry.
- 4. Close the door.
- 5. Touch ⊳ุฃ.
- 6. Touch □.

Flex start will appear on the display panel.

The **Flex start** function has now been activated and the appliance will wait to be started by the smart energy system (Energy manager).

i

You can display useful information and the energy and water consumption for each programme.

Compare the consumption data for each of the programmes with the options and programme settings that have been selected for them, so that you can reduce your energy and water consumption.

- 1. Touch I. This displays the energy and water consumption and the programme information.
- Touch ← to return to the programmes overview.

☆ Favourites

You can manage a selected programme with your favourite settings.

You can do the following to favourites:

- Save them
- Call them up
- Delete them

Saving

- 1. Select the programme you require, and adjust the programme settings as needed.
- Touch ☆ in the programme features. This programme has now been saved to your list of favourites.

Notes

- Each programme can only be saved once.
- You can save up to seven favourite programmes.

Calling up

- 1. Switch on the appliance.
- 2. Touch 🕸 Favourites.
- **3.** Touch the favourite programme you wish to use.
- 4. Start the programme.

Deleting

- 1. Select the favourite programme you want to delete.
- 2. Touch \star in the programme features.
- Confirm that you wish to delete this favourite programme. This programme has now been deleted from your list of favourites.

Options

After you have set a programme, you can use the options to further customise the washing process to your laundry.

You can do the following to options:

- Adjust them
- Activate/deactivate them

Adjust them

1. Touch the option.



The setting options are displayed.

 Touch or swipe your finger along the bar until the required value is displayed.
 Note: The changes are applied immediately and do not need to be confirmed.

Activating/deactivating

- 1. Touch the option.
- 2. Touch the option to activate or deactivate it.

Remote start 🗋

Activate remote start to allow the appliance to be started via the Home Connect app.

Touch it briefly to activate or deactivate it.

Notes

- The appliance must be connected to your home network to activate remote start.
- Remote start can only be activated if the appliance door and detergent drawer are closed.
- Remote start cannot be activated if the childproof lock is active.
 Deactivate the childproof lock beforehand.
- Remote start will be deactivated for safety reasons in the following circumstances:
- If you open the door.
- In the event of a power failure.
- Once the programme has ended.
- If you press ▷III on the appliance.
- If you press **Remote start** again on the appliance.
- If you press () for standby mode.

sensoFresh 🛸

There are two intensity settings for the active oxygen treatment.

Active oxygen intensity

- **1** Normal for light odours
- 2 Intensive for strong odours, e.g. cigarette smoke, kitchen odours

varioSpeed=0

This programme uses extra energy to wash your laundry more quickly.

Touch **varioSpeed** = ① to activate or deactivate this option.

Note: With the **varioSpeed** = ① option activated, your laundry will still be washed just as effectively by your chosen programme as when this option is not selected.

eco 💿

This programme washes at lower temperatures over a longer period of time to conserve energy.

Touch **eco** (a) to activate or deactivate this option.

Note: With the **eco** (a) option activated, your laundry will still be washed just as effectively by your chosen programme as when this option is not selected.

Start the programme

Touch and hold \triangleright 10 button for 1² seconds, then release the button.

The programme starts and the appliance door is locked.

The programme information is shown on the touch display while the programme is in progress.

Adding more laundry or removing laundry

If the programme has already started, you will still be able to load more laundry or remove some from the drum.

- 1. Touch ▷II.
 - This will pause the programme.
- 2. Open the door.
- 3. Add more laundry or remove laundry.
- 4. Close the door.
- 5. Touch ▷III.

Notes

- Do not leave the appliance door open for too long when adding more laundry, otherwise water may start to trickle out from the laundry.
- For safety reasons, the appliance door remains locked when the water level or temperature is high, during the active oxygen treatment (depending on appliance features) and while the drum is turning, and it is not possible to add more laundry during this time. Refer to the messages on the touch display.

Cancel the programme

- 1. Touch Cancel.
- 3. Remove the laundry.

If the temperature is too high:

- 1. Touch Cancel.
- 2. Select the **Rinse** programme to cool the laundry.
- 3. Touch ⊳00.

If the water level is too high:

- 1. Touch Cancel.
- 2. Select the **Spin** or **Drain** programme to drain the water.
- Touch ▷III.

Programme end

Laundry is ready. will appear on the touch display

- **1.** Press \triangleq to open the door.
- 2. Remove the laundry.
- 3. Press () for standby mode.

Appliance menu

In the appliance menu, you can activate/deactivate the childproof lock and signal tones, and implement all appliance settings.

1. Touch or touch and swipe upwards.



The appliance menu is now open.

2. Touch the required setting.

Childproof lock 🖘

You can lock the control panel to prevent settings from being changed inadvertently.

You can do the following to the childproof lock:

- Activate
- Deactivate

Activating

Touch ∽.

This activates the childproof lock; you will no longer be able to make any changes on the touch display.

Deactivate

- Touch anywhere on the touch display.
 A message appears on the touch display to tell you that the childproof
- lock has been activated.
 2. Touch and hold Deactivate child lock for three seconds. This deactivates the childproof lock.

Notes

- To remove the laundry at the end of the programme, deactivate the childproof lock.
- The childproof lock can be activated no matter what status the appliance is in.
- The childproof lock also remains activated when the appliance has been put into standby mode.
- If the appliance is put into standby mode while the programme is running and the childproof lock has been activated, the programme resumes when the appliance is switched back on.

Audible signal settings I)

Signal tone after the end of the programme.

You can do the following to the signal tone:

- Deactivate it
- Activate it

Deactivating

Touch 록)).

Activating

Touch ₥.

Appliance Setting 🐵

You can do the following to appliance settings:

- Adjust them
- Activate/deactivate them

Adjusting

- 1. Touch 🕸.
- 2. Swipe until the required appliance setting appears.



3. Touch the appliance setting.



4. Touch or swipe your finger along the bar until the required value is displayed.

Note: The changes are applied immediately and do not need to be confirmed.

Activating/deactivating

- 1. Touch the appliance setting.
- 2. Touch the appliance setting to activate or deactivate it.



If a tick appears, this means the setting has been activated. If there is no tick, this means that the setting is deactivated.

Time

You can set the time on the appliance.

- 1. Touch Time.
- 2. Touch On.

3. Touch the hour side of the time display and swipe your finger along the bar until the correct hour is shown.



4. Touch the minutes side of the time display and swipe your finger along the bar until the correct number of minutes past the hour is shown.



The time has now been set.

Note: The time will only be shown on the touch display if it has been activated.

Sounds

You can set the tones for the buttons, messages and the programme end.

- 1. Touch Sounds.
- 2. Choose between Programme End and Buttons and Info.
- **3.** Swipe your finger along the bar until the required volume is selected.

Drum clean reminder

Your appliance can issue you with regular reminders to run the cleaning programme.

Touch **Drum clean reminder** to activate or deactivate the reminder function.

Brightness

You can set the brightness of the touch display.

Touch Brightness and adjust it.

Light Ring

You can define when the door light lights up or set the brightness of the door light.

- 1. Touch Light Ring.
- 2. Touch Set Brightness to adjust the brightness.
- 3. Touch **Set Mode** to define whether the door light should be activated or deactivated or whether it should only deactivate for specific situation.

Language

You can set the language.

- 1. Touch Language.
- 2. Scroll through the list until the language you require is shown.



3. Touch the required language.



4. Touch Restart to apply the change.

Note: If you change the language, this change will not be applied until the appliance is restarted.

Home Connect

You can find all the information regarding Home Connect in the dedicated section.

Software update is available. Would you like to install update?

As soon as a new update is available, a message will appear on the touch display on your appliance.

You can install the update directly via the message on the display or, alternatively, via the appliance settings.

Touch **Software update is available**. **Would you like to install update?**. The update will now be installed. Installation may take a few minutes.

Notes

- Do not put the appliance in standby mode while it updates.
- If no software updates are available, Your software is up to date. will appear on the touch display.

Factory settings

You can reset all your appliance settings.

- 1. Touch Factory settings.
- 2. Touch Reset.
- **3.** Confirm that you wish to reset the settings.

Note: If you do this, your saved favourite programmes will be lost.

Home Connect

This appliance is Wi-Fi-capable and can be remotely controlled using a mobile device.

You can use the Home Connect app to do the following on your appliance from your mobile device:

- Set up programs and launch them.
- Adjust, activate and deactivate program settings.
- Query the status of programs.
- Adjust, activate and deactivate appliance settings.
- Put the appliance into standby mode.

Before you can use the Home Connect functions, you will need to carry out the following steps:

- 1. Install the Home Connect app on your mobile device.
- 2. Register in the Home Connect app.
- **3.** Connect your appliance to your home network automatically **or** manually (you only need to do this the first time).
- 4. Connect your appliance to the Home Connect app.

You can find information about the app on our Home Connect website www.home-connect.com. Home Connect services are not available in every country. The availability of the Home Connect function depends on the availability of Home Connect services in your country. You can find information on this at www.home-connect.com.

Notes

- Please observe the safety precautions in this instruction manual and make sure that these are complied with even when operating the appliance via the Home Connect app while you are away from home. You must also follow the instructions in the Home Connect app.
- You cannot use the Home Connect app to make changes while the controls on the appliance are being operated. However, you can use the Home Connect app to see any adjustments made directly on the appliance itself.

Calling up the Home Connect menu

In the Home Connect menu, you can create and view network connections, reset network settings, activate/ deactivate Wi-Fi and find other Home Connect functions.

- 1. Switch on the appliance.
- 2. Press \uparrow or press and hold \uparrow and swipe upwards.



A menu is displayed.

- 3. Press 🕸 .
- 4. Press Home Connect .
- 5. Press Continue.

You are now in the Home Connect menu.

Note: Press \leftarrow to return to the higher-level screen.

Connecting to the home network and the Home Connect app

Connect your appliance to the home network **automatically** or **manually** (you only need to do this the first time).

Notes

- If your home network router has a WPS function, you can connect the appliance to your home network automatically.
- If your home network router does not have a WPS function, you need to connect the appliance to your home network manually.

You must then connect to the Home Connect app.

Note: To connect your appliance to the home network, **Wi-Fi** must be activated on the appliance. **Wi-Fi** is deactivated on the appliance by default and is activated automatically when you connect your appliance to your home network.

Connecting to your home network automatically

Step 2.1

Ensure that you are in the Home Connect menu. \rightarrow Page 35

- 1. Press Settings.
- 2. Press Connect to network.
- Press Connect automatically (WPS).

4. Confirm the message in the display. The appliance now attempts to connect to your home network. flashes in the display.



 Activate the WPS function on your home network router within the next 2 minutes.

6. Confirm the message in the display. If the appliance has connected to your home network successfully, Your home appliance is connected to your home network. and ? appear in the display and light up continuously.

Note: If you are not able to establish a connection, check whether your appliance is within range of your home network.Try connecting automatically again or connect your appliance manually.

Connecting to your home network manually

Step 2.2

Ensure that you are in the Home Connect menu. \rightarrow Page 35

- 1. Press Settings.
- 2. Press Connect to network.

3. Press Connect manually.

The appliance now sets up its own Wi-Fi network with the name (SSID) HomeConnect.



- 4. Call up the Wi-Fi setting on the mobile device.
- Connect the mobile device to the Home Connect Wi-Fi network and enter the password (key) HomeConnect.

Your mobile device now connects to the appliance. The connection process may take up to 60 seconds.



- 6. Confirm the message in the display.
- Once you have connected successfully, open the Home Connect app on the mobile device.
- 8. In the Home Connect app, enter the network name (SSID) and password (key) for your home network.
- 9. Carry out the last steps in the Home Connect app to connect your appliance.

10. Confirm the message in the display. If the appliance has connected to your home network successfully, **Your home appliance is connected to your home network.** and **?** appear in the display and light up continuously.

Note: If you are not able to establish a connection, check whether your appliance is within range of your home network. Try connecting manually again.

Connecting to the Home Connect app

Step 3

If your appliance is connected to your home network, you can connect it to the Home Connect app.

Ensure that you are in the Home Connect menu. \rightarrow Page 35

Make sure that you have opened the Home Connect app and are logged in.

- 1. Press Settings.
- 2. Press Connect with app.

The appliance now attempts to connect to the Home Connect app.

- 3. Once your appliance is displayed in the app, carry out the last steps in the Home Connect app.
- 4. Confirm the message in the display.

Note: If you were not able to establish a connection, check whether your mobile end device is within range of your home network or is connected to this. Try connecting to the Home Connect app again.

Energy management

You can connect your appliance to your smart energy system (Energy manager).

Once you have connected your appliance to the smart energy system (Energy manager) and activated the **Flex start** function, you will be able to optimise your energy consumption because your appliance will not start up until your home photovoltaic system can provide sufficient energy or the energy tariff is good.

Further information and system requirements for using the Energy manager can be found at: www.homeconnect.com/energymanagement

Notes

- The smart energy system (Energy manager) must use the EEBus initiative communications standard.
- Before you start, read the smart energy system instruction manual to find out how to connect your appliance to the smart energy system (Energy manager).
- 1. Press 🐵 .
- 2. Press Connect with energy manager.

Your appliance now attempts to connect to the smart energy system (energy manager). If the appliance has connected successfully, **Your home appliance is connected to your energy manager.** appears in the display.

- 3. Press Continue.
- 4. Activate Flexstart if you want the smart energy system (Energy manager) to start up your appliance.

Status

View the status of your connection to the home network, to the app and to the energy manager (depending on the appliance features).

Ensure that you are in the Home Connect menu. \rightarrow Page 35

Press Status.

Activating/deactivating Wi-Fi

If your appliance is already connected to your home network, you can activate or deactivate **Wi-Fi** on your appliance.

Ensure that you are in the Home Connect menu. \rightarrow Page 35

Press Wi-Fi.

Notes

- If you connect to your home network, Wi-Fi is activated automatically.
- If Wi-Fi is activated on your appliance, the appliance is not automatically put in standby mode.
- If Wi-Fi is switched off on the appliance, it is not possible to use the Home Connect app to start or control the appliance remotely.
- If Wi-Fi is switched off and your appliance was previously connected to your home network, this connection will be re-established automatically when Wi-Fi is switched back on.
- If you activate this function, the energy consumption increases in comparison to the values specified in the consumption value table.

Resetting your network settings

You can reset all of the network settings.

Ensure that you are in the Home Connect menu. \rightarrow Page 35

1. Press Reset.

Do you want to reset all network settings? appears in the display.2. Press Factory settings.

Note: If you want to operate your appliance via the Home Connect app again, you will need to reconnect it to your home network and to the Home Connect app.

Updating the software

You can update the Home Connect software on your appliance. As soon as a new software update is available, a note appears in the display: **Software update is available. Would you like to install update?**

Install the update directly via the **message in the display** or **manually** as follows:

- 1. Press 🐵 .
- 2. Press Software Update.

The Home Connect software will now be updated.

3. Confirm the message in the display.

Note: If no software update is available, **Your software is up to date.** appears in the display.

Note: The software update may take several minutes. Do not switch the appliance off while updates are being installed.

Information on data protection

When your appliance is connected for the first time to a Wi-Fi network, which is connected to the Internet, your appliance transmits the following categories of data to the Home Connect server (initial registration):

- Unique appliance identification (consisting of appliance codes as well as the MAC address of the installed Wi-Fi communication module).
- Security certificate of the Wi-Fi communication module (to ensure a secure data connection).
- The current software and hardware version of your household appliance.
- Status of any previous resetting to factory settings.

This initial registration prepares the Home Connect functions for use and is only required when you want to use these Home Connect functions for the first time.

Note: Ensure that the Home Connect functions can be used only in conjunction with the Home Connect app. Information on data protection can be accessed in the Home Connect app.

Declaration of Conformity

BSH Hausgeräte GmbH hereby declares that the appliance with Home Connect functionality meets the basic requirements and other relevant provisions of the Directive 2014/53/EU.

A detailed RED Declaration of Conformity can be found online at www.siemens-home.bsh-group.com among the additional documents on the product page for your appliance.

CE

2.4 GHz band: max. 100 mW

Laundry

Protecting your laundry and appliance

Caution!

Damage to the appliance/textiles

Foreign objects (e.g. coins, paper clips, needles, nails) may damage the washing or components of the appliance.

The following instructions must be observed when preparing your laundry:

- Always follow the manufacturer's instructions when dosing all detergents, cleaning aids, care products and cleaning agents.
- Do not exceed maximum load. Overfilling will impair the washing result.
- Keep detergents and agents for the pretreatment of laundry (e.g. stain remover, prewash sprays, etc.) away from the surfaces of the appliance. Using a damp cloth, immediately remove any fine spray residue and other residue or droplets.
- Empty any pockets. Remove any foreign objects.
- Remove metal parts (paper clips, etc.).
- Trousers, knitwear and knitted textiles, e.g. jersey garments, T-shirts or sweatshirts, should be turned inside out.
- Ensure that underwired bras are appliance-washable.
- Wash delicates in a net or bag (tights, underwired bras, etc).
- Close zips, button up covers.
- Brush sand out of pockets and collars.
- Remove curtain fittings or include in the net/bag.

Sorting laundry

Sort your laundry according to the care instructions and manufacturer's information on the care labels, depending on:

- Type of fabric/fibre
- Colour

Note: Laundry may discolour. Wash white and coloured items separately. Wash new coloured items separately the first time you wash them.

Soiling

Wash laundry with the same level of soiling together.

Some examples of soiling levels can be found in the chapter

- Light: Do not need to pretreat, select the varioSpeed setting if necessary.
- Normal
- Heavy: Load less laundry, need to pretreat or soak laundry firstly.
- Stains: Remove/pretreat stains while they are fresh. First dab with soapy water; do not rub. Then wash the items of laundry with the appropriate programme. Stubborn or dried-in stains can sometimes only be removed by washing several times.
- Symbols on the care labels
 - Suitable for normal washing process;

e.g. Cottons programme

A gentle washing process is required;

e.g. Easy-Care programme

- An especially gentle washing process is required; e.g. Delicates/ Silk programme
- Suitable for washing by hand;
 e.g. Wool programme
- 🕅 Do not machine wash.

Starching

Note: Laundry should not be treated with fabric softener.

- **1.** Switch on the appliance.
- 2. Select the Rinse programme.
- Measure starch into compartment ⊗ in accordance with the manufacturer's instructions (clean first if necessary).
- 4. Touch the ▷II button.

Dyeing/bleaching

Dye should only be used in normal household quantities. Salt may damage stainless steel. Always follow the dye manufacturer's instructions.

Do **not** use the appliance to bleach clothes.

Detergent

Correct selection of detergent

The care label is crucial for selecting the correct detergent, temperature and treatment of the laundry. \rightarrow See also www.sartex.ch

If you visit www.cleanright.eu, you will find further information on detergents, care products and cleaning agents for domestic use.

 Standard detergent with optical brighteners
 Suitable for beil weekable white

Suitable for boil-washable white laundry made from linen or cotton Programme: Cottons/ cold - max. 90 °C

- Detergent for colours without bleach or optical brighteners
 Suitable for coloured laundry made from linen or cotton
 Programme: Cottons/ cold - max. 60 °C
- Detergent for colours/delicates without optical brighteners
 Suitable for coloured laundry made from easy-care fibres, synthetic fibres
 Programme: Easy-Care/ cold - max, 60 °C
- Detergent for delicates Suitable for delicate, fine fabrics, silk or viscose Programme: Delicate/Silk/ cold - max. 40 °C
- Detergent for woollens Suitable for wool Wool programme/ cold - max. 40 °C

Saving energy and detergent

For light and normal soiling, you can save energy (lower washing temperature) and detergent.

	-
Saving	Soiling/note
Reduced temper- ature and deter- gent quantity as per the recom- mended dosage	 Light No visible dirt or stains. Clothing has taken on some body odour, e.g.: Light summer/sports clothing (worn for a few hours) T-shirts, shirts, blouses (worn for up to one day) Guest bed linen and hand towels (used for one day)
	 Normal Visible dirt or a few light stains, e.g.: T-shirts, shirts, blouses (sweat soaked, worn a few times) Towels, bedding (used for up to one week)
Temperature as per the care label and detergent quantity as per	Heavy Dirt and/or stains clearly visible, e.g. tea towels, baby items, work clothing

Note: When measuring the amount of all detergents/additives/care products and cleaning agents, please always check the manufacturer's instructions and information.

the recommended dosage for heavy soiling

Overview of programmes

Selectable programme

Programme/Type of washing	Options/Information
Name of the programme	Max. load as kg
Brief explanation of the programme and for which fabrics it	selectable temperature* as °C
IS SUILADIE.	selectable spin speed* in rpm
	possible programme settings and options*
sensoFresh	Max. load 1 kg
For eliminating odours and freshening up non-washable fab-	-
els depending on how strong the odour is.	Off
Note: . The detergent can not be added for this programme.	🏽 sensoFresh
Cottons	Max. load 10 kg/5**kg
For cleaning normal to heavily soiled cotton or linen cloth-	Cold - 90 °C
ing.	400 - 1400 rpm
	$\stackrel{=0}{\boxtimes}, \textcircled{0}, \textcircled{1}, \textcircled{2}, \textcircled{3}, \textcircled{4}, \textcircled{7}, \textcircled{7}, \bigtriangledown, \bigtriangledown, \bigtriangledown, \overbrace{1}, \textcircled{7}, \textcircled{7}, \rightleftarrows, \bigtriangledown, \bigtriangledown, \overbrace{1}, \textcircled{7}, \fbox{7}, \bigtriangledown, \o, \o,$
Easy-Care	Max. load 4 kg
For cleaning easy-care laundry made from synthetic fibres or mixed fabrics, such as polyamida or polyaster	Cold - 60 °C
mixed labrics, such as polyamide of polyester.	400 - 1200 rpm
	$= \textcircled{\textcircled{0}}, \textcircled{\textcircled{0}}, \textcircled{\textcircled{1}}, \textcircled{\textcircled{2}}, \textcircled{\textcircled{2}}, \textcircled{\textcircled{3}}, \textcircled{\textcircled{3}}, \textcircled{\textcircled{3}}, \textcircled{\textcircled{3}}, \bigtriangledown, \bigtriangledown, \bigtriangledown, \bigtriangledown, \textcircled{1}, \textcircled{1}, \textcircled{1}, \textcircled{1}, \textcircled{1}, \bigtriangledown, \bigtriangledown, \bigtriangledown, \bigtriangledown, \bigtriangledown, \bigtriangledown, \bigtriangledown, \o, \o,$
Mixed Fabrics	Max. load 4 kg
For cleaning different fabrics (cotton, synthetic fibres and	Cold - 40 °C
mally soiled laundry.	400 - 1400 rpm
	$= \textcircled{\textcircled{0}}, \textcircled{\textcircled{0}}, \textcircled{\textcircled{1}}, \textcircled{\textcircled{2}}, \textcircled{\textcircled{2}}, \textcircled{\textcircled{3}}, \textcircled{\textcircled{3}}, \textcircled{\textcircled{3}}, \textcircled{\textcircled{3}}, \bigtriangledown, \bigtriangledown, \bigtriangledown, \bigtriangledown, \textcircled{1}, \textcircled{1}, \textcircled{1}, \textcircled{1}, \textcircled{1}, \textcircled{1}, \textcircled{1}, \textcircled{1}, \fbox{1}, \r{1}, \r{1},$
* depending on the model and the programme.	

** reduced load with varioSpeed = 0.

Programme/Type of washing	Options/Information
Delicates/Silk	Max. load 2 kg
For cleaning delicate fabrics, such as silk, satin or viscose.	Cold - 40 °C
using a detergent designed for delicates.	Off - 800 rpm
	$\stackrel{=0}{\boxtimes}, \textcircled{0}, \textcircled{1}, \textcircled{2}, \textcircled{3}, \textcircled{4}, \textcircled{7}, \textcircled{7}, \bigtriangledown, \bigtriangledown, \bigtriangledown, \overbrace{1}, \textcircled{7}, \textcircled{7}, \bigtriangledown, \bigtriangledown, \bigtriangledown, \bigtriangledown, \overbrace{1}, \textcircled{7}, \bigtriangledown, \bigtriangledown,$
Wool	Max. load 2 kg
For gently cleaning woollen fabrics, e.g. cashmere/lamb's wool.	Cold - 40 °C
Very gentle, suitable for fabrics which hand-washing is recom-	Off - 800 rpm
mended. Detergent designed for woollens strongly recom- mend.	₩, ,
Dark Wash	Max. load 3.5 kg
For gentle cleaning of dark-coloured laundry, such as jeans.	Cold - 40 °C
rinse result. Reduced spinning for optimal textile care. We rec-	400 - 1200 rpm
ommend using a liquid detergent.	±Ů, @, Ů, <i>≌</i> , ₴, ₴, ₱, Ħ, Ħ, Ħ, Ħ, È
Shirts	Max. load 2 kg
For cleaning blouses and shirts made from cotton, linen or mixed fabrics. Peduced spinping provents creases	Cold - 60 °C
Thixed Tablics. Neuticed spirining prevents creases.	400 - 800 rpm
	=Ŭ, @, ∪, @, ➡, ➡, ♣, ♥, Ħ, Ħ, Ħ, Ħ, K
Hygiene Mix	Max. load 4 kg
For cleaning different fabrics (cotton, synthetic fibres and mixed	Cold - 40 °C
active oxygen.	400 - 1400 rpm
	±Ů, @, Ů, <i>≌</i> , ₴, ₴, ₱, Ħ, Ħ, Ħ, Ħ, K
Textile Guard	Max. load 1 kg
For gentle washing water-resistant and breathable fabrics with	Cold - 40 °C
agent). Mild liquid detergent recommended. Do not use fabric	400 - 800 rpm
softener; remove fabric softener residue from detergent dis- penser before starting.	=Ü, Q, 😸, 🕹, 🌪, 🕅
Note: Add waterproofing agent into the dispenser \mathfrak{B} .	

- depending on the model and the programme. reduced load with **varioSpeed** =C.

Programme/Type of washing	Options/Information
Duvet	Max. load 2.5 kg
For gentle cleaning of microfibre blankets, pillows and clothing	Cold - 60 °C
ally. We recommend using a small dose of a detergent	400 - 1200 rpm
designed for delicates.	≡Ů, @, ➡, ➡, ➡
Curtains	Max. load 3.5 kg
For cleaning heavy and light curtains. Reduced spinning pre-	Cold - 40 °C
vents creases, we recommend using a special detergent.	Off - 800 rpm
	$= \textcircled{0}, \textcircled{0}, \underbar{1}, \textcircled{s}, \textcircled{s}, \textcircled{s}, \textcircled{s}, \bigtriangledown, \bigtriangledown, \bigtriangledown, \ddddot$
myTime	Max. load 2 kg
The programme duration can be adjusted individually. For	Cold - 40 °C
fabrics) in one washing cycle.	400 - 1200 rpm
The duration of this washing programme can be self set from 20 minutes to maximum 60 minutes, with 10-minute increments.	<u>@</u> , ☆, ⁺, †
Note: Increase the length of the wash programme with Extra Rinse .	
Rapid 15	Max. load 2 kg
For washing lightly soiled laundry quickly (cotton, synthetic	Cold - 40 °C
ndres and mixed fadrics) in 15 minutes.	400 - 1200 rpm
	₫, भ, ⊐
Auto gentle	Max. load 3.5 kg
For cleaning delicate fabrics (cotton, synthetic fibres) in one	Auto
degree of soiling and automatically adjusts the washing time.	Auto
amount of detergent and water volume.	₩, , , ₩
The default temperature is 30 °C.	
Cottons Eco <	Max. load 10 kg
For cleaning normally soiled cotton clothing with optimised	Cold - 90 °C
chorgy and water consumption.	400 - 1400 rpm
	$\mathbf{U}, \underline{\boldsymbol{\omega}}, \underline{\boldsymbol{\omega}}, \underline{\boldsymbol{\tau}}, \underline{\boldsymbol{\tau}}, \underline{\boldsymbol{\pi}}, \boldsymbol{\boldsymbol{\omega}}, \boldsymbol{\boldsymbol{\omega}}, \underline{\boldsymbol{\omega}}, \underline{\boldsymbol{\omega}}$
* depending on the model and the programme.	

* reduced load with varioSpeed =^O.

Programme/Type of washing	Options/Information
Rinse	-
For running separate rinse and spin cycles.	-
	Off - 1400 rpm
	@, ➡, ➡, भ, ₩, ,
Spin	-
For running a separate spinning cycle.	-
	Off - 1400 rpm
	<i>, \</i>
Drain	-
For draining all the remaining water in the washing machine	-
separatery, e.g. aner mise noid.	-
	-
Drum Clean	-
An intensive and antibacterial clean of the washing machine	-
gen.	1200 rpm
Note: Always follow the manufacturer's instructions when dosing the detergent.	Ŷ
 depending on the model and the programme. reduced load with varioSpeed =①. 	

· Sensors

Unbalanced load detection system

The automatic unbalanced load detection system detects imbalances and ensures even distribution of the laundry by repeatedly starting and stopping drum spinning.

If the laundry is extremely unevenly distributed, the spin speed is reduced or the spin cycle is not performed for safety reasons.

Note: Place large and small items of laundry evenly in the drum.

Aqua-Sensors

Depending on the programme and model

During a rinse cycle, the Aqua sensor checks the turbidity of the rinsing water (turbidity is caused by dirt and detergent residue). The duration and the number of rinse cycles depend on the turbidity of the water.

Cleaning and maintenance

Warning Risk of death!

There is a risk of electric shock if touch live components. Press the button \bigcirc and pull out the mains plug.

Caution! Fire and explosion hazard!

Toxic vapours can be produced by cleaning agents that contain solvents, e.g. cleaning solvent. Do not use cleaning agents that contain solvents.

Caution!

The appliance may be damaged!

Cleaning agents that contain solvents, e.g. cleaning solvent, can damage surfaces and components in the appliance.

Do not use cleaning agents that contain solvents.

Appliance housing/control panel

- Remove the detergent residue immediately.
- Wipe the housing and the control panel with a soft, damp cloth.
- Do not use abrasive cloths, sponges or detergents (stainless steel cleaner).
- Do not clean the appliance with a water jet.

Drum

Use chlorine-free cleaning agents, do not use steel wool.

If there are odours in the appliance, or to clean the drum, run the **Drum Clean** programme without laundry.

Descaling

Descaling should not be necessary if the detergent is measured out correctly. However, if it is required, follow the manufacturer's instructions for the descaling agent. Suitable descalers can be obtained via our website or from customer services.

Detergent drawer and housing

If the appliance contains detergent or fabric softener residues:

1. Pull out the detergent drawer. Press down the insert and fully remove the drawer.



2. To remove the insert: Push the insert upwards from below with your finger.



3. Clean the detergent dispenser tray and insert with water and a brush, and dry it. Clean the inside of the housing as well.



 Fit the insert and lock it in place (push the cylinder onto the guide pin).



5. Push in the detergent drawer.



Note: Leave the detergent drawer open so that any residual water can evaporate.

Drain pump is blocked

Note: Turn the water tap off to prevent more water from flowing in and to ensure that it is drained via the pump.

Warning Risk of scalding!

When you wash at high temperatures, the water gets very hot. If you come into contact with the hot water, you may be scalded.

Allow the water to cool down first.

- 1. Press the 🕁 button. Pull out the mains plug.
- 2. Open the service flap.



3. Take the drain hose out of the retainer.

Remove the sealing cap and pour the water out into a suitable container.

Replace the sealing cap and place the drain hose back in the retainer.



4. Carefully unscrew the pump cover; residual water may leak out. Clean the interior, pump cover thread and pump housing. The impeller in the drain pump must be able to rotate.



5. Refit and screw on the pump cover. The handle must be in a vertical position.



6. Close the service flap.



Note: To prevent unused detergent from flowing straight into the drain during the next wash: Pour 1 litre of water into dispenser II and start the **Rinse**, **Spin** or **Drain** programme.

The drain hose at the siphon is blocked

- 1. Press the 🕁 button. Pull out the mains plug.
- 2. Loosen the hose clamp. Carefully remove the drain hose; residual water may leak out.
- **3.** Clean the drain hose and siphon connecting piece.



4. Re-attach the drain hose and secure the connection point using the hose clamp.

Filter in the water supply is blocked

Release water pressure in the supply hose:

- 1. Turn off the water tap.
- Select any programme (except Rinse, Spin and Drain programmes).
- 3. Select the ▷II button. Allow the programme to run for approx. 40 seconds.
- 4. Press the button 也.
- 5. Pull out the mains plug.

Clean the filters:

1. Disconnect the hose from the rear of the appliance.



2. Use pliers to remove the filter.



3. Clean the filter with a small brush.



4. Connect the hose and check for leaks.



Faults and what to do about them

Emergency release

E.g. power outage or in the event of a loss of power

The programme continues when the power supply is restored.

However, if the laundry has to be removed, the appliance door can be opened as follows:

Warning Risk of scalding!

When you are washing at high temperatures, there is a risk of scalding if you come into contact with hot water and laundry.

If possible, leave it to cool down first.

Warning Risk of injury!

Reaching into the drum while it is still turning may cause hand injuries. Do not reach into the drum when it is

Do not reach into the drum when it is turning.

Wait until the drum has stopped turning.

Warning

Irritation of the respiratory tract!

Any active oxygen that is emitted may irritate the mucosa and cause eyes to water.

Do not open the door using the emergency release if a programme is running with active oxygen.

Wait until there is no active oxygen in the drum.

Caution! Water damage!

Any escaping water may cause water damage.

Do not open the door if water can be seen through the glass.

1. Press the ⁽→ button. Pull out the mains plug.

2. Open the service flap.



3. You can find a vacuum cup on the drain hose, take it out of the drain hose.



- **4.** Drain the water. \rightarrow Page 49
- 5. Pull the emergency release downwards with a tool and release. And use the vacuum cup to open the door.





Faults and what to do about them

Faults	Cause/Remedy
Water is leaking from the appliance.	Attach the drain hose correctly or replace it.Tighten the screw fitting on the supply hose.
The appliance is not filling with water. Detergent is not being dis- pensed.	 Programme does not start? Is the tap turned on? Could the filter in the water supply be blocked? → "Filter in the water supply is blocked" on page 50 Is the supply hose kinked or trapped?
The wrong detergent/fab-	Dispenser(s):
poured into the dis- penser(s).	 Empty and clean. Refill.
Detergent/fabric softener has congealed in the dis- pensers.	Clean and refill the dispensers.
Unable to open door.	 The safety function is activated. Stop the programme? Can the door only be opened by the emergency release? → "Emergency release" on page 51 Child lock is activated? For continuing please hold "Deactivate child lock" for 3 seconds. Water temperature too high. Please wait until the door buttonlights up and then try again. Water level too high. Please start "Drain" programme first. Stopping drum. Please wait until the door button lights up and then try again. Door opener has overheated. Please wait until the door buttonlights up and then try again. Door blocked. Remove any objects near the door and try again. Programme running. Please pause the programme and then tryagain. Concentration of active oxygen too high. Please wait until the door button lights up and then try again.
The programme will not start.	 Have you touched the ▷III button or selected ③ Delayed start time? Is the door closed? Child lock is activated? For continuing please hold "Deactivate child lock"
	for 3 seconds.
The water is not draining.	 Could the drain pump be blocked? → "Drain pump is blocked" on page 49 Could the drain hose at the siphon be blocked?
Water is not visible in the drum.	Not a fault – the water is below the visible area.

Faults	Cause/Remedy
The spin result is not sat- isfactory. Laundry wet/too damp.	 Not a fault - the unbalanced load detection system has interrupted the spin cycle because the laundry is unevenly distributed. Distribute small and large items of laundry evenly in the drum. Is Less Ironing selected? Is I Silent Wash programme setting or Silent Wash programme selected (depending on the model)? Is the selected spin speed too low?
The spin cycle runs sev- eral times.	Not a fault – the unbalanced load detection system is adjusting an imbalance.
The programme is taking longer than usual.	 Not a fault – the unbalanced load detection system is adjusting an imbalance by repeatedly distributing the laundry. Not a fault – the foam detection system is activated – a rinse cycle has been switched on.
The length of the pro- gramme changes during the wash cycle.	Not a fault – the programme sequence is optimised for the specific washing process. This may change the length of the programme shown on the Touch-Display.
Foam may come out of the detergent drawer.	Too much detergent used? Mix 1 tablespoon of fabric softener with ½ litre of water and pour into dispenser II. (Not for outdoor, sports and down-filled textiles!) Reduce detergent dosage for the next wash cycle. Use commercially available low foam detergent and care product which are suitable for machine.
Odours, stain formation in the appliance.	Run the Drum Clean90 ° C programme without laundry. Add washing powder or a detergent containing bleach. Note: To prevent foaming, only use half the amount of detergent recommend- ed by the detergent manufacturer. Do not use detergents designed for woollens or delicates.
I am unable to connect to my home network.	 Wi-Fi is switched off. To connect to your home network, switch on Wi-Fi. must appear on the display. Wi-Fi is switched on but a connection to your home network cannot be established. Check whether your home network is available or try to connect to your home network again.
Home Connect is not working.	 You can find solutions to problems with Home Connect at www.home-connect.com. The availability of the Home Connect functionality depends on the availability of the Home Connect Services (e.g. provision of the app) in your country. Home Connect Services are not available in every country – for further information please check: www.home-connect.com.
Loud noises, vibrations and appliance "move- ment" during the spin cycle.	 Is the appliance aligned? → "Alignment" on page 18 Are the appliance's feet fixed? Secure the appliance's feet. Have the transport locks been removed? → "Removing the transport locks" on page 14

en Faults and what to do about them

Faults	Cause/Remedy
The Touch-Display indica- tor lights do not work while the appliance is run- ning.	 Has there been a power failure? Have the fuses blown? Reset/replace the fuses. If the fault occurs repeatedly, call customer services.
There are noises after the programme starts sensoFresh .	Not a fault – the appliance is filled with water to create mist; operating noises from the fan and pump can be heard when it is doing this.
Water stains on dry laun- dry after the sensoFresh programme.	 Was residual water removed before laundry was added? Level the appliance. The active oxygen treatment can only work properly if the appliance is levelled correctly.
Specific odour on the laundry after the sensoF-resh programme.	Active oxygen leaves a specific odour on the laundry following treatment. Shake out the laundry briefly.
Odour has not been removed satisfactorily after the sensoFresh pro- gramme.	 The active oxygen treatment is less effective if the drum is dirty. Run the Drum Clean programme before using the appliance for the first time, and regularly thereafter. Have you loaded too much laundry? Do not exceed the maximum load. Leave the door and detergent drawer open so that any residual water can evaporate.
There is detergent residue on the laundry.	 Some phosphate-free detergents contain water-insoluble residue. Select Rinse or brush the laundry after washing.
Other faults	You can rectify a fault yourself as the display shows. Or switch off the appliance and pull out the mains plug. Turn off the tap and call customer services.

After-sales service

If you cannot rectify a fault yourself, (\rightarrow "Faults and what to do about them" on page 51), please contact our aftersales service.

We will always find an appropriate solution to avoid unnecessary visits by engineers.

Please provide the after-sales service with the product number (E-Nr.) and the production number (FD) of the appliance.



E-Nr. Product number FD Production number

You can find this information (depending on the model):

- On the inside of the loading door
- On the back of the appliance

Trust the expertise of the

manufacturer. Contact us. By doing so, you can be sure that the repairs are carried out by trained service personnel using genuine spare parts.

Consumption values table

Energy and water consumption, programme duration and residual moisture for the main washing programme

(approximate values)

Programme	Load	Energy consump- tion*	Water consump- tion*	Programme duration*
Cottons 20 °C	10 kg	0,39 kWh	901	3 h
Cottons 40 °C	10 kg	1,29 kWh	90	31⁄2 h
Cottons Eco 40 °C **	5 kg	0,47 kWh	47	6 h
Cottons Eco 60 °C **	5 kg	0,55 kWh	47	6 h
Cottons Eco 60 °C **	10 kg	0,82 kWh	60 I	61⁄2 h
Cottons 60 °C	10 kg	1,55 kWh	901	31⁄4 h
Cottons 90 °C	10 kg	2,75 kWh	106	3 h
Easy-Care 40 °C	4 kg	0,85 kWh	62 I	2 h
Mixed Fabrics 40 °C	4 kg	0,66 kWh	45 I	11⁄4 h
Delicates/Silk 30 °C	2 kg	0,25 kWh	37	³⁄₄ h
Wool 30 °C	2 kg	0,22 kWh	41	³⁄₄ h
sensoFresh intensive	1 kg	0,05 kWh	01	³⁄₄ h
Hygiene Mix 40 °C	4 kg	0,66 kWh	45 I	1¾ h
Drum Clean 90 °C	0 kg	1,45 kWh	281	11⁄2 h

Programme	Approximate information on the residual moisture*** WM14U940 Max. 1400 rpm		
Cottons	48 %		
Easy-Care	40 %		
Delicates/Silk	30 %		
Wool	45 %		

Values determined according to EN60456.

Observed values may deviate from the indicated values due to influence of water pressure, hardness and inlet temperature, ambient temperature, type, amount and soiling of laundry, detergent used, fluctuations in power supply and selected additional functions.

Program settings with maximum spin speed for testing and energy labeling in accordance with EU Directive 2010/ 30/EU with cold water (15°C)

The programs are suitable for the cleaning of normally soiled cotton textiles and regarding the combination of en-

ergy and water consumption the most effective. The specification of the programme temperature is based on the temperature stated on the care label in the textiles. The actual washing temperature may deviate from the indicated programme temperature for reasons of saving energy. The washing efficiency corresponds to the legal requirements.

Information on residual moisture based on program-dependent spin-speed limit and maximum loads.

Technical data

Dimensions:

848 mm x 598 mm x 622 mm (height x width x depth)

Weight:

83 kg

Mains connection:

Nominal voltage 220-240V, 50 Hz

Minimum installation protection ()10

Nominal power 1900-2300 W

Water pressure:

100-1000 kPa (1-10 bar)

Power consumption when in standby: $0.18\ {\rm W}$

Power consumption when ready for use (left-on mode): 0.18 W

Power consumption when networked (Wi-Fi) in standby mode/duration:

2.3 W / 20 mins

Aqua Stop warranty

Only for appliances with Aqua-Stop

In addition to warranty claims against the vendor based on the purchase agreement and to our appliance warranty, we will provide compensation under the following conditions:

- If water damage is caused due to a fault in our Aqua-Stop system, we will compensate domestic customers for the damage caused.
- 2. The liability guarantee is valid for the service life of the appliance.
- 3. It is a prerequisite of all warranty claims that the appliance with Aqua-Stop must have been installed and connected correctly in accordance with our instructions; this also includes a correctly fitted Aqua-Stop extension (genuine accessories). Our warranty does not cover defective feed lines or fittings leading to the Aqua-Stop connection at the tap.
- Appliances with Aqua-Stop do not need to be supervised during operation, nor secured afterwards by turning off the tap.

The tap only needs to be turned off if you are away from home for a long period, e.g. for several weeks' holiday.

	١
117	
KY .	

Repair order and advice in the event of faults

GB 0344 892 8999 (Calls charged at local or mobile rate.)

IE 01450 2655 (0.03 € per minute at peak. Off peak 0.0088 € per minute.)

You can find the contact information for all countries in the attached after-sales service directory.

BSH Hausgeräte GmbH Carl-Wery-Straße 34 81739 München GERMANY siemens-home.bsh-group.com

Manufactured by BSH Hausgeräte GmbH under Trademark License of Siemens AG

