

Your new dryer

Congratulations - you have chosen to buy a modern, high-quality Bosch domestic appliance.
The condensation dryer with heat exchanger and automatic cleaning function is outstanding in terms of efficient energy consumption and low maintenance requirements → page 6.
Every dryer which leaves our factory is carefully checked to ensure that it functions correctly and is in perfect condition.
Should you have any questions, our after-sales service will be pleased to help.

Environmentally-responsible disposal
Dispose of packaging in an environmentally-responsible manner.
This appliance is designated according to European directive 2002/96/EC which governs waste electrical and electronic equipment - WEEE).
The directive provides an EU-wide framework for the return and recycling of used appliances.

For further information about our products, accessories, spare parts and services, please visit: www.bosch-home.com

Observe the safety instructions on page 13.
Read these instructions and the separate **Energy-saving mode** instructions before switching on the dryer.

Contents

■ Preparation	2
■ Setting the programmes	2
■ Drying	3/4
■ Notes on laundry	5
■ Button signals	5
■ Fine adjustment of the drying result	6
■ Important information	7
■ Overview of programmes	7
■ Installation	8
■ Frost protection / Transport	8
■ Care and cleaning	9
■ Technical data	10
■ Optional accessories	10
■ Normal noises	11
■ What to do if ... / After-sales service	12
■ Safety instructions	13

Select On/Off for buzzer at the end of the programme.
Reduced temperature for delicate fabrics that require a longer drying time; e.g. polyacrylics, polyamide, elastane, acetate silk.
Reduces creasing and prolongs the 'reduced ironing' phase after the programme has finished.

Intended use

- For domestic use only.
- Only to be used for drying fabrics that have been washed with water.

Do not leave children unsupervised near the dryer. Keep pets away from the dryer.
The dryer can be operated by children 8 years old and older, by persons with reduced physical, sensory or mental abilities and by persons with insufficient experience or knowledge if they are supervised or have been instructed in its use by a responsible adult.

Preparation Installation → page 8

Inspecting the dryer
Never start the dryer if it is damaged. Inform your after-sales service.

Connecting the mains plug
Make sure your hands are dry. Hold the plug only.

Sorting and loading laundry
Remove all items from pockets. Check for cigarette lighters. The drum must be empty prior to loading. See programme overview on page 7. See also separate instructions for "basket for woollens" (depending on the model).

Selecting and adjusting the programme
Select the drying programme ...

... and adapt to individual requirements

Programme selector

Additional functions	Display status/service	Display/Remaining time	Programme selector
Buzzer	○ Drying ○ Iron dry ○ Cupboard dry ○ AntiCrease/End	h:min	
Low Heat	○ Container ○ Filter		
Reduced Ironing			

Start/Stop button: All buttons are sensitive and only need to be touched lightly.

Press the Start/Stop button

Only use the dryer with the fluff filter inserted.

Container	Empty the condensate container. Clean the filter in the condensate container if necessary → page 9.
Filter	Rinse the fluff filters under running water → page 4.
h:min	End of programme after 1-24 hours (button may need to be pressed several times) can always be set to the nearest full hour.
Cin	Automatic cleaning of the heat exchanger.
Fine adjustment of the drying result	The drying result (e.g. Cupboard Dry) can be adjusted over three levels (1 - max. 3) for the Cottons, Easy-Care, Mixed Load and Super Quick 40' programmes → presetting = 0. After one of these programmes has been finely adjusted, the setting is retained for the others. Further information → page 6.

Drying

Emptying condensation
Empty the container **after each** drying cycle, not during drying.
1. Remove the condensate container and hold it level.
2. Pour out the condensation.
3. Always push container in fully until it clicks into place.
If the **Container** indicator lamp flashes despite the container having been emptied → Filter in condensate container, page 9.

Cleaning the fluff filter
Clean fluff filters reduce energy consumption.
The fluff filter consists of two parts. Clean the inner and outer filter **after every** drying cycle:
1. Open the door. Remove fluff from the door/door area.
2. Pull out both parts of the fluff filter.
3. Remove fluff from the edge of the shaft. Fluff should not fall into the open shaft.
4. Open the filter and remove all the fluff.
5. Rinse both parts under running water and dry thoroughly.
6. Close the inner and outer filter, put them back together and reinsert them into the appliance.

Switching off the dryer
Turn the programme selector to **Off**. Do not leave laundry in the dryer.

Removing the laundry
Your dryer is equipped with an automatic reduced ironing function. The drum is moved at specific time intervals for 60 minutes once the programme has ended. The laundry stays loose and fluffy (or 120 minutes if the additional **Reduced ironing** function is selected).

End of programme as soon as the **AntiCrease/End** indicator lamp lights up.

Interrupt programme Adding or removing laundry.
The drying operation can be interrupted briefly to add or remove laundry. However, it must then be continued until it has finished.
1. Open the door. The drying process is interrupted.
2. Add or remove laundry then close the door.
3. If required, select a new programme and additional functions.
4. Press the **Start/Stop** button. The remaining time is updated after a few minutes.

Do not pull out/empty the condensate container when drying is in progress.

Do not tumble-dry the following fabrics, for example:
- Non-breathable fabrics (e.g. rubber-coated).
- Delicate materials (silk, curtains made from synthetic material) → these may crease.
- Oil-stained laundry.

Drying tips
- To ensure an even result, sort the laundry by fabric type and drying programme.
- Always dry very small fabrics (e.g. baby socks) together with large items of laundry (e.g. towels).
- Close zips, hooks and eyelets, and button up covers. Tie fabric belts, apron strings, etc. together.
- Do not over-dry easy-care laundry → Risk of creasing. Allow laundry to finish drying in the air.
- Do not dry woollens in the dryer. They may, however, be refreshed → page 7 **Wool finish** programme.
- Do not iron laundry immediately after drying; fold items up and leave for a while → residual moisture will then be distributed evenly.
- The drying result depends on the type of water used during washing. → Fine adjustment of the drying result → page 6.
- Knitted fabrics (e.g. T-shirts, jerseys) often shrink slightly the first time they are tumble-dried. → Do not use the **Very Dry** programme.
- The drying of starched laundry should be limited. → Starch leaves behind a coating that impairs drying.
- When washing laundry that is to be tumble-dried afterwards, use the correct amount of fabric softener as specified in the manufacturer's instructions.
- For pre-dried, multi-layered fabrics or small, individual items of laundry, use the Timed programme. Also suitable for subsequent drying.

Environmental protection/energy-saving tips
- Before drying, spin the laundry thoroughly in the washing machine → the higher the spin speed, the shorter the drying time will be, thus less energy is consumed. Also spin easy-care laundry.
- Use the maximum recommended capacity, but do not exceed it → Programme overview page 7.
- Make sure the room is well ventilated during drying.
- Do not cover or seal the air inlet.

Button signals
Setting the volume for button signals
Turn to **Off** 1 x to the right Press and hold **Low heat** and turn 2 x to the right Press **Start/Stop** until the required volume is reached Turn to **Off**
Selectable values: 0 (off), 1 (quiet), 2 (normal), 3 (loud).

Emptying condensation

Emptying condensation
Empty the container **after each** drying cycle, not during drying.
1. Remove the condensate container and hold it level.
2. Pour out the condensation.
3. Always push container in fully until it clicks into place.
If the **Container** indicator lamp flashes despite the container having been emptied → Filter in condensate container, page 9.

Cleaning the fluff filter
Clean fluff filters reduce energy consumption.
The fluff filter consists of two parts. Clean the inner and outer filter **after every** drying cycle:
1. Open the door. Remove fluff from the door/door area.
2. Pull out both parts of the fluff filter.
3. Remove fluff from the edge of the shaft. Fluff should not fall into the open shaft.
4. Open the filter and remove all the fluff.
5. Rinse both parts under running water and dry thoroughly.
6. Close the inner and outer filter, put them back together and reinsert them into the appliance.

Switching off the dryer
Turn the programme selector to **Off**. Do not leave laundry in the dryer.

Removing the laundry
Your dryer is equipped with an automatic reduced ironing function. The drum is moved at specific time intervals for 60 minutes once the programme has ended. The laundry stays loose and fluffy (or 120 minutes if the additional **Reduced ironing** function is selected).

End of programme as soon as the **AntiCrease/End** indicator lamp lights up.

Interrupt programme Adding or removing laundry.
The drying operation can be interrupted briefly to add or remove laundry. However, it must then be continued until it has finished.
1. Open the door. The drying process is interrupted.
2. Add or remove laundry then close the door.
3. If required, select a new programme and additional functions.
4. Press the **Start/Stop** button. The remaining time is updated after a few minutes.

Do not pull out/empty the condensate container when drying is in progress.

Do not tumble-dry the following fabrics, for example:
- Non-breathable fabrics (e.g. rubber-coated).
- Delicate materials (silk, curtains made from synthetic material) → these may crease.
- Oil-stained laundry.

Drying tips
- To ensure an even result, sort the laundry by fabric type and drying programme.
- Always dry very small fabrics (e.g. baby socks) together with large items of laundry (e.g. towels).
- Close zips, hooks and eyelets, and button up covers. Tie fabric belts, apron strings, etc. together.
- Do not over-dry easy-care laundry → Risk of creasing. Allow laundry to finish drying in the air.
- Do not dry woollens in the dryer. They may, however, be refreshed → page 7 **Wool finish** programme.
- Do not iron laundry immediately after drying; fold items up and leave for a while → residual moisture will then be distributed evenly.
- The drying result depends on the type of water used during washing. → Fine adjustment of the drying result → page 6.
- Knitted fabrics (e.g. T-shirts, jerseys) often shrink slightly the first time they are tumble-dried. → Do not use the **Very Dry** programme.
- The drying of starched laundry should be limited. → Starch leaves behind a coating that impairs drying.
- When washing laundry that is to be tumble-dried afterwards, use the correct amount of fabric softener as specified in the manufacturer's instructions.
- For pre-dried, multi-layered fabrics or small, individual items of laundry, use the Timed programme. Also suitable for subsequent drying.

Environmental protection/energy-saving tips
- Before drying, spin the laundry thoroughly in the washing machine → the higher the spin speed, the shorter the drying time will be, thus less energy is consumed. Also spin easy-care laundry.
- Use the maximum recommended capacity, but do not exceed it → Programme overview page 7.
- Make sure the room is well ventilated during drying.
- Do not cover or seal the air inlet.

Button signals
Setting the volume for button signals
Turn to **Off** 1 x to the right Press and hold **Low heat** and turn 2 x to the right Press **Start/Stop** until the required volume is reached Turn to **Off**
Selectable values: 0 (off), 1 (quiet), 2 (normal), 3 (loud).

Information on laundry ...

Labelling of fabrics
Follow the manufacturer's care information.
☑ Dry at normal temperature.
☑ Dry at low temperature → in addition, select **Low heat**.
☑ Do not machine dry.

Always observe the safety instructions on page 13.
Do not tumble-dry the following fabrics, for example:
- Non-breathable fabrics (e.g. rubber-coated).
- Delicate materials (silk, curtains made from synthetic material) → these may crease.
- Oil-stained laundry.

Drying tips
- To ensure an even result, sort the laundry by fabric type and drying programme.
- Always dry very small fabrics (e.g. baby socks) together with large items of laundry (e.g. towels).
- Close zips, hooks and eyelets, and button up covers. Tie fabric belts, apron strings, etc. together.
- Do not over-dry easy-care laundry → Risk of creasing. Allow laundry to finish drying in the air.
- Do not dry woollens in the dryer. They may, however, be refreshed → page 7 **Wool finish** programme.
- Do not iron laundry immediately after drying; fold items up and leave for a while → residual moisture will then be distributed evenly.
- The drying result depends on the type of water used during washing. → Fine adjustment of the drying result → page 6.
- Knitted fabrics (e.g. T-shirts, jerseys) often shrink slightly the first time they are tumble-dried. → Do not use the **Very Dry** programme.
- The drying of starched laundry should be limited. → Starch leaves behind a coating that impairs drying.
- When washing laundry that is to be tumble-dried afterwards, use the correct amount of fabric softener as specified in the manufacturer's instructions.
- For pre-dried, multi-layered fabrics or small, individual items of laundry, use the Timed programme. Also suitable for subsequent drying.

Environmental protection/energy-saving tips
- Before drying, spin the laundry thoroughly in the washing machine → the higher the spin speed, the shorter the drying time will be, thus less energy is consumed. Also spin easy-care laundry.
- Use the maximum recommended capacity, but do not exceed it → Programme overview page 7.
- Make sure the room is well ventilated during drying.
- Do not cover or seal the air inlet.

Button signals
Setting the volume for button signals
Turn to **Off** 1 x to the right Press and hold **Low heat** and turn 2 x to the right Press **Start/Stop** until the required volume is reached Turn to **Off**
Selectable values: 0 (off), 1 (quiet), 2 (normal), 3 (loud).

Button signals
Setting the volume for button signals
Turn to **Off** 1 x to the right Press and hold **Low heat** and turn 2 x to the right Press **Start/Stop** until the required volume is reached Turn to **Off**
Selectable values: 0 (off), 1 (quiet), 2 (normal), 3 (loud).

Information on laundry ...

Labelling of fabrics
Follow the manufacturer's care information.
☑ Dry at normal temperature.
☑ Dry at low temperature → in addition, select **Low heat**.
☑ Do not machine dry.

Always observe the safety instructions on page 13.
Do not tumble-dry the following fabrics, for example:
- Non-breathable fabrics (e.g. rubber-coated).
- Delicate materials (silk, curtains made from synthetic material) → these may crease.
- Oil-stained laundry.

Drying tips
- To ensure an even result, sort the laundry by fabric type and drying programme.
- Always dry very small fabrics (e.g. baby socks) together with large items of laundry (e.g. towels).
- Close zips, hooks and eyelets, and button up covers. Tie fabric belts, apron strings, etc. together.
- Do not over-dry easy-care laundry → Risk of creasing. Allow laundry to finish drying in the air.
- Do not dry woollens in the dryer. They may, however, be refreshed → page 7 **Wool finish** programme.
- Do not iron laundry immediately after drying; fold items up and leave for a while → residual moisture will then be distributed evenly.
- The drying result depends on the type of water used during washing. → Fine adjustment of the drying result → page 6.
- Knitted fabrics (e.g. T-shirts, jerseys) often shrink slightly the first time they are tumble-dried. → Do not use the **Very Dry** programme.
- The drying of starched laundry should be limited. → Starch leaves behind a coating that impairs drying.
- When washing laundry that is to be tumble-dried afterwards, use the correct amount of fabric softener as specified in the manufacturer's instructions.
- For pre-dried, multi-layered fabrics or small, individual items of laundry, use the Timed programme. Also suitable for subsequent drying.

Environmental protection/energy-saving tips
- Before drying, spin the laundry thoroughly in the washing machine → the higher the spin speed, the shorter the drying time will be, thus less energy is consumed. Also spin easy-care laundry.
- Use the maximum recommended capacity, but do not exceed it → Programme overview page 7.
- Make sure the room is well ventilated during drying.
- Do not cover or seal the air inlet.

Button signals
Setting the volume for button signals
Turn to **Off** 1 x to the right Press and hold **Low heat** and turn 2 x to the right Press **Start/Stop** until the required volume is reached Turn to **Off**
Selectable values: 0 (off), 1 (quiet), 2 (normal), 3 (loud).

Button signals
Setting the volume for button signals
Turn to **Off** 1 x to the right Press and hold **Low heat** and turn 2 x to the right Press **Start/Stop** until the required volume is reached Turn to **Off**
Selectable values: 0 (off), 1 (quiet), 2 (normal), 3 (loud).

Fine adjustment of the drying result

Adjustment of the levels of dryness
Turn to **Off** 1 x to the right Press and hold **Low heat** and turn 5 x to the right Press **Low heat** until the required level is reached Turn to **Off**

L:00, L:01, L:02, L:03 are shown in sequence
Short signal when changing from L:03 to L:00, otherwise long signal.

Important Information
Your dryer is designed to be particularly energy efficient. Its technical features include a refrigeration circuit, which uses energy efficiently in a similar way to a refrigerator. The dryer's heat exchanger is cleaned automatically during drying. The fluff filters and filter in the condensate container must be cleaned regularly.

Never operate the dryer without the fluff filters and without filter in condensate container.

Fluff filters
During drying, fluff and hair from the laundry is trapped by the fluff filter. Blocked fluff filters may impair the heat exchange process. The fluff filters must therefore be cleaned after every drying cycle. Rinse regularly under running water → page 4.

Filter in the condensate container
The filter in the condensate container cleans the condensation. This condensation is required for the automatic cleaning process. The filter should be cleaned regularly under running water. Empty the condensate container before cleaning the filter → page 4/9.

Fabrics
Do not dry any fabrics that have come into contact with solvents, oil, wax, grease or paint: e.g. hair styling products, nail varnish remover, stain remover, cleaning solvent. etc.
Empty all pockets.
Do not dry non-breathable fabrics.
Avoid drying items that produce a lot of fluff.
Woollens should be refreshed only, using the woollens programme.

Programme overview

Sort the laundry according to type of textile and fabric. Fabrics must be suitable for tumble drying.

After drying...
☑ from laundry ☑ lightly iron laundry ☑ do not iron laundry ☑ mangle laundry

PROGRAMMES
* Cottons max. 7 kg
** Easy-Care max. 3.5 kg
*** Mixed Load max. 3 kg
Iron Dry
Cupboard Dry
Cupboard Dry Plus / Very Dry

Wool finish max. 3 kg
Super Quick 40' max. 2 kg
Sportswear max. 1.5 kg
Timed Programme warm 30' max. 3 kg

TEXTILE TYPE AND INFORMATION
Hard-wearing fabrics, dye-resistant fabrics made of cotton or linen.
Non-iron laundry made of synthetic fibres and blended fabric, easy-care cotton.
Mixed items of laundry made of cotton and synthetics (Mix).
Fabrics suitable for ironing (iron fabrics in order to avoid creasing).
Single-layer fabrics.
Fabrics made of thick, multilayered items of clothing.
Woolen fabrics suitable for washing machines. Fabrics become fluffier but not dry. Remove fabrics once the programme has ended and allow to dry.
Laundry made of synthetic fibres, cotton or blended fabrics (for example) that needs to be dried quickly. The values may differ from those specified depending on the type of fabric, mixture of laundry to be dried, residual moisture in the fabric and loading capacity.
Fabrics with membrane coating, water-repellent fabrics, functional clothing, fleece fabrics (dry jackets/trousers with removable internal lining separately).
Pre-dried, multilayered, sensitive fabrics made of acrylic fibres, or separate small items of laundry.
Also for subsequent drying.

Easy-Care programmes only
*Dryness levels can be selected individually → Cupboard Dry Plus and Iron Dry (depending on the model).
Degree of dryness can be finely adjusted; multi-layered textiles require a longer drying time than single-layered items of clothing.
Recommendation: Dry separately.

Programme overview see also page 5

Sort the laundry according to type of textile and fabric. Fabrics must be suitable for tumble drying.

After drying...
☑ from laundry ☑ lightly iron laundry ☑ do not iron laundry ☑ mangle laundry

PROGRAMMES
* Cottons max. 7 kg
** Easy-Care max. 3.5 kg
*** Mixed Load max. 3 kg
Iron Dry
Cupboard Dry
Cupboard Dry Plus / Very Dry

Wool finish max. 3 kg
Super Quick 40' max. 2 kg
Sportswear max. 1.5 kg
Timed Programme warm 30' max. 3 kg

TEXTILE TYPE AND INFORMATION
Hard-wearing fabrics, dye-resistant fabrics made of cotton or linen.
Non-iron laundry made of synthetic fibres and blended fabric, easy-care cotton.
Mixed items of laundry made of cotton and synthetics (Mix).
Fabrics suitable for ironing (iron fabrics in order to avoid creasing).
Single-layer fabrics.
Fabrics made of thick, multilayered items of clothing.
Woolen fabrics suitable for washing machines. Fabrics become fluffier but not dry. Remove fabrics once the programme has ended and allow to dry.
Laundry made of synthetic fibres, cotton or blended fabrics (for example) that needs to be dried quickly. The values may differ from those specified depending on the type of fabric, mixture of laundry to be dried, residual moisture in the fabric and loading capacity.
Fabrics with membrane coating, water-repellent fabrics, functional clothing, fleece fabrics (dry jackets/trousers with removable internal lining separately).
Pre-dried, multilayered, sensitive fabrics made of acrylic fibres, or separate small items of laundry.
Also for subsequent drying.

Easy-Care programmes only
*Dryness levels can be selected individually → Cupboard Dry Plus and Iron Dry (depending on the model).
Degree of dryness can be finely adjusted; multi-layered textiles require a longer drying time than single-layered items of clothing.
Recommendation: Dry separately.

Installation

- Scope of delivery: dryer, installation and operating instructions, basket for woollens (*depending on the model*).
- Check dryer for transport damage.
- The dryer is very heavy. Do not attempt to lift it on your own.
- Be careful to avoid sharp edges.
- Do not set up in a room that is susceptible to frost. Freezing water may cause damage.
- If in doubt, have the appliance connected by a specialist.
- Do not lift the dryer by protruding parts (e.g. the door) – risk of breakage.

1. Setting up the dryer

- The appliance plug must always be accessible.
- Ensure that the appliance is installed on a clean, level and firm surface.
- Do not obstruct the air inlet on the front of the dryer.
- Keep the area around the dryer clean.
- Make the dryer level using the threaded feet and a spirit level.
- Do not remove the threaded feet under any circumstances.



Do not set up the dryer behind a door or sliding door, as this may obstruct the dryer door or prevent it from opening. This will prevent a potentially fatal danger to children from locking themselves in.



Clean and level
Make sure that the air inlet remains unobstructed

2. Mains connection

- Connect to an AC earthed socket. If in doubt have the socket checked by a specialist.
- The mains voltage and the voltage shown on the rating plate (→ page 10) must be the same.
- The connected load and necessary fuse protection are specified on the rating plate.

Frost protection



Preparation

1. Empty the condensate container → page 4.
2. Select any programme using the programme selector.
3. Press the Start/Stop button → condensed water is pumped into the container
4. Wait 5 minutes and then empty the condensate container again.
5. Turn the programme selector to Off.

Transport

- Prepare the dryer → see Frost protection.
- Transport the dryer in a vertical upright position.
- Following transportation, do not use the dryer for two hours.



The dryer contains residual water; this can flow out if the dryer is tilted.

Care and cleaning



Appliance must be switched off.



Heat exchanger

The dryer's heat exchanger is cleaned automatically during drying. **Cln** appears in the display panel. Do not pull out the condensate container during the cleaning process.


Dryer housing, control panel, air intake

Remove detergent residues immediately. Wipe with a soft, damp cloth. Do not use harsh cleaning agents or solvents. Some water may collect between the window and the seal during drying. This does not affect the proper operation of your dryer in any way.

Filter in the condensate container

The filter is cleaned automatically when the condensate container is emptied. However, the filter should still be cleaned regularly under running water → This prevents stubborn deposits/dirt from building up.

1. Pull out the condensate container.

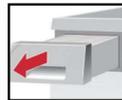

2. Pull the filter out of its snap-in lock.



3. Clean the filter under running water or in the dishwasher.



4. Refit the filter.



5. Insert the condensate container so that it locks into place.



Only operate the dryer with the filter inserted.

Moisture sensor

The dryer is equipped with stainless steel moisture sensors. Moisture sensors measure how damp the laundry is. A thin layer of limescale may build up on the moisture sensors after prolonged use.

1. Open the door.
2. Clean the moisture sensors using a damp sponge with a rough surface.



- Do not use steel wool or abrasive materials.



Technical data

● Dimensions (DxWxH)	60 x 60 x 85 cm (height adjustable)
Weight	approximately 51 kg
Max. capacity	7 kg
Condensate container	4.0 l
Connection voltage	220-240 V
Connected load	max. 800 W
Fuse protection	10 A
Ambient temperature	5 - 35 °C
Product number	
Production number	under the door

The rating plate can be found on the back of the dryer.

- **Drum interior light** (*depending on model*): The drum lights up after the door is opened and after the programme starts, and switches off automatically.

Consumption rates

Fabrics/programmes	Residual moisture in the fabrics after spinning	Drying time**	Energy consumption**
👕 Cottons 7 kg Cupboard Dry*	1400 rpm (50%)	151 min	1.33 kWh
	1000 rpm (60%)	178 min	1.65 kWh
	800 rpm (70%)	205 min	1.92 kWh
👔 Iron Dry*	1400 rpm (50%)	110 min	0.94 kWh
	1000 rpm (60%)	137 min	1.24 kWh
	800 rpm (70%)	166 min	1.55 kWh

Fabrics/programmes	Drying time	Annual energy consumption
👕 Easy-Care 3.5 kg Cupboard Dry*	800 rpm (40%)	64 min 0.54 kWh
	600 rpm (50%)	81 min 0.68 kWh

* Programme setting for testing in accordance with applicable standard EN61121.
** The values may differ from those specified, depending on the type of fabric, composition of laundry to be dried, residual moisture in the fabric and the amount of laundry being loaded.

Fabrics/programmes	Drying time	Annual energy consumption
👕 Cottons 7 kg / 3.5 kg* Cupboard Dry***	139 min / cycle	212 kWh / year

*** Programme setting for testing and energy labelling in accordance with Directive 2010/30/EU.

Optional accessories

Platform
For easier loading and unloading. The basket contained in the drawer can be used to carry the laundry.


Washer-dryer stack connection set
The dryer can be placed on top of a suitable washing machine with the same width and depth to save space. The dryer **must be** fastened to the washing machine using this connection set. Same as WTZ 20410, but with pull-out worktop.

Installation underneath the worktop


Instead of the appliance covering plate, you **must** have a metal cover fitted by a specialist.

Normal noises


During drying, the compressor and the pump generate some noise which is entirely normal.

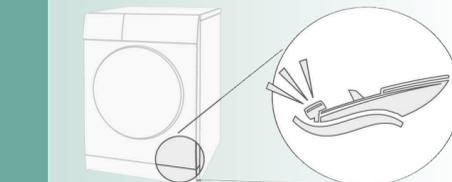


The compressor in the dryer may occasionally generate a humming noise. The volume and pitch of this may vary depending on the selected programmes and the progress of the drying.

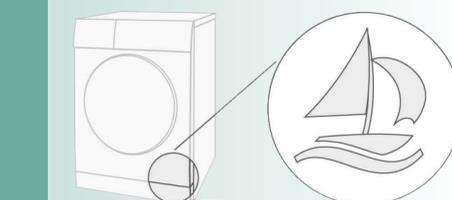

The compressor in the dryer is ventilated from time to time, which creates a whirring sound.

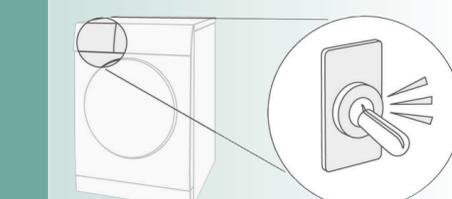

The automatic cleaning process causes a clicking noise.

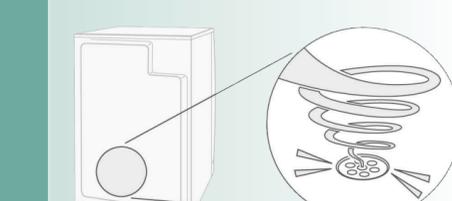

The process of pumping the condensation into the condensate container generates pumping noises.

What to do if...



If you cannot rectify a fault yourself (e.g. switching off/on), please contact our after-sales service. We will always find an appropriate solution and will avoid unnecessary visits by engineers. Trust the expertise of the manufacturer and rest assured that the repair will be carried out by trained service technicians using original spare parts. The contact details of your local after-sales service can be found in the enclosed after-sales service directory, or by calling one of these numbers:

- GB 0844 8928979
(Calls from a BT landline will be charged at up to 3 pence per minute. A call set-up fee of up to 6 pence may apply.)
 - IE 01450 2655 (0.03 € per minute at peak. Off peak 0.0088 € per minute.)
- When contacting the after-sales service, please quote the appliance's product number (E no.) and production number (FD) (see under the loading door). Turn the programme selector to **Off** and unplug the mains plug from the socket.

- The Start/Stop indicator lamp does not light up. Mains plug plugged in? Programme selected? Check the socket fuse.
- The display panel light and indicator lights (*depending on model*) go out and the Start/Stop indicator light flashes. Energy-saving mode is activated → see the separate *Energy-saving mode* instructions.
- The Container indicator lamp and the Start/Stop button are flashing. Empty the condensate container → page 4. Clean the condensate container filter if necessary → page 9. Dryer transported? → Wait 2 hours and start again.
- The Filter indicator lamp and Start/Stop button are flashing. Rinse the fluff filter under running water → page 4.
- **Cln** appears in the display panel. Not an error. Automatic cleaning of the heat exchanger. Do not empty the condensate container.
- Dryer does not start. Start/Stop button selected? Door closed? Programme set? Ambient temperature greater than 5 °C? Make sure the dryer is level.
- Water is leaking out. Push the door closed until you hear it click into place.
- The door opens by itself. Laundry load exceeded? Remove articles of clothing immediately after the end of the programme, hang up and pull into shape. Unsuitable programme selected → page 7.
- Creasing. Warm laundry feels damper than it actually is. The selected programme does not suit the load. Use another drying programme or, in addition, select the time programme → page 7. Use fine adjustment for the drying result → page 1/2 and 6. Fine layer of limescale on the humidity sensors → Clean the humidity sensors → page 9. Programme termination, e.g. tank full, mains power supply failure, door open or maximum drying time reached.
- Drying result is not satisfactory (laundry feels too damp). Rinse the fluff filters under running water → page 4. Insufficient supply of air → ensure that air can circulate. Air inlet possibly blocked → Clear inlet → page 8. Ambient temperature higher than 35 °C → ventilate the room.
- Drying time too long. Make sure the room is sufficiently ventilated. Air inlet blocked? → Keep clear.
- The humidity in the room increases significantly. Remove laundry from the dryer immediately and spread out. This allows the heat to dissipate. Be careful as the door, the drum and the laundry may be hot.
- Power failure. Not an error. Normal noises → page 11.
- Other intermittent noises and vibrations. Has the condensate container been properly inserted? → Push the condensate container all the way in. Not an error. Normal noises → page 11.
- Loud humming noise for several seconds.

Safety instructions



- Emergency ONLY use the dryer...** – Pull the appliance plug out of the socket immediately or disconnect the fuse. – in rooms inside the house. – to dry fabrics.
- The dryer must NEVER...** – be used for purposes other than those described above. – be modified in terms of its technology or properties.
- Hazards** – The dryer must not be used by children or persons who have not been instructed in its use. – Do not leave children unsupervised near the dryer. – Keep pets away from the dryer. – Remove all objects from pockets, and lighters in particular → **Risk of explosion.** – Do not lean or sit on the door → **Risk of tipping.**
- Installation** – Secure loose cables → **Risk of tripping.** – Do not operate a dryer if there is a risk of frost.
- Mains connection** – Connect the dryer to an AC earthed socket according to specifications, otherwise it cannot be guaranteed that the appliance is completely safe. – The cable cross-section must be sufficient. – Only use earth-leakage circuit breakers with the following symbol: – The appliance plug and socket must be compatible. – Do not use multiple plugs/connectors and/or extension cables. – Do not touch or hold the appliance plug with wet hands → **Risk of electric shock.**
- Operation** – Never pull the appliance plug out of the socket by its cable. – Do not damage the mains lead → **Risk of electric shock.** – Only load the drum with laundry. – Check the contents before you switch the dryer on. – Do not use the dryer if the laundry has been in contact with solvents, oil, wax, grease or paint (e.g. hair styling products, nail varnish remover, stain remover, cleaning solvent, etc.) → **Risk of fire/explosion.** – Dust (e.g. coal dust, flour) poses a danger: Do not use the dryer → **Risk of explosion** – Do not put laundry containing foamed material/rubber in the dryer → elastic material may be destroyed and the dryer be damaged due to possible deformation of the foamed material. – Do not turn off the dryer until the drying process ends, unless the laundry will be removed quickly and spread out, so that the heat can dissipate. – When cleaning the fluff filter, make sure that no foreign material (down or filling material) gets into the air duct opening. If necessary, clean the drum beforehand with a vacuum cleaner. If foreign material should still get into the air duct → call the after-sales service → **Risk of fire/explosion.** – Light things, such as long hair, may be sucked into the air inlet of the dryer → **Risk of injury.** – Switch off the dryer once the programme has ended. – The water from condensation is not drinking water and may be contaminated with fluff.
- Defect** – Do not use the dryer if it is defective or if you suspect that it is. Repairs must only be carried out by the after-sales service. – Do not use the dryer if the mains cable is defective. To avoid danger, only have the defective mains cable replaced by the after-sales service.
- Spare parts** – Only use genuine spare parts and accessories for safety reasons.
- Disposal** – Pull out the appliance plug, **then** cut off the mains cable from the appliance. Dispose of at a municipal waste disposal facility. – Heat exchangers contain a fluorinated greenhouse gas covered by the Kyoto protocol (R134a) → dispose of in a proper manner. Capacity: 0.22 kg. – Packaging: Keep all packaging out of reach of babies and children → **Risk of suffocation.** – All materials are environmentally sound and can be reused. Dispose of in an environmentally-responsible manner.



Dryer

en Instruction manual

Your new dryer

Congratulations - you have chosen to buy a modern, high-quality Bosch domestic appliance.

The condensation dryer with heat exchanger and automatic cleaning function is outstanding in terms of efficient energy consumption and low maintenance requirements → page 6.

Every dryer which leaves our factory is carefully checked to ensure that it functions correctly and is in perfect condition.

Should you have any questions, our after-sales service will be pleased to help.

Environmentally-responsible disposal

Dispose of packaging in an environmentally-responsible manner.

This appliance is designated according to European directive 2002/96/EC which governs waste electrical and electronic equipment - WEEE).

The directive provides an EU-wide framework for the return and recycling of used appliances.

For further information about our products, accessories, spare parts and services, please visit: www.bosch-home.com



Observe the safety instructions on page 13.



Read these instructions and the separate **Energy-saving mode** instructions before switching on the dryer.

Contents

Page

Preparation	2
Setting the programmes	2
Drying	3/4
Notes on laundry	5
Button signals	5
Fine adjustment of the drying result	6
Important Information	6
Overview of programmes	7
Installation	8
Frost protection / Transport	8
Care and cleaning	9
Technical data	10
Optional accessories	10
Normal noises	11
What to do if ... / After-sales service	12
Safety instructions	13

Select On/Off for buzzer at the end of the programme.

Reduced temperature for delicate fabrics that require a longer drying time; e.g. polyacrylics, polyamide, elastane, acetate silk.

Reduces creasing and prolongs the 'reduced ironing' phase after the programme has finished.

Intended use

- For domestic use only.
- Only to be used for drying fabrics that have been washed with water.



Do not leave children unsupervised near the dryer. Keep pets away from the dryer.

The dryer can be operated by children 8 years old and older, by persons with reduced physical, sensory or mental abilities and by persons with insufficient experience or knowledge if they are supervised or have been instructed in its use by a responsible adult.

Preparation

Installation → page 8



Never start the dryer if it is damaged. Inform your after-sales service.



Make sure your hands are dry. Hold the plug only.



Remove all items from pockets. Check for cigarette lighters. The drum must be empty prior to loading.

See programme overview on page 7.

See also separate instructions for "basket for wool" (depending on the model)

Selecting and adjusting the programme

Select the programme

... and adapt to individual requirements

Additional functions	Display status/service	Display/Remaining time	Programme selector
Buzzer Low Heat Reduced Ironing	<input type="radio"/> Drying <input type="radio"/> Iron dry <input type="radio"/> Cupboard dry <input type="radio"/> AntiCrease/End <input type="radio"/> Container <input type="radio"/> Filter		Easy-Care Very Dry Cupboard Dry Iron Dry Super Quick 40' Sportswear Timed Programme warm 30' Off Cottons Cupboard Dry Plus Cupboard Dry Iron Dry Mixed Load Cupboard Dry Wool finish Start Stop



All buttons are sensitive. They need to be touched.

Press the Start/Stop button



Only use the dryer if the plug is inserted.

Container	Empty the condensate container. Clean the filter in the condensate container if necessary → page 9.
Filter	Rinse the fluff filters under running water → page 4.
h:min	End of programme after 1-24 hours (button may need to be pressed several times) to the nearest full hour.
CIn	Automatic cleaning of the heat exchanger.
Fine adjustment of the drying result	The drying result (e.g. Cupboard Dry) can be adjusted over three levels (1 - max. 3) using Easy-Care , Mixed Load and Super Quick 40' programmes → presetting these programmes has been finely adjusted, the setting is retained for the others. Further information → page 6.

Inspecting the dryer

Connecting the mains plug

Loading laundry

woollens"

the programme
drying programme ...

Individual requirements

Positive and only
lightly.

Start/Stop button

with the fluff filter

can always be set

for the Cottons, 0, 1, 2, 3
= 0. After one of



1
2

3



Do not pull out/empty the condensate container when drying is in progress.

Drying



Drying




Emptying condensation

Empty the container **after each** drying cycle, not during drying.

1. Remove the condensate container and hold it level.
2. Pour out the condensation.
3. Always push container in fully until it clicks into place.

If the **Container** indicator lamp flashes despite the container having been emptied → *Filter in condensate container, page 9.*




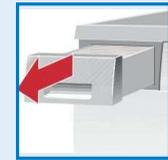


Cleaning the fluff filter

i Clean fluff filters reduce energy consumption.


The fluff filter consists of two parts. Clean the inner and outer filter **after every** drying cycle:

1. Open the door. Remove fluff from the door/door area.
2. Pull out both parts of the fluff filter.
3. Remove fluff from the edge of the shaft. Fluff should not fall into the open shaft.
4. Open the filter and remove all the fluff.
5. Rinse both parts under running water and dry thoroughly.
6. Close the inner and outer filter, put them back together and reinsert them into the appliance.

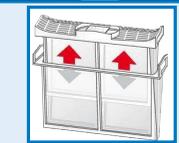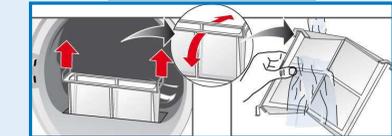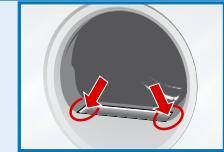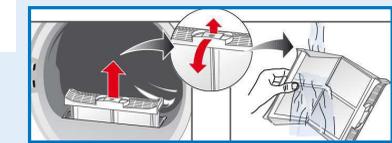

Switching off the dryer

Turn the programme selector to **Off**. Do not leave laundry in the dryer.

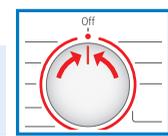

Removing the laundry

Your dryer is equipped with an automatic reduced ironing function. The drum is moved at specific time intervals for 60 minutes once the programme has ended. The laundry stays loose and fluffy (or 120 minutes if the additional **Reduced ironing** function is selected).

End of programme as soon as the **AntiCrease/End** indicator lamp lights up.



Interrupt programme Adding or removing laundry.

i The drying operation can be interrupted briefly to add or remove laundry. However, it must then be continued until it has finished.

1. Open the door. The drying process is interrupted.
2. Add or remove laundry then close the door.
3. If required, select a new programme and additional functions.
4. Press the **Start/Stop** button. The remaining time is updated after a few minutes.

Information on laundry ...



Labelling of fabrics

Follow the manufacturer's care information.

- Dry at normal temperature.
- Dry at low temperature → in addition, select **Low heat**.
- Do not machine dry.



Always observe the safety instructions on page 13.

Do not tumble-dry the following fabrics, for example:

- Non-breathable fabrics (e.g. rubber-coated).
- Delicate materials (silk, curtains made from synthetic material) → these may crease.
- Oil-stained laundry.



Drying tips

- To ensure an even result, sort the laundry by fabric type and drying programme.
- Always dry very small fabrics (e.g. baby socks) together with large items of laundry (e.g. towels).
- Close zips, hooks and eyelets, and button up covers.
- Tie fabric belts, apron strings, etc. together
- Do not over-dry easy-care laundry → Risk of creasing. Allow laundry to finish drying in the air.
- Do not dry woollens in the dryer. They may, however, be refreshed → page 7 **Wool finish** programme.
- Do not iron laundry immediately after drying; fold items up and leave for a while → residual moisture will then be distributed evenly.
- The drying result depends on the type of water used during washing. → *Fine adjustment of the drying result* → page 6.
- Knitted fabrics (e.g. T-shirts, jerseys) often shrink slightly the first time they are tumble-dried. → Do not use the **Very Dry** programme.
- The drying of starched laundry should be limited. → Starch leaves behind a coating that impairs drying.
- When washing laundry that is to be tumble-dried afterwards, use the correct amount of fabric softener as specified in the manufacturer's instructions.
- For pre-dried, multi-layered fabrics or small, individual items of laundry, use the Timed programme. Also suitable for subsequent drying.


Environmental protection/energy-saving tips

- Before drying, spin the laundry thoroughly in the washing machine → the higher the spin speed, the shorter the drying time will be, thus less energy is consumed. Also spin easy-care laundry.
- Use the maximum recommended capacity, but do not exceed it → Programme overview page 7.
- Make sure the room is well ventilated during drying.
- Do not cover or seal the air inlet.

Button signals



Setting the volume for button signals

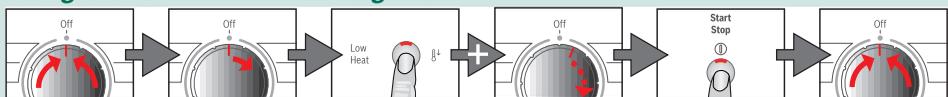

Turn to **Off** 1 x to the right Press and hold **Low heat** and turn 2 x to the right Press **Start/Stop** until the required volume is reached Turn to **Off**




Selectable values: 0 (off), 1 (quiet), 2 (normal), 3 (loud).

Fine adjustment of the drying result



Adjustment of the levels of dryness

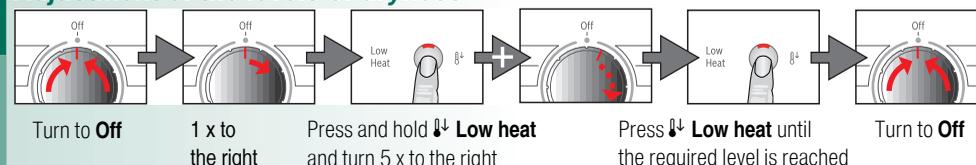

L:00, L:01, L:02, L:03 are shown in sequence
Short signal when changing from L:03 to L:00, otherwise long signal.

L:01

Important Information

Your dryer is designed to be particularly energy efficient. Its technical features include a refrigeration circuit, which uses energy efficiently in a similar way to a refrigerator. The dryer's heat exchanger is cleaned automatically during drying. The fluff filters and filter in the condensate container must be cleaned regularly.



Never operate the dryer without the fluff filters and without filter in condensate container.

Fluff filters

During drying, fluff and hair from the laundry is trapped by the fluff filter. Blocked fluff filters may impair the heat exchange process. The fluff filters must therefore be cleaned after every drying cycle. Rinse regularly under running water → page 4.

Filter in the condensate container

The filter in the condensate container cleans the condensation. This condensation is required for the automatic cleaning process. The filter should be cleaned regularly under running water. Empty the condensate container before cleaning the filter → page 4/9.

Fabrics

Do not dry any fabrics that have come into contact with solvents, oil, wax, grease or paint: e.g. hair styling products, nail varnish remover, stain remover, cleaning solvent. etc. Empty all pockets.

Do not dry non-breathable fabrics.

Avoid drying items that produce a lot of fluff.

Woollens should be refreshed only, using the woollens programme.

Programme overview

see also page 5

Sort the laundry according to type of textile and fabric. Fabrics must be suitable for tumble drying.

After drying...	iron laundry	lightly iron laundry	do not iron laundry	mangle laundry
PROGRAMMES				
TEXTILE TYPE AND INFORMATION				
** Cottons	max. 7 kg			
** Easy-Care	max. 3.5 kg			
** Mixed Load	max. 3 kg			
*Iron Dry				
Cupboard Dry				
*Cupboard Dry Plus/ Very Dry				
Wool finish	max. 3 kg			
Super Quick 40'	max. 2 kg			
Sportswear	max. 1.5 kg			
Timed Programme warm 30'	max. 3 kg			

*for Cottons and Easy-Care programmes only

**Dryness levels can be selected individually → Cupboard Dry Plus, Cupboard Dry and Iron Dry (depending on the model).

Degree of dryness can be finely adjusted; multi-layered textiles require a longer drying time than single-layered items of clothing.
Recommendation: Dry separately.

9308/9000907650



Robert Bosch Hausgeräte GmbH
Carl-Wery-Str. 34
81739 Munich, Germany

WTW863S1GB

Installation




- Scope of delivery: dryer, installation and operating instructions, basket for woollens (depending on the model).
- Check dryer for transport damage.
- The dryer is very heavy. Do not attempt to lift it on your own.
- Be careful to avoid sharp edges.
- Do not set up in a room that is susceptible to frost. Freezing water may cause damage.
- If in doubt, have the appliance connected by a specialist.
- Do not lift the dryer by protruding parts (e.g. the door) - risk of breakage.

1. Setting up the dryer

- The appliance plug must always be accessible.
- Ensure that the appliance is installed on a clean, level and firm surface.
- Do not obstruct the air inlet on the front of the dryer.
- Keep the area around the dryer clean.
- Make the dryer level using the threaded feet and a spirit level.
- Do not remove the threaded feet under any circumstances.



Take all accessory parts out of the drum.
The drum must be empty.

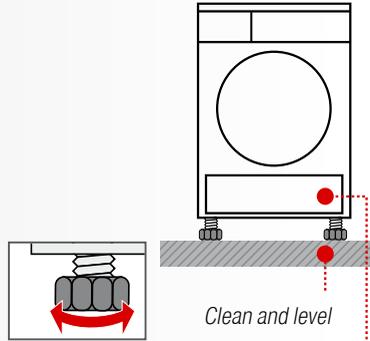

Make sure that the air inlet remains unobstructed



Do not set up the dryer behind a door or sliding door, as this may obstruct the dryer door or prevent it from opening. This will prevent a potentially fatal danger to children from locking themselves in.

2. Mains connection see Safety instructions → page 13.

- Connect to an AC earthed socket. If in doubt have the socket checked by a specialist.
- The mains voltage and the voltage shown on the rating plate (→ page 10) must be the same.
- The connected load and necessary fuse protection are specified on the rating plate.

Frost protection



Do not operate the dryer if there is a danger of frost.



Preparation

1. Empty the condensate container → page 4.
2. Select any programme using the programme selector.
3. Press the **Start/Stop** button → condensed water is pumped into the container
4. Wait 5 minutes and then empty the condensate container again.
5. Turn the programme selector to **Off**.

Transport



- Prepare the dryer → see Frost protection.
- Transport the dryer in a vertical upright position.
- Following transportation, do not use the dryer for two hours.



The dryer contains residual water; this can flow out if the dryer is tilted.

Care and cleaning



Appliance must be switched off.



Heat exchanger

The dryer's heat exchanger is cleaned automatically during drying. **Cln** appears in the display panel. Do not pull out the condensate container during the cleaning process.



Dryer housing, control panel, air intake

Remove detergent residues immediately. Wipe with a soft, damp cloth.

Do not use harsh cleaning agents or solvents.

Some water may collect between the window and the seal during drying. This does not affect the proper operation of your dryer in any way.




Filter in the condensate container


The filter is cleaned automatically when the condensate container is emptied.

However, the filter should still be cleaned regularly under running water → This prevents stubborn deposits/dirt from building up.


1. Pull out the condensate container.

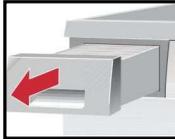


2. Pull the filter out of its snap-in lock.

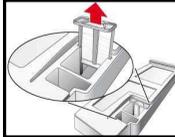

3. Clean the filter under running water or in the dishwasher.

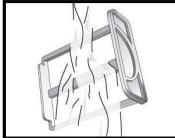

4. Refit the filter.

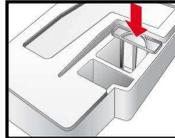

5. Insert the condensate container so that it locks into place.



Only operate the dryer with the filter inserted.



Moisture sensor

The dryer is equipped with stainless steel moisture sensors. Moisture sensors measure how damp the laundry is. A thin layer of limescale may build up on the moisture sensors after prolonged use.

1. Open the door.
2. Clean the moisture sensors using a damp sponge with a rough surface.



Do not use steel wool or abrasive materials.



Technical data

● Dimensions (DxWxH)	60 x 60 x 85 cm (height adjustable)
Weight	approximately 51 kg
Max. capacity	7 kg
Condensate container	4.0 l
Connection voltage	220-240 V
Connected load	max. 800 W
Fuse protection	10 A
Ambient temperature	5 - 35 °C
Product number	
Production number	under the door

The rating plate can be found on the back of the dryer.

- **Drum interior light** (depending on model): The drum lights up after the door is opened and after the programme starts, and switches off automatically.

Consumption rates

Fabrics/programmes	Residual moisture in the fabrics after spinning		Drying time**	Energy consumption**
👤 Cottons 7 kg				
Cupboard Dry*	1400 rpm	(50%)	151 min	1.33 kWh
	1000 rpm	(60%)	178 min	1.65 kWh
	800 rpm	(70%)	205 min	1.92 kWh
Iron Dry*	1400 rpm	(50%)	110 min	0.94 kWh
	1000 rpm	(60%)	137 min	1.24 kWh
	800 rpm	(70%)	166 min	1.55 kWh
👤 Easy-Care 3.5 kg				
Cupboard Dry*	800 rpm	(40%)	64 min	0.54 kWh
	600 rpm	(50%)	81 min	0.68 kWh

* Programme setting for testing in accordance with applicable standard EN61121.

** The values may differ from those specified, depending on the type of fabric, composition of laundry to be dried, residual moisture in the fabric and the amount of laundry being loaded.

Fabrics/programmes	Drying time	Annual energy consumption
👤 Cottons 7 kg / 3.5 kg*		
Cupboard Dry***	139 min / cycle	212 kWh / year

*** Programme setting for testing and energy labelling in accordance with Directive 2010/30/EU.

Optional accessories (from after-sales service using order number, depending on model)

WMZ 20500 Platform
For easier loading and unloading. The basket contained in the drawer can be used to carry the laundry.


WTZ 20410 Washer-dryer stack connection set
The dryer can be placed on top of a suitable washing machine with the same width and depth to save space. The dryer **must be** fastened to the washing machine using this connection set.

Same as WTZ 20410, but with pull-out worktop.


WTZ 10290 Installation underneath the worktop
Instead of the appliance covering plate, you **must** have a metal cover fitted by a specialist.

Normal noises


During drying, the compressor and the pump generate some noise which is entirely normal.

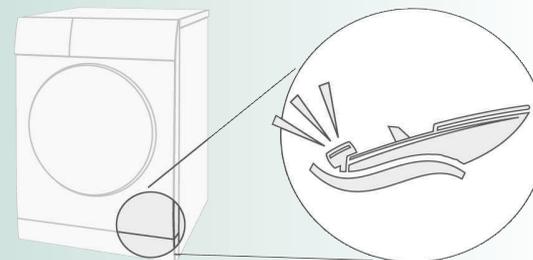


The compressor in the dryer may occasionally generate a humming noise. The volume and pitch of this may vary depending on the selected programmes and the progress of the drying.

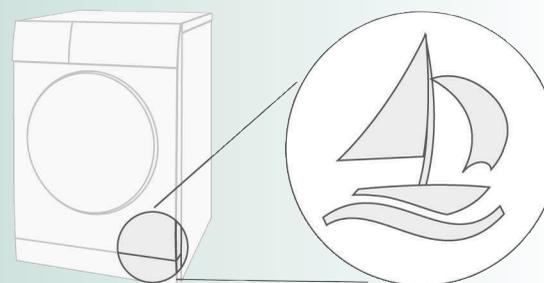

The compressor in the dryer is ventilated from time to time, which creates a whirring sound.

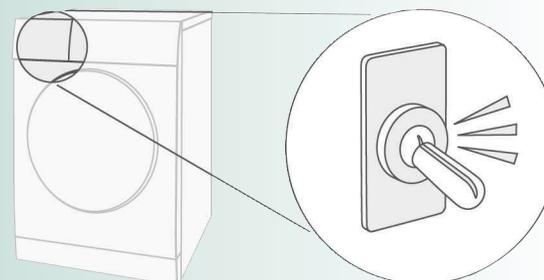

The automatic cleaning process causes a clicking noise.

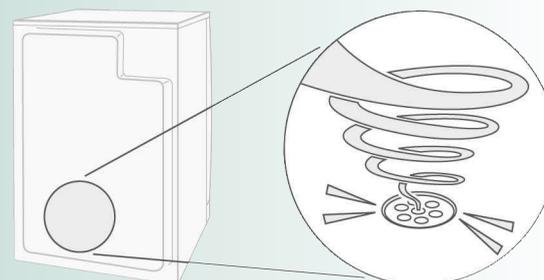

The process of pumping the condensation into the condensate container generates pumping noises.

What to do if...



If you cannot rectify a fault yourself (e.g. switching off/on), please contact our after-sales service. We will always find an appropriate solution and will avoid unnecessary visits by engineers. Trust the expertise of the manufacturer and rest assured that the repair will be carried out by trained service technicians using original spare parts. The contact details of your local after-sales service can be found in the enclosed after-sales service directory, or by calling one of these numbers:

– GB 0844 8928979

(Calls from a BT landline will be charged at up to 3 pence per minute. A call set-up fee of up to 6 pence may apply.)

– IE 01450 2655 (0.03 € per minute at peak. Off peak 0.0088 € per minute.)

When contacting the after-sales service, please quote the appliance's product number (E no.) and production number (FD) (see under the loading door).

Turn the programme selector to **Off** and unplug the mains plug from the socket.

● The Start/Stop indicator lamp does not light up.	Mains plug plugged in? Programme selected? Check the socket fuse.
● The display panel light and indicator lights (<i>depending on model</i>) go out and the Start/Stop indicator light flashes.	Energy-saving mode is activated → see the separate <i>Energy-saving mode</i> instructions.
● The Container indicator lamp and the Start/Stop button are flashing.	Empty the condensate container → <i>page 4</i> . Clean the condensate container filter if necessary → <i>page 9</i> . Dryer transported? → Wait 2 hours and start again.
● The Filter indicator lamp and Start/Stop button are flashing.	Rinse the fluff filter under running water → <i>page 4</i> .
● Cln appears in the display panel.	Not an error. Automatic cleaning of the heat exchanger. Do not empty the condensate container.
● Dryer does not start.	Start/Stop button selected? Door closed? Programme set? Ambient temperature greater than 5 °C?
● Water is leaking out.	Make sure the dryer is level.
● The door opens by itself.	Push the door closed until you hear it click into place.
● Creasing.	Laundry load exceeded? Remove articles of clothing immediately after the end of the programme, hang up and pull into shape. Unsuitable programme selected → <i>page 7</i> .
● Drying result is not satisfactory (laundry feels too damp).	Warm laundry feels damper than it actually is. The selected programme does not suit the load. Use another drying programme or, in addition, select the time programme → <i>page 7</i> . Use fine adjustment for the drying result → <i>page 1/2 and 6</i> . Fine layer of limescale on the humidity sensors → Clean the humidity sensors → <i>page 9</i> . Programme termination, e.g. tank full, mains power supply failure, door open or maximum drying time reached.
● Drying time too long.	Rinse the fluff filters under running water → <i>page 4</i> . Insufficient supply of air → ensure that air can circulate. Air inlet possibly blocked → Clear inlet → <i>page 8</i> . Ambient temperature higher than 35 °C → ventilate the room.
● The humidity in the room increases significantly.	Make sure the room is sufficiently ventilated. Air inlet blocked? → Keep clear.
● Power failure.	Remove laundry from the dryer immediately and spread out. This allows the heat to dissipate. Be careful as the door, the drum and the laundry may be hot.
● Other intermittent noises and vibrations.	Not an error. Normal noises → <i>page 11</i> .
● Loud humming noise for several seconds.	Has the condensate container been properly inserted? → Push the condensate container all the way in. Not an error. Normal noises → <i>page 11</i> .

Safety instructions



Emergency ONLY use the dryer...	– Pull the appliance plug out of the socket immediately or disconnect the fuse. – in rooms inside the house. – to dry fabrics.
The dryer must NEVER...	– be used for purposes other than those described above. – be modified in terms of its technology or properties.
Hazards	– The dryer must not be used by children or persons who have not been instructed in its use. – Do not leave children unsupervised near the dryer. – Keep pets away from the dryer. – Remove all objects from pockets, and lighters in particular → Risk of explosion . – Do not lean or sit on the door → Risk of tipping .
Installation	– Secure loose cables → Risk of tripping . – Do not operate a dryer if there is a risk of frost.
Mains connection	– Connect the dryer to an AC earthed socket according to specifications, otherwise it cannot be guaranteed that the appliance is completely safe. – The cable cross-section must be sufficient. – Only use earth-leakage circuit breakers with the following symbol: – The appliance plug and socket must be compatible. – Do not use multiple plugs/connectors and/or extension cables. – Do not touch or hold the appliance plug with wet hands → Risk of electric shock . – Never pull the appliance plug out of the socket by its cable. – Do not damage the mains lead → Risk of electric shock .
Operation	– Only load the drum with laundry. Check the contents before you switch the dryer on. – Do not use the dryer if the laundry has been in contact with solvents, oil, wax, grease or paint (e.g. hair styling products, nail varnish remover, stain remover, cleaning solvent, etc.) → Risk of fire/explosion . – Dust (e.g. coal dust, flour) poses a danger: Do not use the dryer → Risk of explosion – Do not put laundry containing foamed material/rubber in the dryer → elastic material may be destroyed and the dryer be damaged due to possible deformation of the foamed material. – Do not turn off the dryer until the drying process ends, unless the laundry will be removed quickly and spread out, so that the heat can dissipate. – When cleaning the fluff filter, make sure that no foreign material (down or filling material) gets into the air duct opening. If necessary, clean the drum beforehand with a vacuum cleaner. If foreign material should still get into the air duct → call the after-sales service → Risk of fire/explosion . – Light things, such as long hair, may be sucked into the air inlet of the dryer → Risk of injury . – Switch off the dryer once the programme has ended. – The water from condensation is not drinking water and may be contaminated with fluff.
Defect	– Do not use the dryer if it is defective or if you suspect that it is. Repairs must only be carried out by the after-sales service. – Do not use the dryer if the mains cable is defective. To avoid danger, only have the defective mains cable replaced by the after-sales service.
Spare parts	– Only use genuine spare parts and accessories for safety reasons.
Disposal	– Pull out the appliance plug, then cut off the mains cable from the appliance. Dispose of at a municipal waste disposal facility. – Heat exchangers contain a fluorinated greenhouse gas covered by the Kyoto protocol (R134a) → dispose of in a proper manner. Capacity: 0.22 kg. – Packaging: Keep all packaging out of reach of babies and children → Risk of suffocation . – All materials are environmentally sound and can be reused. Dispose of in an environmentally-responsible manner.



Dryer



BOSCH

en Instruction manual