


USER MANUAL

Thank you for choosing Better Bathrooms.
Please read this manual before installing your product
and keep for future reference

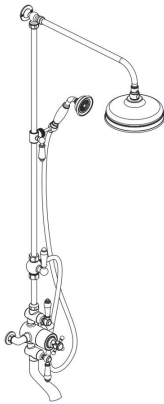

Product Name — 3 Outlet Exposed Shower With Spout - Camden



- Single-person assembly
- We always recommend using professional tradespeople to install your product

V2_19.12.2025

Congratulations on your purchase

And welcome to our growing gang of savvy shoppers

We're on a mission to bring you extraordinary bathroom products, for less. From modern to traditional style ceramics, plus the gorgeous fixtures, fittings and furniture to match. So, you can fall in love with your space every single day.

As one of the UK's largest independent bathroom stores, we've received countless awards, including the National Business Awards UK, the Digital Entrepreneur Awards and being placed on The Sunday Times Fast Track 100.

We hope your new product exceeds your highest expectations. However, if you experience any problems, please:

- log in to your account and contact our customer services team via our self-serve portal betterbathrooms.com/CustomerAccount/Login.
- contact us via betterbathrooms.com/contact/contact-us.

Important information


- Please read these instructions thoroughly and retain for future reference
- Water pressures must be balanced. Always ensure to flush the system prior to installation.

Always check walls for pipes and cables before drilling.

Please note: Screws and plugs supplied are for masonry only, for any other structure a suitable plug and screw must be used.


Maximum Static Pressure: 10 Bar
Flow Pressure, Hot & Cold: 1-5 Bar
Hot Supply Temperature: 55-55 °C
Cold Supply Temperature: 5-25 °C

Parts / Diagrams

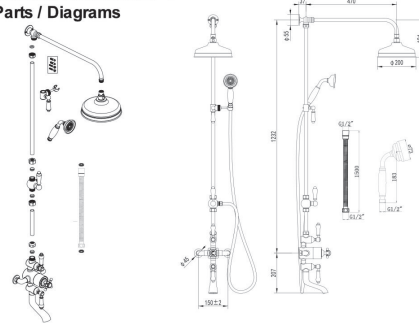


Tools required

 - Protective cloth

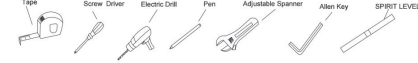

Installation

Fig 1:

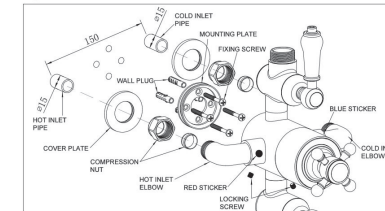

The valve should be installed in accordance with the water bye-laws. For further details refer to the latest copy of Water Bye-laws guide or your local water authority.

Fig 1:

1. Prepare the water supply pipes (hot on the left and cold on the right) at the identified height with a width of 150mm centers.
2. Make the ends of pipes 20-25mm out from the face of wall.
3. Remove the compression nuts and olives from the mixer elbows, then place the cover plate, the compression nut and olive over the end of the water pipe.
4. Put the mounting plate onto the wall and mark the position of 4 holes.
5. Drill 4 x 8mm holes on the wall to a depth of 45mm and insert wall plugs.
6. Insert the wall plugs into the holes, offer the mounting plate up to the wall and secure using the screws provided, then fix the valve body to the mounting plate using the grub screws provided.
7. Offer the valve to the mounting bracket and push the elbows over the ends of the pipes, ensure the pipes are fully inserted and connect the nut to the mixer elbow and tighten

Fig 2:

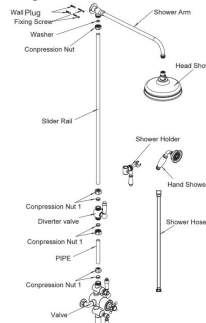


Fig 2:

1. After the mixer valve is installed, connect the pipe to the upper outlet fitting the compression nut and olive, then tighten to create the seal
2. Assemble the diverter to the pipe to the opposite end of the pipe, using the compression nut and olive
3. Assemble the slider rail not the diverter using the compression nut and olive (Do not tighten at this stage)
4. With the compression nut and olive fitted place the shower arm onto the top end of the rail and mark the drill holes in the wall bracket
5. Remove the rail and arm and drill 2 x 8mm diameter holes at a depth of 45mm, then insert the plugs and tap flush
6. Fit the shower holder onto the slide rail and slide up the rail to allow fitting to continue (ensure to turn the lever to move the shower holder)
7. Re-fit the slider rail to the diverter and the arm to the rail, positioning the wall bracket over the screw holes
8. Secure the wall bracket using the screws provided
9. Tighten all compression nut and olives to create seals
10. Fit the seals into each end of the shower hose
11. Connect the nut end of the hose to the mixer outlet
12. Connect the cone end of the hose to the hand shower
13. Place the cone end of the hose into the holder, ensure the holder is secured before turning on the water
14. Fit the seal into the overhead shower and screw the head to the arm
15. Turn on the water supply and check for leaks

OPERATION

Turn the top handle (on the valve body) to controls the hand shower and the overhead shower.

(3) When the diverter handle is facing upward, the overhead shower is activated.


(2) When the diverter handle is facing to the right, the hand shower is activated.

Turn the cross handle to regulate the water temperature.

Turn the bottom lever (on the valve body) to operate the bath filler spout. To adjust the height of the shower holder, first rotate the handle (on the shower holder) counterclockwise to loosen it.

Adjust to the desired height, then rotate the handle clockwise to secure the shower holder in place.


RECALIBRATE

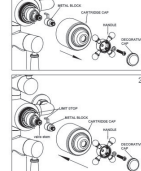


- 1) Turn off the valve.
- 2) Unscrew the decorative cap on the temperature control handle.
- 3) Unscrew and remove the handle.
- 4) Unscrew and remove the cartridge cap.
- 5) Pull off the metal block with limit stop on the backside.

- 1) Turn on the valve.
- 2) Temperature is up when valve stem is turned clockwise, temperature is down when valve stem is turned anti-clockwise.
- 3) When the temperature is set properly, fit the metal block to the valve stem to align the limit stop.
- 4) Assemble all the parts back together in sequence.

 REMOVAL OF ON/OFF VALVE

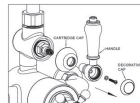

 - 1) Turn off hot & cold inlets.
- 2) Remove the decorative cap on the handle anti-clockwise.
- 3) Unscrew and remove the handle.
- 4) Take out cartridge cap.

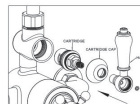

- 1) Take out the valve with spanner turning anti-clockwise.
- 2) Turn replacement valve clockwise to the mixer body.
- 3) Install all the components to the mixer body in order.

TROUBLE SHOOTING

1. Output water temperature does not correspond with temperature set

Cause: Thermostat has not been adjusted base on the existing home water system

Remedy: Adjust the thermostat, refer to "Temperature Setting" procedure.

Cause: Hot Water temperature too low

Remedy: Adjust the water heater, increase hot water temperature to 65 °C.

2. Crossflow, cold water being forced into hot water pipe, or vice versa, when valve is closed

Cause: Non-return valves dirty or leaking

Remedy: Clean the non-return valves or exchange if necessary

3. Very low flow or no flow

Cause: Supply pressure inadequate

Remedy: Check hot and cold feeds. If a pump has been installed, please check to see if the pump is working (the valve will shut down if either the cold or hot water supply fails)

4. Water will not run hot enough when first installed

Cause: Wrong maximum temperature setting

Remedy: Adjust the maximum temperature, refer to "Temperature Setting" procedure.

MAINTENANCE (THERMOSTATIC CARTRIDGE)

*After a period of use of the thermostatic mixer, limescale or debris can build up around the thermostat cartridge, which will affect flow and performance.

Cleaning of thermostat will be required


Turn off water supply and turn then turn on the shower to drain any water from inside the valve.

1. Remove the decorative cap.
2. Then remove the handle screw.
3. Pull off the handle.

4. Remove cartridge cap, metal block, plastic block, clamp nut, then pull out the cartridge

5. Wash the cartridge to clean the debris or limescale from the filters, if the debris build up is severe, this may need to be soaked overnight.

6. Once cleaned replace components in reverse sequence.

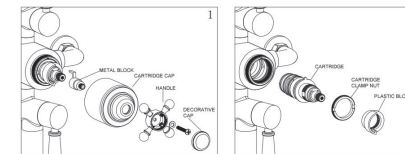

CLEANING

To maintain the surface of your product, wipe with a clean damp cloth and wipe dry.

Do not use abrasive cleaning agents or materials which can strip and scratch the surface; the use of these agents or materials can invalidate your guarantee.

It is recommended to wipe and dry on a regular basis.

For more information

- visit betterbathrooms.com
- email customerservices@buyitdirect.co.uk
- call 03303903062
- write to Trident Business Park, Neptune Way, Huddersfield, HD2 1UA.

better
bathrooms

Part of the BuyItDirect Group