


TES1 – Estuary Dual Lever

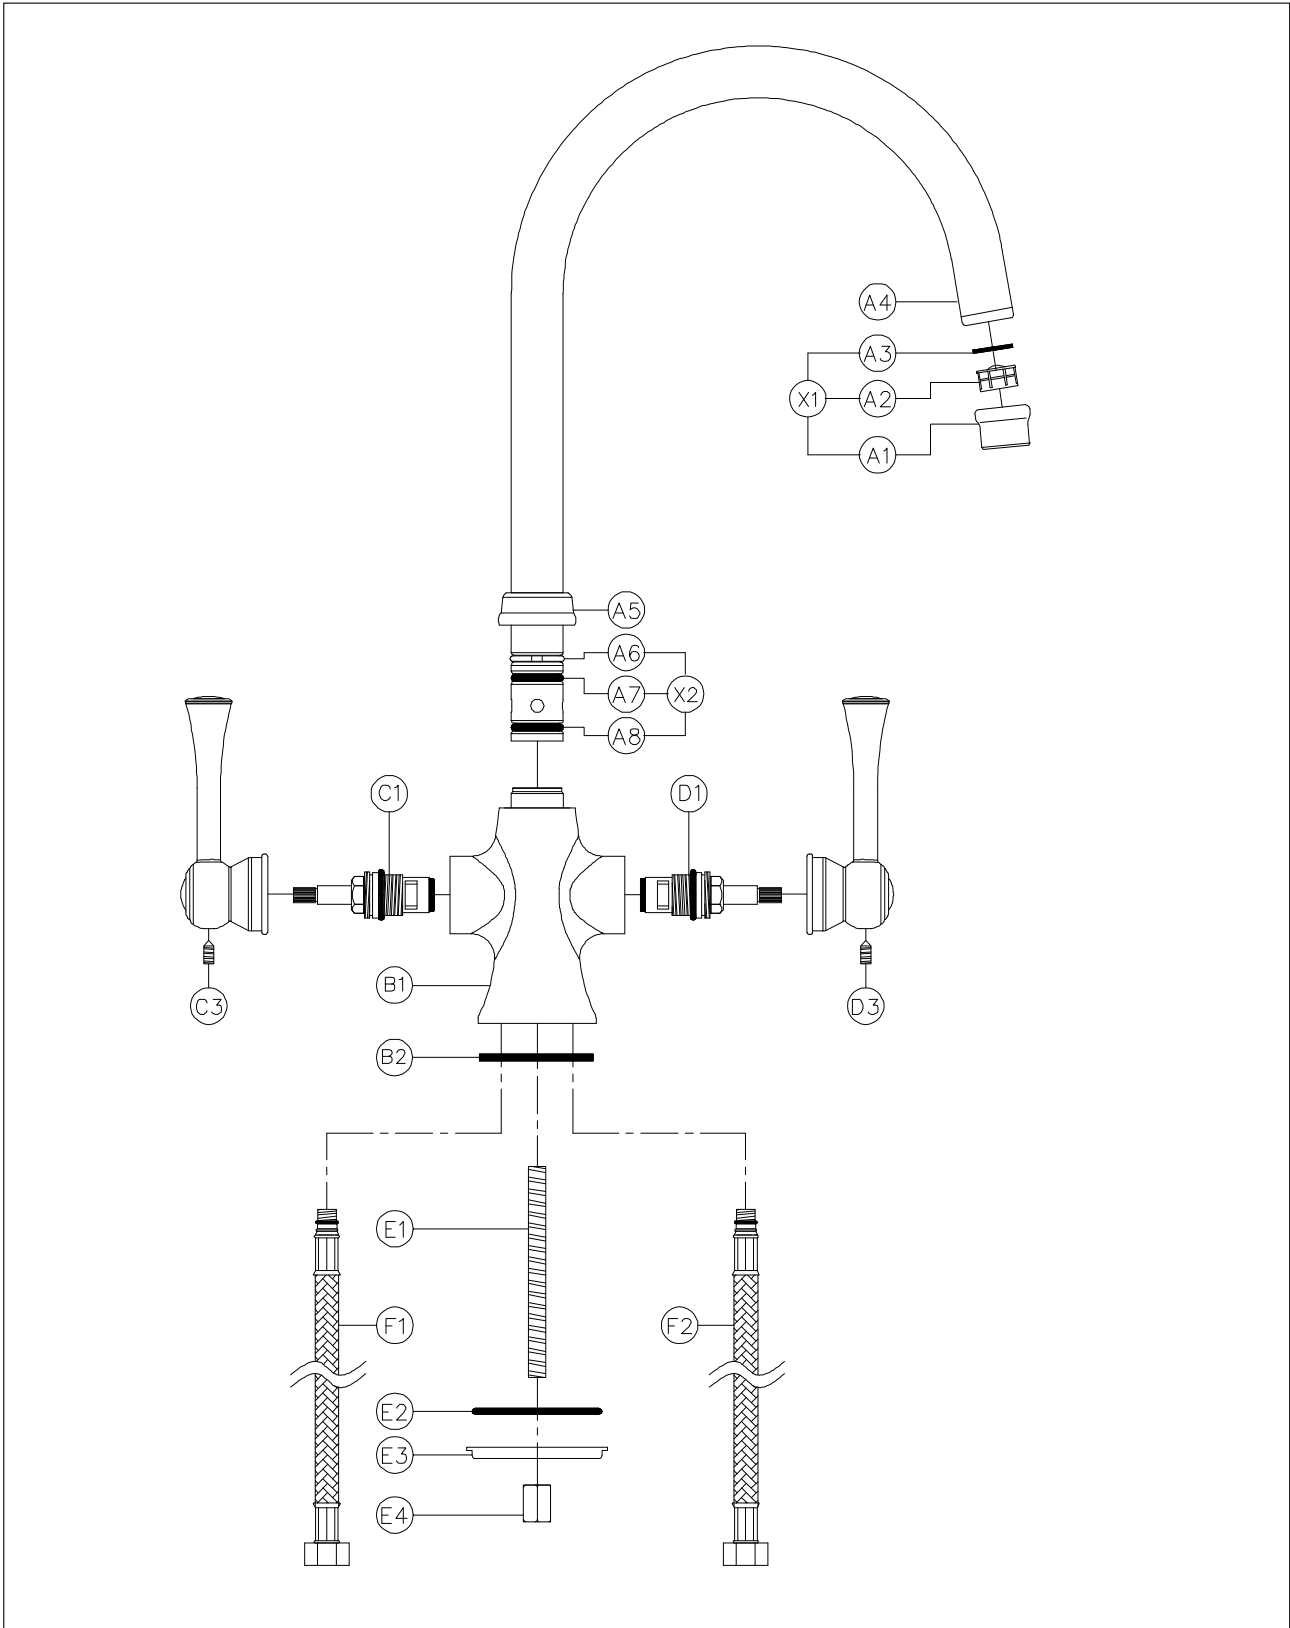

TES1 - Estuary Dual Lever
service drawing v1

our policy is to continually
improve and develop products,
and accordingly we reserve the
right to amend specifications
without prior notice

General Advice:

- These instructions are intended as a guide only, if you are in any doubt you should seek the advice of a qualified professional.
- Take care not to mark finished parts with screwdrivers or other tools.
- Use a pair of rubber gloves to get a better grip on decorative hand tight parts.
- Ensure all parts are reassembled tightly.
- After maintenance test that all assemblies are water tight and function correctly.
- Always isolate the hot and cold water supplies before starting any maintenance, once isolated you should drain any residual water from your system.

To replace the cold valve:

1. Loosen grub screw (D3) on the underside of handle (D2) using a 2.0mm A/F Allen key.
2. Pull handle (D2) horizontally away from the body (B1).
3. Using a socket unscrew valve (D1) anticlockwise.
4. Replace the faulty valve (D1) with the new one and assemble in reverse order.

To replace the spout O-rings:

1. Whilst holding body (B1) unscrew the spout locking collar (A5)
2. Pull the spout (A4) vertically away from the body (B1).
3. Remove the old O-rings (A7 & A8) using a small screwdriver or similar.
4. If worn, remove the white PTFE spacer (A6).
5. Ensure the inside of the body (B1) and the spout base (A4) is clean of dirt and grit with a soft wet cloth.
6. If required locate the new white PTFE spacer (A6).
7. Carefully locate the new O-rings (A7 & A8) onto the spout base (A4).
8. Grease the O-rings (A7 & A8) thoroughly with silicone or alternative similar grease.
9. Reassemble the tap in the reverse order.