


THEMDL – Hemlock Dual Lever

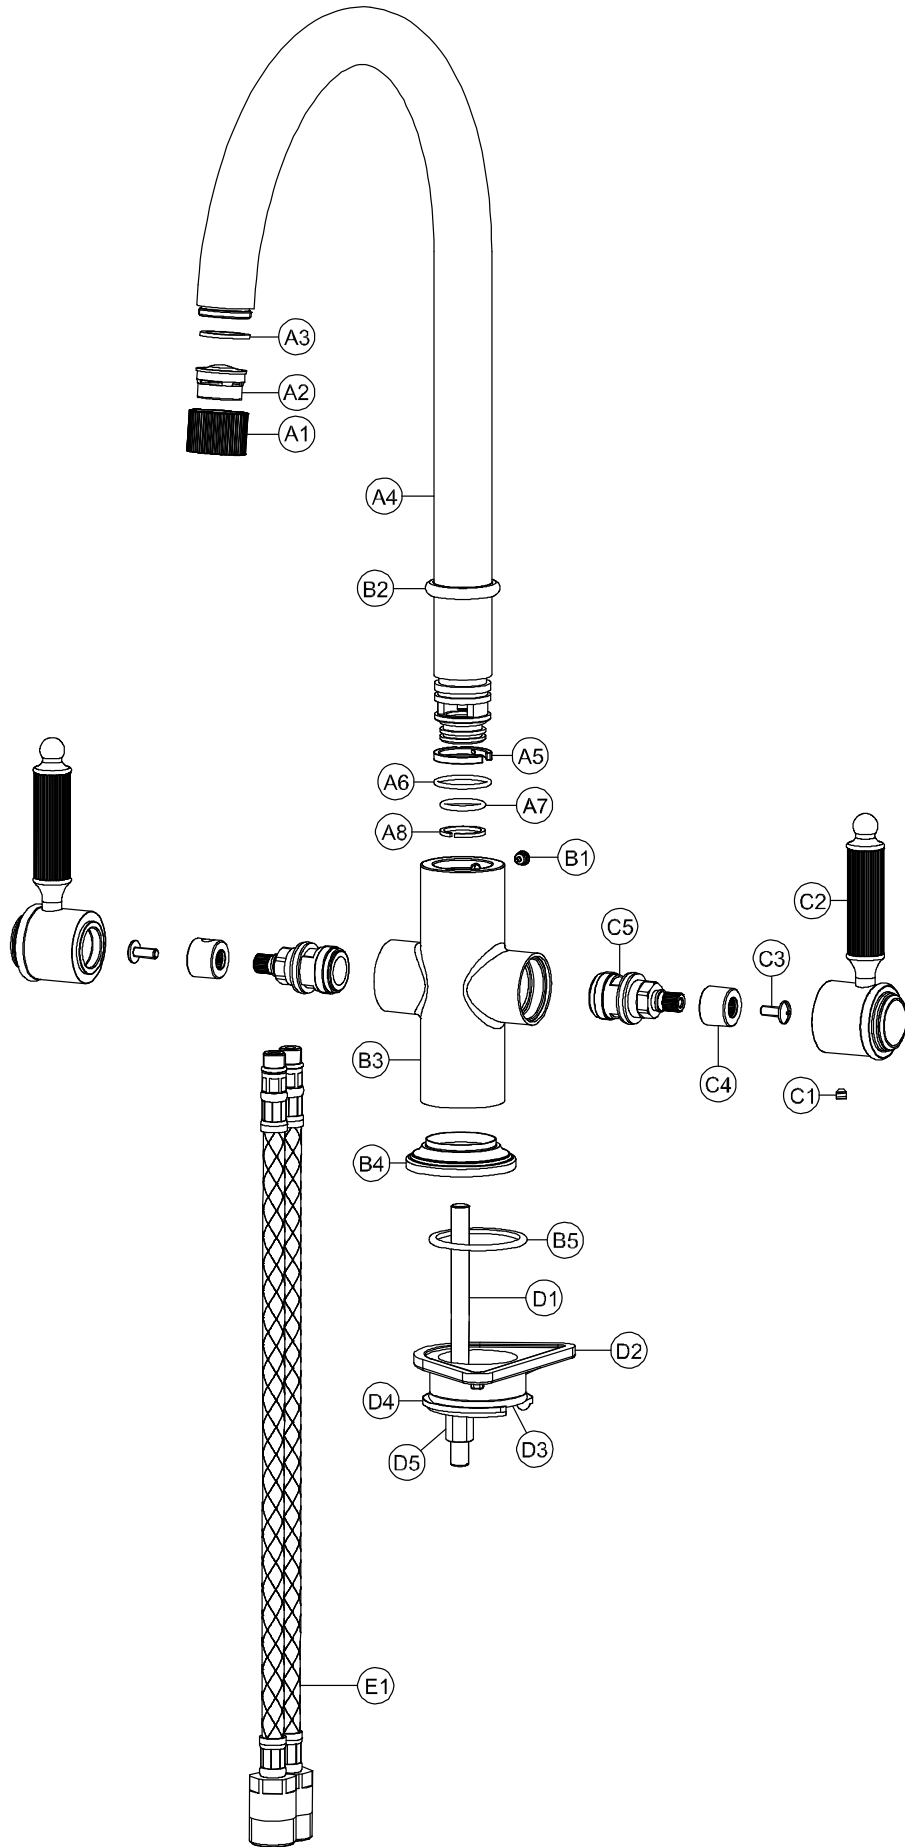

General Advice:

- These instructions are intended as a guide only, if you are in any doubt you should seek the advice of a qualified professional.
- Take care not to mark finished parts with screwdrivers or other tools.
- Use a pair of rubber gloves to get a better grip on decorative hand tight parts.
- Ensure all parts are reassembled tightly.
- After maintenance test that all assemblies are water tight and function correctly.
- Always isolate the hot and cold-water supplies before starting any maintenance, once isolated you should drain any residual water from your system.

To replace the valve:

1. Loosen grub screw (C1) on the underside of handle (C2) using a 2.5mm A/F allen key.
2. Pull handle (C2) horizontally away from the body (B3).
3. Unscrew (C3) and pull bush (C4) away from valve (C5)
4. Using a socket unscrew valve (C5) anticlockwise.
5. Replace the faulty valve (C5) with the new one and assemble in reverse order.

To replace the spout o-rings:

6. Loosen grub screw (B1) on the back of body (B3) using a 2.5mm A/F allen key.
7. Pull the spout (A4) vertically away from the tap body (B3).
8. Remove O-ring (A6 & A7) using a precision screwdriver.
9. Clean the spout base (A4) with a soft wet cloth.
10. Replace the O-ring (A6 & A7).
11. Typically, the PTFE rings (A5 & A8) do not wear, replace if necessary.
12. Reassemble the tap in reverse order.

Important Note: Top PTFE ring (A5) has a small gap, this needs to be aligned with grub screw (B1) during reassembly.

To clean the aerator:

1. Hold the spout (A4) firmly.
2. Unscrew the aerator housing (A1) by hand.
3. Clean the aerator (A2).
4. Reassemble the tap in the reverse order, don't forget to include flat washer (A3).