



10

To adjust the tilt of the TV screen on the brackets loosen the side screws then tighten when correct angle is achieved.

Once happy with the screen angle mount the TV onto the bracket and secure in place with parts D.

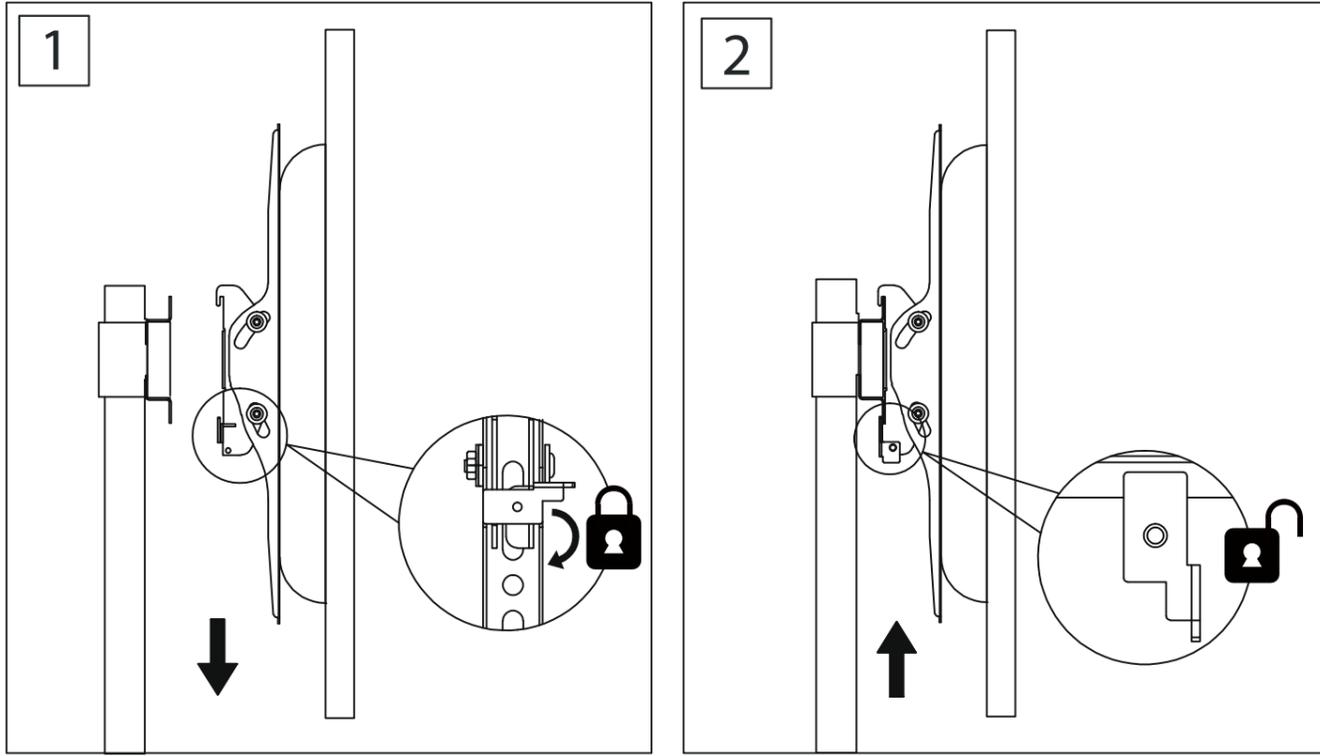


11

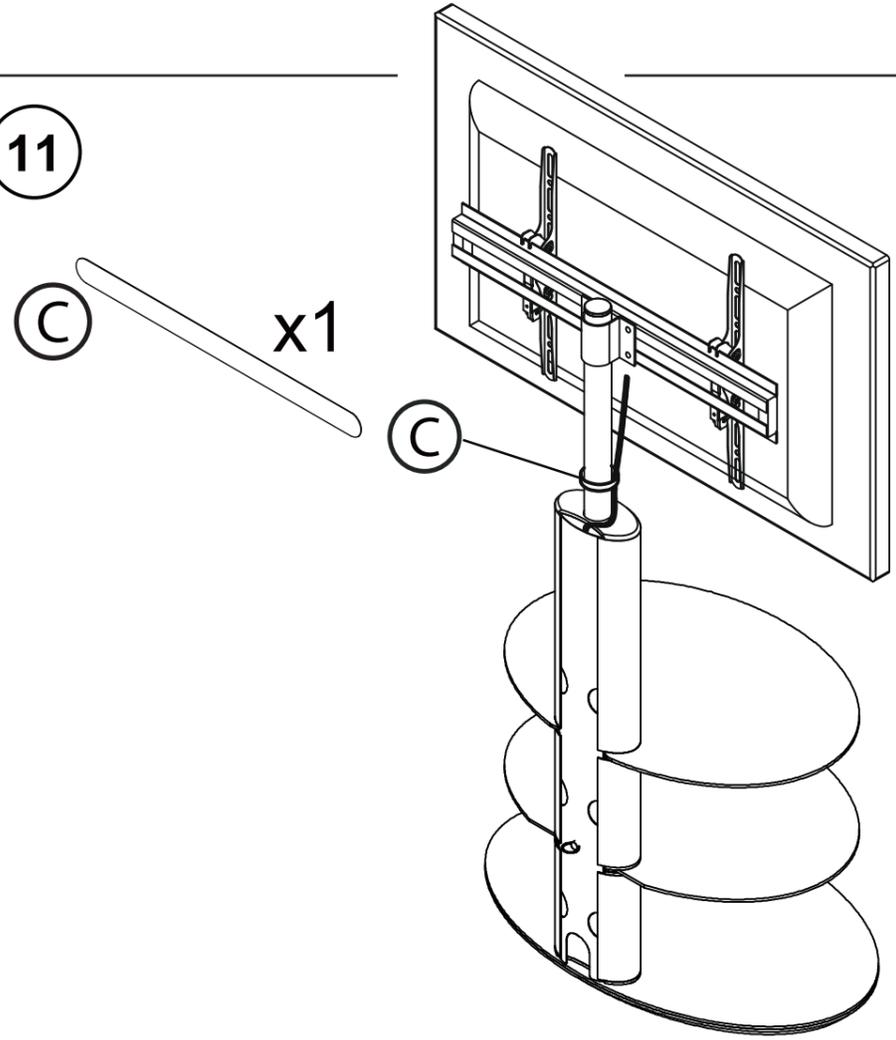

ST90E3 REV9





Product Name: STRATA E3  
Product Ref: ST90E3  
Art number: 407250

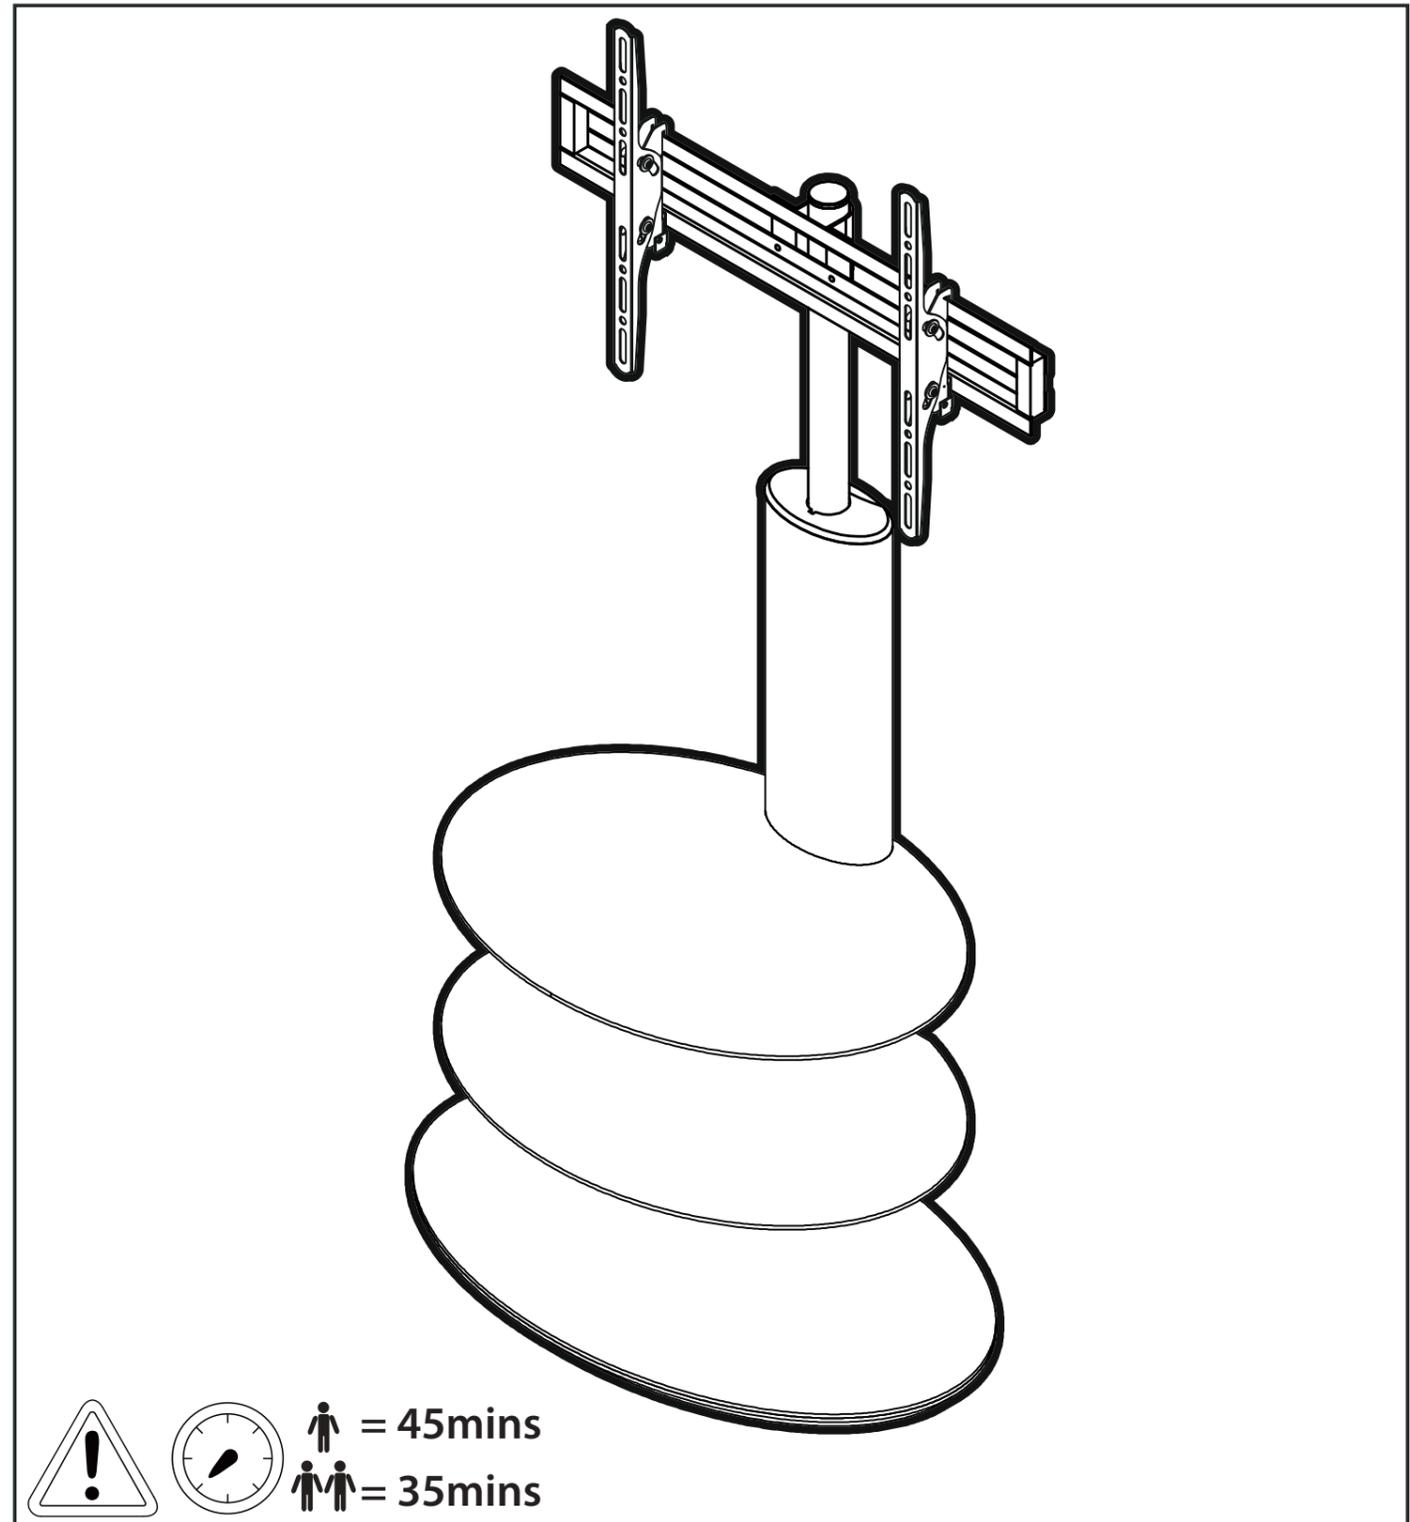






! = 45mins  
 ⌚ = 35mins

TECHLINK, A Division Of Tapehand Ltd.  
 Units 7 and 8 Bat and Ball Enterprise Centre  
 Bat and Ball Road  
 Sevenoaks  
 Kent  
 United Kingdom  
 TN14 5LJ

(UK)Free Phone 0800 634 2699  
 (US)Toll Free (844) 499-1159  
 salesdesk@techlink.uk.com  
 www.techlink.uk.com  
 www.recharge.uk.com

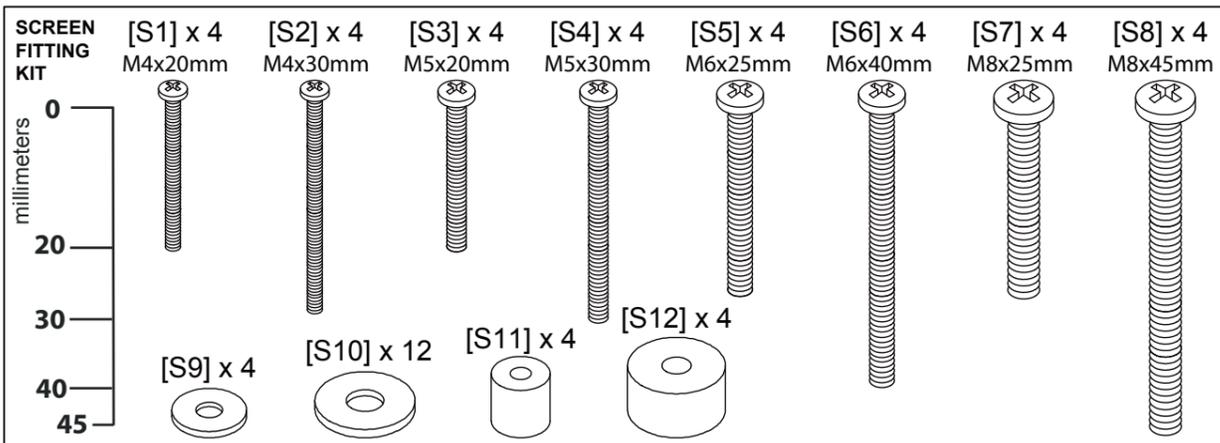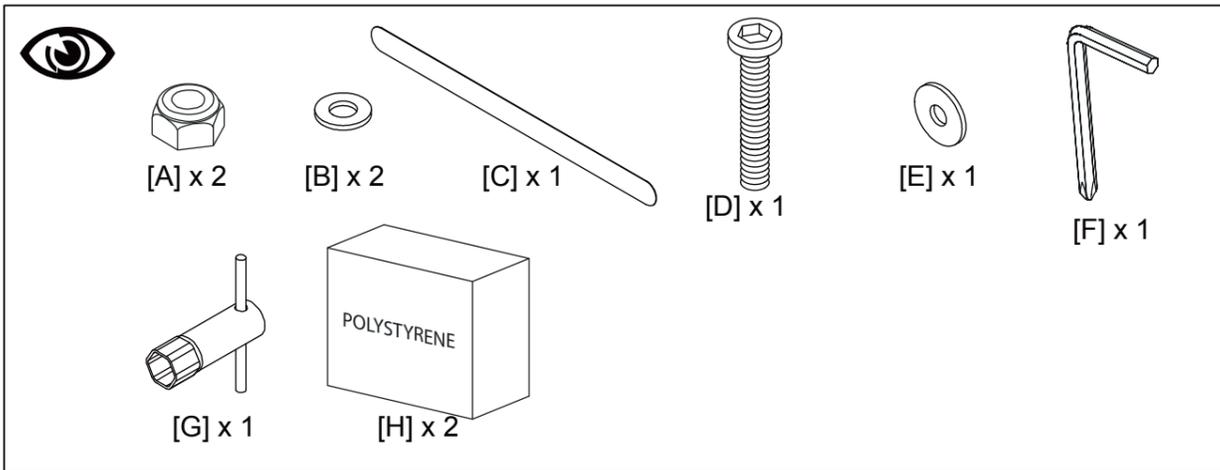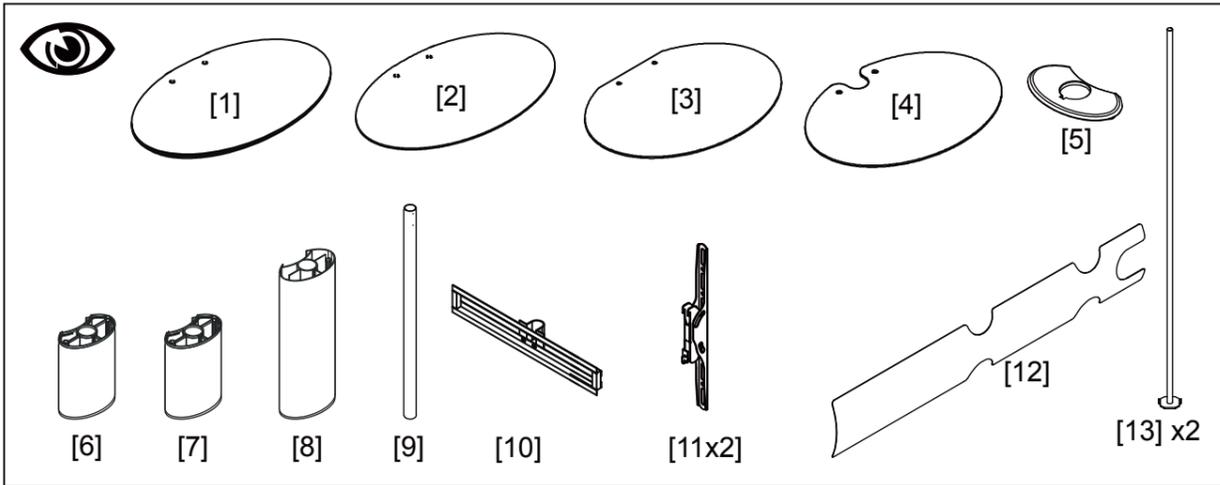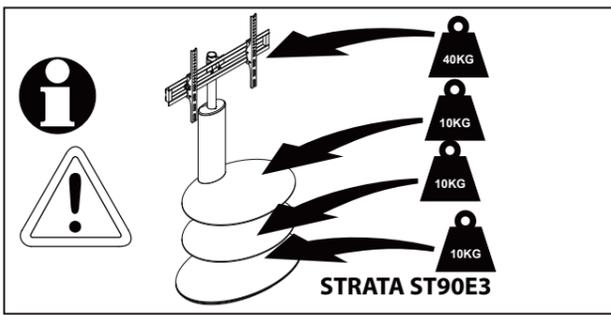

**Take extra care not to over tighten any screws as this may cause damage!**

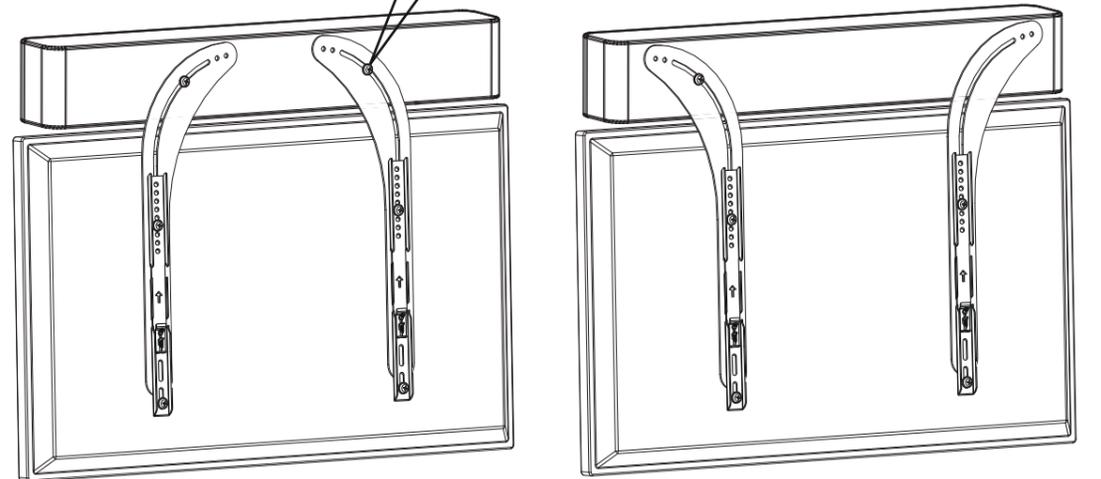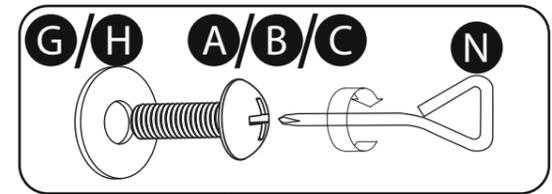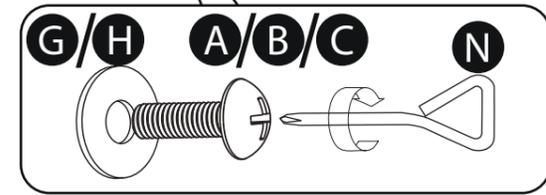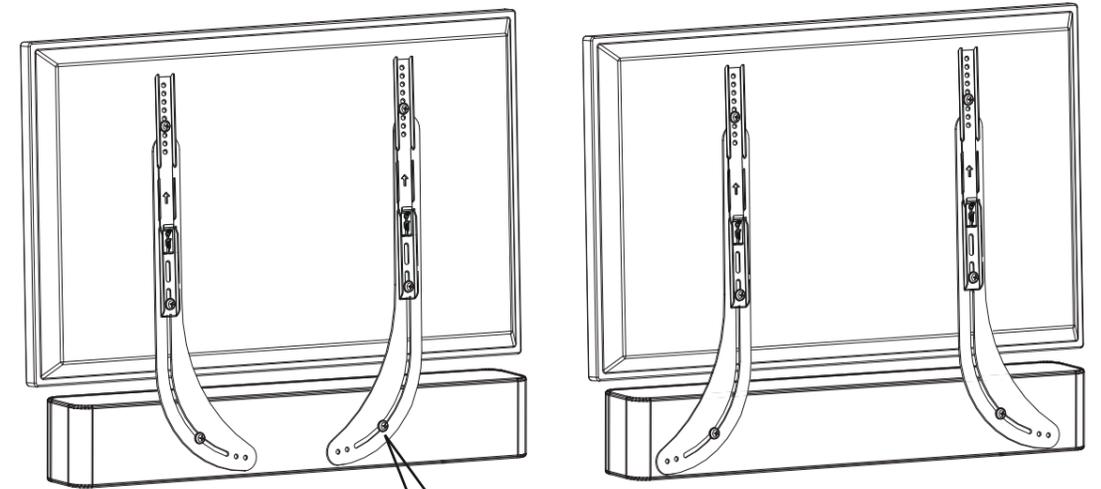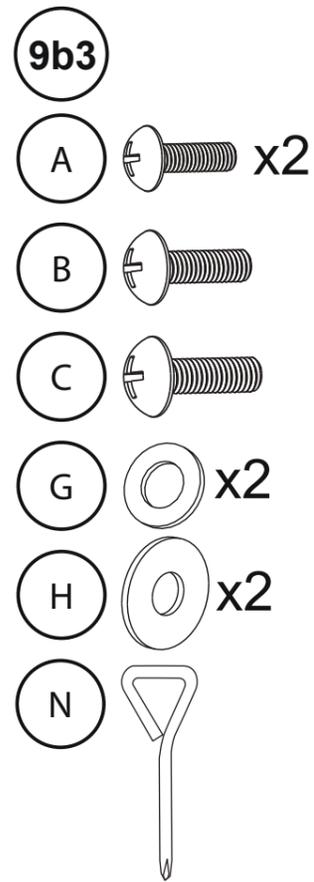

9b2











 
L



x2

M






x2

O

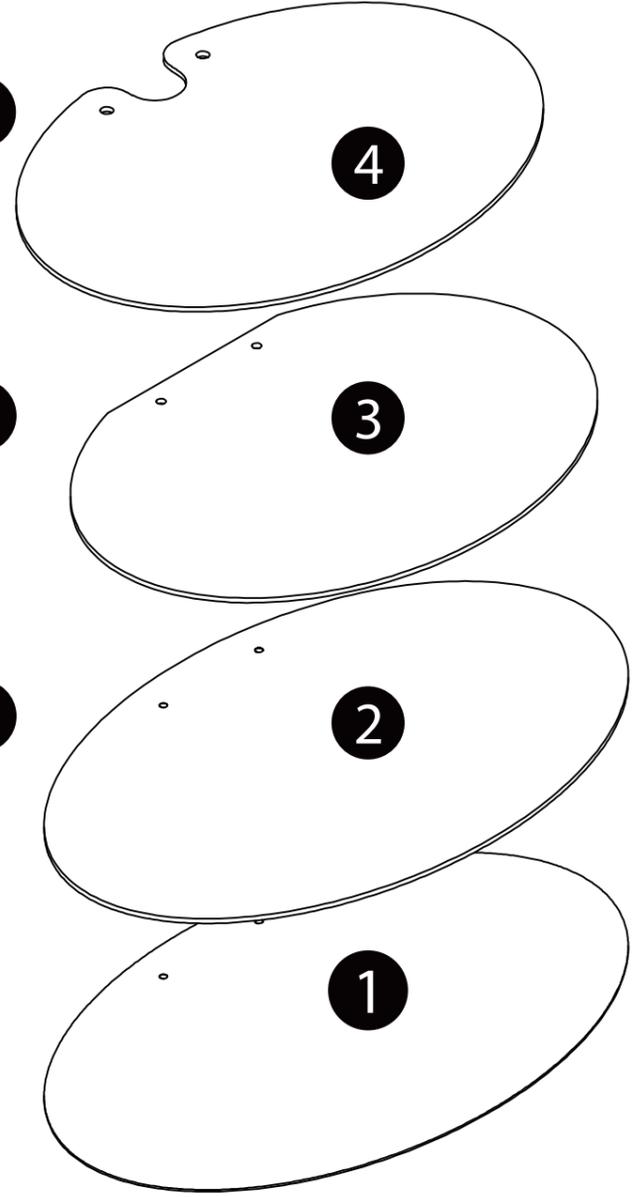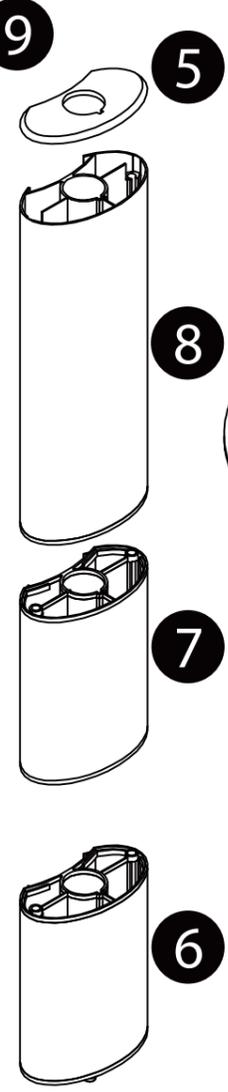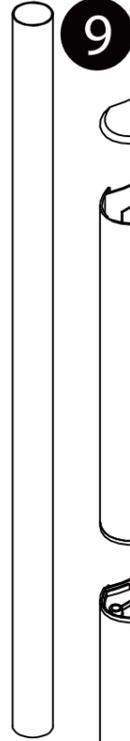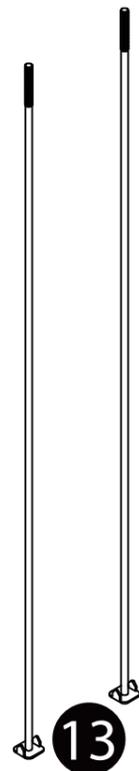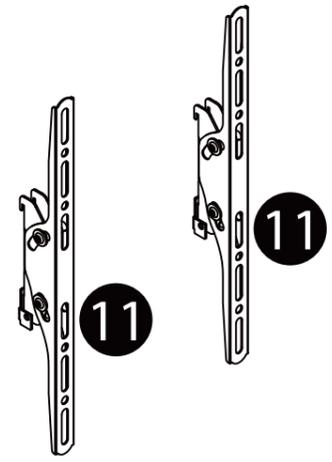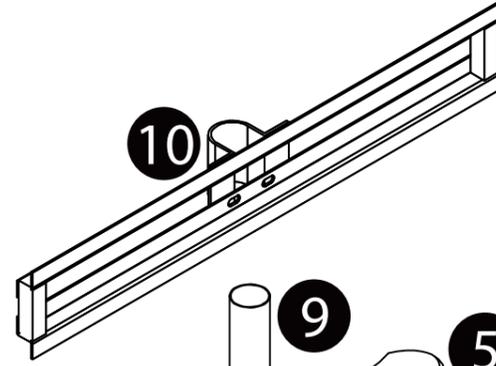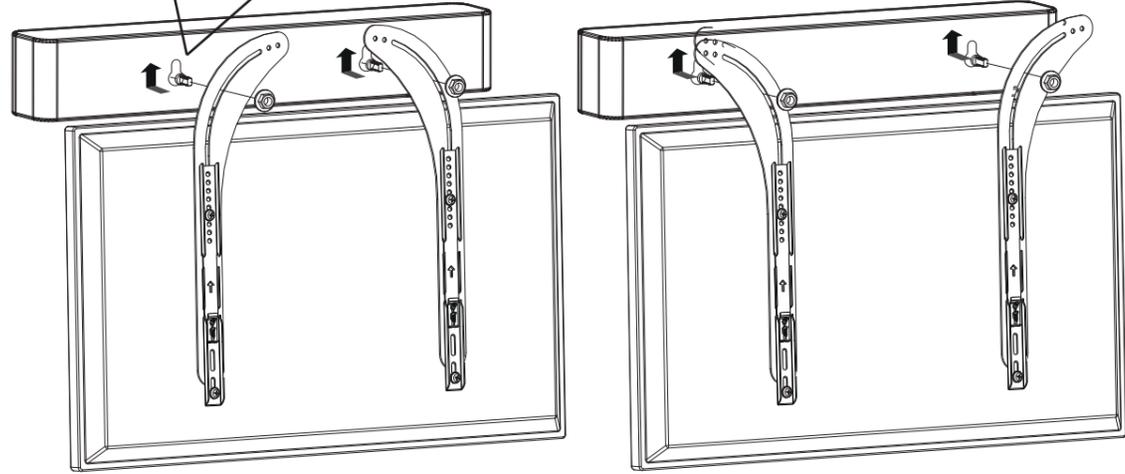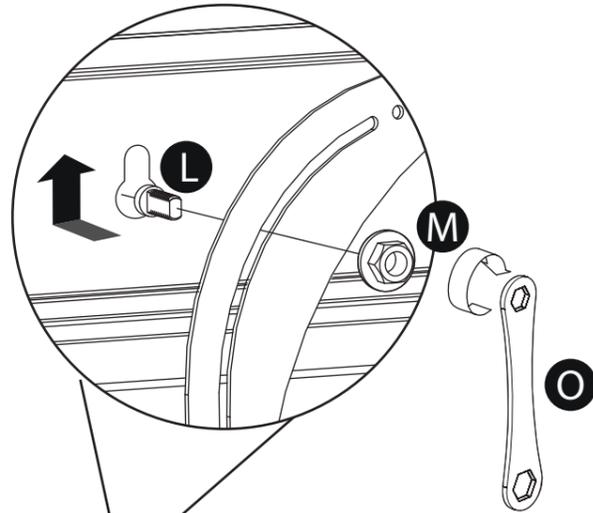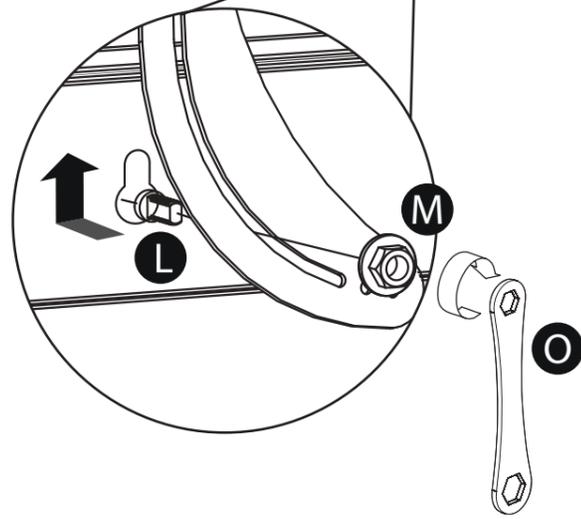
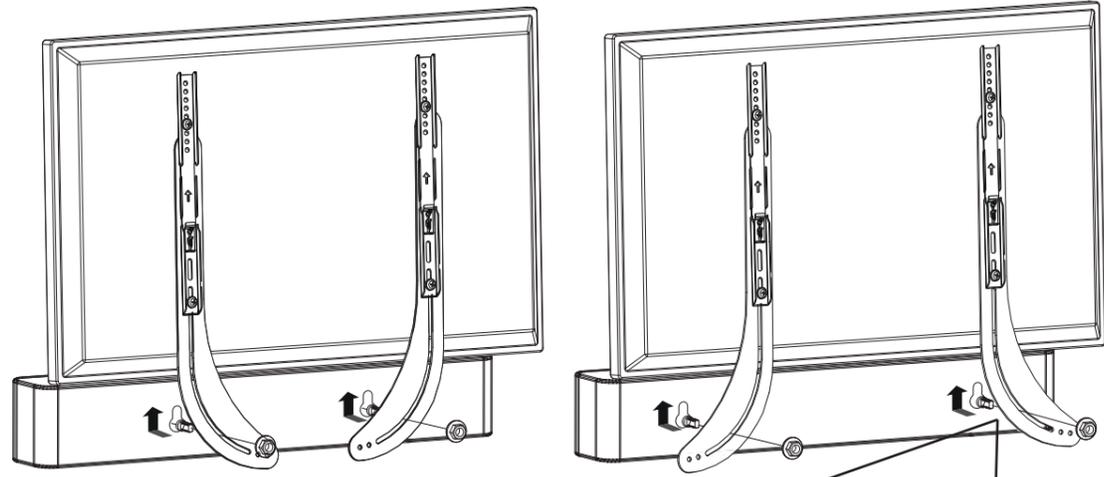



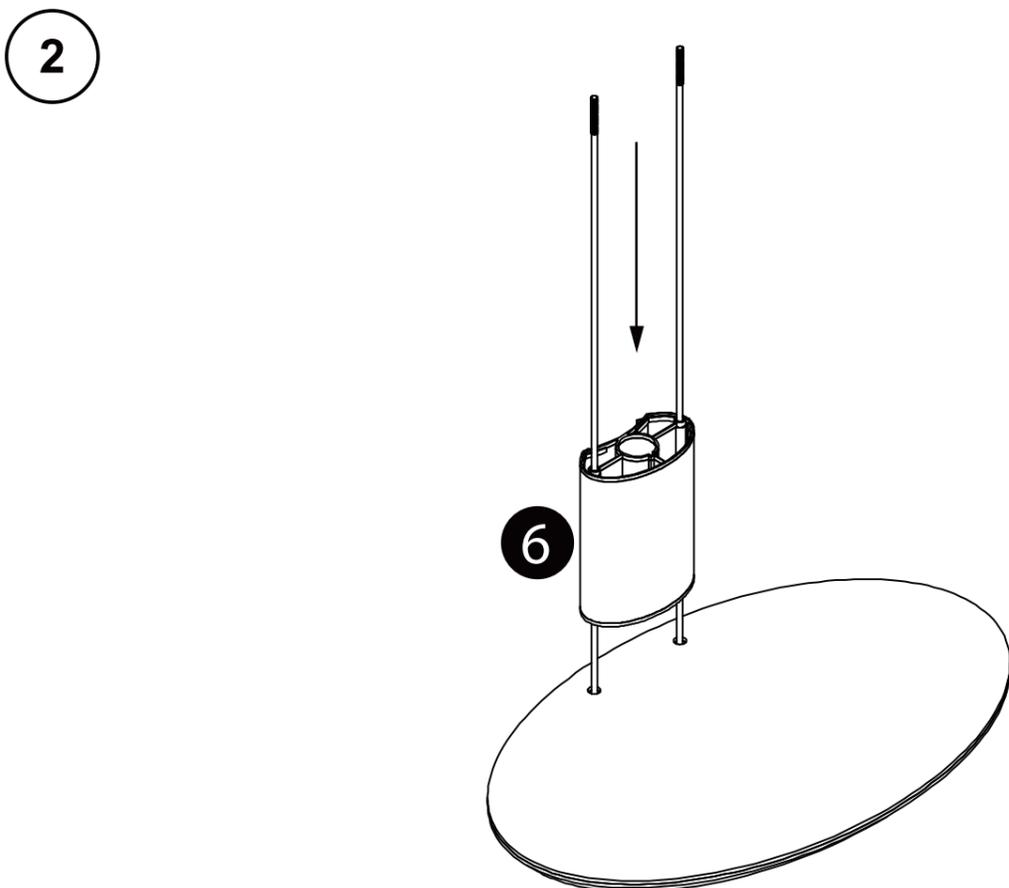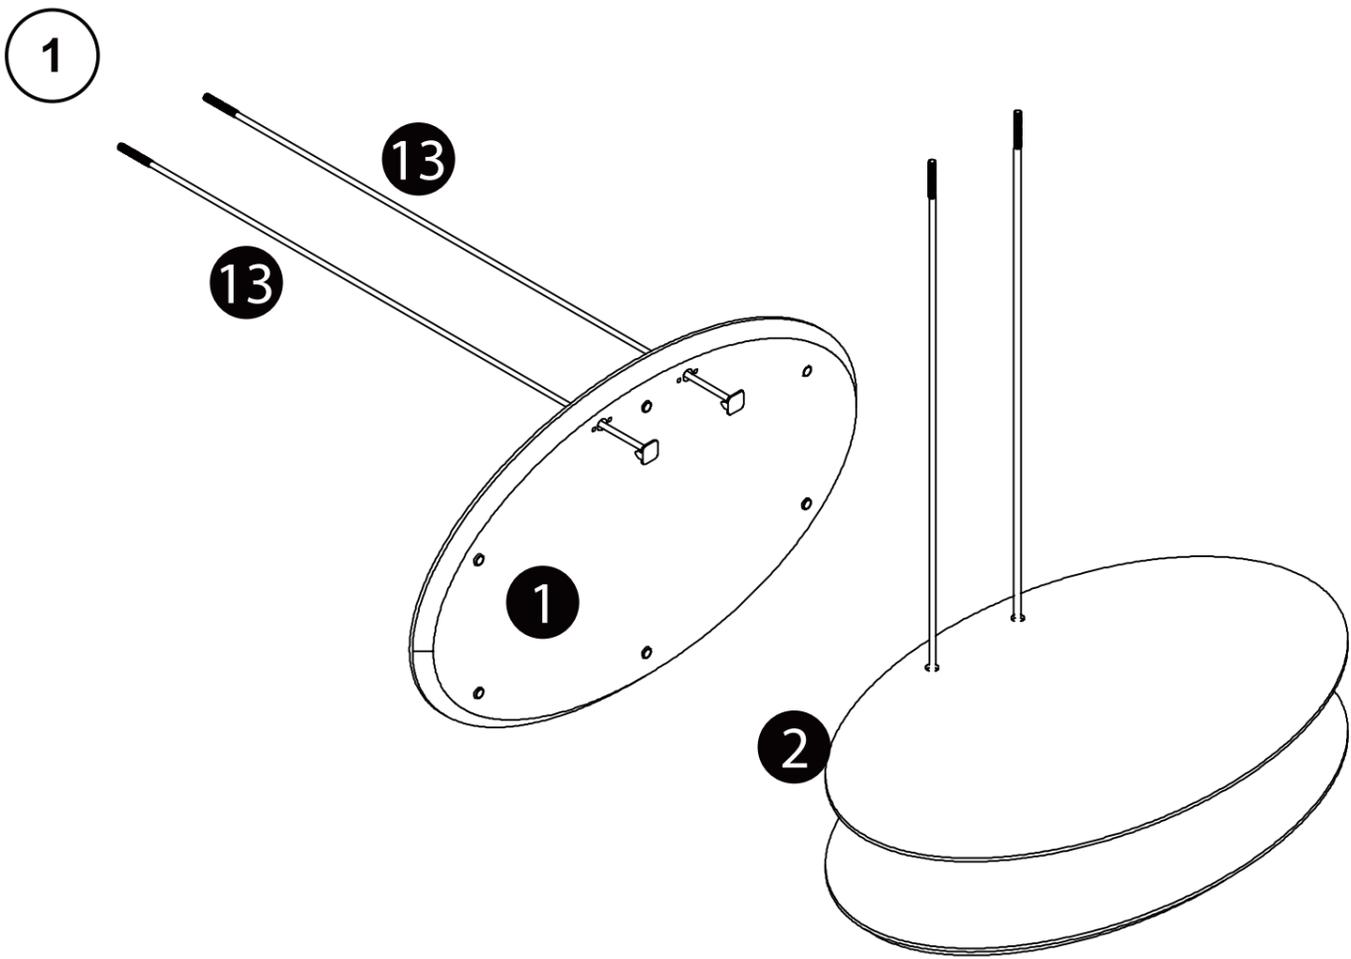


**9b** Screen Fitting including Sound Bar Mounting Bracket

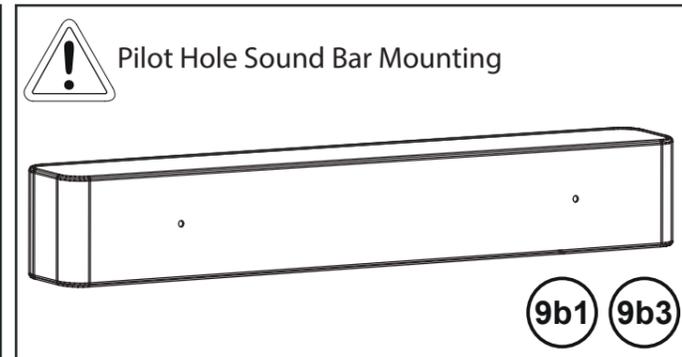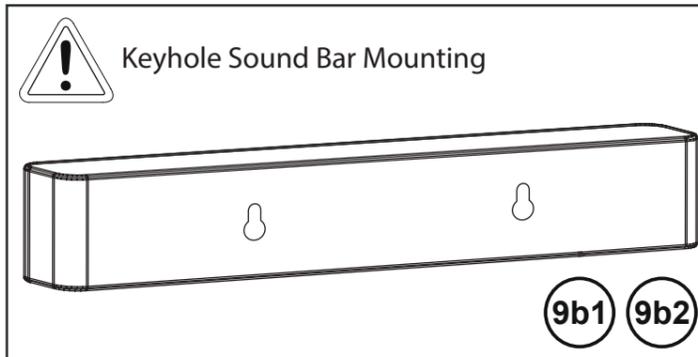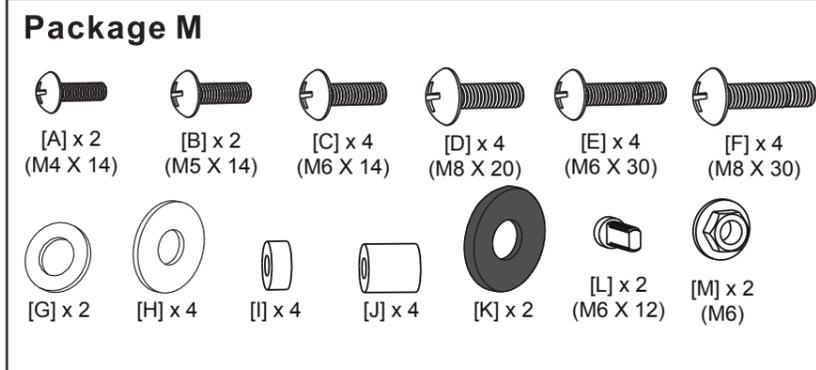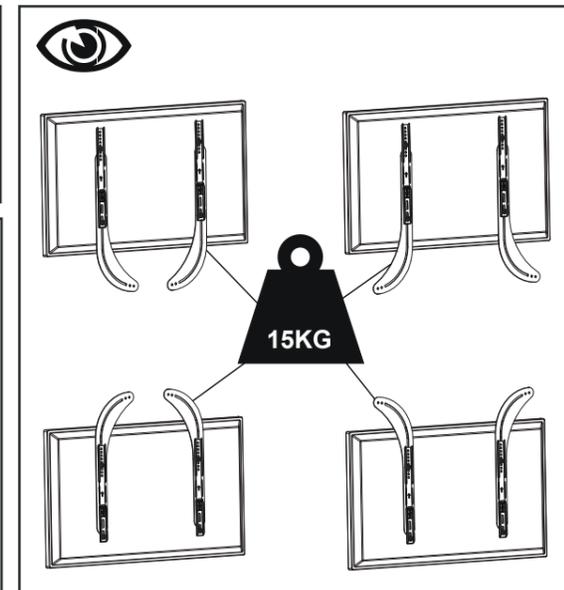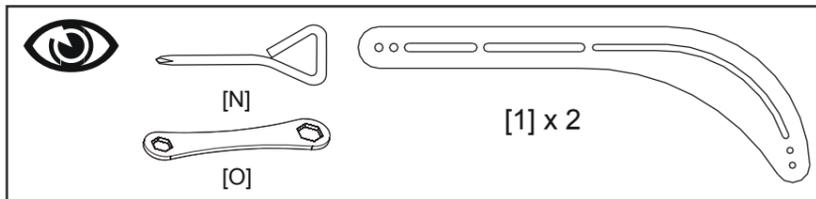


- 9b1**
- [C] x 4
  - [D] x 4
  - [E] x 4
  - [F] x 4
  - [H] x 4
  - [I] x 4
  - [J] x 4
  - [K] x 4
  - [N]

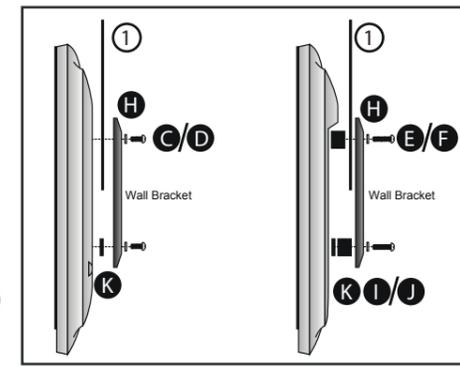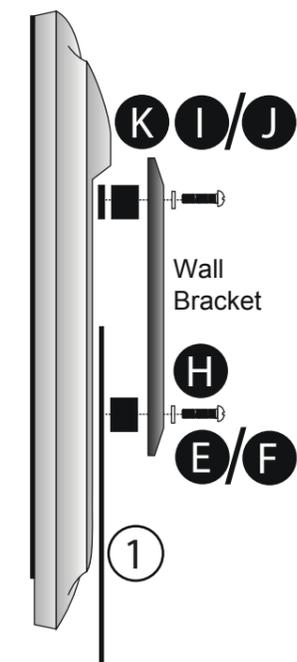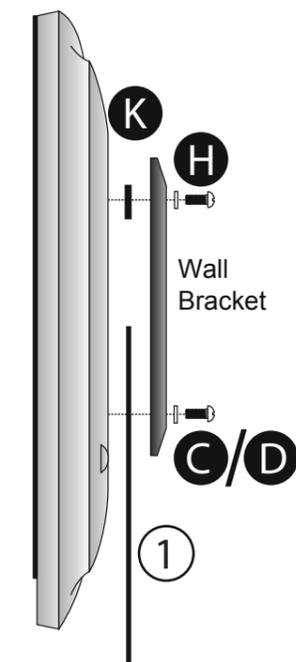




**8** Slide the bracket onto the pole and secure at a height suitable for your screen size.

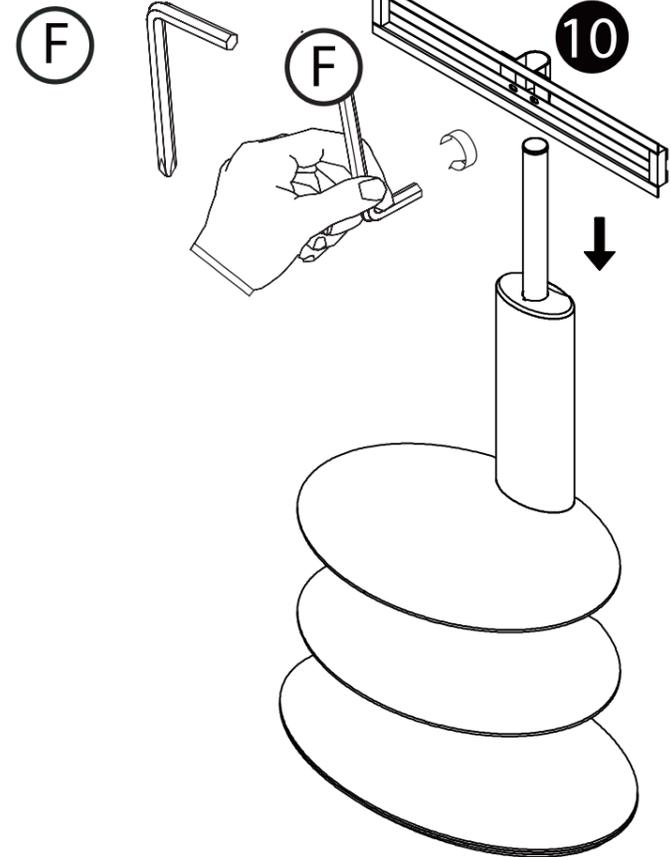

If the mounting holes on your TV are low secure the bracket lower



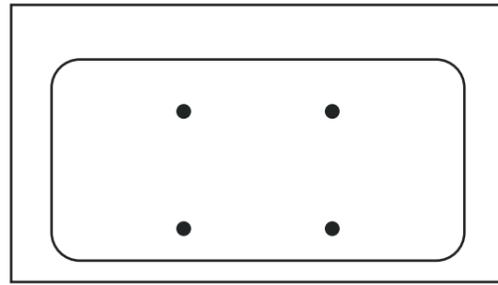


If the mounting holes on your TV are high secure the bracket higher

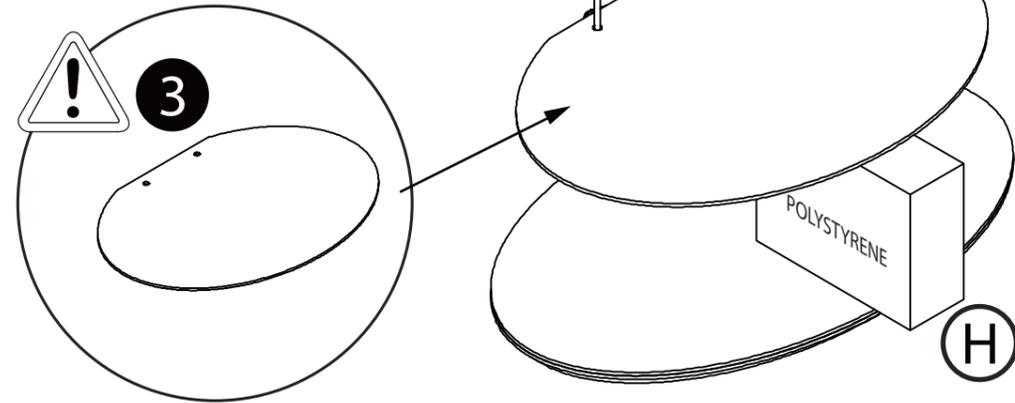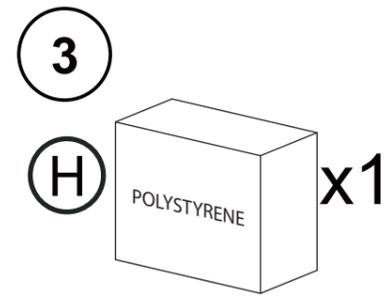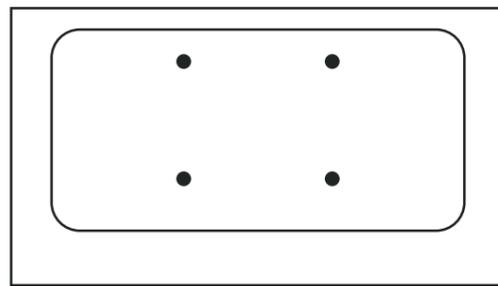



**!** If fitting soundbar bracket go to step 9b

**9** **SCREEN FITTING KIT REQUIRED FOR THIS STEP**

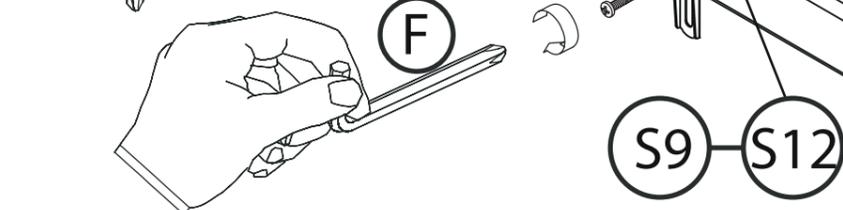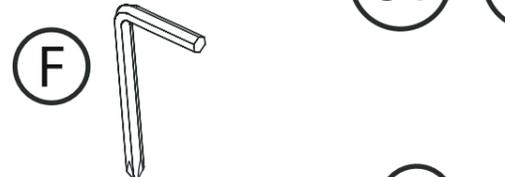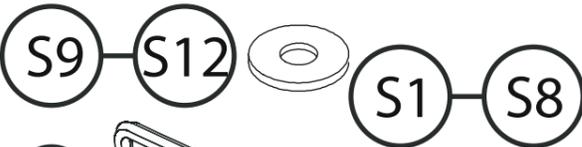

Choose the holes that best suit the height you would like your screen at.

**!** When completed, move to step 10

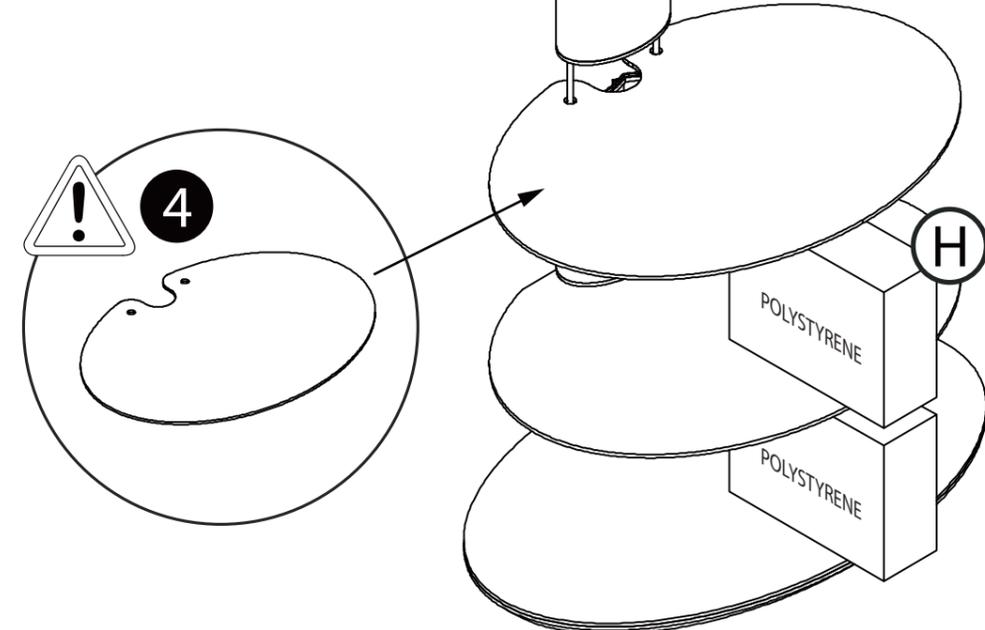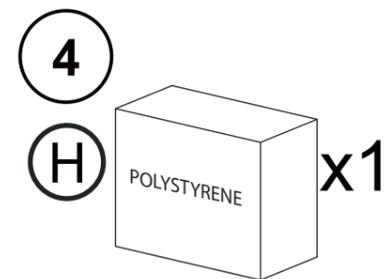


5

A x2

B x2

G


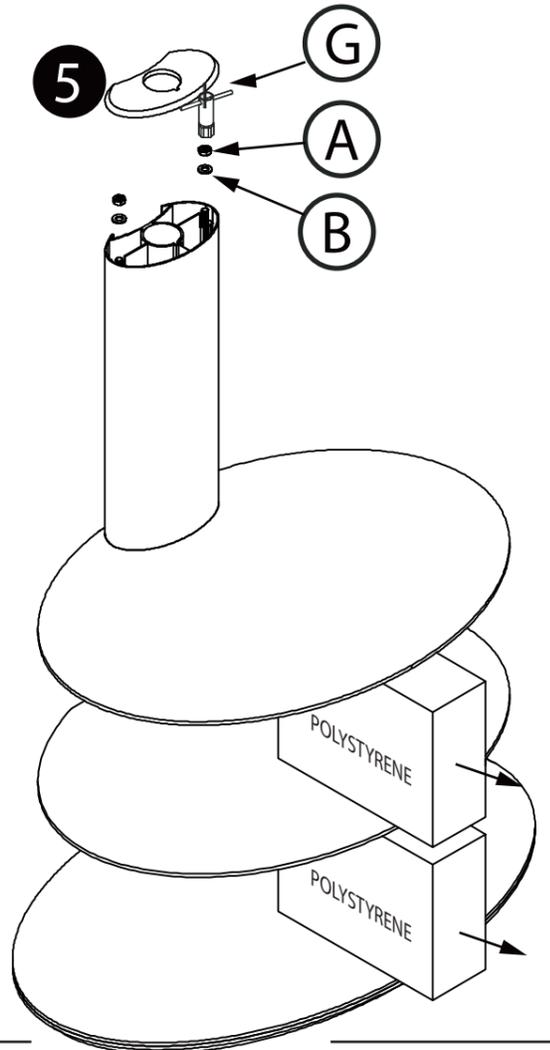


7

D x1


E x1

F

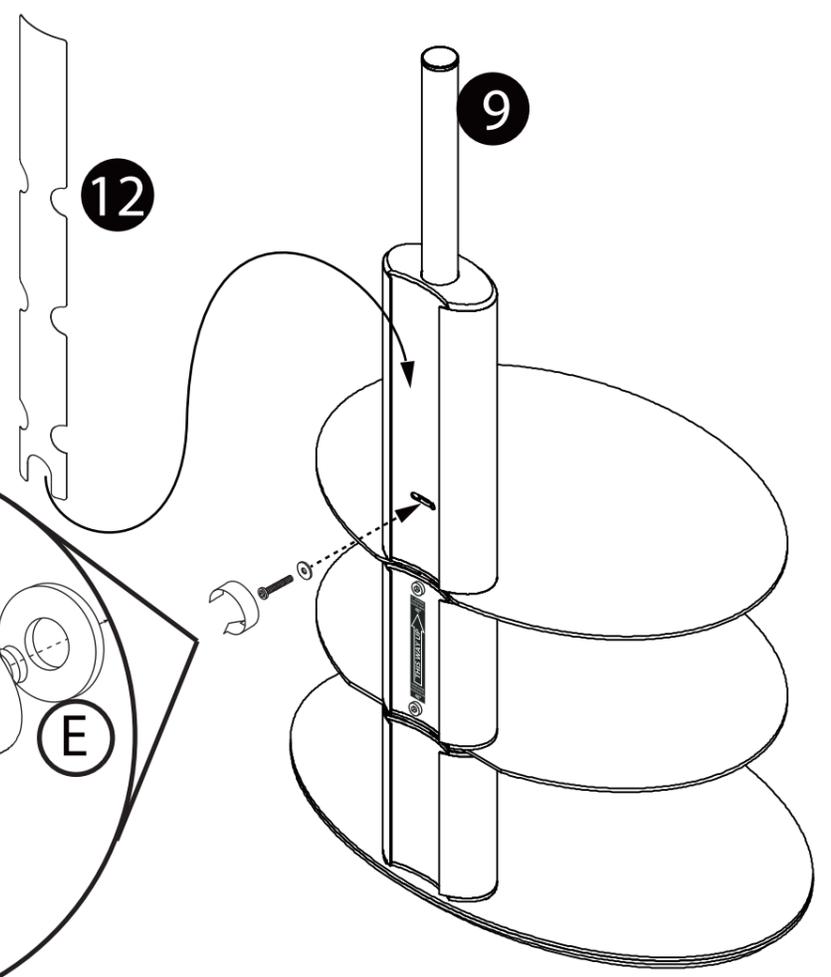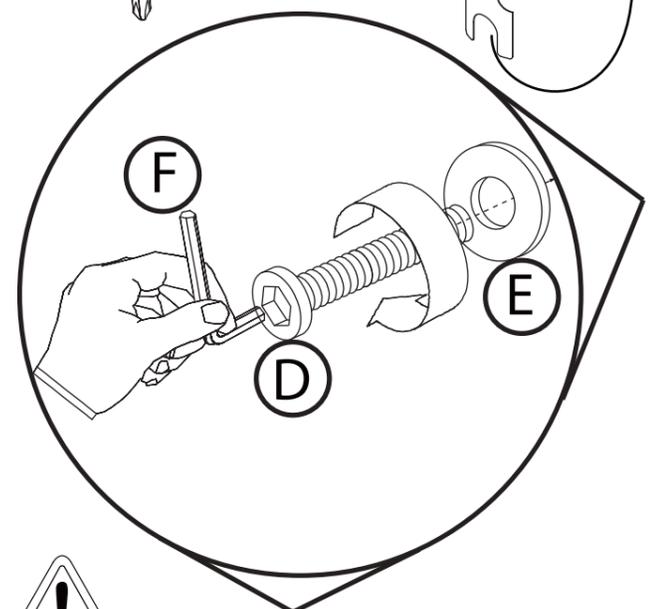

6\*

F

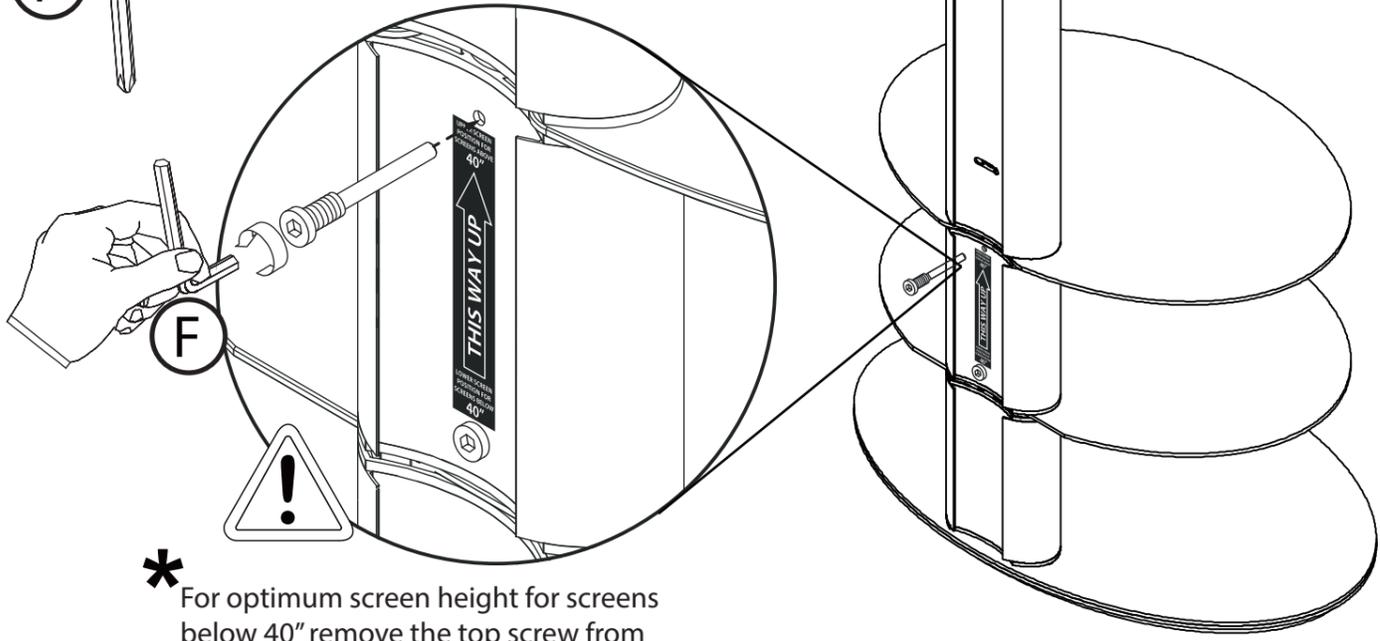

\* For optimum screen height for screens below 40" remove the top screw from part 5 as shown above. For screens above 40" do not remove this screw.

