

electricQ

Microwave Oven User Manual



Model: EIQMW9BEH

Thank you for choosing electricQ.

Please read this user manual before using this microwave and keep it safe for future reference.

Visit our page www.electricQ.co.uk for our entire range of electricals.

CONTENTS

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY.....	3
SPECIFICATIONS.....	4
IMPORTANT SAFETY INSTRUCTIONS	4
SETTING UP YOUR OVEN.....	8
TURNTABLE INSTALLATION.....	8
INSTALLATION.....	9
BEFORE YOU CALL FOR SERVICE.....	9
GROUNDING INSTRUCTIONS.....	10
RADIO INTERFERENCE.....	10
MICROWAVE COOKING PRINCIPLES.....	10
UTENSILS GUIDE	11
MATERIALS YOU CAN USE IN THE MICROWAVE.....	12
CONTROL PANEL.....	13
HOW TO SET THE MICROWAVE CONTROLS	14
AUTO COOK MENU.....	18
CLEANING AND CARE	19
TROUBLE SHOOTING	20
CUSTOMER CARE LINE.....	21

Please read these instructions carefully before installing and operating the oven.
Record in the space below the SERIAL NO. found on the nameplate on your oven
and retain this information for future reference.
SERIAL NO.

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

1. Do not attempt to operate this oven with the door open since open door operation can result in harmful exposure to microwave energy. It is important not to damage or tamper with the safety interlocks.
2. Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
3. Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the 3 components listed below:
Door (bent),
Hinges and latches (broken or loosened),
Door seals and sealing surfaces.
4. The oven should not be adjusted or repaired by anyone except properly qualified service personnel.

SPECIFICATIONS

Model:	EIQMW9BEH
Rated Voltage:	230-240V~ 50Hz
Rated Input Power(Microwave):	1450-1500 W
Rated Output Power(Microwave):	850-900 W
Rated Input power (Grill):	1050-1100W
Rated Input Power (Convection):	2300-2500W
Oven Capacity:	25 L
Turntable Diameter:	Ø315 mm
External Dimensions:	513 x 479 x 306 mm
Net Weight:	Approx. 17.9 kg

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, injury to persons or exposure to excessive microwave oven energy when using your appliance, follow basic precautions, including the following:

- 1.Warning: Liquids and other foods must not be heated in sealed containers since they are liable to explode.
- 2.Warning: It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.
- 3.This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
4. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- 5.Keep the appliance and its cord out of reach of children less than 8 years. Only use utensils that are suitable for use in microwave ovens.
- 6.The oven should be cleaned regularly and any food deposits should be removed.
- 7.Read and follow the specific:
"PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY".
- 8.When heating food in plastic or paper containers,

Keep an eye on the oven due to the possibility of ignition.

9.If smoke is emitted, switch off or unplug the appliance and keep the door closed in order to stifle any flames.

10.Do not overcook food.

11.Do not use the oven cavity for storage purposes. Do not store items, such as bread, cookies, etc. inside the oven.

12.Remove wire twist-ties and metal handles from paper or plastic containers/bags before placing them in the oven.

13.Install or locate this oven only in accordance with the installation instructions provided.

14.Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.

15.This appliance is intended to be used in household and similar applications such as:

-staff kitchen areas in shops, offices and other working environments;

-by clients in hotels, motels and other residential type environments;

-farm houses;

-bed and breakfast type environments.

16.If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

17.Do not store or use this appliance outdoors.

18.Do not use this oven near water, in a wet basement or near a swimming pool.

19.The temperature of accessible surfaces may be high when the appliance is operating. The surfaces are liable to get hot during use. Keep cord away from heated surface, and do not cover any vents on the oven.

20.Do not let cord hang over edge of table or counter. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.

21.The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.

22.Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.

23.The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

24.Children should be supervised to ensure that they do not play with the appliance.

25.The appliances are not intended to be operated by means of an external timer or separate remote-control system.

26. Accessible parts may become hot during use. Young children should be kept away.
27. Steam cleaner is not to be used.
28. During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven.
29. Only use the temperature probe recommended for this oven (for ovens provided with a facility to use a temperature-sensing probe.)
30. **WARNING:** The appliance and its accessible parts become hot during use.
31. Care should be taken to avoid touching heating elements. Children less than 8 years of age shall be kept away unless continuously supervised.
32. The microwave oven must be operated with the decorative door open. (For ovens with a decorative door.) The rear surface of appliance shall be placed against a wall.
33. The microwave oven must not be placed in a cabinet. The microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

To Reduce the Risk of Injury to Persons Grounding Installation

DANGER

Electric Shock Hazard Touching some of the internal components can cause serious personal injury or death. Do not disassemble this appliance.

WARNING

Electric Shock Hazard

Improper use of the grounding can result in electric shock. Do not plug into an outlet until appliance is properly installed and grounded.

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an

escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

Consult a qualified electrician or serviceman if the grounding instructions are not completely understood or if doubt exists as to whether the appliance is properly grounded. If it is necessary to use an extension cord, use only a 3-wire extension cord.

A short power-supply cord is provided to reduce the risks resulting from becoming entangled

in or tripping over a longer cord.
If a long cord set or extension cord is used:

- 1) The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
- 2) The extension cord must be a

grounding-type 3-wire cord.

- 3) The long cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.

CLEANING

Be sure to unplug the appliance from the power supply.

Clean the cavity of the oven after using with a slightly damp cloth.

Clean the accessories in the usual way in soapy water.

The door frame and seal and neighbouring parts must be cleaned carefully with a damp cloth when they are dirty.

Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.

Cleaning Tip---For easier cleaning of the cavity walls that the food cooked can touch: Place half a lemon in a bowl, add 300ml (1/2 pint) water and heat on 100% microwave power for 10 minutes. Wipe the oven clean using a soft, dry cloth.

UTENSILS CAUTION

Personal Injury Hazard It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.

See the instructions on "Materials you can use in microwave oven or to be avoided in microwave oven." There may be certain non-metallic utensils

that are not safe to use for microwaving. If in doubt, you can test the utensil in question following the procedure below.

Utensil Test:


1. Fill a microwave-safe container with 1 cup of cold water (250ml) along with the utensil in question.
2. Cook on maximum power for 1 minute.
3. Carefully feel the utensil. If the empty utensil is warm, do not use it for microwave cooking.
4. Do not exceed 1 minute cooking time.

SETTING UP YOUR OVEN


Names of Oven Parts and Accessories

Remove all materials from the carton and oven cavity. Your oven comes with the following accessories:


- Glass tray 1
- Turntable ring assembly 1
- Instruction Manual 1

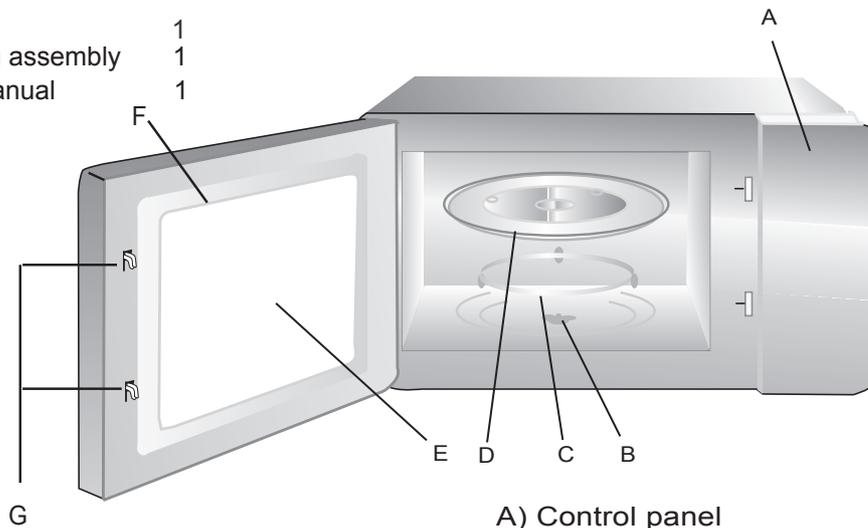

- A) Control panel
- B) Turntable shaft
- C) Turntable ring assembly
- D) Glass tray
- E) Observation window
- F) Door assembly
- G) Safety interlock system

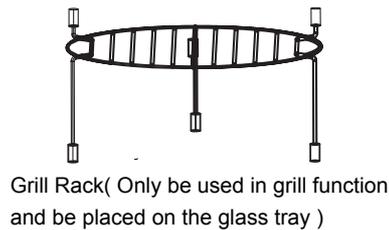

Turntable Installation

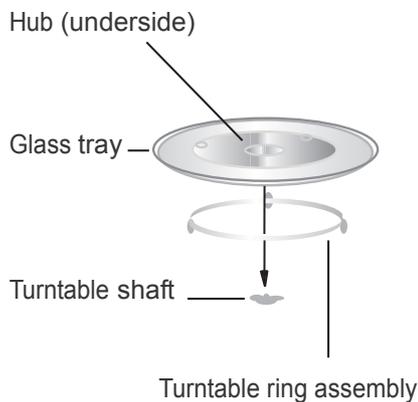

- a. Never place the glass tray upside down. The glass tray should never be restricted.
- b. Both glass tray and turntable ring assembly must always be used during cooking.
- c. All food and containers of food should always be placed on the glass tray for cooking.
- d. If glass tray or turntable ring assembly cracks or breaks, contact your nearest authorized service Centre.

INSTALLATION


Countertop Installation

Remove all packing material and accessories. Examine the oven for any damage such as dents or broken door. Do not install if oven is damaged.

Cabinet: Remove any protective film found on the microwave oven cabinet surface. Do not remove the light brown Micra cover that is attached to the oven cavity to protect the magnetron.

Installation

1. Select a level surface that provides enough open space for the intake and/or outlet vents.

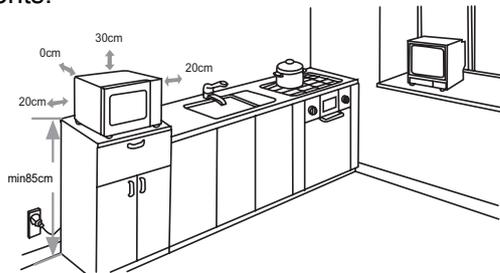

2. The minimum installation height is 85cm.
3. The rear surface of appliance needs to be placed against a wall.
4. Leave a minimum clearance of 30cm above the oven and a minimum clearance of 20cm between the oven and any adjacent walls.
5. Do not remove the legs from the bottom of the microwave.
6. Blocking the intake and/ or outlet openings can damage the microwave.
7. Place the microwave as far away from radios and TV as possible. Operation of microwave oven may cause interference to your radio or TV reception.
8. Plug your oven into a standard household outlet. Be sure the voltage and the frequency is the same as the voltage and the frequency on the rating label.
9. **WARNING:** Do not install the microwave over a range cooktop or other heat-producing appliance. If installed near or over a heat source, the oven could be damaged and the warranty would be void.
10. The accessible surface may be hot during operation

BEFORE YOU CALL FOR SERVICE

If the oven fails to operate:

1. Make sure that the microwave is plugged in securely. If it is not, remove the plug from the outlet, wait 10 seconds, and plug it in again securely.
2. Check for a blown circuit fuse or a tripped main circuit breaker. If these seem to be operating properly, test the outlet with another appliance.
3. Make sure that the control panel is programmed correctly and the timer is set.
4. Check that the door is securely closed engaging the door safety lock system. Otherwise, the microwave energy will not flow into the oven.

IF NONE OF THE ABOVE RECTIFIES THE SITUATION, THEN CONTACT A QUALIFIED TECHNICIAN. DO NOT TRY TO ADJUST OR REPAIR THE OVEN YOURSELF.

GROUNDING INSTRUCTIONS

This appliance must be grounded. This microwave oven is equipped with a cord that has a grounding wire with a grounding plug. It must be plugged into a wall receptacle that is properly installed and grounded. In the event of an electrical short circuit, grounding reduces risk of electric shock by providing an escape wire for the electric current. We recommended that you use a separate circuit for the microwave. Using a high voltage is dangerous and may result in a fire or other accident causing oven damage.

WARNING Improper use of the grounding plug can result in a risk of electric shock.

Note:

1. If you have any questions about the

grounding or electrical instructions, consult a qualified electrician or service person.

2. Neither the manufacturer nor the dealer can accept any liability for damage to the oven or personal injury resulting from failure to observe the electrical connection procedures.

The wires in this cable main are colored in accordance with the following code:

Green and Yellow = EARTH

Blue = NEUTRAL

Brown = LIVE

RADIO INTERFERENCE

Operation of the microwave oven can cause interference to your radio, TV, or similar equipment.

When there is interference, it may be reduced or eliminated by taking the following measures:

1. Clean door and sealing surface of the oven.
2. Reorient the receiving antenna of radio or

television.

3. Relocate the microwave oven with respect to the receiver.
4. Move the microwave oven away from the receiver.
5. Plug the microwave oven into a different outlet so that microwave oven and receiver are on different branch circuits.

MICROWAVE COOKING PRINCIPLES

1. Arrange food carefully. Place thickest areas towards outside of dish.
2. Watch cooking time. Cook for the shortest amount of time indicated and add more as needed. Food severely overcooked can smoke or ignite.
3. Cover foods while cooking. Covers prevent spattering and help foods to cook evenly.
4. Turn foods over once during microwave cooking to speed cooking of such foods as chicken and hamburgers. Large items like roasts must be turned over at least once.
5. Rearrange foods such as meatballs halfway through cooking both from top to bottom and from the center of the dish to the outside.

UTENSILS GUIDE

1. The ideal material for a microwave utensil is transparent to microwave, it allows energy to pass through the container and heat the food.
2. Microwave cannot penetrate metal, so metal utensils or dishes with metallic trim should not be used.
3. Do not use recycled paper products when microwave cooking, as they may contain small metal fragments which may cause sparks and/or fires.
4. Round /oval dishes rather than square/oblong ones are recommend, as food in corners tends to overcook.

The list below is a general guide to help you select the correct utensil

COOKWARE	MICROWAVE	GRILL	COMBINATION
Heat-Resistant Glass	Yes	Yes	Yes
Non Heat-Resistant Glass	No	No	No
Heat-Resistant Ceramics	Yes	Yes	Yes
Microwave-Safe Plastic Dish	Yes	No	No
Kitchen Paper	Yes	No	No
Metal Tray	No	Yes	No
Metal Rack	No	Yes	No
Aluminum Foil & Foil Container	No	Yes	No


Materials you can use in the microwave

Browning dish	Follow manufacturer's instructions. The bottom of browning dish must be at least 3/16 inch (5mm) above the turntable. Incorrect usage may cause the turntable to break.
Dinnerware	Microwave-safe only. Follow manufacturer's instructions. Do not use cracked or chipped dishes.
Glass jars	Always remove lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break.
Glassware	Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes.
Cooking bags	Follow manufacturer's instructions. Do not close with metal tie. Make slits to allow steam to escape.
Paper plates & cups	Use for short-term cooking/warming only. Do not leave oven unattended while cooking.
Paper towels	Use to cover food for reheating and absorbing fat. Use with supervision for a short-term cooking only.
Parchment paper	Use as a cover to prevent splattering or a wrap for steaming.
Plastic	Microwave-safe only. Follow the manufacturer's instructions. Should be labeled "microwave safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as directed by package.
Plastic wrap	Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food.
Thermometer	Microwave-safe only (meat and candy thermometers).
Wax paper	Use as a cover to prevent splattering and retain moisture.

Materials to be avoided in the microwave

Aluminum foil and trays	May cause arcing. Transfer food into microwave-safe dish.
Carton with metal handle	May cause arcing. Transfer food into microwave-safe dish.
Metal/trimmed utensils	Metal shields the food from microwave energy. Metal trim may cause arcing.
Metal twist ties	May cause arcing and could cause a fire in the oven.
Paper bags	May cause a fire in the oven.
Plastic foam	Plastic foam may melt or contaminate the liquid inside when exposed to high temperature.
Wood	Wood will dry out when used in the microwave oven and may split or crack.

CONTROL PANEL

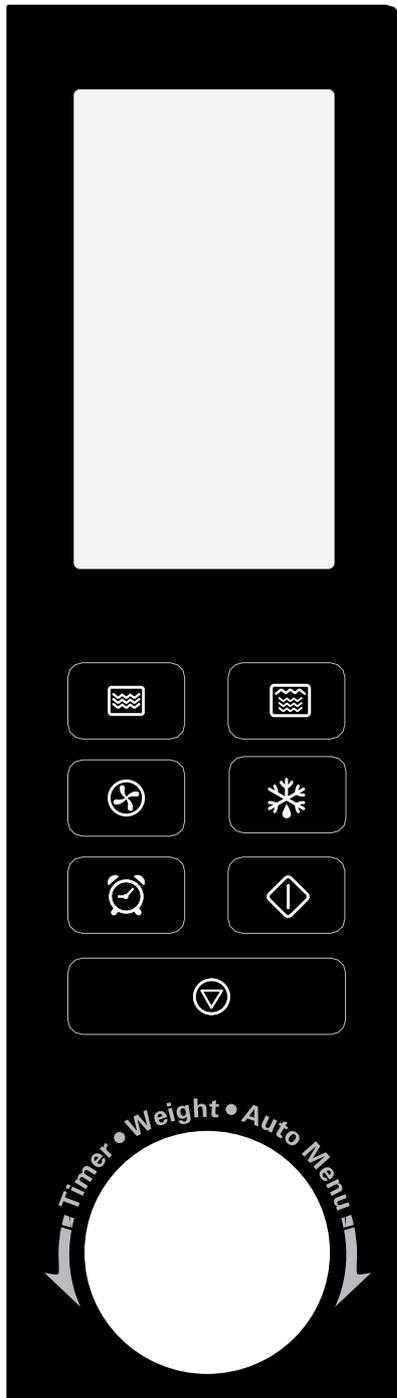

Microwave



Grill/Combi.



Convection



W.T/Time Defrost



Clock/Kitchen Timer



Stop/Clear



Start/+30Sec./Confirm

HOW TO SET THE MICROWAVE CONTROLS

SETTING CLOCK

When the microwave oven is plugged in, the screen will display "0:00" and the buzzer will ring once.

1. Press "CLOCK/KITCHEN TIMER" once and "00:00" will display.
2. Turn the dial to adjust the hour figures, the input time should be within 0-23(24-hour).
3. Press "CLOCK/KITCHEN TIMER", and the minute figures will flash.
4. Turn the dial to adjust the minute figures, the input time should be within 0-59.
5. Press "CLOCK/KITCHEN TIMER" to finish clock setting. "." Will flash.

Note: 1) If the clock is not set, it will not function when powered.

2) During the process of clock setting, if you press "STOP/CLEAR", the oven will go back to the previous status automatically.

KITCHEN TIMER

1. Press "CLOCK/KITCHEN TIMER" twice and the LED will display 00:00.
2. Turn the dial to enter the correct timer. (The maximum cooking time is 95 minutes).
3. Press "START/+30SEC./CONFIRM" to confirm setting.
4. When the kitchen time is reached, the buzzer will ring 5 times.

If the clock has been set (24-hour system), the LED will display the current time.

Note: The kitchen Time is different from the 24-hour system, the Kitchen timer is a different timer.

MICROWAVE COOKING

Press "MICROWAVE" and the LED will display "P100". Press "MICROWAVE" or turn

the dial to choose the power you want, and "P100", "P80", "P50", "P30" or "P10" will display for each added press. Then press "START/+30SEC./CONFIRM" to confirm and turn the dial to set the cooking time from 0:05 to 95:00. Press "START/+30SEC./CONFIRM" again to start cooking.

Example: If you want to use 80% microwave power to cook for 20 minutes, you can operate the oven as follows:

1. Press "MICROWAVE" once and the screen will display "P100".
2. Press "MICROWAVE" once again or turn the dial to choose 80% microwave power.
3. Press "START/+30SEC./CONFIRM" to confirm and the screen will display "P80"
4. Turn the dial to adjust the cooking time until the oven displays "20:00".
5. Press "START/+30SEC./CONFIRM" to start cooking.

Note: The step quantities for the adjustment time of the coding switch are as follows:

0---1 min	:	5 seconds
1---5 min	:	10 seconds
5---10 min	:	30 seconds
10---30 min	:	1 minute
30---95 min	:	5 minutes

"MICROWAVE" Pad instructions:

"Microwave" order	Display	Cooking power
1	P100	100%
2	P80	80%
3	P50	50%
4	P30	30%
5	P10	10%

GRILL OR COMBI. COOKING

Press "GRILL/COMBI" and the LED will display "G-1", and press "GRILL/COMBI" or turn the dial to choose the power you want, and "G-1", "C-1", "C-2", "C-3" or "C-4" will display with each added press. Then press "START/+30SEC./CONFIRM" again to confirm. Turn the dial to choose the cooking time. Press "START/+30SEC./CONFIRM" to start cooking.

Example: If you want to use grill power to cook for 10 minutes, you can operate the oven as the following steps:

1. Press "GRILL/COMBI." Once and the screen will display "G 1".
2. Press "START/+30SEC./CONFIRM" to confirm.
3. Turn the dial to adjust the cooking time until the oven displays "10:00".
4. Press "START/+30SEC./CONFIRM" to start cooking.

Note: It is normal for the microwave to sound the buzzer twice when half the grilling time has passed because turning your food over half way through grilling will deliver better results. Once you have turned food over, close the door and press "START/+3-SEC./CONFIRM" to continue cooking. If you decide not to turn the food over, the microwave will continue to work.

Note: Combination Instructions

Instruction	1	2	3	4
Display	C-1	C-2	C-3	C-4
Microwave	●	●		●
Grill		●	●	●
Convection	●		●	●

CONVECTION COOKING (WITH PREHEATING)

The convection cooking can let you cook the food like it was in a traditional oven. The microwave is not used. We recommend you preheat the oven to the appropriate temperature before placing the food in the oven.

1. Press the "CONVECTION" key once and "150" will flash.
2. Keep pressing "CONVECTION" or turn the dial to select the convection function.

Note: The temperature can be chosen from 150 degrees to 240 degrees,

3. Press the "START/+30SEC./CONFIRM" to confirm the temperature.
4. Press the "START/+30SEC./CONFIRM" to start preheating. When the oven has reached the programmed temperature, the buzzer will sound twice to remind you to put food in the oven. The preheated temperature is displayed and flashing.
5. Put food into the oven and close the door. Turn the dial to adjust the cooking time. (The maximum setting is 95 minutes).
6. Press the "START/+30SEC./CONFIRM" key to start cooking.

Note: a) Cooking time cannot be entered until the oven has preheated. When it has preheated, the door must be opened to input the cooking time.

b) If a time has not be entered after 5 minutes of preheating, the oven will stop heating and the buzzer will sound 5 times and turn back to its waiting state.

CONVECTION COOKING (WITHOUT PREHEAT)

1. Press "CONVECTION" key once and "150" will flash.
2. Keep pressing "CONVECTION" or turn the dial to select the convection function.

Note: The temperature can be set between 150 degrees to 240 degrees.

3. Press the "START/+30SEC./CONFIRM" to confirm the temperature.
4. Turn the dial to adjust the cooking time (the maximum time you can set is 95 minutes).
5. Press the "START/+30SEC./CONFIRM" key to start cooking.

MULTI-SECTION COOKING

Two stages maximum can be set. If one of the stages is defrosting, it will be put in the first stage automatically. The buzzer will ring once after each stage and the next stage will begin.

Note: Auto menu and preheating cannot be set as one of the multi-stages.

Example: If you want to defrost food for 5 minutes then cook it with 80% microwave power for 7 minutes. The steps are as following:

1. Press "W.T./TIME DEFROST" twice, the screen will display "d-2"
2. Turn the dial to adjust the defrost time of 5 minutes.
3. Press "MICROWAVE" once.
4. Turn the dial to choose 80% microwave power till "P80" displays.
5. Press "START/+30SEC./CONFIRM" to confirm.
6. Turn the dial to adjust the cooking time to 7 minutes.
7. Press "START/+30SEC./CONFIRM" to start cooking.

SPEEDY COOKING

1. In the waiting state, press "START/+30SEC./CONFIRM" key to cook with 100% power level for 30 seconds. Each press on the same key can increase 30 seconds. The maximum cooking time is 95 minutes.
2. During microwave, grill, convection and combination states, press "START/+30SEC./CONFIRM" key to cook with 100% power level for 30 seconds. Each press on the same key can increase 30 seconds.

Note: This function cannot work under weight defrost, multi-stage and auto menu cooking.

SPEEDY MICROWAVE COOKING

In waiting state turn the dial left to choose cooking time directly then press "START/+30SEC./CONFIRM" key to cook with 100% microwave power. This program can be set as the first one of multistage.

AUTO MENU

1. In waiting state turn the dial right to choose the function you want, and "A1", "A2", "A3"... "A10" will be displayed.
2. Press "START/30+SEC./CONFIRM" to confirm the menu you want.
3. Turn the dial to choose the weight of the menu and the "g" indicator will light up.
4. Press "START/30+SEC./CONFIRM" to start cooking.

Note: When you choose A9 cake, please do not put the cake into the oven at the beginning. The oven needs to be preheated to 180 degree first. After several minutes, the buzzer sounds twice to remind you to put the cake into the oven. After putting the cake in the oven, please press start again. The timer will count down, and the cake will be cooked perfectly.

DEFROST BY WEIGHT

1. Press "W.T./TIME DEFROST" pad once and the oven will display "d-1"
2. Turn the dial to select the weight of your food. Whilst you are doing this, the "g" indicator will be lit. The weight should be between 100-2000g.
3. Press "START/30+SEC./CONFIRM" key to start defrosting.

DEFROST BY TIME

1. Press "W.T./TIME DEFROST" pad twice and the oven will display "d-2"
2. Turn the dial to select the cooking time. The maximum setting time is 95 minutes.
3. Press "START/30+SEC./CONFIRM" key to start defrosting.

INQUIRING FUNCTION

1. If the microwave is in a middle of a cooking function, you can check the time by pressing the "CLOCK/KITCHEN TIMER". It will be displayed for 2-3 seconds.
2. If you want to check the power level during a cooking function, press the "MICROWAVE", "GRILL/COMBI" or "CONVECTION", the current power will be displayed for 2-3 seconds.

LOCK-OUT FUNCTION FOR CHILDREN

Lock: In waiting state, press "STOP/CLEAR" for 3 seconds and there will be a long beep indicating that the microwave has entered the lock mode and the  indicator will light. LED will display current time or 0:00.

Lock quitting: In locked state, press "STOP/CLEAR" for 3 seconds, there will be a long "beep" indicating that the lock is released and "" indicator will disappear.

SPECIFICATION

1. The buzzer will sound once when turning the knob at the beginning.
2. "START/30+SEC./CONFIRM" must be pressed to continue cooking if the door is opened during cooking.
3. Once the cooking programme has been set and the "START/30+SEC./CONFIRM" is not pressed in 5 minutes, the current time will be displayed and the setting will be cancelled.
4. If you press the button properly, the beep will sound. If you haven't pressed the button properly, there will be no beep response.
5. The buzzer will sound 5 times to remind you when cooking has finished.

Menu	Weight (g)	Display	Power
A-1 Pizza	200	200	C-4
	300	300	
	400	400	
A-2 Potato	1 (about 230g)	1	100%
	2 (about 460g)	2	
	3 (about 690g)	3	
A-3 Meat	150	150	100%
	300	300	
	450	450	
	600	600	
A-4 Fish	150	150	80%
	250	250	
	350	350	
	450	450	
	650	650	
A-5 Vegetable	150	150	100%
	350	350	
	500	500	
A-6 Beverage/coffee	1 (about 240g)	1	100%
	2 (about 480g)	2	
	3 (about 720g)	3	
A-7 Pasta	50(with water 450ml)	50	80%
	100(with water 800ml)	100	
	150(with water 1200ml)	150	
A-8 Popcorn	50	50	100%
	100	100	
A-9 Cake	475	475	Preheat at 180 degrees
A-10 Chicken	500	500	C-4
	750	750	
	1000	1000	
	1200	1200	

CLEANING AND CARE

1. Turn off the oven and remove the power plug from the wall socket before cleaning.
2. Keep the inside of the oven clean. When food splatters or spilled liquids adhere to oven walls, wipe with a damp cloth. Mild detergent may be used if the oven gets very dirty. Avoid the use of spray and other harsh cleaners as they may stain, streak or dull the door surface.
3. The outside surfaces should be cleaned with a damp cloth. To prevent damage to the operating parts inside the oven, water should not be allowed to seep into the ventilation openings.
4. Wipe the both sides of the door and window, the door seals and adjacent parts frequently with a damp cloth to remove any spills or splatters. Do not use abrasive cleaner.
5. Do not allow the control panel to become wet. Clean with a soft, damp cloth. When cleaning the control panel, leave oven door open to prevent oven from accidentally turning on.
6. If steam accumulates inside or around the outside of the oven door, wipe with a soft cloth. This may occur when the microwave oven is operated under high humidity condition. This is normal.
7. It is occasionally necessary to remove the glass tray for cleaning. Wash the tray in warm sudsy water or in a dishwasher.
8. The roller ring and oven floor should be cleaned regularly to avoid excessive noise.
Simply wipe the bottom surface of the oven with mild detergent. The roller ring may be washed in mild sudsy water or dishwasher. When removing the roller ring from cavity floor for cleaning, be sure to replace in the proper position.
9. Remove odors from your oven by combining a cup of water with the juice and skin of one lemon in a deep microwaveable bowl, microwave for 5 minutes. Wipe thoroughly and dry with a soft cloth.
10. When it becomes necessary to replace the oven light, please consult a dealer to have it replaced.
11. The oven should be cleaned regularly and any food deposits removed. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazard.
12. Please do not dispose this appliance into the domestic rubbish bin; it should be disposed to the particular disposal center provided by the municipalities.
13. When the microwave oven with grill function is first used, it may produce slight smoke and smell. This is a normal phenomenon, because the oven is made of a steel plate coated with lubricating oil, and the new oven will produce fumes and odor generated by burning the lubricating oil. This phenomenon will disappear after a period of using.

Trouble Shooting

Normal	
Microwave oven interfering TV reception	Radio and TV reception may be interfered when microwave oven operating. It is similar to the interference of small electrical appliances, like mixer, vacuum cleaner, and electric fan. It is normal.
Dim oven light	In low power microwave cooking, oven light may become dim. It is normal.
Steam accumulating on door, hot air out of vents	In cooking, steam may come out of food. Most will get out from vents. But some may accumulate on cool place like oven door. It is normal.
Oven started accidentally with no food in.	It is forbidden to run the unit without any food inside. It is very dangerous.

Trouble	Possible Cause	Remedy
Oven can not be started.	(1) Power cord not plugged in tightly.	Unplug. Then plug again after 10 seconds.
	(2) Fuse blowing or circuit breaker works.	Replace fuse or reset circuit breaker (repaired by professional personnel of our company)
	(3) Trouble with outlet.	Test outlet with other electrical appliances.
Oven does not heat.	(4) Door not closed well.	Close door well.
Glass turntable makes noise when microwave oven operates	(5) Dirty roller rest and oven bottom.	Refer to "Maintenance of Microwave" to clean dirty parts.

ElectriQ UK SUPPORT

www.electriQ.co.uk/support

Complete online support form on www.electriQ.co.uk/support

Service Line: 0871 620 1057

Office hours: 9AM - 5PM Monday to Friday

www.electriQ.co.uk

Unit 2, The Nursery

Berristow Lane South Normanton

Derbyshire, DE55 2FX



Disposal: Do not dispose this product as unsorted municipal waste. Collection of such waste must be handled separately as special treatment is necessary.

Recycling facilities are now available for all customers at which you can deposit your old electrical products. Customers will be able to take any old electrical equipment to participating civic amenity sites run by their local councils. Please remember that this equipment will be further handled during the recycling process, so please be considerate when depositing your equipment. Please contact the local council for details of your local household waste recycling centres.