

electric

USER MANUAL



**OUTDOOR MULTI POSITION ELECTRIC
HEATER WITH REMOTE AND LIGHT**

EQODETVH

Thank you for choosing electricQ
Please read the manual before using this heater
and keep it safe for future reference.
Visit our page www.electricQ.co.uk for our entire product range

CONTENTS

SAFETY INSTRUCTIONS	3
PRODUCT OVERVIEW	5
ASSEMBLY	6
OPERATION	9
CONTROL PANEL	9
CHANGING THE ORIENTATION	10
CLEANING AND MAINTENANCE	11
TECHNICAL SPECIFICATIONS	11
TROUBLESHOOTING	11
SUPPORT	12

SAFETY INSTRUCTIONS

IMPORTANT

- Carefully read the instructions before operating this unit.
- This appliance is for outdoor use only.
- Rating: This unit must be only connected to a 220-240 V / 50 Hz earthed outlet.
- Installation must be in accordance with the regulations of the country where the unit is used.
- If you are in any doubt about the suitability of your electrical supply have it checked and, if necessary, modified by a qualified electrician.
- This heater has been tested and is safe to use. However, as with any electrical appliance - use it with care.
- Disconnect the power from the unit before dismantling, assembling or cleaning.
- Avoid touching the main body when in use.
- Never insert fingers, pencils or any other objects through the guard.
- This appliance can be used by Children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be carried out by children.
- Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate, or clean the appliance or perform user maintenance.
- Children under 3 years should be kept away unless continuously supervised.
- Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
- Do not clean the unit by spraying it or immersing it in water.
- Avoid connecting the unit to an electrical outlet using an extension cord. If an outlet is not available, one should be installed by a qualified electrician. If an extension cord is used, it should be fully unwound from its spool, and be suitable for the power of the unit.
- Never operate this appliance if the unit, cord or plug is damaged. Ensure the power cord is not stretched, exposed to sharp objects / edges, or routed under the unit.
- Any service other than regular cleaning should be performed by an authorised service representative. Failure to comply could result in a voided warranty.
- Never use the plug as a switch to start and turn off the heater. Use the provided power button on the unit.
- Do not use an external timer.
- Always ensure the unit is secure before operation. Do not use on unstable or uneven surfaces.
- Avoid keeping the unit in direct sunlight for long periods of time.
- The heater is designed to be used at temperatures above -20°C. If it is exposed to temperatures below this, it must be allowed to warm above this level before operation.
- Do not attempt to repair, disassemble or modify the appliance. This unit contains no

 
user-serviceable parts.

- Always unplug or disconnect the appliance from the mains power supply when not in use, or when moving or cleaning it. Do not pull the cord to unplug the heater.
- Keep the heater clean. Do not allow any object to enter the ventilation or exhaust opening as this may cause electric shock, fire, or damage to the heater.
- Do not use the appliance for anything other than its intended use.
- There may be a trace of odour during the first few minutes of initial use, or after a period of storage. This is normal and will quickly disappear.
- This appliance has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or any flammable liquids are used or stored.
- Never locate this appliance where it may become exposed to water.
- This appliance is IP34 rated, and so although it resistant to water ingress, should not be allowed to be submerged, or subjected to overly wet conditions.
- The unit must be sited in an area sheltered from adverse weather conditions such as rain, wind, snow and ice.
- The appliance must be disconnected from the mains when not in use.
- To prolong the life of the product, and to ensure its safety we advise the unit is stored in a secure dry location when not in use.
- Minimum distances should always be complied with from top: 60 cm, from sides: 150 cm.
- The heater should not face flammable substances or surfaces.
- Heaters should not be installed in areas where hazardous vapours may be present. Defined in BS 5345.
- Ensure that there is no possibility of flammable material coming into contact with the heater, or in the near vicinity of the heater.
- The heaters are fitted with safety guards. These are intended only to stop large objects from hitting the emitters. On no account should the heater be operated with the guard removed.
- Do not install or use immediately above or below a power socket.
- The remote contains a lithium battery, keep out of reach of small children. Seek medical advice if swallowed.
- To prevent battery leakage: Remove the battery from the remote if exhausted or before long periods of storage.
- Due to continual product development, there may be variations between the pictures and the specifications within the manual and the actual product.
- **WARNING:** To reduce the risk of fire or electrical shock, **DO NOT** use this appliance with any solid-state Speed Control Device or any variable speed controllers.

ENERGY SAVING AND UNIT SAFETY PROTECTION TIP

- Do not cover or restrict the airflow. Do not use in a dusty environment.
- For safety and maximum performance, when used as a portable unit the minimum distance from a wall or objects should be 50cm.

PRODUCT OVERVIEW

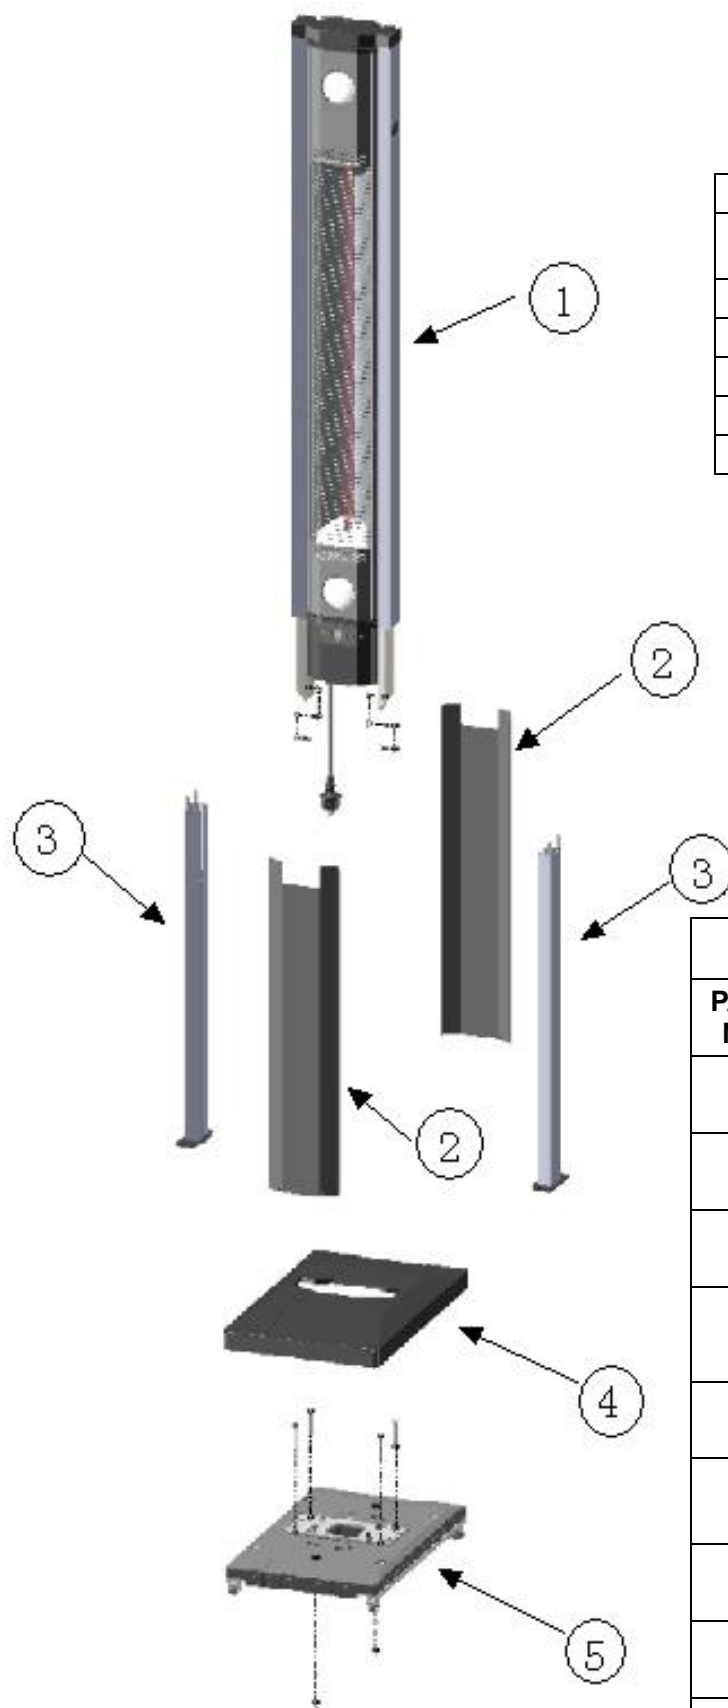


PARTS		
PART NO.	PART NAME	QTY
1	Heater Body	1
2	Panel	2
3	Upright Sections	2
4	Base cover	1
5	Base	1


FITTINGS			
PART NO.	PART NAME	DIAGRAM	QTY
6	M4×10 Bolt		6
7	Washer		2
8	ST3.5×12 Screw		2
9	M6×50 Hexagonal Head Bolts		4
10	Remote Control		1
11	Castor		2
12	Foot Collar		2
13	Foot		2
14	D6 Washer		4

ASSEMBLY

 
STEP 1: Using four BOLTS (6), attach the 2 CASTORS (11) to one side of the base. On the other side of the base attach the FEET (13), ensuring that the FOOT COLLARS (12) are in place.

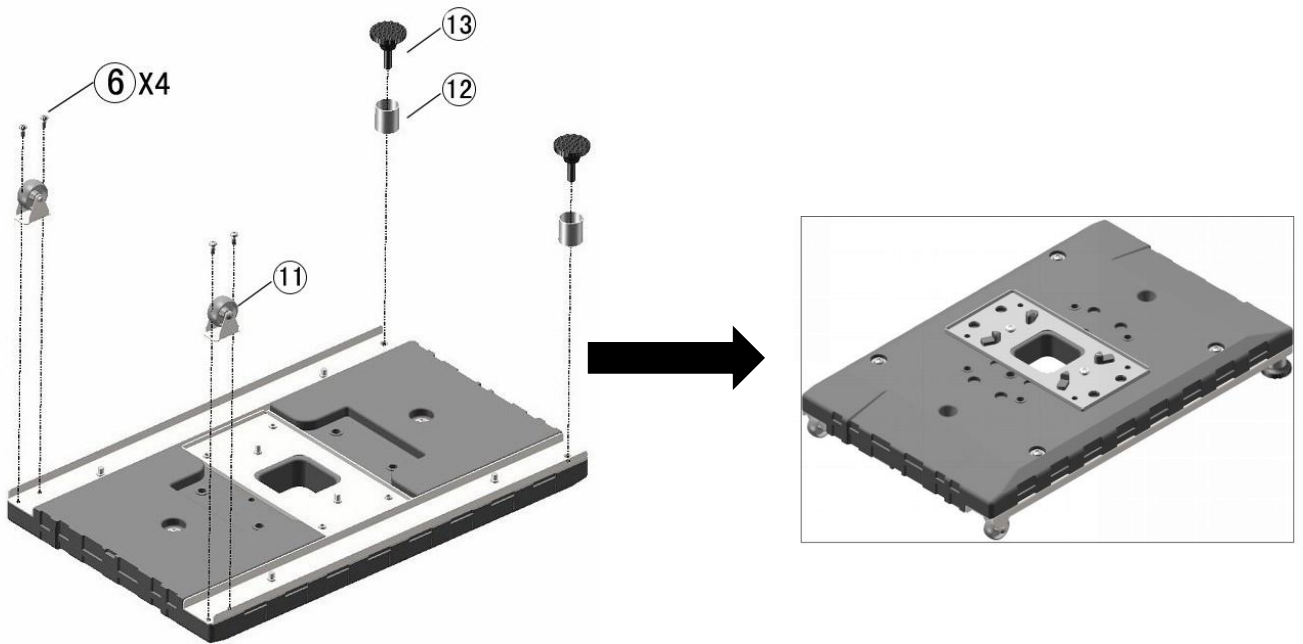

 
STEP 2: Place the base gently onto its feet before attaching the two UPRIGHT SECTIONS (3) using four WASHERS (14) and four BOLTS (9).

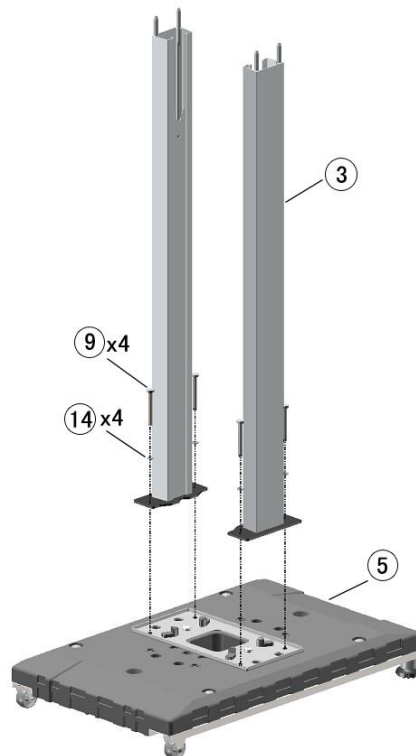

 
STEP 3: Gently place the BASE COVER (4) over the two upright sections and guide it down until it fits securely onto the base.

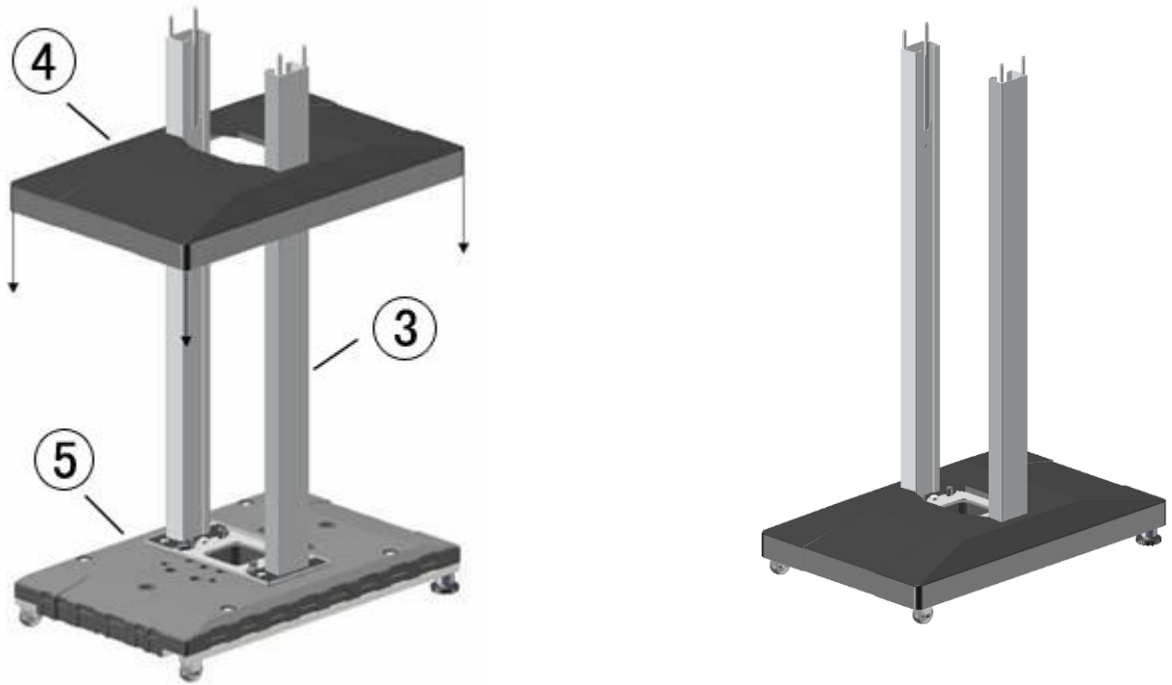

 
STEP 4: Place the main body of the heater onto the support brackets and fix in position using two M4X10 BOLTS (6). Then slide the power cable through the hole in the base.

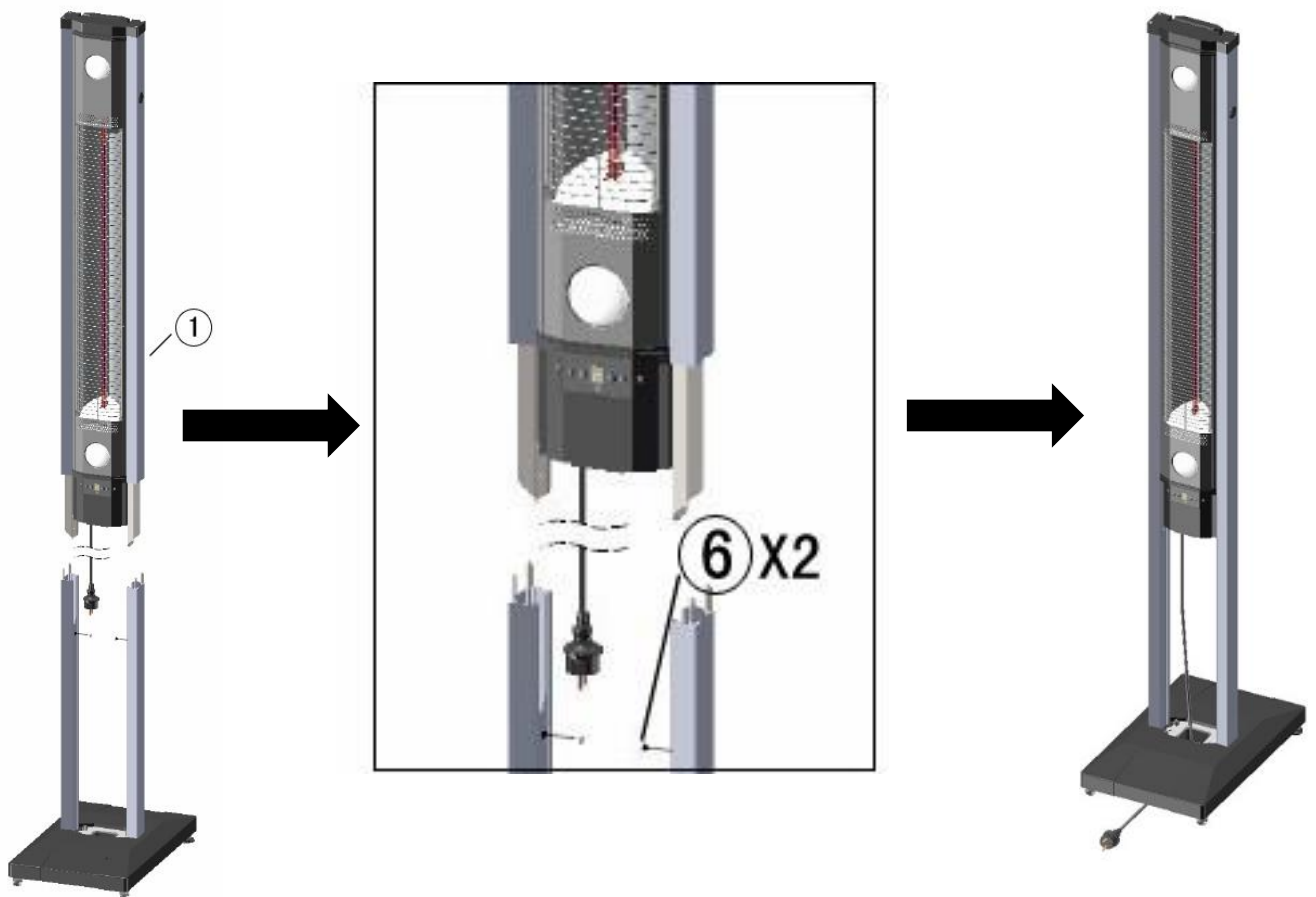

 STEP 5: Slide the BASE COVER (4) up to the base of the main body, gently push both PANELS (2) into position until they are securely in place. Do not complete this step until you have successfully pulled the power cable through the base. When complete, slide the BASE COVER back down so it is back in its original place.

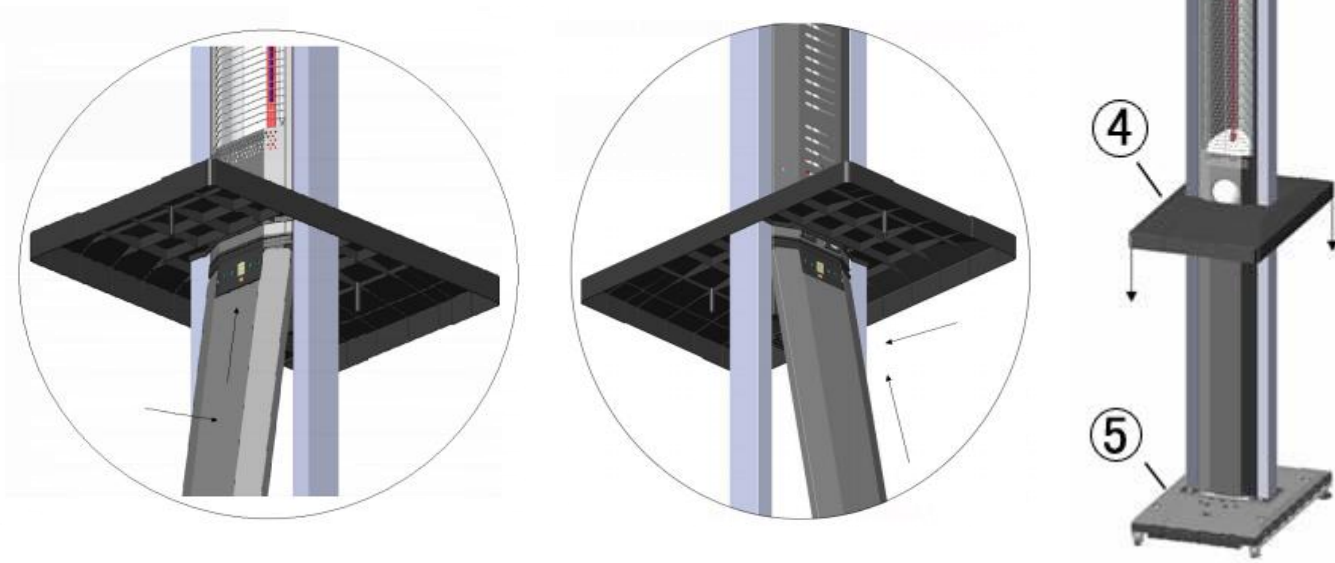

 STEP 6: Secure the base into place using two WASHERS (7) and two ST3.5×12 Screws (8).

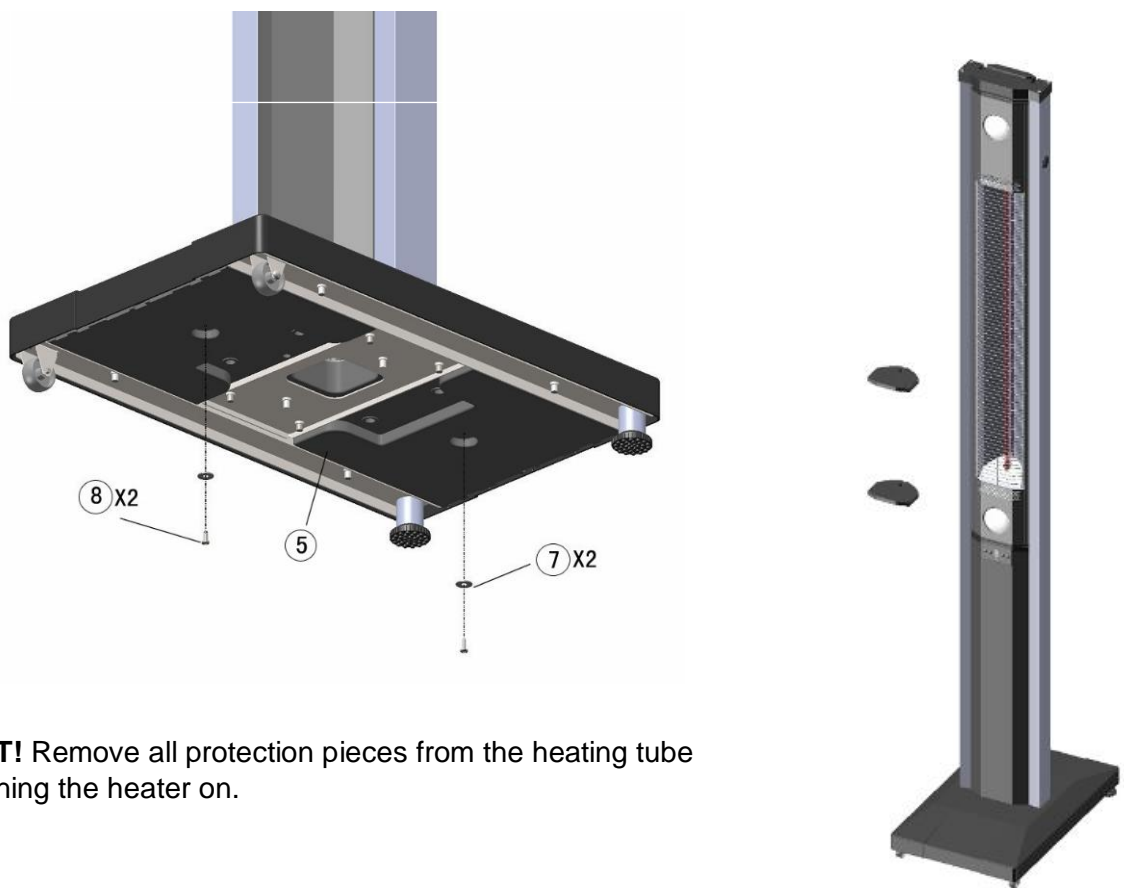

 
 
IMPORTANT! Remove all protection pieces from the heating tube before switching the heater on.


 

 
OPERATION

Plug in the power cable, the heater will bleep. The heater is in “Stand By” mode, the POWER indicator will be illuminated blue.

TO TURN ON	Press the POWER button and the indicator will turn white, indicating the heater is on. The heat will default to level 3.
TO SELECT THE HEAT LEVEL	Repeatedly press the HEAT button to select the heat output. There are 5 levels between 1 (Low) and 5 (High). The display will stop flashing the currently selected heat level after 5 seconds.
TO SELECT THE LED BRIGHTNESS	Repeatedly press the LAMP button to select the brightness of the LED lights. There are 5 levels between 1 (Low) and 5 (High). The display will stop flashing the currently selected brightness level after 5 seconds.
TO TURN OFF THE LED LAMP	Press the LAMP button immediately followed by the POWER button.
TO TURN OFF THE HEATING	Press the HEAT button immediately followed by the POWER button.
TO PUT THE UNIT IN STANDBY	Press the POWER button.


CONTROL PANEL

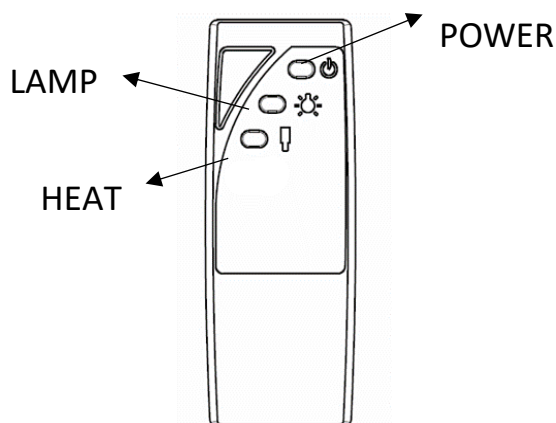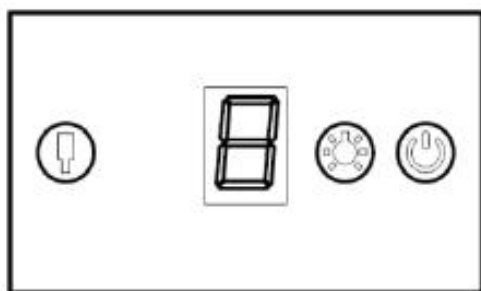


BUTTON	FUNCTION
 POWER	Press to turn the heater on or off. Can also individually turn off the Heat / Light by pressing the Heat / Lamp button immediately before the Power button.
 HEAT	Press to turn On the heating tube. Repeatedly press to select the power level between 1 (Low) and 5 (High).
 LIGHT	Press to turn on the LED light. Repeatedly press to select the brightness between 1 (Low) and 5 (High).
 LCD DISPLAY	Displays the heat level of the heating tube when in heating mode. When the LIGHT button is pressed the display will show the brightness.

CHANGING THE HEATERS ORIENTATION

 The heater can be set up with the heating tube in either a vertical or horizontal position. To change to horizontal position, push the base on the main body out of the frame so it pivots at the top, until the main body is horizontal.

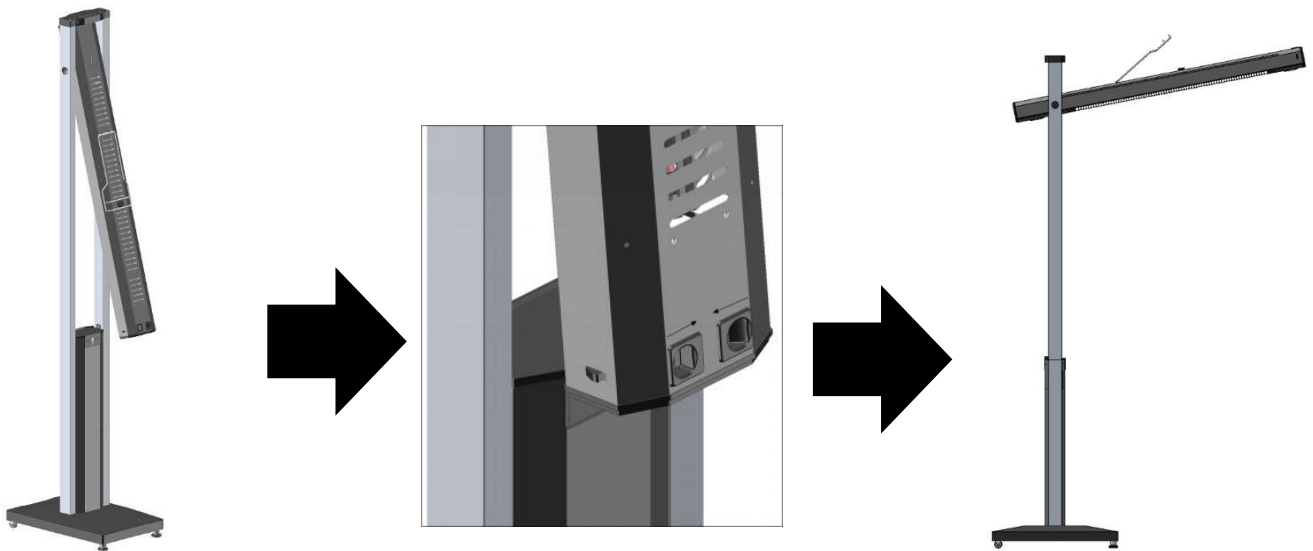

 Lock the main body into position by securing the clip on the main body to the top of the upright.

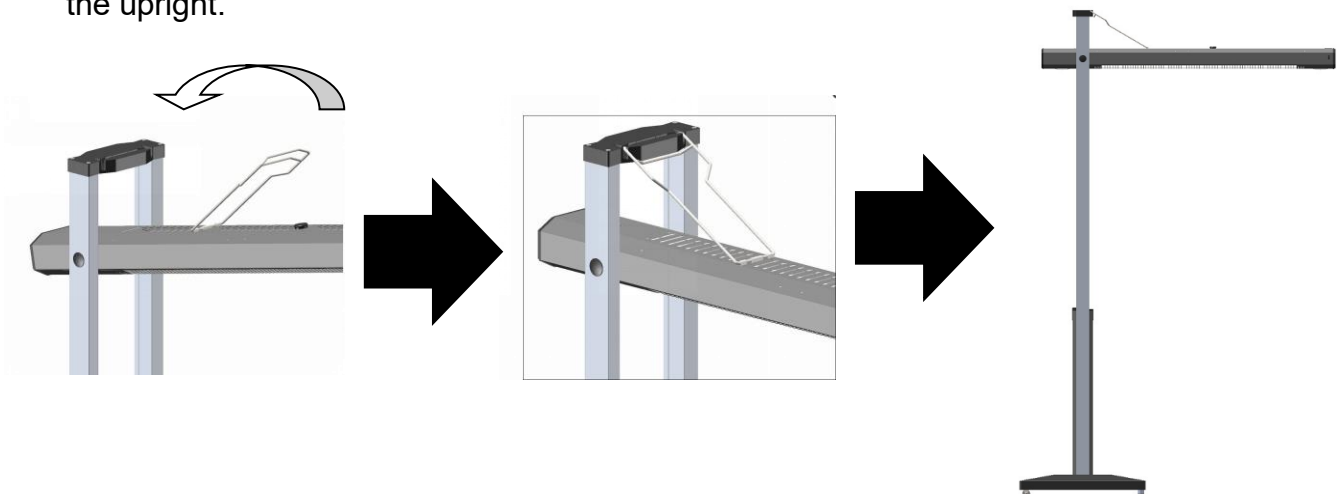

TO CHANGE BACK TO VERTICAL:

Reverse the steps above, ensuring the body is adequately supported and slowly lowered back to the upright position.

CLEANING AND MAINTENANCE

ATTENTION: Please turn off the unit and unplug from the mains and allow to fully cool before cleaning or performing any maintenance.

CLEANING THE SURFACE

- Clean the heater with a duster or a soft wet cloth.
- Do not use chemical solvents (such as benzene, alcohol or gasoline) as they may cause irreversible damage. Make sure no water enters the control panel or gaps in the casing.
- Do not run the unit until completely dry.
- Place the heater in its original box or cover to protect it from dust when not in use.

TECHNICAL SPECIFICATIONS

Model	EQODETVH
Voltage	220-240V~
Frequency	50 Hz
Power	1800W Max
IP Rating	IP34

TROUBLESHOOTING

Do not repair or disassemble the unit by yourself, unauthorized repair attempts will invalidate the warranty and may cause bodily harm.

Issue	Possible Reason	Solution
No power	1. Power cord is unconnected 2. There is no power from socket 3. The power switch on the rear of the unit is turned off.	1. Connect the power cord 2. Check socket is turned on 3. Ensure the power switch on the rear of the unit is in the on position
Odour emission from unit	1. New unit. When the unit is used for the first time the heater may produce and odour which will dissipate within a week of use	1. No action required

electriQ UK SUPPORT

www.electriQ.co.uk/support

Please, for your own convenience, make these simple checks before calling the service line.

If the unit still fails to operate call: 0330 390 3061 or complete the online form

1. Is the unit plugged into the mains?
2. Is the fuse OK?
3. Switch the unit off and wait three minutes to see if the issue is resolved. Restart the unit.

Office hours: 9AM - 5PM Monday to Friday

www.electriQ.co.uk
Unit J6, Lowfields Business Park
Lowfields Way, Elland
West Yorkshire, HX5 9DA

Disposal: Do not dispose this product as unsorted municipal waste. Collection of such waste must be handled separately as special treatment is necessary.



Recycling facilities are now available for all customers at which you can deposit your old electrical products. Customers will be able to take any old electrical equipment to participating civic amenity sites run by their local councils. Please remember that this equipment will be further handled during the recycling process, so please be considerate when depositing your equipment. Please contact the local council for details of your local household waste recycling centres.