

electric

49 inch FHD LED TV



EIQ-49FHDT2SM

LED TV

CONTENTS

Safety Information.....	2
What is included.....	4
TV Stand Installation/Removal.....	5
Getting Started.....	6
Connecting to External Devices.....	8
Remote Control.....	9
Settings.....	11
Smart TV.....	37
Specifications.....	43
Support & Disposal.....	44

SAFETY INFORMATION

- Read these instructions – All the safety and operating instructions should be read before this product is operated.
- Keep these instructions – The safety and operating instructions should be retained for future reference.
- Heed all warnings – All warnings on the appliance and in the operating instructions should be adhered to.
- Follow all instructions – All operating and usage instructions should be followed.
- Do not use this equipment near water – The appliance should not be used near water or moisture e.g. in a wet basement or near a swimming pool.
- Clean only with a dry cloth. Do not use solvents or petroleum based fluids.
- Do not block any ventilation openings.
- Do not install near any heat sources such as radiators, stoves or other apparatus (including amplifiers) that produce heat.
- Do not tamper with the supplied plug. This plug is a BS1363 standard plug.
- Protect the power cord from being walked on or pinched, particularly at the plug and at the point where they exit from the appliance.
- Only use at attachments/accessories specified by the manufacturer.
- Use only with a cart, stand, tripod, bracket or table specified by the manufacturer or sold with the apparatus. When a cart or stand is used, use caution when moving it to avoid any injuries or damage from it tipping over.
- Unplug the apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus or it has been exposed to rain or moisture, it does not operate normally or has been dropped.
- Please keep the unit in a well-ventilated environment.
- The TV set should only be connected to a mains power supply with 220-240V 50Hz
- To prevent overload, do not share the same power supply socket with too many other electronic components.
- Do not place any connecting wires where they may be stepped on or tripped over.
- Do not place heavy items on the cable as this may cause damage.
- Hold the main plug, not the wires, when removing from a socket.

- Pull the plug out immediately and seek professional help if the main plug or cable is damaged, liquid has spilled onto the set, if accidentally exposed to water or moisture, if anything accidentally penetrates the ventilation slots or if the set does not work normally.
- Do not remove the safety covers. There are no user serviceable parts inside. Trying to service the unit yourself is dangerous and may invalidate the product's warranty. Only qualified personnel should service this apparatus.
- To avoid battery leakage, remove exhausted batteries from the remote control when not in use for a long period.
- Do not block ventilation slots on the back cover. The TV can be placed in a cabinet but ensure at least 5cm (2") clearance all around.
- Do not tap or shake the TV screen, this may damage internal components.
- **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and objects filled with liquids, such as vases, shall not be placed on the apparatus.
- **WARNING:** The wall plug socket is used as a disconnection device and should remain readily accessible.
- **WARNING:** The batteries shall not be exposed to excessive heat such as direct sunlight or fire.

 <p>This warning sign is to warn of dangerous voltage inside the product.</p>	<div style="border: 1px solid black; padding: 2px; text-align: center; margin-bottom: 5px;"> CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN </div> <p>CAUTION: To reduce the risk of electric shock, DO NOT remove the cover (or back). No user serviceable parts inside. Refer servicing to qualified service personnel.</p>	 <p>This warning sign is to alert you of important instructions accompanying the product.</p>
--	---	--



This equipment is a Class II or double insulated electrical appliance. It does not require a grounded connection.



AT FULL VOLUME, PROLONGED LISTENING MAY DAMAGE THE USER'S HEARING.

WHAT IS INCLUDED



TV Set



Remote Control (2 xAAA Batteries)



User's Manual

Stand Support






Base Stand



6Screws

TV STAND INSTALLATION/REMOVAL

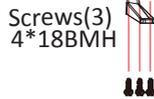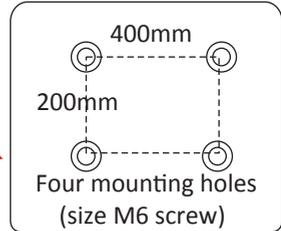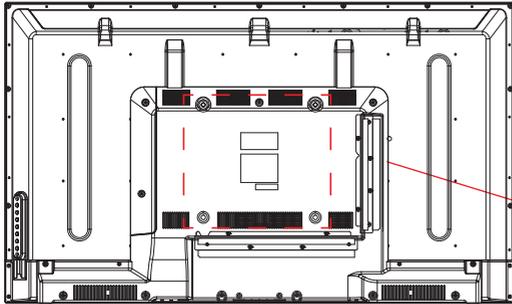


WALL MOUNTING

- The TV is provided with mounting holes for a VESA approved wall mounting bracket (not supplied)
- The VESA mounting pattern is 400x200mm and the size of the screws is 4 x M6 x 10(not supplied)
- Do not use screws longer than 10mm or damage will occur to the internal components.

NOTE: As the TV set is considered heavy, please consult with a professional wall mount installer to perform the installation.


GETTING STARTED

BUTTON FUNCTIONS

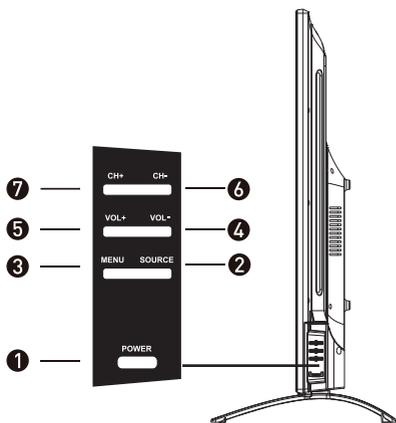


1. **POWER BUTON:** To turn ON/OFF the TV
2. **SOURCE** Button: To select the input source.
3. **MENU** Button: To enter menu setting page.
4. **VOL-**: To decrease the volume level.
5. **VOL+**: To increase the volume level
6. **CH-**: To select previous channel
7. **CH+**: To select next channel
8. Remote Control Sensor
9. **Power Indicator:** In standby mode the indicator light will display red, when switching on the unit the indicator light will display green.

INPUT / OUTPUT TERMINALS

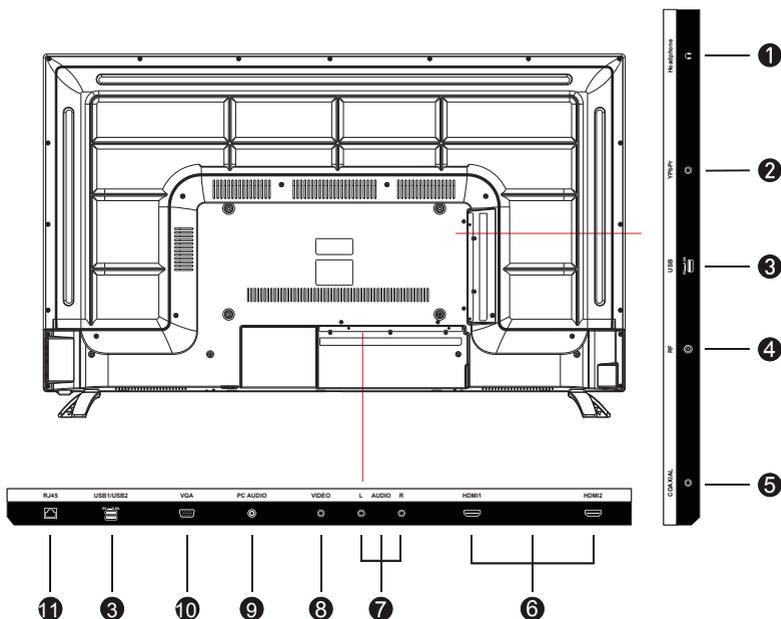


1. Headphones
2. YPbPr: Connect to the YPbPr video output terminal of the DVD player
3. Back USB x2. Provides access to SMART TV. Connect smart remotes, keyboards, gaming accessories or usb flash drive Side USB x 1 can be used for DTV recording, timeshift or as a media player file.
Note: only connect low power USB flash drives or externally powered hard drives to the 3x USB ports as they only provide 0.5 Amps power
4. RF: Antenna connection
5. Coaxial: Coaxial output
6. HDMI x2
7. AUDIO IN L/R: Stereo audio input
8. VIDEO: Video input
9. PC Audio: connect it to the audio
10. VGA: PC Video input
11. RJ45

CONNECTING TO EXTERNAL DEVICES

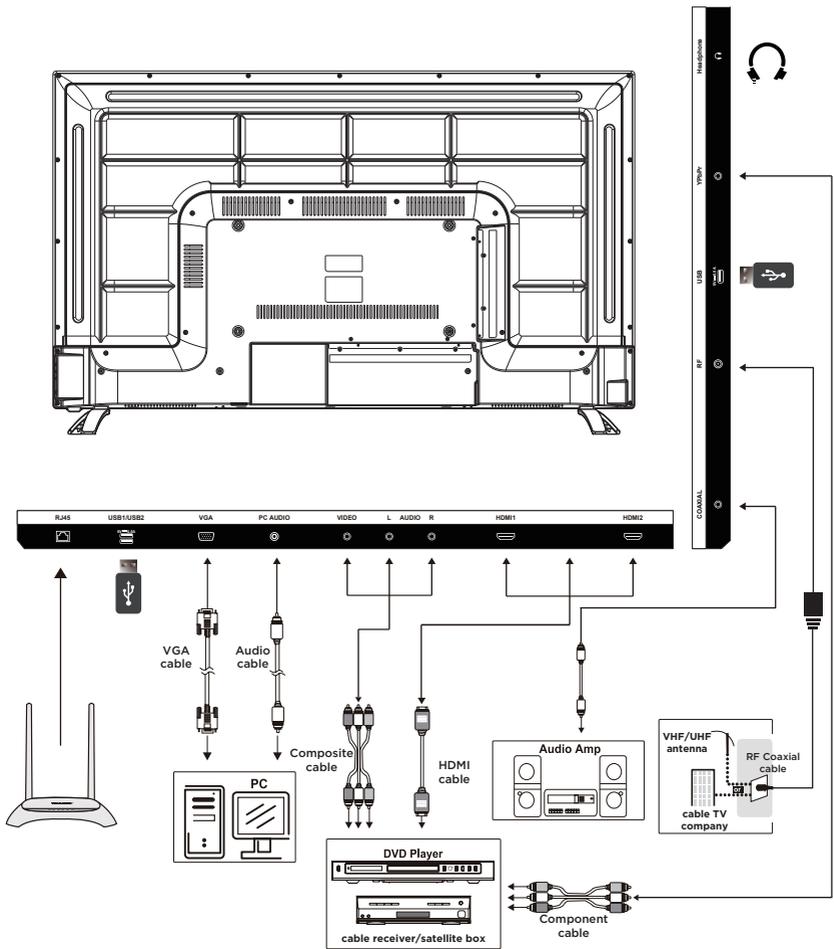

REMOTE CONTROL

1. POWER: Turn on the TV/Standby
2. MUTE: Mute or restore the sound
3. SOURCE: Press to change the signal source
4. S. MODE: Setting audio options
5. P. MODE: Output image mode selection
6. AUDIO: Switch the audio channel when DVD or multimedia playing. I/II: In the TV mode, press this button to select the stereo size
7. P. SIZE: Press to select the different picture size.
8. NUMBER KEYS: Change the channel
9. FAV. CH: Show the list of favourite channels
10. SLEEP: Auto Power Off Timer
11. JUMP: Return to the previous channel tuned
12. MENU: Show Menu
13. EXIT: Exit the Menu
14. INFO: Show information about the current program
15. NAVIGATION KEYS (Up, Down, Left, Right and OK): To move in the menus and confirm settings.
16. V+ / V-: Increase / decrease volume
17. P+ / P-: Next / previous channel
18. BACK: key navigation.
19. MENU: contextual menu and options
20. MOUSE: Turns on / off the mouse emulation. Use the arrows to navigate and OK to select. To return to keys navigation press mouse key again.
21. SEARCH: function enable quick text search.

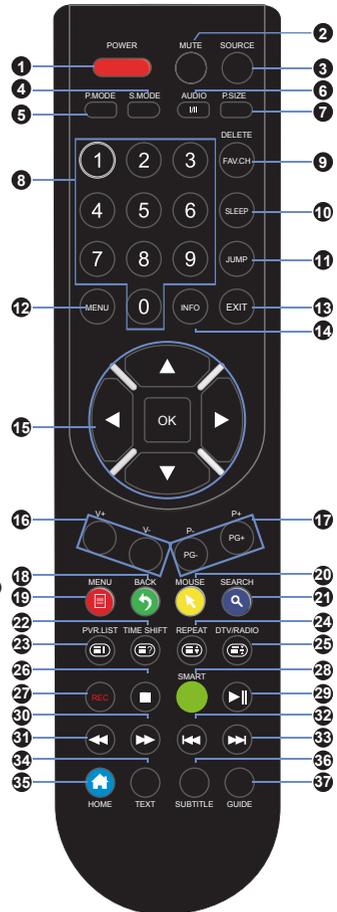


● ● ● ● Press the appropriate colour to direct access functions in TELETEXT or EPG OSD mode.

22. TIME SHIFT: In DTV mode, press TIME SHIFT button to start the delay function, press the button to start playing delay program, press the button to terminate the delay function
 Reveals hidden information such as the answers to a quiz in TELETEXT Mode.
23. PVR LIST: IN DTV mode, displays the executed PVR LIST.
 Displays the main index in TELETEXT mode.

24. REPEAT: Repeat mode.
 Displays the top, bottom or all of the page.
25. DTV/RADIO: In DTV mode, press DTV/RADIO button to enter DTV or RADIO mode.
 Freeze a multi-page selection on TELETEXT mode.
26.  Stop Playback
27. REC: In DTV mode, press REC button to start recording, press  button stop recording.
28. Smart : Provides quick access to the smart TV functions.
29.  Play/Pause.
30.  Fast Forward playback
31.  Rewind playback
32.  Previous file or chapter
33.  Nextfile or chapter
34. TEXT: Turn on and off the Teletext function
35.  function returns to the main smart tv menu.
36. SUBTITLE: Select subtitle of media video file (requires the support of disk or file)
37. GUIDE: Show the Electronic Program Guide (EPG)


BATTERY INSTALLATION

1. Open the battery cover.
2. Insert 2 AAA batteries in the battery compartment, matching the polarities correctly.
3. Replace the battery cover.

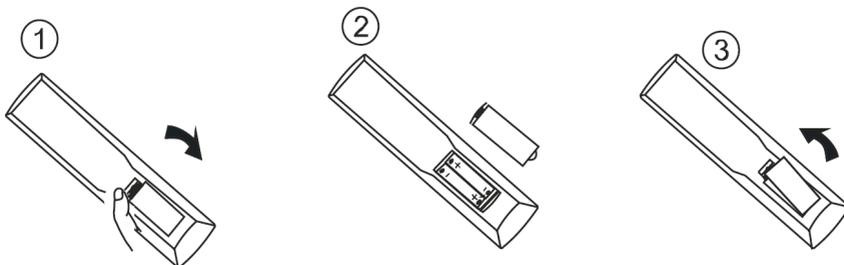

SETTINGS

INITIAL SETUP

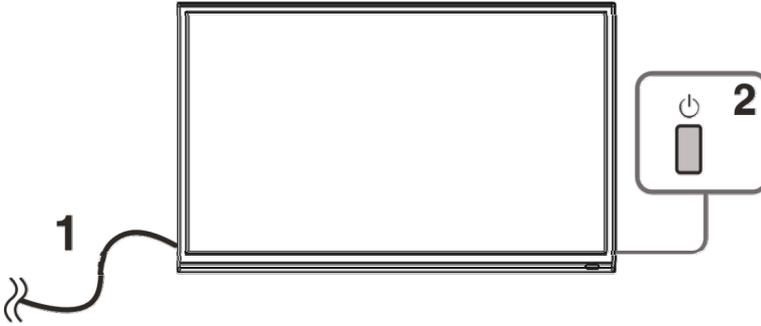

1. Connect the TV set to a power outlet.
2. Press the POWER button on the remote or on the TV set to turn on the TV (the indicator will be lit green)

NOTE: Pressing the power button on the remote or TV set will place the TV into standby mode only. If the TV set is expected to be not in use for a long period of time, please disconnect it from the power source.

SELECT INPUT SOURCE

Input Source	
DTV	
ATV	
AV	
PC	
Component	
HDMI1	
HDMI2	
Smart TV	
Media	
Move	Select
EXIT	Exit

Press INPUT button to display the input source list, Press ▼ / ▲ or OK button to select the input source you want to, Press OK button to enter the input source, Press EXIT button to quit.

Main Menu Operation

Channel Menu

Press MENU button to display the main menu .


Press ◀ / ▶ button to select CHANNEL in the main menu.



1. Press ▼ / ▲ button to select the option that you want to adjust in the CHANNEL menu.
2. Press Enter button to adjust.
3. After finishing your adjustment, Press Enter button to save and return to the previous menu.

Auto Tuning

Press ▼ / ▲ button to select Auto Tuning, then press Enter/▶ button to enter.

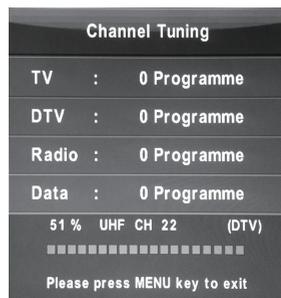

ATV Manual Tuning



Current CH

Set the channel number.

Colour System

Select the colour system

Sound System

Select the Sound system

Fine-Turn

Adjust the frequency of the channel finely.
(Available System: AUTO,PAL , SECAM)


Search

Start searching channel

DTV Manual Tuning

Press ▼ / ▲ button to select DTV Manual Tuning, then press Enter button to enter sub-menu.

Press ◀ / ▶ button to select channel, then press Enter button to search program.

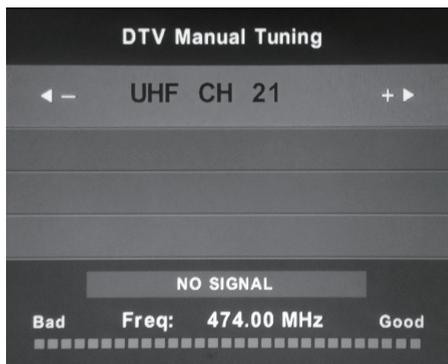

Program Edit

Press ▼ / ▲ button to select Program Edit, then press Enter button to enter sub-menu.



The three coloured key is the shortcut key for programming the channel.

First press ▼ / ▲ to highlight the channel you want to select, then:

Press the Red button to delete the program in the list.

Press the Yellow button to move the channel in favorite list.

Press the Blue button to skip the selected channel.

Press Fav button to add or remote the channel to your favorite list.

(Your TV set will skip the channel automatically when using CH+/- to view the channels.)

Schedule List

Press ▼ / ▲ button to select Schedule List, then press Enter button to enter sub-menu. It is available in source.



Press the YELLOW button to enter the interface below.

When the time appointment is conflict , it will produce a warning message.



Signal Information


Press ▼ / ▲ button to select Signal Information, press the Enter button to see the detail information about the signal. Only available when there is signal in DTV.



Picture Menu

Press MENU button to display the main menu.

Press ◀ / ▶ button to select PICTURE in the main menu.

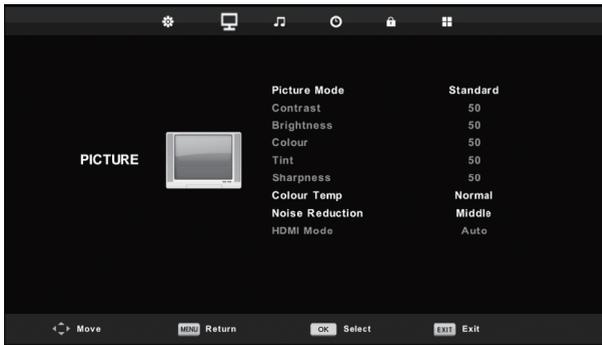


1. Press ▼ / ▲ button to select the option that you want to adjust in the PICTURE menu.
2. Press OK button to adjust.
3. After finishing your adjustment, Press MENU button to save and return back to the previous menu.

Picture Mode

Press ▼ / ▲ button to select Picture Mode, then press OK button to enter sub-menu. You can change the value of contrast, brightness, colour, sharpness and tint when the picture is in Personal mode.

TIPS: You can press PMODE button to change the Picture Mode directly.

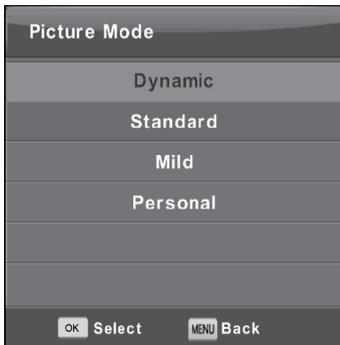

Contrast/ Brightness/ Colour/ Tint / Sharpness

Press ▼ / ▲ button to select option, then press ◀ / ▶ button to adjust.

- Contrast** Adjust the highlight intensity of the picture, but the shadow of the picture is invariable.
- Brightness** Adjust the optical fiber output of the entire picture, it will effect the dark region of the picture.
- Colour** Adjust the saturation of the colour based on your own like.
- Tint** Use in compensating colour changed with the transmission in the NTSC code.
- Sharpness** Aadjust the peaking in the detail of the picture.

Colour Temp

Press ▼ / ▲ button to select Colour Temperature , then press OK button to enter sub-menu. Press ◀ / ▶ button to select. (Available Picture mode: Cool, Medium, Warm). You can change the value of red,green and blue when the colour temperature is in User mode.




- Cold** Increase the blue tone for the white.
- Normal** Set to default colour temperature.
- Warm** Increase the red colour for the white.

Noise Reduction

To filter out and reduces the image noise and improve picture quality.

Press ▼ / ▲ button to select Noise Reduction , then press OK button to enter sub-menu.

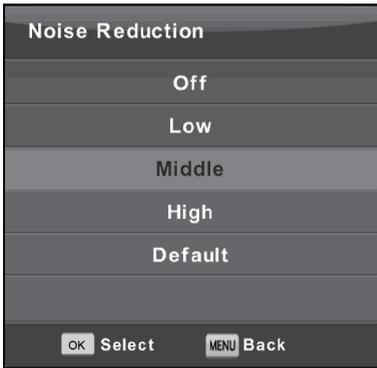

- Off** Select to turn off video noise detection.
- Low** Detect and reduce low video noise.
- Middle** Detect and reduce moderate video noise.
- High** Detect and reduce enhanced video noise.
- Default** Set as Default.


Sound Menu



1. Press ▼ / ▲ button to select the option that you want to adjust in the SOUND menu.
2. Press Enter button to adjust.
3. After finishing your adjustment, Press Enter button to save and return to the previous menu.

Sound Mode

Press ▼ / ▲ button to select Sound Mode, then press Enter button to enter sub-menu. Press ▼/▲ button to select.

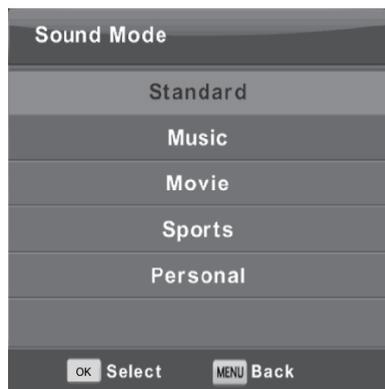

You can change the value of Treble and Bass when the sound is in Personal mode.
TIPS: You can press SMODE button on the remote control to change the Sound Mode directly.

- | | |
|-----------------|---|
| Standard | Produces a balanced sound in all environments. |
| Music | Preserves the original sound.Good for musical programs. |
| Movie | Enhances treble and bass for a rich sound experience. |
| Sports | Enhances vocals for sports. |
| Personal | Select to customize picture settings. |

Note:The treble and bass are only available in User mode,you can adjust them as you like.

Balance

Press ▼ / ▲ button to select option, Press ◀ / ▶ button to adjust.

You can change the value of Treble and Bass when the sound is in Personal mode.
TIPS: You can press SMODE button on the remote control to change the Sound Mode directly.

Auto Volume level

Press ▼ / ▲ button to select Auto Volume Level, then press ◀ / ▶ button to select On or Off.

SPDIF Mode

Press ▼ / ▲ button to select SPDIF Mode, then press ◀ / ▶ button to select Off / PCM / Auto.

AD Switch

Press ▼ / ▲ button to select AD Switch, then press ◀ / ▶ button to select On or Off. Amblyopia function for the blind, the tracks will be mixed describe the current screen . It need codestream to support.

NOTE:

Balance: This item can adjust the speaker's output, it enables you to listen to best at your position.

Auto Volume: This item is used for reducing the difference between channel and program's volume automatically.

Time Menu

Press MENU button to display the main menu .

Press ◀ / ▶ button to select TIME in the main menu.



1. Press ▼ / ▲ button to select the option that you want to adjust in the TIME menu.
2. Press Enter button to adjust.
3. After finishing your adjustment, Press Enter button to save and return to the previous menu.


Time Zone

Press ▼ / ▲ button to select Sleep Timer, then press Enter button to enter sub-menu.



Press ▼ / ▲ / ◀ / ▶ button to select time zone.

Sleep Timer

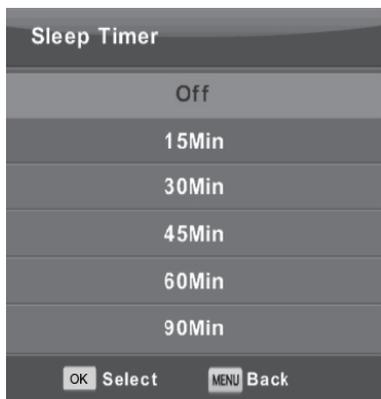

Press ▼ / ▲ button to select Sleep Timer, then press Enter button to enter sub-menu.

Press ▼ / ▲ button to select.

(Available options are:Off,15min,30min,45min,60min,90min,120min,240min).

Auto Standby



Press ▼ / ▲ button to select Auto Standby, then press Enter button to enter sub-menu.

Press ▼ / ▲ button to select.

Tips: The remote control does not make any operation in the hypothesis time, it will close down automatically. If you do any operation, it will reset the time.

OSD Timer



Press ▼ / ▲ button to select OSD Timer, then press Enter button to enter sub-menu. Press ◀ / ▶ button to select.

Lock Menu

Press MENU button to display the main menu. Press ◀ / ▶ button to select Lock in the main menu.



1. Press ▼ / ▲ button to select the option that you want to adjust in the LOCK SYSTEM menu.
2. Press Enter/◀ / ▶ button to adjust.
3. After finishing your adjustment, Press MENU button to return back to the previous menu

Lock System



Press ▼ / ▲ button to select Lock System, then press Enter button to make the following 3 options valid. Default password is 0000, and if forget what you set, please call the service center.

Set Password




Press ▼ / ▲ button to select Set Password, then press Enter button to enter sub-menu to set new password.

Channel Lock



Press ▼ / ▲ button to select Channel Lock then press Enter button to enter sub-menu to select. Press button to lock or unlock the channel Green .

Parental Guidance

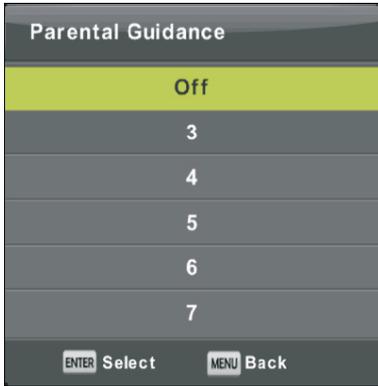

Press ▼ / ▲ button to select Parental Guidance, then press Enter button to enter sub-menu to select the number of age which is suitable for your children.

Key Lock

Press ▼ / ▲ button to select Key Lock, then press ◀ / ▶ button to select Off or On. When Key Lock's statue is on, you can't use the Key panel button.

Hotel Mode



1. Press ▼ / ▲ button on the remote control to select hotel mode in the Lock menu.
2. Press Enter button on the remote control to enter the sub-menu.
3. After finishing your adjustment, Press MENU button to save and return back to the previous menu.

Hotel Mode

Press ▼ / ▲ button to select Hotel Mode, then press ◀ / ▶ button to select on or off.

Source Lock

Press ▼ / ▲ button to select Source Lock, then press Enter button to enter sub-menu to select.

Default Source

Press ▼ / ▲ button to select Default Source, then press Enter button to enter sub-menu to select.

Default Prog

Press ▼ / ▲ button to select Default Prog, then press ◀ / ▶ button to adjust. It is available when the default source is TV.

Max Volume

Press ▼ / ▲ button to select Max Volume, then press ◀ / ▶ button to adjust.

Import Database

We can import parameter of Audio/Channel/Lock/Setup from USB disk. Insert USB disk, choose "Import Database" and press enter to import.

Export Database

We can export parameter of Audio/Channel/Lock/Setup to USB disk. Insert USB disk, choose "Export Database" and press Enter to Export.

Clear Lock

Press ▼ / ▲ button to select Clear Lock, then press Enter button to clear the setting you have done before.

Setup Menu

Press MENU button to display the main menu. Press ◀ / ▶ button to select SETUP in the main menu.



1. Press ▼ / ▲ button to select the option that you want to adjust in the SETUP menu.
2. Press Enter button to adjust.
3. After finishing your adjustment, Press Enter button to save and return to the previous menu.

OSD Language

Select an OSD menu language can be displayed. Default English is selected as menu language.


Press ▼ / ▲ / ◀ / ▶ button to select Menu Language.



TT Language

Press ▼ / ▲ button to select TT Language, then press Enter button to enter sub-menu.

Press ▼ / ▲ / ◀ / ▶ button to select TT language.

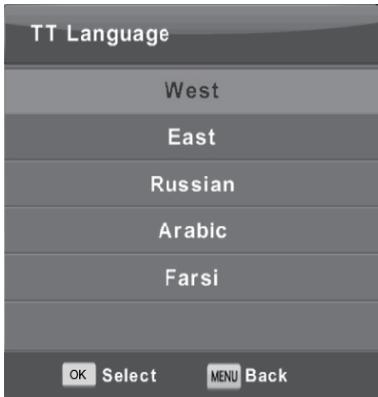

Audio Languages

Press ▼ / ▲ button to select Audio Languages, then press Enter button to enter sub-menu.

Press ◀ / ▶ button to select the primary of Audio Languages.

Press ▼ / ▲ / ◀ / ▶ button to select the Audio Languages.



Subtitle Language

Press ▼ / ▲ button to select Subtitle Language, then press Enter button to enter sub-menu.

Press ◀ / ▶ button to select the primary of Subtitle Language.

Press ▼ / ▲ / ◀ / ▶ button to select the Subtitle Language.



Hearing Impaired

Press ▼ / ▲ button to select Hearing Impaired, then press Enter button to select On or Off.

PVR File System

Press ▼ / ▲ button to select PVR File System, then press Enter button to enter sub-menu.

Press ▼ / ▲ button to select Check PVR File System , then press Enter button to enter. Then it will check the USB speed.



Aspect Ratio

Press ▼ / ▲ button to select Aspect Ratio, then press Enter button to enter sub-menu.
Press ▼ / ▲ button to select aspect ratio. (Available options are: Auto, 4:3,16:9, Zoom1, Zoom2).



Blue Screen

Press ▼ / ▲ button to select Blue Screen, then press Enter button to select On or Off.

First Time Installation

Press ▼ / ▲ button to select First time installation, then press Enter button to enter.

Reset

Press ▼ / ▲ button to select Reset, then press Enter button to enter sub-menu.

Software Update(USB)

Press ▼ / ▲ button to select Software Update (USB), plug your USB device in the USB slot, then press Enter button to update the right software.

HDMI CEC

Press ▼ / ▲ button to select HDMI CEC, then press Enter button to enter the sub-menu.



CEC Control

Press ◀ / ▶ button to turn the CEC Control on or off.

Audio Receiver

Press ◀ / ▶ button to turn the Audio Receiver on or off.

Device Auto Power Off

Press ◀ / ▶ button to turn the Device Auto Power on or off.

TV Auto Power On

Press ◀ / ▶ button to turn the TV Auto Power On on or off.

Device List


Press Enter button to show list of device.

Device Menu

Press Enter button to enter the menu of device.

EPG

Press EPG button on remote control to enter EPG menu page.

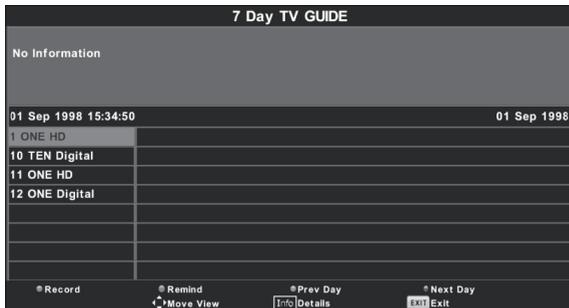

Press UP/DOWN navigation button to select preferred program.

Press LEFT/RIGHT navigation button to switch between left column and right column.

When a program is highlighted (cursor moved to Right column):

Press RED button to record program.

Press GREEN button repeatedly to set a reminder.

Press YELLOW button to display program guide of previous day.

Press BLUE button to display program guide of next day.



FAVORITE LIST

When viewing an available channel, press FAV button on remote control to enter Favorite List menu page.

Press UP or DOWN navigation buttons to select preferred channel.

Press OK button to confirm the selection.

NOTE:

To add a favorite channel, please refer to the operations of "DTV Mode > Channel > Programme Edit"



Quick select

When viewing an available channel, press OK button on remote control to enter Channel List menu page.

Press UP or DOWN navigation buttons to select preferred channel.

Press LEFT/RIGHT navigation buttons to select a channel group.

Press OK button to confirm the selection.

Screen Menu

Press MENU button to display the main menu .

Press ◀ / ▶ button to select SCREEN in the main menu.



Press Enter button to start adjusting H-Offset/V-Offset/Size/Phase automatically.

H-Offset

Adjust the horizontal position of the picture.

Press ▼ / ▲ button to select H-Offset, then press Enter button to enter sub-menu.

V-Offset

Adjust the vertical position of the picture.

Press ▼ / ▲ button to select V-Offset, then press Enter button to enter sub-menu.

Size

Adjust the display size.

Press ▼ / ▲ button to select Size, then press Enter button to enter sub-menu.

Phase

Adjust the horizontal interfering lines.

Press ▼ / ▲ button to select Phase, then press Enter button to enter sub-menu.


Position Reset

Press ▼ / ▲ button to select Position Reset, then press Enter button to enter.

Media OPERATION

Note: Before operating Media menu, Plug in USB device, then press INPUT button to set the Input Source to Media .


Press ▼ / ▲ button to select Media in the Source menu, then press Enter button to enter.

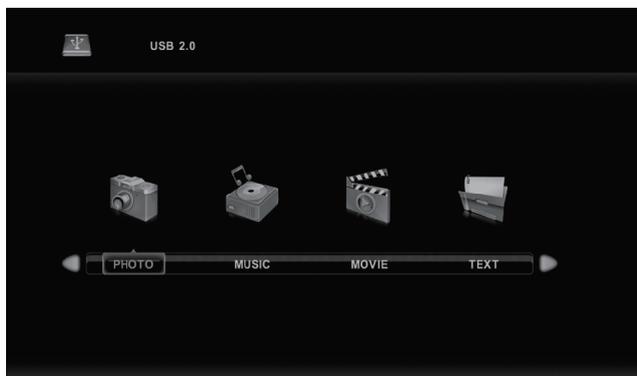

Press ◀ / ▶ button to select the option you want to adjust in the main Media menu, Media then press Enter button to enter.


Photo Menu

Press ◀ / ▶ button to select PHOTO in the main menu, then press Enter button to enter. Press Exit button to return to the previous menu and exit menu to quit.

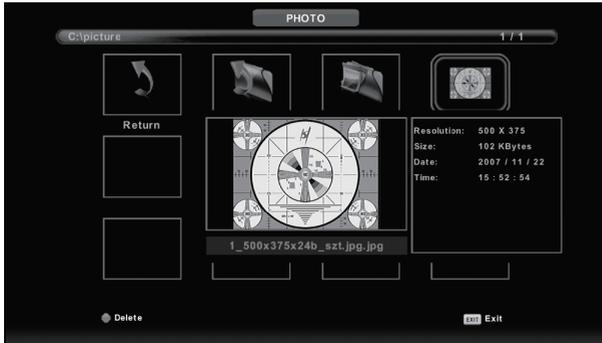



Press ◀ / ▶ button to select the file you want to watch in the file selecting menu, then press media button to display picture.

When highlighting the option you select, the file information will appear on the right and picture will be previewed in the center.

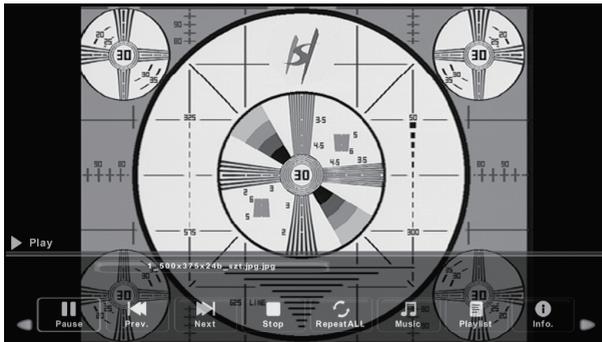


Music Menu

Press ◀ / ▶ button to select MUSIC in the main menu, then press Enter button to enter. Press Exit button to return to the previous menu and exit menu to quit.

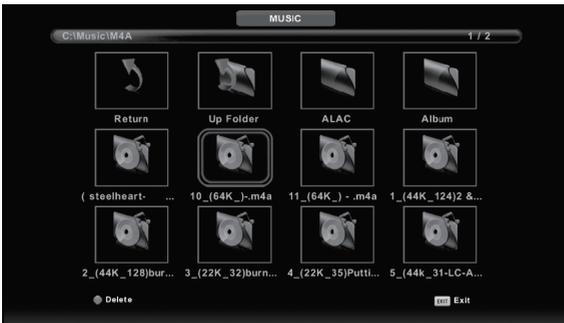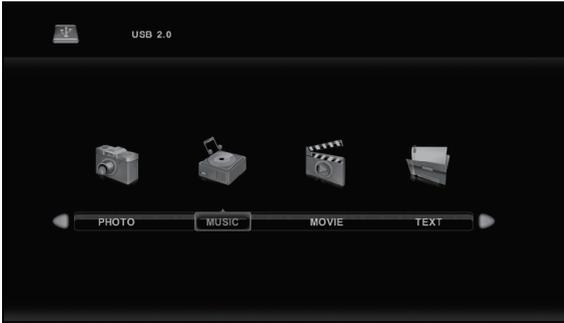


Press ◀ / ▶ button to select drive disk you want to watch, then press Enter button to enter. Press ◀ / ▶ button to select return option to the previous menu.

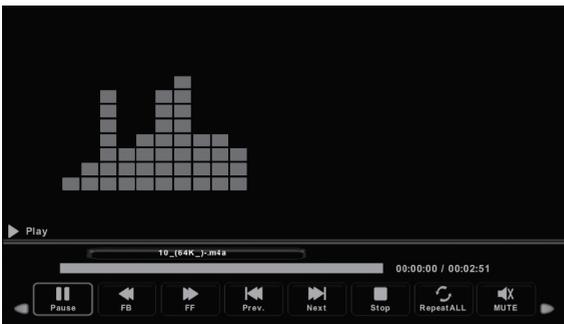

Movie Menu

Press ◀ / ▶ button to select MOVIE in the main menu, then press Enter button to enter. Press Exit button to return to the previous menu and exit menu to quit.

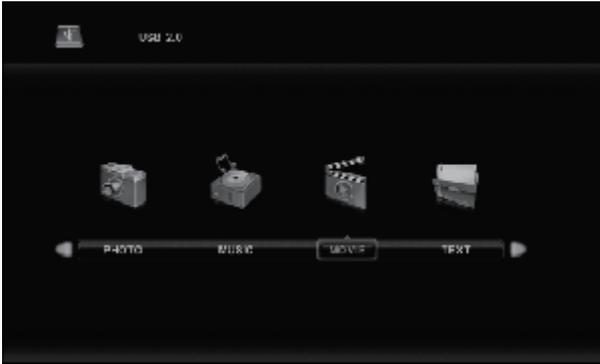


Press ◀ / ▶ button to select drive disk you want to watch, then press Enter button to enter.

Press media button to play the selected movie.


Press display button to select menu in the bottom you want to run, then press Enter button to operate.

Press Exit button to back to the previous menu and exit button to quit the entire menu.

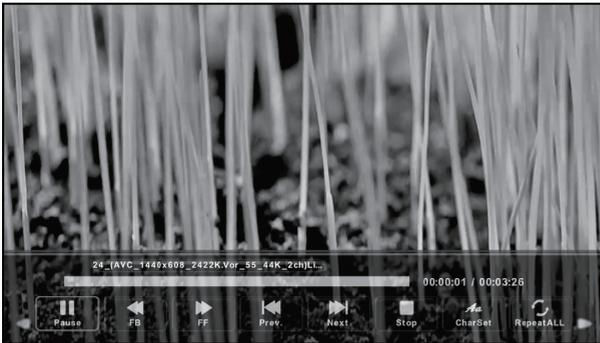


Text Menu

Press ◀ / ▶ button to select TEXT in the main menu, then press Enter button to enter. Press Exit button to return to the previous menu and exit menu to quit.

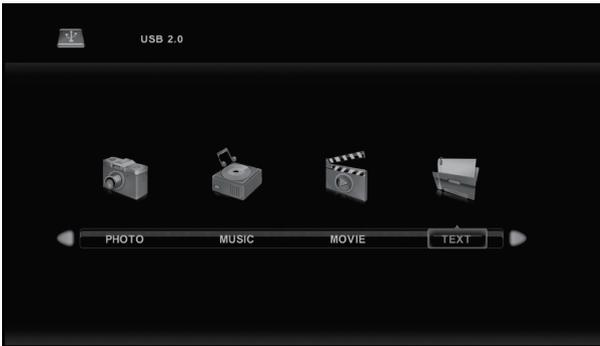

Press ◀ / ▶ button to select drive disk you want to watch, then press Enter button to enter. Press ◀ / ▶ button to select return option to back to the previous menu.

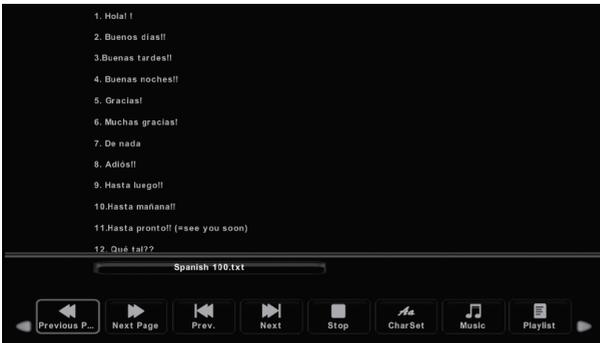

Multimedia Playback Format

Multimedia Categories	File Extension
Video	*.avi/MPEG(*.mpeg,*.dat,*vob) / MPEG-4(*.mp4) / TS(*.ts,*.trp,*tp) / MKV(*.mkv) / *.flv / VC-1 / WMV9(*.wmv,*.asf) / RMVB(*.rm,*.rmvb)
Music	*.mp3/AAC(*.aac,*m4a)/*.wav
Photo	*.jpg/*.jpeg
Text	*.txt

SMART TV

1.1 Welcome Page


When the Android Box is first powered up, Welcome Page will be shown. It will help you to configure the device.




If you want to skip this wizard, press "HOME" key
If you have finished this wizard once, it will not auto-open again.

1.2 Setup page

Select Language:

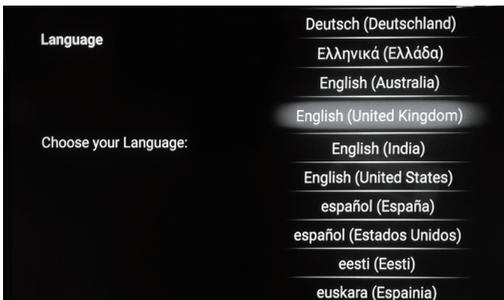


Select network type:

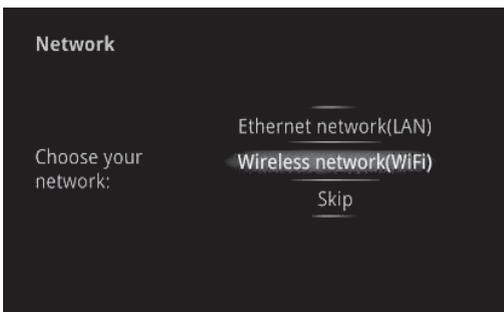


If you do not want to choose your network, you can skip this step by press "Skip", You will also find the network settings in function "Settings"

Select Wireless network(Wi-Fi)

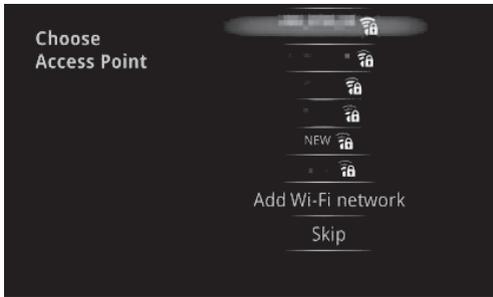


If choose 'Wi-Fi', select a Wi-Fi Access Point
If choose 'Ethernet', the screen will show Ethernet connection status

Select Ethernet network(LAN)

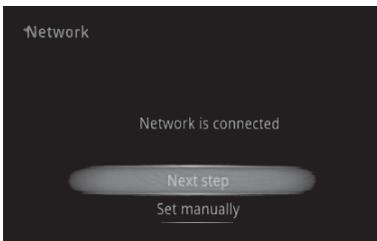

Configure Ethernet manually

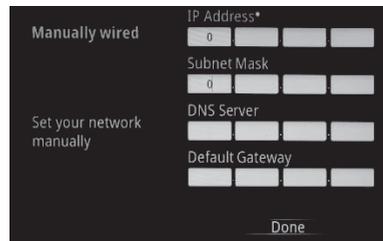


Set up the correct Time Zone



If network is not connected, setup the date and time manually


Setup Date/time manually

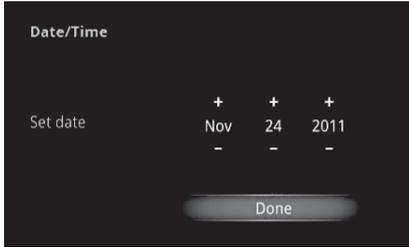

Configuration




Adjust screen size, using the arrow buttons on remote control

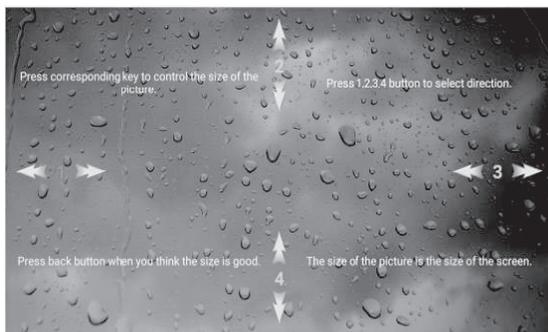


User can setup the Language, Network, Time Zone, Date/Time, and adjust screen size in this part.

2.1 Main Launcher

Press the arrow buttons ◀ / ▶ to select the sub-screen and press ▼ into sub-screen.

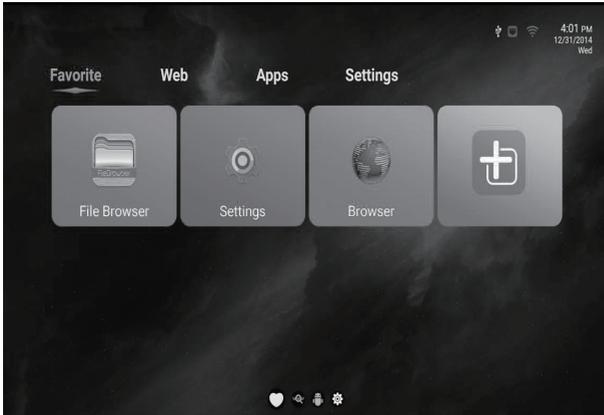

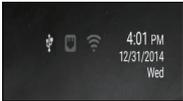FUNCTION	DESCRIPTION
	Main Launcher tab contains : Time information(You can set time information at settings) ; USB/Ethernet/ Wifi function status(White for working, gray for standby)
	All App menu can view and select more apps.
	The Browser tab contains bookmarks and search bar. It allows you enjoy your time on surfing Internet. You can search for information and watch online TV etc.
	Add you favorite APP to this directory.
	The Settings screen contains most of the customizing and configuration options, such as language and network settings.
	Create necessary APP shortcuts to the main launcher.

2.2 Settings

FUNCTION	DESCRIPTION
<p>Wifi-settings</p> 	<p>Check to turn on Wi-Fi so can connect to Wi-Fi networks Check to receive an alert when an open Wi-Fi networks becomes available</p>
<p>Ethernet</p> 	<p>Turn on/off the Ethernet Ethernet settings: IP address , Subnet Mask, DNS Server, Default Gateway and etc</p>
<p>Advance settings</p> 	<p>Contains all of the settings</p>
<p>Factory reset</p> 	<p>Restore factory default</p>
<p>App manage</p> 	<p>Management application</p>
<p>Language & input</p> 	<p>Select language Android keyboard</p>
<p>System updates</p> 	<p>Local update Update system via update.zip from USB flash drive or micro SD card Net update OTA network upgrade</p>

<p>Date & Time</p> 	<p>Automatic date & time (Need network) Set date Set time Select time zone User 24-hour format Select date format : dd/mm/yyyy ;mm/dd/yyyy ; yyyy/mm/dd</p>
<p>About device</p> 	<p>Android version Build number</p>

2.3 Applications

Install from USB Flash Drive

1. Open the “File Browsers”
2. Choose your USB flash drive or any other mass storage’s folder
3. Find you application, and press it
4. Press the install button
5. You can find the application in tab “Apps” after installation

Download & install from Browser

1. Open the Browser.
2. Press search key and input your website address
3. Download the APK file which you like if there is a link for download
(If you have problems with downloading, please make sure there is, enough space in your internal storage)

Install from AppInstaller

1. Open the AppInstaller
2. Find the icon of the application, and enter it
3. Press the install button
4. You can find the application in tab after in stallation.

SPECIFICATIONS

TV System	PAL DVB-T2-C
Maximum	1920x1080
Brightness	260 CD/m ²
Static Contrast	1200:1
Response Time	8ms
Consumption	108W
Power Supply	AC100-240V – 50/60Hz
Connectivity	Composite Video Input Component Video Input PC Video Input (VGA) PC Audio Input HDMI input x 2 RF Antenna Input RJ 45 Headphones Output Coaxial Output
Data Interface	USB
Supported System Files	FAT32 and FAT16

Remote Control

Signal Type	Infrared
Control Distance	8 meters
Control Angle	30° (Horizontal)
Power Supply	AAA 1.5V x 2



PRODUCT DISPOSAL

Do not dispose this product as unsorted municipal waste. Collection of such waste must be handled separately as special treatment is necessary.

Recycling facilities are now available for all customers at which you can deposit your old electrical products. Customers will be able to take any old electrical equipment to participating civic amenity sites run by their local councils. Please remember that this equipment will be further handled during the recycling process, so please be considerate when depositing your equipment. Please contact the local council for details of your local household waste recycling centres.

TROUBLESHOOTING

Problem	Solution
No power	Insert the power plug securely into the power outlet.
No picture	Ensure that the equipment is connected properly.
Distorted or no sound	<ul style="list-style-type: none"> • Ensure the equipment is connected properly • Ensure that the input setting for the TV and stereo system are correct. • Adjust the master volume to a suitable volume by pressing V+/V- button. • Check audio settings are correct. • Check set isn't muted. • Unplug headphones • Check the antenna connection.
Remote control not working	<ul style="list-style-type: none"> • Check the batteries are installed with the correct polarities. • Replace the batteries with new, fully charged ones. • Point directly at the remote sensor on the TV and try again. • Operate at a distance of no more than 6m. • Remove any obstacles between the remote control and the sensor.
Buttons on the TV don't do anything	Disconnect the power plug and then reconnect it. (The unit may not be operating properly due to lightning, static, or other factors.)
Poor picture or no picture	<ul style="list-style-type: none"> • Adjust the indoor aerial, use an amplified aerial or external digital antenna. • Have the DTV antenna checked or installed by a professional installer • Move anything that may cause interference. • Retry Auto tuning the unit. • Try another channel.
Noise or other interference	Electronic equipment near the unit may be causing interference. Relocate the unit or move the equipment.

electriQ UK SUPPORT

Complete online support form on www.electriQ.co.uk/support

Service Line: 0871 620 1057

Office hours: 9AM - 5PM Monday to Friday

www.electriQ.co.uk

Unit 2, The Nursery

Berristow Lane South Normanton

Derbyshire, DE55 2FX