

Summit - 

Ultra Energy Efficient  
Dehumidifier



## **Congratulations!**

You have purchased the very latest in dehumidification technology. Your new EcoAir high efficiency room appliance will give you many years of dependable service. Many features have been built into your EcoAir portable appliance to assure quiet operation, functional controls and the most economical operation.

<b>Key Features</b> .....	<b>Page 3</b>
<b>Quick Start Up</b> .....	<b>Page 4 - 5</b>
<b>Empty Water Tank Instructions</b> .....	<b>Page 6</b>
<b>Continuous Drainage Instructions</b> .....	<b>Page 7</b>
<b>Maintenance</b> .....	<b>Page 8</b>
<b>Troubleshooting</b> .....	<b>Page 9</b>
<b>Specifications</b> .....	<b>Page 10</b>
<b>Appendix</b>	

***App 1. Welcome***

***App 2. Guarantee Card***

***App 3. BS Plug Wiring***

***App 4. Important Safety Instructions***

**When using this appliance in European countries, the following information must be observed:**

Do not dispose of this product as unsorted waste.

It is prohibited to dispose of this appliance as domestic household waste. For disposal:

 
- Contact your local council
- The manufacturer will take back the old appliance for disposal when you replace it with a new product.
- Old products contain valuable resources, which should be recycled as scrap metal.




**WEE/EC2601UR**

Wild disposal of waste in forests and landscapes endangers your health when hazardous substances leak into the ground-water and find their way into the food chain.

# KEY FEATURES

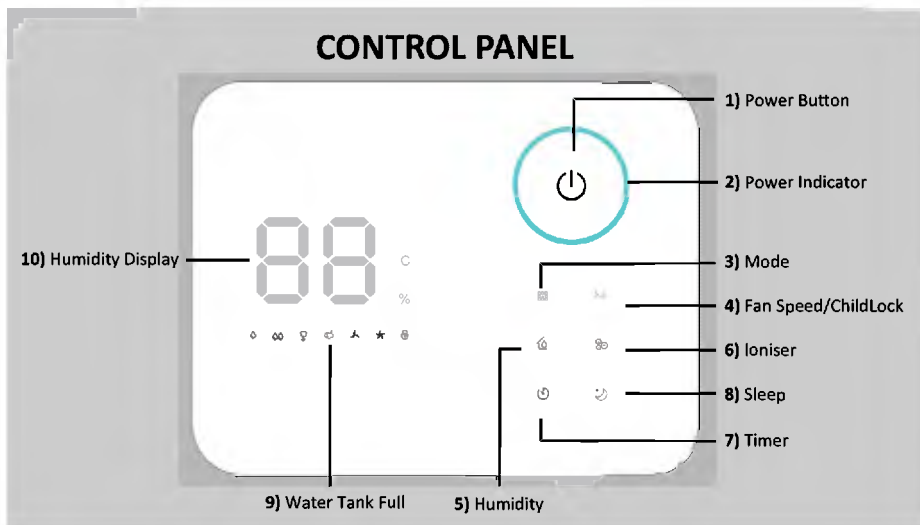

1. **Power Button** - Turns dehumidifier **ON** or **OFF**. The dehumidifier is also pre-set to operate on high fan speed and on One Water Drop Mode. To turn off the dehumidifier press the power button, the compressor will stop, but the fan will continue to run for a further 10 seconds.
2. **Power Indicator** - Once turned on one of 3 coloured lights will appear indicating the current ambient humidity in your environment. Coloured indicators for your ambient humidity; Blue denotes < 40%RH, Green denotes 40 - 60%RH, Red denotes > 60%RH.
3. **Mode Button** - Pre set modes, select 1 Water Drop for a target of 60%RH, 2 Water Drops for 40%RH and Laundry mode for laundry drying or continuous running.
4. **Fan Mode/ ChildLock** - Select for High or Low fan speed. Press and hold this button for 3 seconds to toggle the child lock function.
5. **Humidity Button** - Hold down for 5 seconds, to display the **ambient temperature**. Tap to set your desired humidity level—each tap will increase the humidity by 5%RH up to maximum of 95%RH.
6. **Ioniser** - Tap this button to turn the Ioniser function on or off.
7. **Timer key** - Select timer ON or OFF. The timer can be set on hourly intervals from 1 to 24 hours.
8. **Sleep Mode** - Sleep mode will turn the sound and display light off and turn on the quiet mode.
9. **Water Full Light Indicator** - Lights up when the water tank is full, missing or inserted incorrectly.
10. **Humidity Display Panel** - The display on the dehumidifier by default shows the **ambient humidity** level whilst the dehumidifier is running. It will also show the ambient temperature if you hold down for 5 seconds (see 5 above).

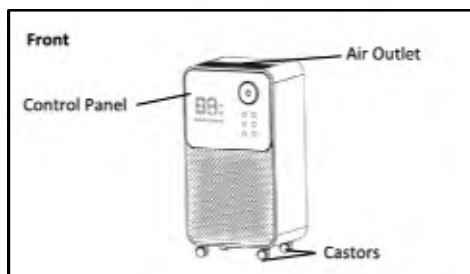 


# QUICK START UP

## STEP 1 - WHERE TO POSITION YOUR DEHUMIDIFIER?

After unpacking your dehumidifier, place it upright to allow the compressor to stabilise for at least 4 hours before use.

Ensure the dehumidifier is a safe distance away from a wall or furniture, away from direct sunlight.

 
**TIP:** Position the dehumidifier in the dampest room or somewhere central like a landing or a hallway. As long as the internal doors are open the excess moisture from all of the rooms in the house will migrate naturally towards the dehumidifier and be processed.

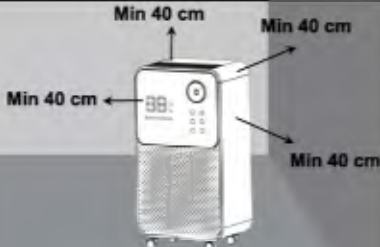

## STEP 2 - CAUTION - AVOID USING IN



 - Areas where ambient temperature falls below 5°C.
- Small confined area i.e. broom cupboard, boiler room, unventilated rooms etc.
- Close proximity to a heat source such as heater, tumble dryer, cooker.
- Dusty or building sites or an industrial environment where particles can clog up the filter or internal components. This will cause the dehumidifier to malfunction, voiding your guarantee.

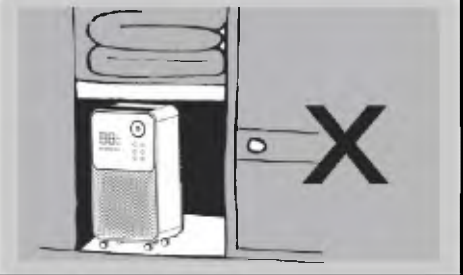

## STEP 3 - ON/OFF



### TO OPERATE SUMMIT

- Always place the dehumidifier in an upright position on an even level surface.
- Plug the dehumidifier into the mains socket, the standby mode indicator will remain on whilst the dehumidifier is plugged in to the mains.
- The dehumidifier performs best at a minimum ambient temperature of 15°C. Where ambient temperature is below 15°C it will need to go into defrost mode periodically to preserve the life of the compressor.
- Press the ON/OFF button to operate the dehumidifier.



## STEP 4 - 1 WATER DROP / 2 WATER DROP



1 Drop

Select for a Pre-set target humidity of 60%. The humidity setting can be manually adjusted by pressing the humidity button.



2 Drop

Select for a Pre-set target humidity of 40%. The humidity setting can be manually adjusted using the humidity button.

### Tip:

The dehumidifier is pre-set to 60%RH. It will not immediately operate if your environment is below 60%RH. Change the humidity setting to below the ambient humidity to begin operation.

# QUICK START UP

## STEP 5 - HUMIDITY BUTTON



Select for the desired humidity.  
touch this button to change the set humidity.

The set humidity range is 20% - 25% - 30% - 35% - 40% - 45% - 50% - 55% - 60% - 65% - 70% - 75% - 80% - 85% - 90% - 95%.

There is an active humidistat which shows the actual humidity level (%RH) in the environment when the dehumidifier is running.

The display will show the actual humidity in the room a few seconds after the humidity level is set on the control panel.

## STEP 7 - TIMER

### SETTING TIMER OFF

Press the "TIMER" Key to select your desired running time



- Whilst the dehumidifier is in operation press the timer button to set the dehumidifier to turn off after a set interval between 0-24hrs (1hr Increments)

- Once set, the timer LED will remain on until the set interval is met and the dehumidifier turns

- Once the dehumidifier is switched off, wait 3 minutes before resuming operation.

### SETTING TIMER ON

#### Pre set Timer Function:

- Whilst on Standby mode (--) press the timer button to set the dehumidifier to come on after a set intervals between 0-24hrs.
- So long as the dehumidifier is plugged into the mains, the dehumidifier will switch ON after the selected time has lapsed.
- The dehumidifier will operate at the selected settings before the dehumidifier was placed on standby mode. It will continue dehumidifying until the humidity setting is reached, the settings are changed, water tank is full or unit switched OFF.
- If the set humidity is higher than the ambient humidity the dehumidifier will turn on however will not dehumidify the air until the humidity settings are adjusted.

**Note:** Wait 3 minutes before resuming operation. After the dehumidifier has stopped (other than tank full) it will not restart for approximately 3 minutes. This is to protect the dehumidifier and is not a fault. Operation will automatically restart after 3 minutes.

## STEP 6 - LAUNDRY MODE



- Press the mode button until the Laundry Symbol appears on the display screen.
- The dehumidifier will operate continuously at its maximum dehumidification settings until the setting is changed or the water tank is full.
- Whilst in Laundry mode the humidity setting can not be changed.

**Note:** If connected to a hose pipe for continuous drainage the dehumidifier will continue to run on its maximum dehumidification settings.

## STEP 8 - TANK FULL INDICATOR



- Indicator lights up when water tank is full or incorrectly inserted. The dehumidifier will automatically switch off. The indicator light will turn red and the dehumidifier will sound 3 beeps.
- Remove water tank, empty and reinstate correctly.

 
#### Note:

- During Sleep mode the 3 beeps will not sound.
- When the water tank is full or removed, the controls are disabled.


## USEFUL INFORMATION

- When you first use your dehumidifier set to laundry mode to reduce the humidity quickly to your desired level. As the humidity settles, use the low fan setting.
- When you set the Timer Off, the dehumidifier may turn off prior to the set interval if it has reached the set humidity.
- To cancel the timer setting press the Timer button until you reach "00".
- **Auto Restart** - Once the power is restored after a power failure, the appliance will continue to operate at the selected settings prior to the power failure.
- **Auto Defrost** - When frost builds up on the evaporator coils, the compressor will cycle off and the fan will continue to run until the frost disappears.
- **Auto shut off** - The dehumidifier will automatically switch off when the tank is full or removed and when humidity setting is reached.


# EMPTYING THE WATER TANK

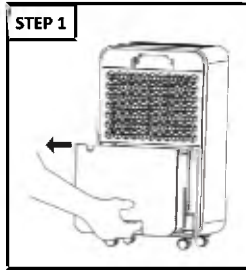

Slide water tank out

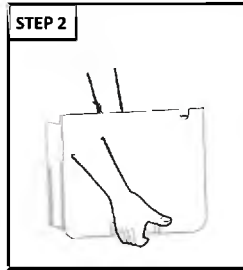 

Lift the water tank

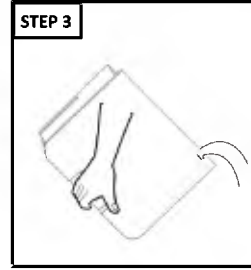 




Pour the water away

1. The Water Full Indicator lights up when the water tank is full and the dehumidifier stops operating.
2. Do not move the dehumidifier or remove the water tank when the dehumidifier is running, as water may leak; causing damage to the dehumidifier or an electric shock.
3. Before removing the water tank leave the dehumidifier to stand for approximately 10 minutes to ensure all water has dripped into the water tank.
4. To remove the water tank, slide it out gently by gripping the water tank from bottom handle and pull out carefully.
5. Pour the water away by tilting the water tank, (see step 3 picture) to the right side. Clean the water tank if needed.
6. Reinsert the water tank to the correct position, as soon as possible to prevent water dripping from the dehumidifier.

## NOTE :

   - Clean the water tank with clean water if needed. Do not use detergent, solvent, abrasive or hot water to avoid damaging the water tank or float.
- Do not remove or damage the float in the water tank or the dehumidifier will not operate properly.
- The Water Full light indicator illuminates if the water tank is not correctly in position.
- Do not tilt the dehumidifier when removing the water tank.
- If the water tank is removed whilst the dehumidifier is running the fan will continue to run for 3 minutes.

# CONTINUOUS DRAINAGE

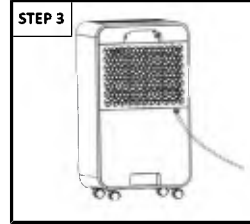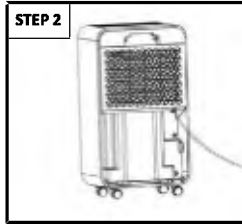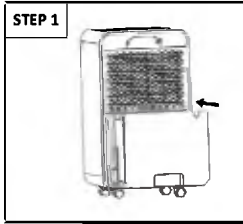


You may use a hose with an inner diameter of 9.5mm for continuous drainage (supplied):

1. Remove the tank from the back of the dehumidifier (Step 1)
2. Insert the drainage hose into the black drain outlet. The hose must lead to an appropriate drain at a downward slope with no sharp bends. (Step 2)
3. Position the tank back into position (Step 3)

## NOTE:

 - Ensure the water tank and continuous drainage hose are well fitted in position before commencing operation.

## ATTENTION

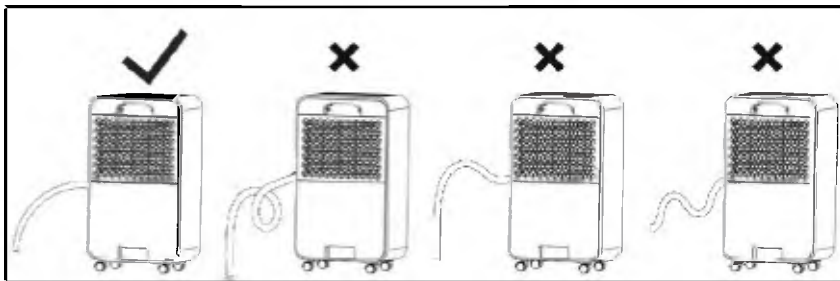


When using the continuous drainage option, place the dehumidifier on a level surface and make sure the hose is clear of any obstructions and is directed downwards.

Avoid placing the dehumidifier on an uneven surface and improper hose installation as it may result in the unit shutting off. Empty the water tank if shut off occurs, then check dehumidifier location and hose for proper setup.

# MAINTENANCE
 
## STEP 1 - CLEANING YOUR PRE FILTER

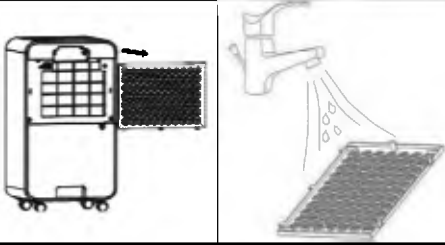


1. Turn OFF the dehumidifier, to remove the filter press the two clips gently and pull out the filter.
2. Clean the filter lightly with a brush or vacuum cleaner or warm mild soapy water. Allow the filter to air dry fully.
3. Replace the filter back into position.
4. If the filter is covered with dust, the airflow and the performance of the dehumidifier will be affected. Check the filter periodically to ensure all dust is removed.

**Tip:** Clean your filter every 2 weeks to keep your air clean and prolong the life of your dehumidifier. The frequency will depend on the conditions of operation.

## STEP 4 - CLEANING YOUR DEHUMIDIFIER

 1. Turn the dehumidifier OFF, wait for the fan to stop and unplug the dehumidifier from the socket.

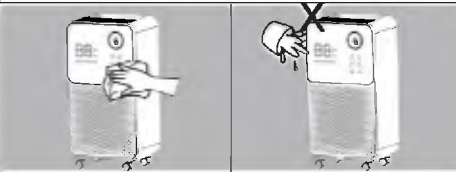


2. Clean the surface with a soft damp cloth.
3. Dry thoroughly with a dry towel after cleaning.
4. Empty the water tank. Allow water tank to drip dry or dry with a cloth.
5. Please take care when cleaning or drying around the float area.

### Caution:

 - Do not wash the dehumidifier or immerse in water.
- Do not let water drip into the air inlet or outlet.

## STEP 2 - REPLACING YOUR 3 IN 1 CARBON FILTER

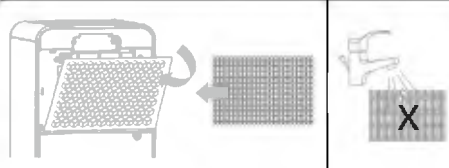

Carbon Filter can be purchased for this dehumidifier. Press the two clips gently to open a gap and insert the carbon filter in the frame filter. Do not clean the Carbon Filter with water!

## STEP 3 - REPLACING YOUR FILTER



It is recommended that the pre filter is replaced every year and the carbon filter is replaced every 6 months for optimal performance and hygiene standards. To purchase a replacement filter please visit:



[www.ecoair.org](http://www.ecoair.org)

## STEP 5 - STORING YOUR DEHUMIDIFIER

1. Turn OFF the dehumidifier, wait for the fan to stop and unplug the dehumidifier from the power socket.
2. Leave the dehumidifier to drain for approximately one day. Clean and dry the water tank.
3. Clean the filter and the dehumidifier. Cover the dehumidifier to prevent it from gathering dust. Store upright in a cool dry place.
4. Do not expose to direct sunlight.



# TROUBLESHOOTING

PROBLEM	REASON	SOLUTION
 <b>No Power</b>	Dehumidifier is not plugged in or there is no power supply	Plug the dehumidifier into mains and switch plug ON. Check the main power supply
	Dehumidifier has reached its pre-set level or tank is full.	The dehumidifier automatically turns off when either condition occurs. Change to a lower humidity setting or empty the tank and replace properly.
	Water tank is not in the proper position.	The water tank must be in place and securely seated for the dehumidifier to operate.
	Power failure/Controls cannot be set	There is a protective time delay to protect the compressor. For this reason, the dehumidifier may not start normal dehumidifying for 3 minutes after it is turned back on.
<b>The Dehumidifying function does not work</b>	Filter clogged	Check and clean or replace the filter
	The air inlet or outlet is blocked or covered	Remove obstructions
 <b>Water Full Light On</b>	Water tank is full or installed incorrectly	Empty water tank or re-install correctly
	Water float out of position	Restore water float back into position
	Dehumidifier on uneven surface or water tank fitted incorrectly	Ensure the dehumidifier is on a flat, even surface, use a spirit level to check, remove tank and replace correctly
<b>Water Leaking</b>	Damaged water tank	Remove the water tank, fill with water and place on a hard even surface to test for leaking.
	The continuous drainage is clogged or loose. Dehumidifier operating in colder environment	Check the continuous drainage hose and its connection Ensure room is within operating temperatures
<b>Not Collecting Water</b>	Did not allow enough time to remove moisture	When first installed, allowed at least 24 hours to maintain the desired dryness
	Set humidity is reached/ Low humidity	Readjust the humidity settings
	Room is very cold or very dry for the current settings	Readjust the humidity setting or increase the room temperature Check room temperature and humidity levels
	Filter dusty	Clean the air filter or replace it
	Room Temperature is too hot	Open the window or door to ventilate
Room Temperature is too cold	Increase heat in the room	
<b>Noisy</b>	Water tank or filter fitted incorrectly Dehumidifier on uneven surface	Check and refit the water tank or filter Check dehumidifier is on an even level surface
	There is sound created when air is passing through the dehumidifier.	This is normal
<b>Frost Appears on Coils</b>	Dehumidifier has been recently turned on, or room temperature is below 5°C	This is normal. Frost will usually disappear within 60 minutes. Do not operate the dehumidifier in temperatures below 5°C
<b>Dehumidifier Runs Too Much</b>	Area to be dehumidified is too large/ High Humidity	The capacity of your dehumidifier may not be adequate.
<b>Humidity Display shows "LO"</b>	Environmental humidity is below 35%	Operation will begin when the humidity rises above 35%
<b>Humidity Display shows "H1"</b>	Environmental humidity is above 95%	The environment has a High humidity
<b>Humidity Display shows "CL"</b>	The environmental temperature < 5°C	Increase the environmental temperature to continue operation
<b>Humidity Display shows "CH"</b>	The environmental temperature > 38°C	Decreased the environmental temperature to continue operation

In the unlikely event of a problem with your product, please refer in the first instance to:

**ECOAIR TECHNICAL SUPPORT**

[www.ecoair.org/support](http://www.ecoair.org/support)

# SPECIFICATIONS

MODEL	Summit-S	
Temperature Range	5°C ~ 35°C	
Dehumidification Extraction Rate	30°C, 80%RH	12 Litres/Day
Power Supply	220 - 240V~50Hz	
Power Consumption	30°C, 80%RH	190W
Water Tank Capacity	2 Litres	
Noise	≤36 dB(A)	
Air Circulation	120m <sup>3</sup> /hr	
Refrigerant /Charge	R134a/ 105g	
Net Weight	12 Kg	
Gross Weight	13 Kg	
Net Dimension (W x H x D)	280mm x 500mm x 200mm	
Gross Dimension (W x H x D)	330mm x 565mm x 250mm	

 
# WELCOME

Thank you and congratulations for choosing an EcoAir dehumidifier to help you control the Relative Humidity within your home. Inside this manual you will find many helpful tips on how to use and maintain your dehumidifier efficiently. Just a little preventative care can save you money and prolong the life of your dehumidifier.

The purpose of the dehumidifier is to remove the excess moisture in the air by detecting the humidity level in the room. By keeping humidity within recommended levels, a dehumidifier combats household damp, mould and mildew. Dehumidifiers can help to reduce the symptoms of asthma, allergies, and other respiratory health conditions. They can also be used to help dry laundry quicker and control moisture-based damage (such as the aftermath of flooding, leaks or rising damp) to valuable belongings and furniture.

## HUMIDITY GUIDE

There will always be water vapour in the air. The water vapour (or commonly known as moisture) in the air is measured in % Relative Humidity (RH). RH is the ratio of the actual amount of water vapour in the air to the amount it could hold when saturated expressed as a percentage. Too much or too little moisture in our homes can be unhealthy and uncomfortable. The optimum humidity level is between 40% and 60% (RH) where we feel most comfortable.

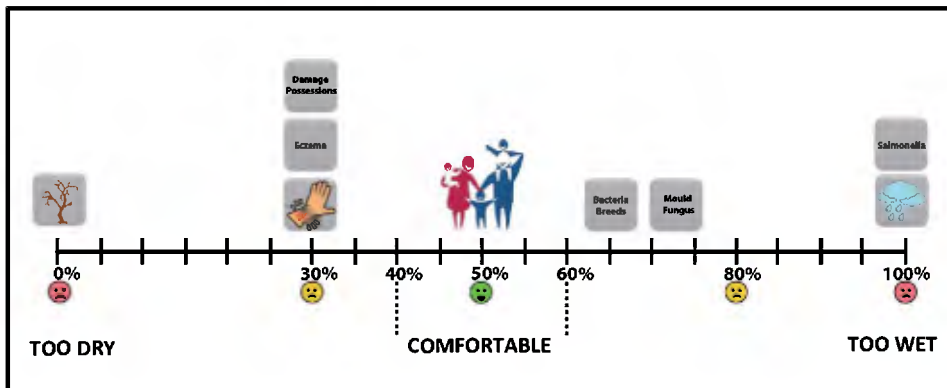

## LOW HUMIDITY

Low humidity indoors causes excess drying which can trigger skin irritations such as eczema, chapped skin and dry nose. It can also damage possessions, such as wooden furniture, musical instruments and artwork by drying it out too much.

## HIGH HUMIDITY

High humidity indoors causes damp and condensation. The damp left by condensation can damage plaster, wall paper, furniture, vehicles, timber windows, doors and clothes. It can be harmful to our health when bacteria thrives, causing mould and fungus.

## MAINTAINING SAFE LEVELS OF HUMIDITY

It is important to maintain a consistent humidity range to preserve furniture, paintings, door and window frames. High humidity causes swelling, corrosion, softening of glues and paint. Low humidity causes shrinking, cracking, warping of wood surfaces and gaps in joints, doors and windows. Frequent changes in humidity levels can accelerate damages to property and belongings.

## CONDENSATION

The warmer the air, the more moisture the air can hold than colder air. So, when the air inside the house becomes colder, the moisture contents in the air becomes saturated, and gets heavier resulting in moisture concentration on the coldest parts of the house particularly on the windows, bathroom mirrors and walls. This is condensation, caused by a sudden increase in humidity, cooking, showers, drying clothes, inadequate ventilation and poor thermal insulation.

Condensation does not disappear instantly even with the dehumidifier on. Where excessive condensation appears for example, on your windows, you may want to open your windows to expel the excess humidity for several minutes. It will take a while for the condensation to generally increase the humidity in the room. Once the humidity level in the room around the dehumidifier is increased above the level you have set on the dehumidifier, it will then begin the dehumidification process.

# GUARANTEE CARD

EcoAir guarantees this product to be free from defects in materials and workmanship for a period of (2) years from the date of purchase. Coverage is valid only with proof of purchase.

## Warranty Terms and Conditions

The conditions below apply to our warranty. They do not affect your statutory rights or the obligations of your retailer and your contract with them.

We provide warranty cover for this appliance subject to the following conditions:

1. We will rectify defects affecting the appliance which are clearly attributable to material and/or manufacturing faults, provided they are reported immediately after being identified within the Warranty Period supported by proof of purchase.
2. Service may not be available to all the islands around the UK. Please check with your retailer or contact our customer service department.
3. The warranty will not extend to consumables such as air filters.
4. Warranty liability will not be triggered by minor variances from nominal features which are of no significance to the appliance's value or fitness for purpose, nor damage caused by wear and tear, exceptional environmental conditions and inappropriate operating conditions.
5. No warranty liability will be accepted:-
  - a. If the defects stem from transport damage for which we are not responsible.
  - b. Improper installation and assembly or non-compliance with the safety regulations and warnings given in the operating instructions.
  - c. Improper use, to also include poor maintenance caused by insufficient aftercare or cleaning and failure to observe operating or assembly instructions or use with improper voltage recommendations.
  - d. Use in a non-domestic environment, to include appliance for rental.
6. No rights are given under this warranty to a person acquiring the appliance second hand.
7. We reserve the right to invalidate the warranty:-
  - a. If repairs or other interventions are performed by persons not authorised by us.
  - b. If our appliances are fitted with non-original spare parts, extras or accessories.
  - c. If our appliance has been altered and damaged by owner or third parties.
  - d. In the event of abuse (whether physical or verbal abuse) towards any member of staff.
8. Warranty provision will be free of charge and we will decide whether this will take the form of a repair or the replacement of the appliance. Small appliances that can be reasonably transported or posted may need to be handed over or shipped to our customer service centre. A purchase receipt must be presented in each case. Replaced parts pass into our ownership.
9. Under no circumstances shall the application of this warranty give rise to the complete replacement of the appliances. In the event of a replacement appliance being supplied at our discretion, we reserve the right to charge an appropriate monetary offset in respect of the period of use already enjoyed.
10. The provision of services under warranty neither extends the term of the warranty nor sets in motion a new Warranty Period. The Warranty Period for spare parts fitted ends with the expiry of the warranty on the appliance as a whole.
11. EcoAir shall not be liable for loss of goods, loss of use, or any special, indirect, consequential or pure economic loss, costs, damages, charges or expenses.
12. Our Warranty service is on a return to base basis.
13. This unit is only for domestic use.
14. The Customer acknowledges and agrees that details of the Customer's name, address and payment method will be held and used by EcoAir to provide the services and to send to the Customer further information. EcoAir may disclose your information to third parties and agents in order to perform the services.


These warranty conditions apply to appliances purchased in the United Kingdom. If appliances shipped to other countries feature the appropriate technical conditions (e.g. voltage, frequency, gas-types etc.) for the climatic and environmental conditions in the country concerned, the terms of the warranty will apply, provided a local customer service network exists. Appliances purchased outside the United Kingdom are subject to the warranty conditions published by the appropriate local representative office of that country. These can be obtained via the specialist dealer from whom you bought appliance.

# BS PLUG WIRING

**Wiring Instructions:** Should it be necessary to change the plug, please note the wires in the mains lead are coloured in accordance with the following codes:

**BLUE - NEUTRAL**  
**BROWN – LIVE**  
**GREEN AND YELLOW - EARTH**

 
In the event that the colours of the wires in the mains lead of this appliance does not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

1. The **BLUE** wire is **NEUTRAL** and must be connected to the terminal which is marked with the letter **N** or coloured **BLACK**.
2. The **BROWN** wire is **LIVE** and must be connected to the terminal which is marked with the letter **L** or coloured **RED**.
3. The **GREEN/YELLOW** is **EARTH** and must be connected to the terminal which is marked with the letter **E** or  or coloured **GREEN** or **GREEN/YELLOW**.
4. Always ensure that the cord grip is positioned and fastened correctly.

If a **13A (BS 1363)** fused plug is used it must be fitted with a **13A** -fuse. If in doubt consult a qualified electrician.

## Wiring for a 13 Amp Plug (BS1363)

Please note. The Earth Terminal is marked with the letter E or  Earth Symbol.

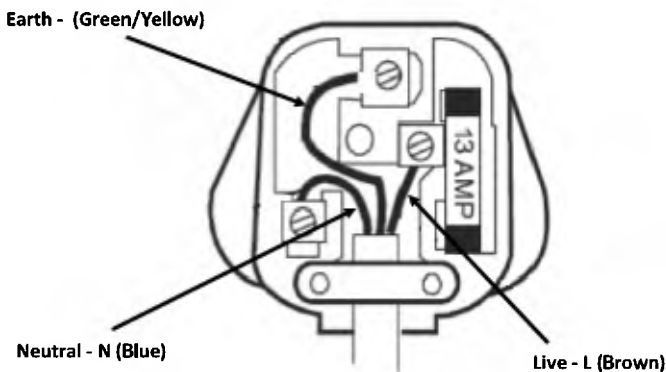

# IMPORTANT SAFETY INSTRUCTIONS

**PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE OPERATING.**

## **WARNING!**

This appliance is intended for domestic use only. It is not suitable for outdoor use. Any other use is not recommended by the manufacturer and may cause fire, electrical shocks or other injuries to person or property. EcoAir cannot be held liable for damage resulting from incorrect or improper use or operation.

**When using electrical appliances, basic safety precautions should always be followed:**

1. Do not operate the appliance if there is a damaged cord, plug or after it malfunctions if it has been dropped or damaged in any way. Arrange for the appliance to be examined or repaired by an authorised technician.
2. Always keep the appliance in an upright position to avoid any damage. Place the appliance on an even level surface during operation.
3. Ensure the household voltage matches the rated specification for the appliance before use.
4. Ensure that the air inlets and outlets are not blocked or covered. Do not insert fingers or any objects into the air inlet or outlet openings.
6. Do not place the unit too close to curtains or any other objects, keep minimum distance of 40cm.
7. Never place anything on top of the appliance and do not cover while in use.
8. To protect against electric shocks, do not immerse or spray the appliance or any of its parts in water.
9. Never unplug the power cord without switching OFF the appliance first.
10. Always unplug the appliance when not in use or when moving location. To disconnect the appliance from the power supply, grip the plug and pull from the power socket. Never pull by the cord.
11. Always empty the internal water tank before storing the appliance away.
12. Close supervision is necessary when the appliance is used in the presence of children and pets.
13. Do not run power cord under carpeting, or cover with rugs or runners. Arrange the cord away from areas where it may become a trip hazard.
14. Never operate or store the appliance in direct sunlight.
15. Repairs must be carried out by an authorised technician, failure to do so may cause damage to the appliance or injury to persons or property and will void the warranty. Always insist on original spare parts.
16. Do not connect via an extension lead or Multi-socket plug. Extension leads and Multi-socket plugs do not guarantee the required safety of the appliance (e.g. danger of overheating).
17. Do not use the appliance without the air filter. Check and if necessary clean the air filter every two weeks.
18. Do not leave the appliance unattended over a long period of time. Leaving your appliance unattended for long periods of time with an uncleaned filter may lead to a fire hazard.
19. Do not use the Laundry Mode function over a long period of time.
20. At the end of its working life dispose of the appliance responsibly, in accordance with local regulations.
21. Before cleaning or maintaining the appliance, please turn off the power and unplug.
22. Do not insert or pull out the power plug with wet hands.
23. Do not operate heating equipment around the appliance.
24. Keep a safe distance from fire source, inflammable and explosive objects.
25. Keep children from playing with or climbing on the appliance.
26. Do not put clothes above the appliance to dry.
27. Never open the unit casing yourself and attempt to repair. This will void the warranty and is a potential health and safety risk.
28. This appliance is not for use in a Server Room or any other similar environment.
29. Dispose of the water collected from the dehumidifier, this water is not drinkable.
30. Do not remove the water tank when running, this may cause water to leak.
31. When using the "LAUNDRY" mode to dry wet clothes efficiently, keep the laundry at a safe distance from the dehumidifier to prevent water from dripping onto the dehumidifier.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

**READ & SAVE THESE IMPORTANT SAFETY INSTRUCTIONS FOR FUTURE REFERENCE**



