


Operating Instructions for myPRO^{XL} Washers

Control panel

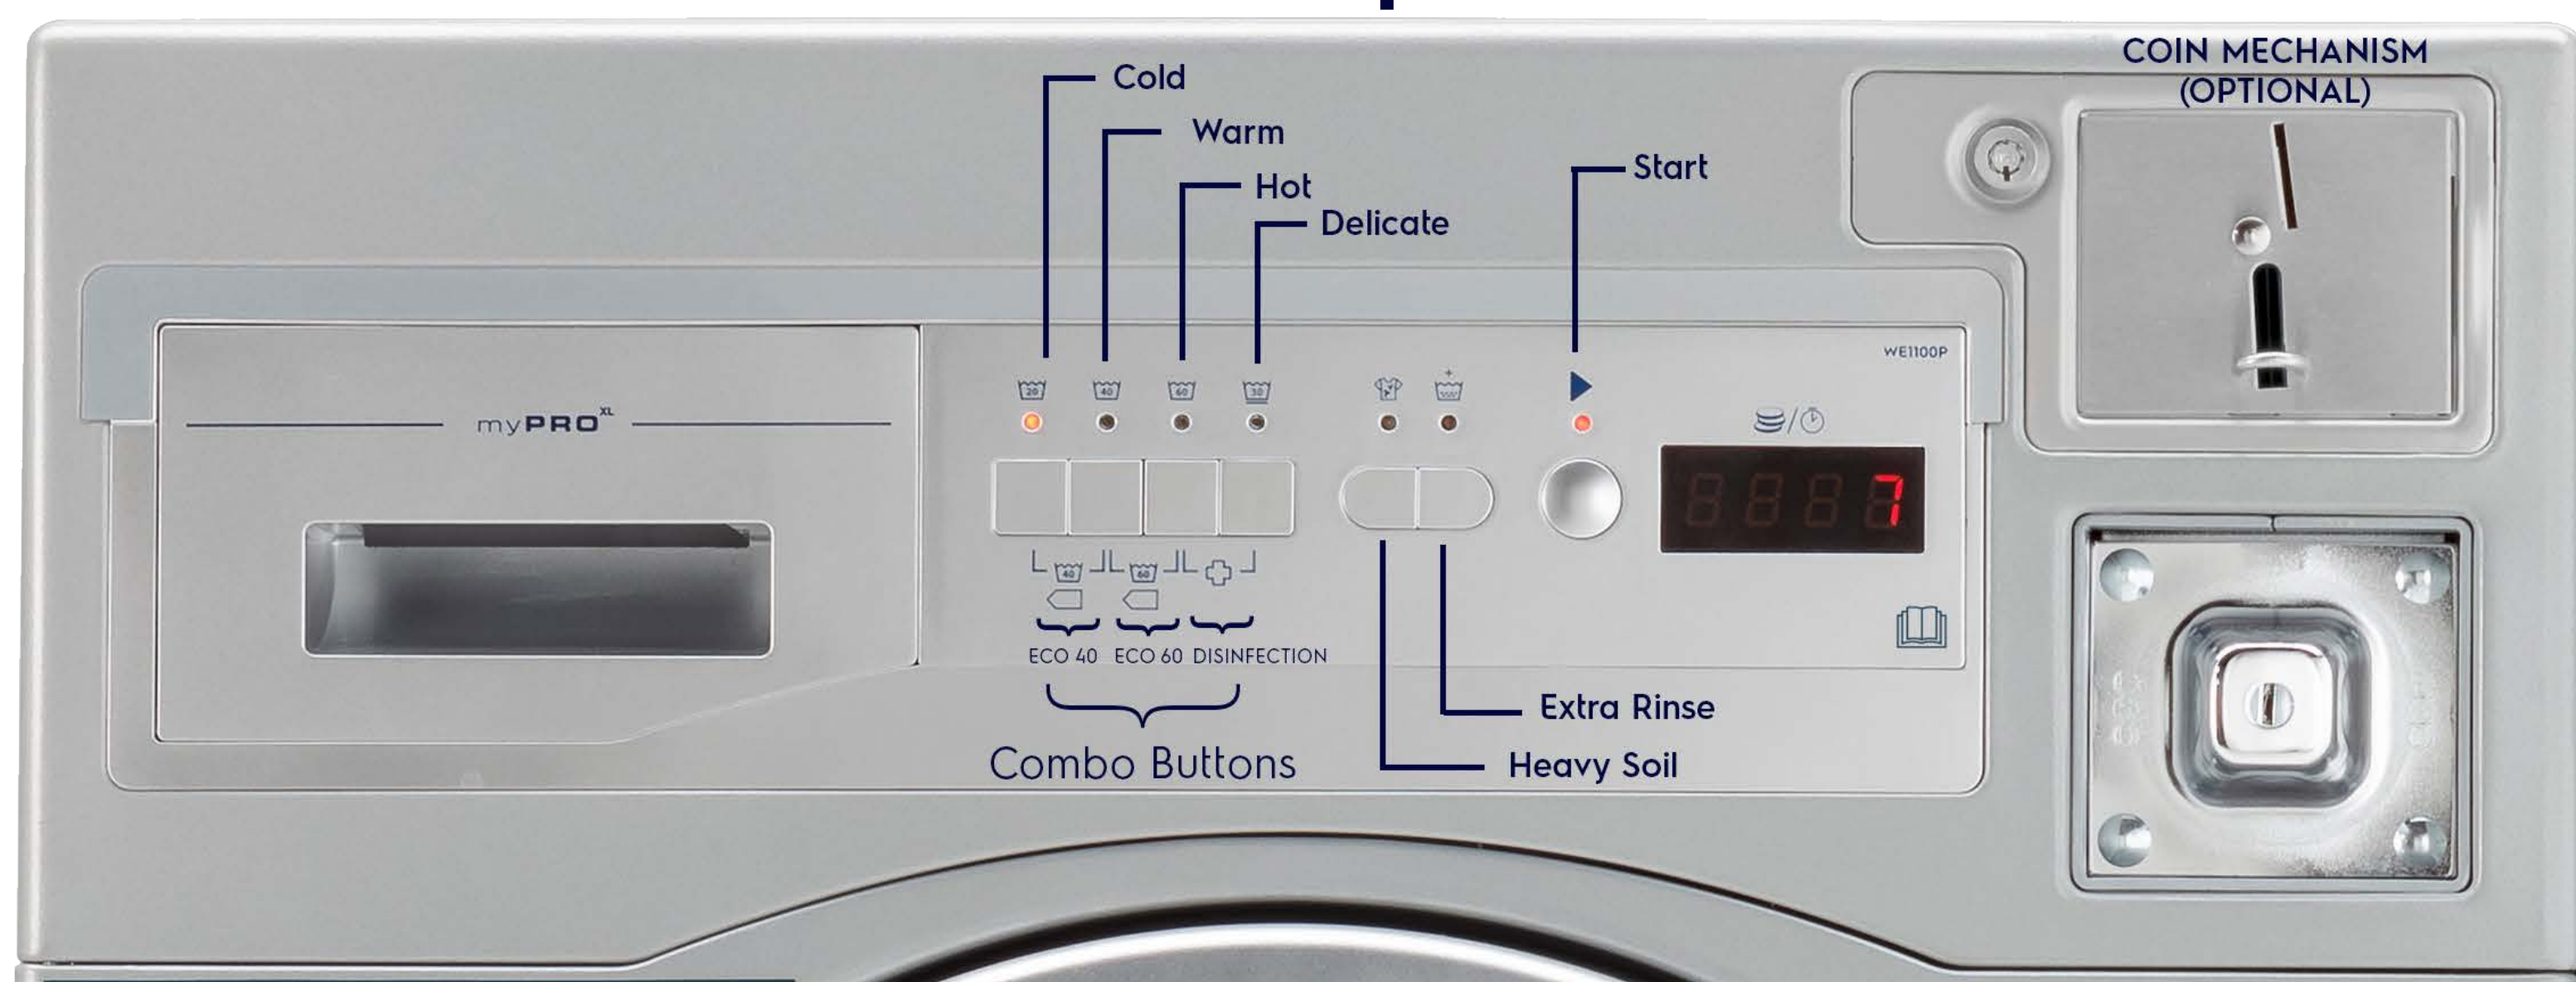


Instructions

1



Open the door
Load the machine,
but do not overload

2

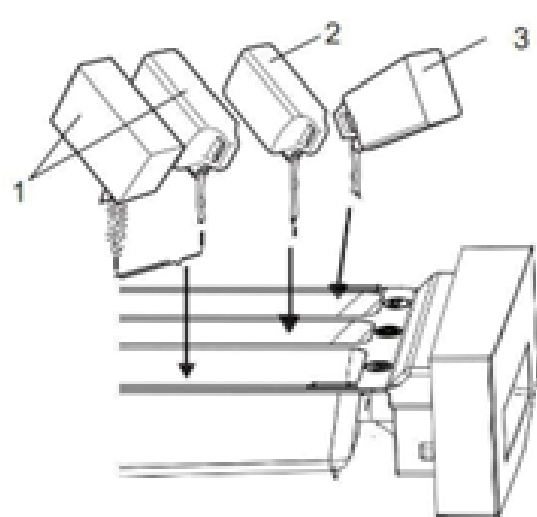

Add Detergent

1. Powder or liquid detergent
2. Softener
3. Bleach

Then choose a
program




3



Click start!


Programs

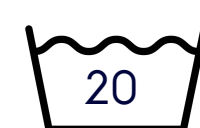

Lightly soiled




White cotton and colour-fast cotton
Normal soil

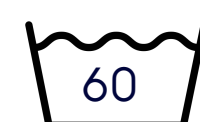

Synthetic items and mixed fabric items
Normal soil



Delicates like acrylics, viscose, polyester
items. Normal soil

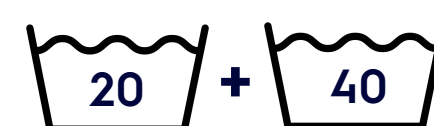

Eco 40 Wash



Eco 60 Wash



Disinfection cycle

Find out more about
the advantages of myPRO
www.electroluxprofessional.com