

Panasonic®

Operating Instructions and Cookery Book Microwave Oven

Model No: NN-CT555W
NN-CT565M
NN-CT585S

Household use only



Important safety instructions
Please read carefully and keep for future reference

Standard Conversion Chart

Weight


1/2 oz	–	15g
1oz	–	25g
2oz	–	50g
3oz	–	75g
4oz	–	100g
5oz	–	150g
6oz	–	175g
7oz	–	200g
8oz	–	225g
9oz	–	250g
10oz	–	275g
11oz	–	300g
12oz	–	350g
13oz	–	375g
14oz	–	400g
15oz	–	425g
1lb/16oz	–	450g

Capacity

1/2tsp	–	3ml
1tsp	–	5ml
1tbsp	–	15ml
1/4pt	–	150ml
1/2pt	–	300ml
3/4pt	–	450ml
1pt	–	600ml
13/4pt	–	1 litre

When using recipes in this book always follow metric or imperial measurements. Do not combine the two. In some recipes the conversions are not a direct equivalent due to recipe result.

Important Notice

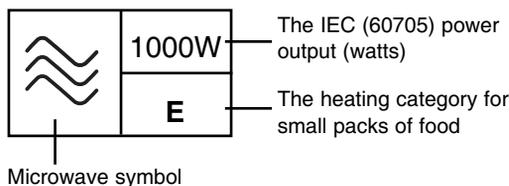

Your oven is rated 1000 Watts (IEC). When using other cookbooks remember to adjust cooking times accordingly. The symbol above, which is displayed on your oven door, indicates the heating category for your oven when cooking or reheating convenience foods. Your oven is rated 'E', which is very efficient. It is therefore very important that you refer carefully to the packet instructions on convenience foods. Some packet instructions only display information for B or D rated ovens. We therefore provide additional guidelines for reheating on pages 55-56 of this book. ALWAYS check the progress of the food as it cooks or reheats by simply opening the door and after checking the progress of the foods press START to continue the cooking time.

Failure to follow the instructions given in this Cookbook and Operating Instructions, may affect the recipe result and in some instances may be dangerous.



Customer Communications Centre 0344 844 3899

Selected Spares and Accessories:

Order direct on line at www.panasonic.co.uk or by telephoning the Customer Communications Centre number above.

For Cookery Advice call: 01344 862108 (open Monday to Wednesday 9 am - 12 pm)

Alternatively visit our web site at www.theideaskitchen.co.uk

- Important safety instructions. Before operating this oven, please read these instructions carefully and keep for future reference.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory and mental capabilities or lack of experience and knowledge if they have been given supervision or instruction by a person responsible for their safety concerning the use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. Keep the appliance and its cord out of reach of children less than 8 years.
- When this oven is installed, it should be easy to isolate the appliance from the electricity supply by pulling out the plug or operating a circuit breaker.

- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Warning! The appliance should be inspected for damage to the door seals and door seal areas and if these areas are damaged the appliance should not be operated until it has been repaired by a service technician trained by the manufacturer.
- Warning! Do not attempt to tamper with or make any adjustments or repairs to the door, control panel housing, safety interlock switches or any other part of the oven. Do not remove the outer panel from the oven which gives protection against exposure to microwave energy. Repairs should only be by a qualified service person.
- Warning! Liquids and other foods must not be heated in sealed containers since they are liable to explode.
- Warning! Do not place this oven near an electric or gas cooker range.

- **Warning!** Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.

For Countertop use:

- The oven must be placed on a flat, stable surface 85 cm above the floor, with rear of oven placed against a back wall. For proper operation the oven must have sufficient air flow, i.e. 5 cm at one side, the other being open; 15 cm clear over the top; 10 cm at the rear.
- When heating food in plastic or paper containers, check the oven frequently as these types of containers ignite if overheated.
- If smoke is emitted or a fire occurs in the oven, press Stop/Cancel pad and leave the door closed in order to stifle any flames. Disconnect the power cord, or shut off power at fuse or circuit breaker panel.
- When heating liquids, e.g. soup, sauces and beverages in your oven, overheating the liquid beyond boiling point can occur without evidence of bubbling. This could result in a sudden boil over of the hot liquid.
- This appliance is intended to be used in household applications only.

- The contents of feeding bottles and baby food jars are to be stirred or shaken. The temperature has to be checked before consumption to avoid burns.
- Do not cook eggs in their shells and whole hard-boiled eggs by MICROWAVE. Pressure may build up and the eggs may explode, even after the microwave heating has ended.
- Clean the inside of the oven, door seals and door seal areas regularly. When food splatters or spilled liquids adhere to the oven walls, door seals and door seal areas wipe off with a damp cloth. Mild detergent may be used if they get very dirty. The use of harsh detergent or abrasive is not recommended.
- **DO NOT USE COMMERCIAL OVEN CLEANERS.**
- When using the GRILL, COMBINATION or Convection mode, some foods may inevitably splatter grease on to the oven walls. If the oven is not cleaned occasionally, it may start to “smoke” during use.

- Failure to maintain the oven in a clean condition could lead to deterioration of surfaces that could affect the life of the appliance and possibly result in a hazardous situation.
- Warning! The accessible parts may become hot in grill, combination use. Young children should be kept away. Children should only use the oven under adult supervision due to the temperatures generated.
- This oven is intended for counter-top use only. It is not intended for Built-in use or for use inside a cupboard.
- A steam cleaner is not to be used for cleaning.
- Do not use harsh, abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
- Exterior oven surfaces, including air vents on the cabinet and the oven door will get hot during GRILL, COMBINATION or Convection, take care when opening or closing the door

and when inserting or removing food and accessories.

- This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- Only use utensils that are suitable for use in microwave ovens.
- The microwave oven is intended for heating food and beverages only. Drying of food, newspapers or clothing and heating of warming pads, slippers, sponges, damp cloth, wheat bags, hot water bottles and similar may lead to risk of injury, ignition or fire.
- Take care when heating foods low in moisture, e.g. bread items, chocolate, biscuits and pastries. These can easily burn, dry out or catch on fire if cooked too long. We do not recommend heating foods low in moisture such as popcorn or poppodums.

- The oven has two grill heaters situated in the top of the oven and a convection heater situated in the back of the oven. After using the GRILL, CONVECTION and COMBINATION functions, care should be taken to avoid touching the inside surfaces of the oven as these will be very hot. Care should be taken to avoid the heating element inside the oven. To prevent burns, care should be taken to avoid touching the inside surfaces of the oven.
- The oven lamp must be replaced by a service technician trained by the manufacturer. DO NOT attempt to remove the outer casing from the oven.

Welcome to Panasonic microwave cooking

Thank you for purchasing a Panasonic microwave oven. Even if this is not your first microwave oven, do please read the opening chapters of this cookbook to achieve perfect results every time.



This microwave oven has the benefit of the Inverter technology. This has been in use with microwave ovens in Japan for many years, improving the cooking performance of the oven. It also means that you benefit from having more space inside your oven, without taking up more room on your work surface.

Microwaves leave most foods tastier and leave you with less washing up, but don't expect to become a perfect microwave cook overnight – some of the methods are very different to those used in conventional cooking.

We hope you enjoy using your new oven but should you require any further help or explanation, please phone our

☎ Cookery advice line 01344 862108

or write to the address below, or contact us on-line at test.kitchen@panasonic.co.uk Alternatively visit our website at www.theideaskitchen.co.uk

Home Appliance Innovation Centre
Panasonic Consumer Electronics U.K.
Willoughby Road
Bracknell
Berks
RG12 8FP

When writing, be sure to state your model number and daytime telephone number.

Contents

Safety information	9-10	Auto weight programs -	48-54
Unpacking your oven	11	Cooking and reheating guidelines	55-56
Placement of oven	11	Reheating charts	57-63
Caution	12	Cooking charts	64-75
Before using your oven	12	Adapting recipes	76
Care and cleaning	13		
Maintenance	14	Recipes	
Parts of your oven	15-16	Soups and starters	77-79
Important Information	17-19	Fish	80-83
Microwaving principles	20	Meat and poultry	84-92
General guidelines	21-22	Pasta, rice & beans	93-95
Containers to use	23-24	Cheese and egg dishes	96-98
Control panels	25-26	Vegetables/vegetarian	99-104
Operating instructions	27-54	Sauces	105-106
• Setting the clock	28	Pastry	107-108
• Operation guide setting	28	Baking	109-110
• Microwaving/defrosting	28-34	Desserts	110-112
• Delay / Stand	35	Baking guidelines	113-114
• Grilling	36-37	Preserves	115-116
• Convection cooking	38-39	Questions and answers	117
• Combination cooking	39-46	Technical specification	118
• Multi-stage cooking	47		


Important safety instructions

Please read carefully and keep for future reference.

This appliance is supplied with a moulded three pin mains plug for your safety and convenience. A 13 amp fuse is fitted in this plug. Should the fuse need to be replaced, please ensure that the replacement fuse has a rating of 13 amps and that it is approved by ASTA or BSI to BS1362. Check for the ASTA mark  or the BSI mark  on the body of the fuse.

If the fuse cover is detachable, never use the plug with the cover omitted.

A replacement fuse cover can be purchased from your local Panasonic Dealer.

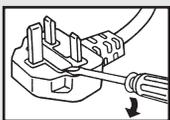

How to replace the fuse

Open the fuse compartment with a screwdriver and replace the fuse.

IF THE FITTED MOULDED PLUG IS UNSUITABLE FOR THE SOCKET OUTLET IN YOUR HOME THEN THE FUSE SHOULD BE REMOVED AND THE PLUG CUT OFF AND DISPOSED OF SAFELY AND AN APPROPRIATE ONE FITTED. THERE IS A DANGER OF SEVERE ELECTRICAL SHOCK IF THE CUT OFF PLUG IS INSERTED INTO ANY 13 AMP SOCKET.

If a new plug is to be fitted, please observe the wiring code as shown opposite. If in any doubt, please consult a qualified electrician (For U.K. Models only).

WARNING: THIS APPLIANCE MUST BE EARTHED.

IMPORTANT: The wires in this mains lead are coloured in accordance with the following code: Green-and-yellow: Earth, Blue: Neutral, Brown: Live.

As the colours of the wire in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured GREEN-AND-YELLOW must be connected to the terminal in the plug which is marked with the letter E or by the Earth symbol  or coloured GREEN or GREEN AND-YELLOW.

The wire which is coloured BLUE must be connected to the terminal in the plug which is marked with the letter N or coloured BLACK.

The wire which is coloured BROWN must be connected to the terminal in the plug which is marked with the letter L or coloured RED.

When this oven is installed it should be easy to isolate the appliance from the electricity supply by pulling out the plug or operating a circuit breaker.

Voltage & power

The voltage used must be the same as specified on this microwave oven. Using a higher voltage than that which is specified is dangerous and may result in a fire or other type of accident causing damage.

Do not immerse cord, plug or oven in water. Keep cord away from heated surfaces. Do not let cord hang over the edge of table or work top. Do not plug your oven in via an extension cable as this can be dangerous. It is important to plug the oven directly into a wall socket.

The back of the appliance heats up during use. Do not allow the cord to be in contact with the back of the appliance or cabinet surface.

Important safety instructions

1. In case of electronic failure, oven can only be turned off at wall socket.

■ Warning!

Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use. Ensure that children do not touch the hot outer casing after operation of the oven.

2. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory and mental capabilities or lack of experience and knowledge if they have been given supervision or instruction by a person responsible for their safety concerning the use of the appliance in a safe way and understand the hazards involved.
3. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
4. During and after cooking with a steam function, do not open the oven door when your face is very close to the oven. Care must be taken when opening the door as steam may cause injury.
5. To prevent burns, take care of hot surfaces which may exist from the cooking process.

Storage of accessories

6. Do not store any objects other than oven accessories inside the oven in case it is accidentally turned on.

Exterior oven surfaces

7. Exterior oven surfaces, including air vents on the rear and bottom of the cabinet and the oven door will get hot during GRILL, CONVECTION and COMBINATION modes. Take care when opening or closing the door and when inserting or removing food and accessories.

Heater

8. The oven has two grill heaters situated in the top of the oven and a convection heater situated in the back of the oven. After using the GRILL, CONVECTION and COMBINATION functions, the inside surfaces of the oven will be very hot. Care should be taken to avoid touching the heating elements inside the oven.

■ Caution! Hot surfaces



After cooking by these modes, the oven accessories will be very hot.

9. Before using GRILL, CONVECTION or COMBINATION function for the first time operate the oven without food and accessories on CONVECTION 220 °C for 5 mins. This will allow the oil that is used for rust protection to be burned off. This is the only time that the oven is operated completely empty.

■ Caution!

Grill element and oven will be hot. **DO NOT OPERATE THE OVEN EMPTY** apart from point 9 above. The appliance must not be operated by MICROWAVE or Combination including microwave **WITHOUT FOOD IN THE OVEN**. Operation when empty will damage the appliance.

The accessible parts may become hot in combination use. Young children less than 8 years of age should be kept away. Children should only use the oven under adult supervision due to the temperatures generated.

Unpacking your oven

1. Examine your oven

Unpack oven, remove all packing material, and examine the oven for any damage such as dents, broken door latches or cracks in the door. Notify dealer immediately if unit is damaged. Do NOT install if unit is damaged.

2. Guarantee

Your receipt is your guarantee, please keep it in a safe place.


3. Cord

If the supply cord of this appliance is damaged, it must be replaced by the manufacturer or it's service agent or a similarly qualified person in order to avoid a hazard.

N.B. The appliance should be inspected for damage to the door seals and door seal areas. If these areas are damaged the appliance should not be operated until it has been repaired by a service technician trained by the manufacturer.

Placement of your oven

1. This oven is suitable for countertop use only. It is not suitable for built-in use or use within a cupboard.
2. The oven must be placed on a flat, stable surface 850 mm above the floor, with rear of oven placed against a back wall. For proper operation the oven must have sufficient air flow, i.e. 5 cm at one side, the other being open; 15 cm clear over the top; 10 cm at the rear.
3. Do not place the microwave oven on a shelf directly above a gas or electric hob. This may be a safety hazard and the oven may be damaged.
4. Do not block air vents on the rear and bottom or top of the cabinet. Do not place any articles on the top of the oven over the vents. If air vents are blocked during operation, the oven may overheat. If the oven overheats, a thermal safety device will turn the oven off. The oven will remain inoperable with blank display until it has cooled.
5. This appliance is intended to be used in household applications only.

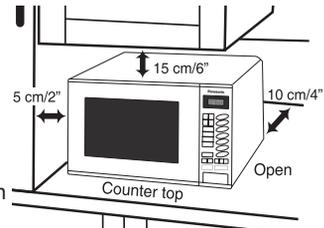

Caution: Hot surfaces

1. Hot surfaces

Exterior oven surfaces, including air vents on the cabinet and the oven door will get hot during CONVECTION, COMBINATION and GRILLING. Use care when opening or closing door and when inserting or removing food and accessories. The oven has a heater situated in the top of the oven. After using the CONVECTION, COMBINATION and GRILL functions the roof and walls will be very hot.

2. Children should be kept away from the oven at all times and should only be allowed to operate the oven under supervision. Ensure that children do not touch the hot outer casing after operation of the oven.
3. When the appliance is used in the combination mode, children should only use the oven under adult supervision due to the temperatures generated.

Before using your oven

1. In the case of electronic failure, the oven can only be turned off at wall socket.
2. Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use. Ensure that children do not touch the hot outer casing after operation of the oven.


3. Storage of accessories

Do not store any objects other than oven accessories inside the oven in case it is accidentally turned on.

4. Before use

Before using CONVECTION, COMBINATION or GRILL function for the first time operate the oven without food and accessories (including glass turntable and roller ring) on Convection 220 °C for 5 mins. This will allow the oil that is used for rust protection to be burned off. This is the only time that the oven is operated empty.

5. This appliance is not intended to be operated by means of an external timer or separate remote-controlled system.
6. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory and mental capabilities or lack of experience and knowledge if they have been given supervision or instruction by a person responsible for their safety concerning the use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

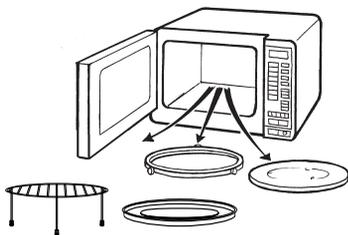

CAUTION: All inside surfaces of the oven will be hot.

DO NOT OPERATE THE OVEN EMPTY.
(Apart from in point 4 above).

The appliance must not be operated by **MICROWAVE** or **COMBINATION WITHOUT FOOD IN THE OVEN**. Operation when empty will damage the appliance.

Care & cleaning of your microwave oven - IMPORTANT

It is essential for the safe operation of the oven that it is kept clean, and wiped out after each use. Failure to maintain the oven in a clean condition could lead to deterioration of a surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.

1. **Switch the oven off** before cleaning and unplug at socket if possible.
2. **Keep the inside of the oven, door seals and door seal areas clean.** When food splatters or spilled liquids adhere to oven walls, door seals and door seal areas wipe off with a damp cloth. Mild detergent may be used if they get very dirty. The use of harsh detergent or abrasives is not recommended. Take care when cleaning around the microwave feed guide.
3. **After using CONVECTION, GRILL or COMBINATION cooking** the walls of the oven should be cleaned with a soft cloth squeezed in soapy water. Particular care should be taken to keep the window area clean particularly after cooking by CONVECTION, GRILL or COMBINATION. Stubborn spots inside the oven can be removed by using a small amount of branded conventional oven-cleaner sprayed onto a soft damp cloth. Wipe onto problem spots, leave for recommended time and then wipe off. Avoid the microwave feed guide area and the door. **DO NOT SPRAY DIRECTLY INSIDE THE OVEN.**
4. The **outside oven surface** should be cleaned with a damp cloth. To prevent damage to the operating parts inside the oven, water should not be allowed to seep into the ventilation openings.
5. If the **control panel** becomes dirty, clean with a soft, dry cloth. Do not use harsh detergents or abrasives on the Control Panel. When cleaning the Control Panel, leave the oven door open to prevent the oven from accidentally turning on. After cleaning touch STOP/CANCEL Pad to clear display window.
6. **If steam accumulates** inside or around the outside of the oven door, wipe with a soft cloth. This may occur when the microwave oven is operated under high humidity conditions and in no way indicates a malfunction of the unit or microwave leakage.
7. It is occasionally necessary to remove the **glass turntable** for cleaning. Wash the turntable in warm soapy water. Do not place in the dishwasher.
8. The **roller ring and oven cavity floor** should be cleaned regularly to avoid excessive noise. Simply wipe the bottom surface of the oven, particularly the turntable spindle and the area surrounding this, with mild detergent and hot water then dry with a clean cloth. The roller ring may be washed in mild soapy water. Vapours may cause corrosion. After removing the roller ring from cavity floor for cleaning, be sure to replace it in the proper position.
9. **When GRILLING or cooking by COMBINATION or CONVECTION** some foods may splatter grease onto the oven walls. If the oven is not cleaned to eliminate this grease, it can accumulate and cause the oven to 'SMOKE' during use. These marks will be more difficult to clean later.
10. A steam cleaner is not to be used for cleaning.
11. Keep air vents clean at all times. Check that no dust or other material is blocking any of the air vents on the top, bottom or rear of the appliance. If air vents become blocked this could cause overheating which would affect the operation of the oven and possibly result in a hazardous situation.
12. Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.



Maintenance of your oven

1. Service

WHEN YOUR OVEN REQUIRES A SERVICE call your local Panasonic engineer (Customer Communication Centre on **0344 844 3899** who can recommend an engineer). It is hazardous for anyone other than a competent person to carry out any service or repair operation which involves the removal of a cover which gives protection against exposure to microwave energy.

2. Door seals

Do not attempt to tamper with or make any adjustments or repairs to door, control panel housing, safety interlock switches or any other part of the oven. Do not remove outer panel from oven.

The door seals and door seal areas should always be kept clean – use a damp cloth.

N.B. The appliance should be inspected for damage to the door seals and door seal areas. If these areas are damaged the appliance should not be operated until it has been repaired by a service technician trained by the manufacturer.

3. Oven light

The oven lamp must be replaced by a service technician trained by the manufacturer. DO NOT attempt to remove the outer casing from the oven.

4. Selected spares and accessories


These may be ordered direct; on line at www.panasonic.co.uk or by telephoning the Customer Communication Centre **0344 844 3899**. Most major credit and debit cards accepted. Ensure you quote the correct model number.



Parts of your oven

1. Do not operate the oven without the roller ring and glass turntable in place.
2. Only use the glass turntable specifically designed for this oven. Do not substitute with any other glass turntable.
3. If glass turntable is hot, allow to cool before cleaning or placing in water.
4. Do not cook directly on glass turntable. Always place food in a microwave safe dish. The only exception to this is when cooking jacket potatoes on microwave only.
5. If food or utensil on glass turntable touches oven walls, causing the turntable to stop moving, it will automatically rotate in the opposite direction. This is normal. Open oven door, reposition the food and restart.
6. The glass turntable can rotate in either direction. The maximum weight that can be placed on the turntable is 4 kg (8 lb 14 oz) (this includes total weight of food and dish.)
7. While cooking by MICROWAVE or COMBINATION, turntable may vibrate. This will not affect cooking performance.
8. The metal accessories provided must ONLY be used as directed for GRILLING, CONVECTION and COMBINATION cooking. Never use them on MICROWAVE only. Do not use if operating the oven with less than 200 g (7 oz) of food on a manual COMBINATION program. FAILURE TO USE ACCESSORIES CORRECTLY COULD DAMAGE YOUR OVEN.
9. Arcing may occur if the incorrect weight of food is used, a metal container has been used incorrectly, or the accessories have been damaged. If this occurs, stop the machine immediately. You can continue to cook by GRILL OR CONVECTION ONLY.
10. Always refer to instructions for correct accessories to use on all programs. The glass turntable and roller ring are the only accessories used for MICROWAVE cooking. For CONVECTION and COMBINATION cooking the Enamel tray must ALWAYS be in place on the glass turntable.

Parts of your oven

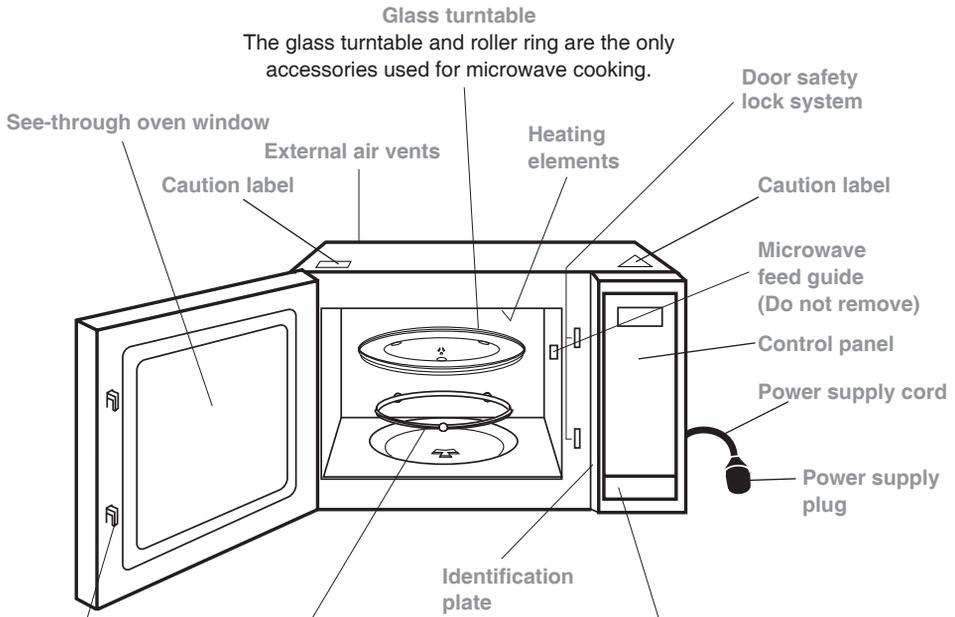

Roller ring

1. The roller ring and oven floor should be cleaned frequently to prevent excessive noise.
2. The roller ring must always be used together with the glass turntable for cooking.

Door release pad

Push to open the door. Opening the door during cooking will stop the cooking process without cancelling the program. Cooking resumes as soon as the door is closed and Start is pressed. The oven light will turn on and stay on whenever the door is opened.



Wire rack



Enamel tray

Note: This illustration is for reference only.



Important information – read carefully

Safety

If smoke is emitted or a fire occurs in the oven, press Stop/Cancel pad and leave the door closed in order to stifle any flames.

Disconnect the power cord, or shut off power at the fuse or the circuit breaker panel.

Short cooking times

As microwave cooking times are much shorter than other cooking methods it is essential that recommended cooking times are not exceeded without first checking the food.

Cooking times given in the cookbook are approximate. Factors that may affect cooking times are: preferred degree of cooking, starting temperature, altitude, volume, size and shape of foods and utensils used. As you become familiar with the oven, you will be able to adjust these factors.

It is better to undercook rather than overcook foods. If food is undercooked, it can always be returned to the oven for further cooking. If food is overcooked, nothing can be done. Always start with minimum cooking times.

Important.

If the recommended cooking times are exceeded the food will be spoiled and in extreme circumstances could catch fire and possibly damage the interior of the oven.

1. Small quantities of food.

Take care when heating small quantities of food as these can easily burn, dry out or catch fire if cooked too long. Always set short cooking times and check the food frequently.

NEVER OPERATE THE OVEN WITHOUT FOOD INSIDE ON MICROWAVE OR COMBINATION.

2. Foods low in moisture.

The microwave oven is intended for heating food and beverages only. Drying of food, newspapers or clothing and heating of warming pads, slippers, sponges, damp cloth, wheat bags, hot water bottles and similar may lead to risk of injury, ignition or fire.

Take care when heating foods low in moisture, e.g. bread items, chocolate, biscuits and pastries. These can easily burn, dry out or catch on fire if cooked too long. We do not recommend heating foods low in moisture such as popcorn or poppodums.

3. Christmas pudding.

Christmas puddings and other foods high in fats or sugar, e.g. jam, mince pies, must not be over heated. These foods must never be left unattended as with over cooking these foods can ignite.

4. Boiled eggs.

Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode even after microwave heating has ended.



Important Information – read carefully

5. Foods with skins.

Potatoes, apples, egg yolk, whole vegetables and sausages are examples of food with non porous skins. These must be pierced using a fork before cooking to prevent bursting.

6. Liquids.

Warning! Liquids and other foods must not be heated in sealed containers since they are liable to explode. When heating liquids, eg soup, sauces and beverages in your microwave oven, overheating the liquid beyond boiling point can occur without evidence of bubbling. This could result in a sudden boil over of the hot liquid. To prevent this possibility the following steps should be taken:

- a) Avoid using straight-sided containers with narrow necks.
- b) Do not overheat.
- c) Stir the liquid before placing the container in the oven and again halfway through the heating time.
- d) After heating, allow to stand in the oven for a short time, stirring again before carefully removing the container.
- e) Microwave heating of beverages can result in delayed eruptive boiling, therefore care should be taken when handling the container.

7. Lids.

Always remove the lids of jars and containers and takeaway food containers before you microwave them. If you don't then steam and pressure might build up inside and cause an explosion even after the microwave cooking has stopped.

8. Deep fat frying.

Do not attempt to deep fat fry in your oven.

9. Meat thermometer.

Use a meat thermometer to check the degree of cooking of roasts and poultry only when meat has been removed from the microwave. If undercooked, return to the oven and cook for a few more minutes at the recommended power level. Do not leave a conventional meat thermometer in the oven when microwaving.

10. Paper, plastic.

When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition. Do not use wire twist-ties with roasting bags as arcing will occur. Do not use re-cycled paper products, e.g. kitchen roll unless they say they are specifically designed for use in a microwave oven. These products contain impurities which may cause sparks and/or fires when used.

11. Reheating.

It is essential that reheated food is served "piping hot".

Remove the food from the oven and check that it is "piping hot", i.e. steam is being emitted from all parts and any sauce is bubbling. (If you wish you may choose to check the food has reached 72°C with a food thermometer – but remember do not use this thermometer inside the microwave.)

For foods that cannot be stirred, e.g. lasagne, shepherds pie, the centre should be cut with a knife to test it is well heated through. Even if a manufacturer's packet instructions have been followed always check the food is piping hot before serving and if in doubt return your food to the oven for further heating.

Important information – read carefully

12. Standing time.

Standing time refers to the period at the end of cooking or reheating when food is left before being eaten, i.e. it is a rest time which allows the heat in the food to continue to conduct to the centre, thus eliminating cold spots. See page 21.

13. Keeping your oven clean.

It is essential for the safe operation of the oven that it is wiped out regularly. Use warm soapy water, squeeze the cloth out well and use to remove any grease or food from the interior. Pay particular attention to the door seal area and also the areas around the microwave feed guide situated on the right hand side of the cavity wall. The oven should be unplugged when cleaning.

14. Grilling.

The oven will only operate on the GRILL function with the door closed.

15. Fan motor operation.

After using the microwave oven, the fan motor may operate to cool the electric components. This is normal and you can take out food even though the fan motor operates. You can continue using the oven during this time.

16. Containers.

Before use check that utensils/containers are suitable for use in microwave ovens. See page 23-24.

17. Babies bottles and food jars.

When reheating babies bottles always remove top and teat. Liquid at the top of the bottle will be much hotter than that at the bottom and must be shaken thoroughly before checking the temperature. The lid must also be removed from babies food jars, the contents must also be stirred or shaken before the temperature is checked. This should be carried out before consumption in order to avoid burns.

18. Arcing

Arcing may occur if a metal container has been used incorrectly, if the incorrect weight of food is used, or if the accessories have been damaged. Arcing is when blue flashes of light are seen in the microwave oven. If this occurs, stop the machine immediately. If the oven is left unattended and this continues it can damage the machine.

You can continue to cook by GRILL OR CONVECTION ONLY.

19. Maximum weight on turntable

The maximum weight that can be placed on the turntable is 4 kg (8 lb 14 oz) (this includes total weight of food and dish.)

Microwaving principles

Microwave energy has been used in this country to cook and reheat food since early experiments with RADAR in World War II. Microwaves are present in the atmosphere all the time, both naturally and from manmade sources.

Manmade sources include radar, radio, television, telecommunication links and mobile phones.

How Microwaves cook food

Reflection

The microwaves bounce off the metal walls and the metal door screen. In a microwave oven, electricity is converted into microwaves by the MAGNETRON.

Transmission

Then they pass through the cooking containers to be absorbed by the water molecules in the food, all foods contain water to a more or lesser extent.

The microwaves cause the water molecules to vibrate which causes FRICTION, i.e. HEAT. This heat then cooks the food. Microwaves are also attracted to fat and sugar particles, and foods high in these will cook more quickly. Microwaves can only penetrate to a depth of 1½-2 inches (4-5 cm) and as heat spreads through the food by conduction, just as in a traditional oven, the food cooks from the outside inwards.

IMPORTANT NOTES

The dish used to cook or reheat the food will get warm during cooking, as the heat conducts from the food. Even when microwaving, oven gloves are required!

MICROWAVES CANNOT PASS THROUGH METAL AND THEREFORE METAL COOKING UTENSILS CAN NEVER BE USED IN A MICROWAVE, FOR COOKING ON MICROWAVE ONLY.

Foods not suitable for cooking by microwave only

Yorkshire puddings, souffles, double crust pastry pies.

This is because these foods rely on dry external heat to cook correctly, do not attempt to cook by microwave.

Foods that require deep fat frying cannot be cooked either.

Boiled eggs

Do not boil eggs in your microwave. Raw eggs boiled in their shells can explode and cause serious injury.

Standing time

When a microwave oven is switched off, the food will continue to cook by conduction – NOT BY MICROWAVE ENERGY. Hence STANDING TIME is very important in microwaving, particularly for dense foods i.e. meat, cakes and reheated meals (Refer to page 21).

General guidelines

Standing time

Dense foods e.g. meat, jacket potatoes and cakes, require a **STANDING TIME** (inside or outside of the oven) after cooking, to allow heat to finish conducting through the food.

■ Jacket potatoes

Wrapped in aluminium foil when cooked by microwave only. It is not necessary to stand jacket potatoes cooked in COMBINATION mode.

Stand for 15 mins.

■ Fish

Stand for 2-3 mins.

■ Egg dishes

Stand for 1-2 mins.

■ Precooked convenience food

Stand for 2-3 mins.

■ Meat joints

Stand 15 mins wrapped in aluminium foil.

■ Plated meals

Stand for 2-3 mins.

■ Vegetables

Boiled potatoes benefit from standing for 1-2 mins, however most other types of vegetables can be served immediately.

■ Defrosting

It is essential to allow standing time to complete the process. This can vary from 5 mins e.g. raspberries, to up to 1 hour for a joint of meat. See pages 31-32.

If food is not cooked after **STANDING TIME**, return to oven and cook for additional time.



Moisture content

Many fresh foods e.g. vegetables and fruit, vary in their moisture content throughout the season. Jacket potatoes are a particular example of this. For this reason cooking times may have to be adjusted throughout the year. Dry ingredients e.g. rice, pasta, can dry out during storage so cooking times may differ from ingredients freshly purchased.



Piercing

The skin or membrane on some foods will cause steam to build up during cooking. These foods must be pierced or a strip of skin should be peeled off before cooking to allow the steam to escape. Eggs, potatoes, apples, sausages etc, will all need to be pierced before cooking. **DO NOT ATTEMPT TO BOIL EGGS IN THEIR SHELLS.**



Cling film

Cling film helps keep the food moist and the trapped steam assists in speeding up cooking times. However it should be pierced before cooking, to allow excess steam to escape. Always take care when removing cling film from a dish as the build-up of steam will be very hot. Always purchase cling film that states on the packet "suitable for microwave cooking" and use as a covering only. Do not line dishes with cling film. Do not cover foods when cooking by **GRILL**, **CONVECTION** or **COMBINATION**.

General guidelines



Dish size

Follow the dish sizes given in the recipes, as these affect the cooking and reheating times. A quantity of food spread in a bigger dish cooks and reheats more quickly.



Quantity

Small quantities cook faster than large quantities, also small meals will reheat more quickly than large portions.



Spacing

Foods cook more quickly and evenly if spaced apart. **NEVER** pile foods on top of each other.



Shape

Even shapes cook evenly. Food cooks better by microwave when in a round container rather than square.



Density

Porous airy foods heat more quickly than dense heavy foods.



Covering

Cover foods with microwave cling film or a self-fitting lid. Cover fish, vegetables, casseroles, soups. Do not cover cakes, sauces, jacket potatoes, pastry items. Please refer to cooking charts and recipes for more information.



Arranging

Individual foods e.g. chicken portions or chops, should be placed in a dish so that the thicker parts are to the outside.



Ingredients

Foods containing fat, sugar or salt heat up very quickly. The filling may be much hotter than the pastry. Take care when eating. **DO NOT** overheat even if the pastry does not appear to be very hot.



Starting temperature

The colder the food, the longer it takes to heat up. Food from a fridge takes longer to reheat than food at room temperature. Food temperature should be between 5-8 °C before cooking.



Turning and stirring

Some foods require stirring during cooking. Meat and poultry should be turned after half the cooking time.



Liquids

All liquids must be stirred **before, during and after heating**. Water especially must be stirred before and during heating, to avoid eruption. Do not heat liquids that have previously been boiled. **DO NOT OVERHEAT.**



Checking food

It is essential that food is checked during and after a recommended cooking time, even if an **AUTO PROGRAM** has been used (just as you would check food cooked in a conventional oven). Return the food to the oven for further cooking if necessary.



Cleaning

As microwaves work on food particles, keep your oven clean at all times. Stubborn spots of food can be removed by using a branded oven cleaner, sprayed onto a soft cloth. Always wipe the oven dry after cleaning. Avoid any plastic parts and door area. Customers should not spray directly into the cavity. The catalytic lining at the back and top of the oven cavity is self-cleaning. See page 13 point 3.

Containers to use



Choosing the correct container is a very important factor in deciding the success or failure of your cooking.

Testing dishes for suitability - For microwave cooking only.

When unsure that a cooking container is suitable for use in your microwave, check by the following test:

1. Fill a microwave safe measuring jug with 300 ml (½ pt) cold water.
2. Place it on the base of the oven along side the dish to be tested. If the dish you are testing is a large dish, then stand the measuring jug on top of the empty dish.
3. Heat on HIGH power for 1 minute.

Result

If the dish is suitable for microwaving, it will remain cool, whilst the water in the jug will begin to feel warm. If the testing dish feels warm, do not use as it is obviously absorbing microwave energy.

Note

This test does not apply to plastic or metal based containers e.g. Le Creuset® style dishes, which should not be used as they are cast iron covered with enamel.

Quick check guide to cooking utensils



Oven glass

Everyday glass that is heat resistant e.g. Pyrex®, is ideal for Microwave, Convection or Combination cooking.

Do not use delicate glass or lead crystal which may crack or arc.



China and ceramic

Everyday glazed china, porcelain or ceramic plates, bowls, mugs and cups can be used if they are heat resistant. Fine bone china should only be used for reheating for short periods. Do not use dishes with a metal rim or pattern. Do not use jugs or mugs with glued handles, since the glue can melt. If dishes are heat resistant they may be used on Convection and Combination but not directly under the Grill.



Pottery, earthenware, stoneware

If completely glazed, these dishes are suitable. Do not use if partially glazed or unglazed, since they are able to absorb water which in turn absorbs microwave energy, making the container very hot and slows down the cooking of food.



Foil/metal containers

NEVER ATTEMPT TO COOK IN FOIL OR METAL containers on Microwave only as the microwaves cannot pass through and the food will not heat evenly, it may also damage your oven. Foil and metal containers can be used on grill, convection and grill + convection modes and may be used with care during certain combination cooking as long as they are not damaged or dented.

Containers to use



Plastic

Many plastic containers are designed for microwave use, but do not use for cooking foods high in sugar or fat or for foods that require long cooking times e.g. brown rice. Only use Tupperware® containers if they are designed for microwave use.



Do not use Melamine. Never cook in margarine cartons or yoghurt pots, as these will melt with the heat from the food. If heatproof they can be used for

Convection or Combination cooking.
DO NOT USE UNDER THE GRILL.



Paper

Plain white absorbent kitchen paper (kitchen towel) can only be used for microwave cooking e.g. for covering bacon to prevent splattering.

ONLY USE FOR SHORT COOKING TIMES. NEVER RE-USE A PIECE OF KITCHEN TOWEL. ALWAYS USE A FRESH PIECE OF PAPER FOR EACH DISH.

Avoid kitchen paper containing manmade fibres.

If you are using branded re-cycled kitchen towel, check first that it is recommended for microwave use. Do not use waxed or plastic coated cups or plates as the finish may melt. Greaseproof paper can be used to line the base of dishes and to cover when blind baking pastry cases. White paper plates can be used for **SHORT REHEATING TIMES**, on Microwave only.



Wicker, wood, straw baskets

Dishes will crack and could ignite. Do not use wooden dishes in your microwave. **DO NOT USE ON ANY COOKING MODE.**



Cling film

Microwave cling film can only be used for covering food that is reheated by microwave. It is also useful for covering food to be cooked, but care should be taken to avoid the film being in direct contact with the food eg. Do not line dishes with cling film. **DO NOT USE ON ANY OTHER COOKING MODE.**



Aluminium foil

Small amounts of smooth aluminium foil can be used to **SHIELD** joints of meat during defrosting and cooking by Microwave, as the microwaves cannot pass through the foil, this prevents the parts shielded from overcooking or over defrosting. Take care that the foil does not touch the sides or roof of the oven, as this may cause arcing and damage your oven. Aluminium foil can be used for Convection cooking.




Roasting bags

Roasting bags are useful when slit up one side to tent a joint, for roasting by power and time. Do not use the metal twists supplied, when using Microwave, Combination or Turbo-cook.

Control panels

NN-CT555W / NN-CT565M *

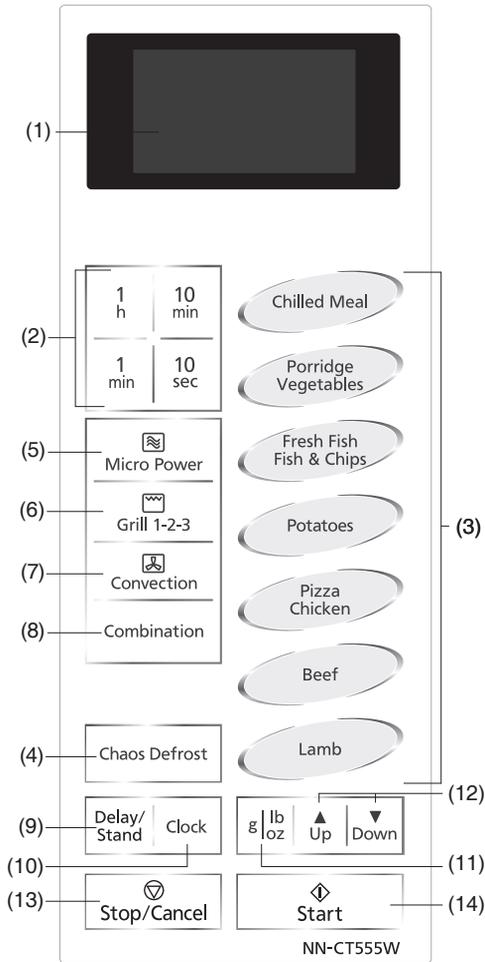

1. Display window
2. Time pads
3. Auto Weight programs
4. Auto Weight Defrost programs (Chaos Defrost)
5. Microwave Power pad
6. Grill Pad
7. Convection pad
8. Combination pad
9. Delay/Stand pad:
This can be used to delay a cooking program for up to 9 hrs. 59 mins, or used to time or for standing (non-cooking) time.
10. Clock pad:
Refer to page 28 for setting the clock.
11. lb/oz Conversion pad
12. Weight Selection pads
13. Stop/Cancel pad:
Before cooking:
one press clears your instructions.
During cooking:
one press temporarily stops the cooking program. Another press cancels all your instructions and the time of day will appear in the display.
14. Start pad:
Press to start operating the oven. If during cooking the door is opened or Stop/Cancel pad is pressed once, Start pad has to be pressed again to continue cooking.

* The design of your control panel may vary from the panel displayed, but the words on the pads will be the same.

Beep sound:

A beep sounds when a pad is pressed. If this beep does not sound, the setting is incorrect. When the oven changes from one function to another, two beeps sound. After completion of cooking, five beeps sound.

NOTE: If an operation is set and Start Pad is not pressed, after 6 minutes, the oven will automatically cancel the operation. The display will revert back to clock mode.


This oven is equipped with an energy saving function.

Please Note:

1. When in stand-by mode the brightness of the display will be reduced.
2. The oven will enter stand-by mode, when first plugged in and immediately after the last operation has completed.

Control panels

NN-CT585S *

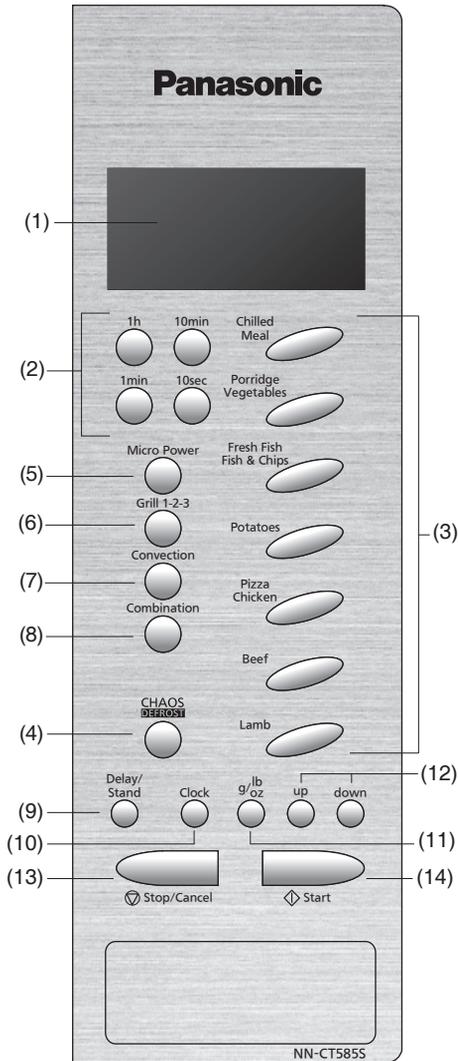

1. Display window
2. Time pads
3. Auto Weight programs
4. Auto Weight Defrost programs (Chaos Defrost)
5. Microwave Power pad
6. Grill Pad
7. Convection pad
8. Combination pad
9. Delay/Stand pad:
This can be used to delay a cooking program for up to 9 hrs. 59 mins, or used to time or for standing (non-cooking) time.
10. Clock pad:
Refer to page 28 for setting the clock.
11. lb/oz Conversion pad
12. Weight Selection pads
13. Stop/Cancel pad:
Before cooking:
one press clears your instructions.
During cooking:
one press temporarily stops the cooking program. Another press cancels all your instructions and the time of day will appear in the display.
14. Start pad:
Press to start operating the oven. If during cooking the door is opened or Stop/Cancel pad is pressed once, Start pad has to be pressed again to continue cooking.

* The design of your control panel may vary from the panel displayed, but the words on the pads will be the same.

Beep sound:

A beep sounds when a pad is pressed. If this beep does not sound, the setting is incorrect. When the oven changes from one function to another, two beeps sound. After completion of cooking, five beeps sound.

NOTE: If an operation is set and Start Pad is not pressed, after 6 minutes, the oven will automatically cancel the operation. The display will revert back to clock mode.


This oven is equipped with an energy saving function.

Please Note:

1. When in stand-by mode the brightness of the display will be reduced.
2. The oven will enter stand-by mode, when first plugged in and immediately after the last operation has completed.

Let's start to use your oven

NN-CT555W / NN-CT565M /
NN-CT585S *

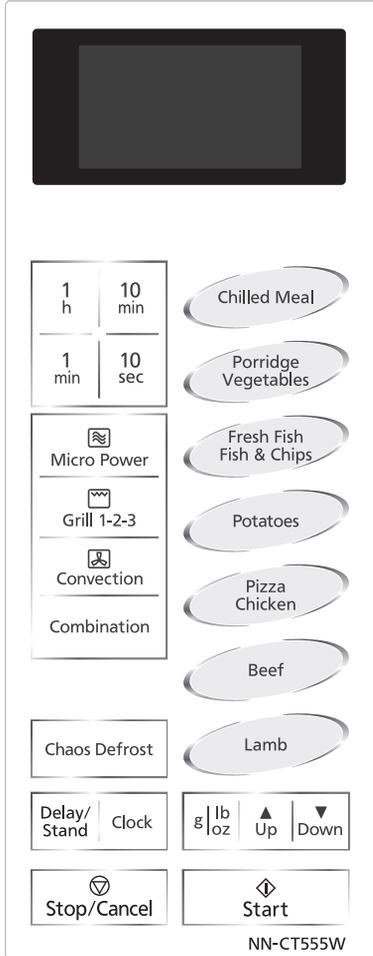

* The design of your control panel may vary from the panel displayed, but the words on the pads will be the same.

1 Plug in

Plug into a 13 amp fused electrical socket. You will be reminded to read your operating instructions.

2 Press clock pad

Set clock as a 24hr clock. Set time using time pads. Press clock pad again. (See page 28 for details).

3 Press Convection pad

() will appear in the display window with the grill setting)

(This procedure is to burn off the oil used for rust protection in the oven.) Press 220 °C setting. Remove all accessories from the oven.

4 Press time pad

Press 1 min pad until 5 minutes is displayed in the window.

5 Press start pad

The time will be displayed in the window and count down. The oven will beep at the end of the program. The oven is now ready to use.

Caution: Heating elements and oven will be hot.

6 Demonstration mode


This is to enable you to experiment setting various programs. (The letter D will always appear in the display window. This is to confirm that there is no microwave power produced and it is safe to use the oven without any food). To select this mode press the Microwave Pad once and then Stop/Cancel 4 times. "Demo mode press any key" will appear. To cancel press the Microwave Pad once and then Stop/Cancel 4 times.

7 Child lock

To operate the child lock facility press the Start pad three times, this will deactivate the microwave. "Lock" will appear in the display and none of the controls will operate. To clear child lock facility press Stop/Cancel three times. To activate child lock, Start must be pressed 3 times within a 10 second period. Child Lock can be set when a colon or the time of day is displayed.

Setting the clock

Example of how to set 11.25am.

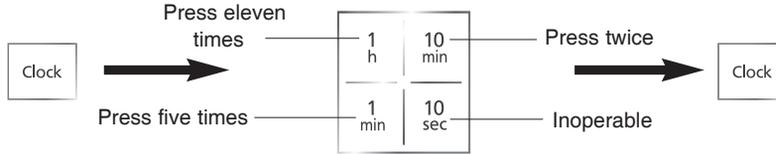

- **Press clock pad**
- **Press time pads**
- **Press clock pad**

“SET TIME” will appear in the display window, and the colon starts to blink.

Enter time of day by pressing Time pads
e.g. 11.25am (24hr clock).

Colon stops blinking. Time of day is now locked into the display.

N.B.

1. To reset time of day, repeat step 1 through to step 3.
2. The clock will keep the time of day as long as the oven is plugged in and electricity is supplied.
3. **This is a 24 hour clock.**

Operation guide setting

To assist you in programming your oven, the following operation will appear in the display window. When you become familiar with your oven, the operation guide can be turned off.

To turn off:



OPERATION GUIDE OFF



Colon or time of day appears in the display window.

Tap Delay/Stand four times.

Display window

To turn on:



OPERATION GUIDE ON



Colon or time of day appears in the display window.

Tap Delay/Stand four times.

Display window

Microwave cooking and defrosting


There are 6 different microwave power levels available.

Selecting microwave power level



- Press this pad until the power you require appears in the display window. The microwave symbol will also appear.

Press	Power level	Wattage
once	High	1000 W
twice	Defrost	270 W
3 times	Medium	600 W
4 times	Low	440 W
5 times	Simmer	250 W
6 time	Warm	100 W

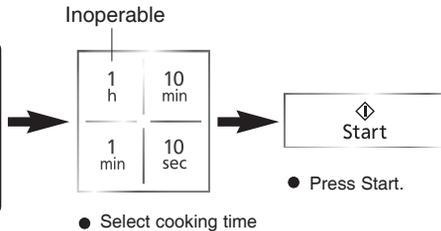


- Select cooking time

N.B.

1. Maximum time that can be set on HIGH power is 30 min.
2. On all power levels, except HIGH power, the maximum time that can be set is 99 minutes, 50 seconds. The 1h pad is inoperable.

Microwave cooking and defrosting

Accessory to use:

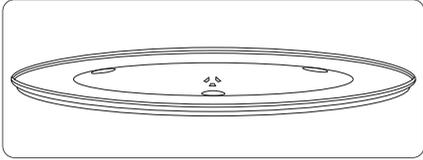

When using your oven on MICROWAVE only, the glass turntable provided must always be in position. **DO NOT** attempt to use microwave only with any metal accessory in the oven.

DO NOT place food directly onto the turntable except in the case of jacket potatoes cooked by MICROWAVE only.

Foods reheated or cooked by MICROWAVE only are normally covered with a lid or cling film, unless otherwise stated.

Auto weight defrost - Chaos Defrost

With this feature you can defrost frozen foods according to the weight. Select the category and set the weight of the food. The weight can be programmed in pounds and ounces or grams. The weight starts from the minimum weight for each category.



- Select the desired program by pressing pad once, twice or three times. The microwave and defrost symbols will also appear.
- Press to select g or lb and oz. Default weight is g.
- Enter the weight by pressing the up & down pads. The “up” pad will start with the minimum weight for each food.
- Press Start.

Program	Weight range	Suitable foods
1 Bread	100 - 900 g (4 oz - 2 lb)	Bread and rolls. Turn at beep. Standing time 10-15 mins.
2 Mince / chops	200 - 1200 g (7oz - 2 lb 10 oz)	Small pieces of meat, minced meat, chicken portions, steaks, chops. Turn at beeps. Standing time 15-30 mins.
3 Meat joints	400 - 2500 g (14 oz - 5 lb 8oz)	Whole chicken, meat joints. Turn at beeps and shield. Standing time of at least 1 hour.

Auto weight defrost programs

This feature allows you to defrost minced meat, chops, chicken portions, meat joints and bread.

The CHAOS defrost pad should be pressed to select the correct category and then enter in the weight of the food in grams or pounds and ounces using the appropriate pads (See page 29).

Foods should be placed in a suitable dish, whole chickens and joints of meat should be on an upturned saucer or on a rack. Chops, chicken portions and slices of bread should be placed in a single layer. It is not necessary to cover the foods.

The CHAOS Theory principle is used in Auto Weight defrost programs to give you a quick and more even defrost.

The CHAOS system uses a random sequence of pulsing microwave energy which speeds up the defrosting process.

During the program the oven will beep to remind you to check the food.

IT IS ESSENTIAL THAT YOU TURN AND STIR THE FOOD FREQUENTLY AND SHIELD IF NECESSARY (See below and page 31).


On hearing the first beep you should TURN and SHIELD (if possible). On the second beep you should turn the food or break it up.

1st Beep



Turn

1st Beep

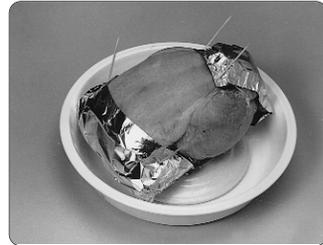

or Shield

2nd Beep



Turn or break up

Auto weight defrost programs

Chaos Defrost

Category 1 Bread

The Bread Program is suitable for defrosting small items e.g. rolls, buns and slices of bread which are required for immediate use. Small items may feel warm immediately after defrosting. Loaves can also be defrosted on this program but these will require standing time to allow the centre to thaw out. Standing time can be shortened if slices are separated and buns and loaves cut in half. Items should be turned halfway during defrosting. **THIS PROGRAM IS NOT SUITABLE FOR CREAM CAKES OR DESSERTS** e.g. cheesecake.

Category 2 Mince / chops (mince/chops/chicken portions)

It is necessary for mince to be broken up frequently during defrosting and this is best carried out in a large shallow dish. Chops and chicken portions should be arranged in a single layer and turned frequently.

Category 3 Meat joints/whole chickens

Meat joints and chickens will require shielding during defrosting especially if they are particularly fatty pieces. This is to prevent over defrosting on the outside edges. Smooth foil secured with cocktail sticks should be used. **DO NOT ALLOW THE FOIL TO TOUCH THE WALLS OF THE OVEN.** Back fat of joints, legs, wings and breast bones need shielding (see photograph on page 30). Standing time of at least 1 hour should be allowed (rolled joints may require longer) before cooking to ensure the centre is fully defrosted.

Defrosting guidelines

Tips

1. Check foods during defrosting. Foods vary in their defrosting speed.
2. It is not necessary to cover the food.
3. Always turn or stir the food especially when the oven "beeps". Shield if necessary (see point 5).
4. Minced meat/chops/chicken portions should be broken up or separated as soon as possible and placed in a single layer.
5. Shielding prevents food cooking. It is essential when defrosting chickens and joints of meat. The outside thaws out first, so protect wings/breast/fat with smooth pieces of aluminium foil secured with cocktail sticks.
6. Allow standing time so that the centre of the food thaws out. (minimum 1 hour for joints of meat and whole chickens)

Defrosting using defrost power & time


By selecting the DEFROST power level from the microwave power pad, and setting a time, you can defrost food in your microwave. The biggest challenge is getting the inside defrosted before the outside starts to cook.

For this reason a defrost program alternates between a defrost power and a standing time. The name for this type of defrost is cyclic and during the standing stages there is not any microwave power in the oven, although the light will remain on and the

turntable will turn. The automatic stand times ensure a more even defrost but it is still necessary to allow for standing time before use. Place foods in a suitable container. Meat joints and chickens should be placed on an upturned saucer.



Separate chops and small items e.g. bread slices where possible.

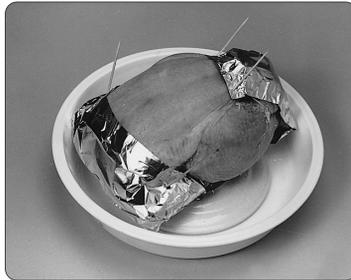

Chickens and joints of meat will require shielding during defrosting.



Turn dense foods and meat 2 or 3 times during defrosting.



Break up small items e.g. minced meat, frequently during defrosting.

Defrosting foods using defrost power & time

The times given below are a guideline only. Always check the progress of the food by opening the oven door and then re-starting. For larger quantities adjust times accordingly. Food should not be covered during defrosting.

Meat	Defrosting time	Method	Standing time
Beef/lamb/ Pork joint	16-18 mins. 450g (1lb)	Place in a suitable dish or on an upturned saucer or use a rack. Turn 3-4 times. Shield.	60 mins.
Minced beef	12 mins. 450g (1lb)	Place in a suitable dish. Break up and turn 3-4 times.	15 mins.
Chops	10-12 mins. 450g (1lb)	Place in a suitable dish in a single layer. Turn twice. Shield if necessary.	15 mins.
Sausages	12 mins. 450g (1lb)	Place in a suitable dish in a single layer. Turn twice. Shield if necessary.	15 mins.
Bacon rashers	6-8 mins. 450g (1lb)	Place in a suitable dish in a single layer. Turn twice. Shield if necessary.	10 mins.
Stewing steak	12 mins. 450g (1lb)	Place in a suitable dish. Break up frequently.	15 mins.
Whole chicken	13-15 mins. 450g (1lb)	Place in a suitable dish on an upturned saucer or use a rack. Turn 3-4 times. Shield.	60 mins.
Chicken portions	10-12 mins. 450g (1lb)	Place in a suitable dish in a single layer. Turn twice. Shield if necessary.	30 mins.


Defrosting foods using defrost power & time

Fish		
Whole	9-10 mins. 450g (1lb)	Place in a suitable dish. Turn twice. Shield. 15 mins.
Fillets/steak	7-8 mins. 450g (1lb)	Place in a suitable dish. Turn twice, separate if necessary. 15 mins.
Prawns	6-7 mins. 450g (1lb)	Place in a suitable dish. Stir twice during defrosting. 10 mins.
General		
Bread sliced	5 mins. 400g (14oz)	Place on the turntable. Separate and rearrange during defrosting. 10 mins.
Slice of bread	30-50 sec. 30g (1oz)	Place on the turntable on a piece of kitchen paper. 1-2 mins.
Pastry	5½ mins. 500g (1lb)	Place on a plate. Turn over half way. 10-15 mins.
Soft fruit	6-7 mins. 450g (1lb)	Place in a suitable dish. Stir twice during defrosting. 10 mins.

Using the Delay/Stand feature


The Delay/Stand pad is used as a timing pad either before, during or after a cooking program. When the Delay/Stand pad is selected with a time, there is no microwave power in the oven during this time.

1. To set a standing time:

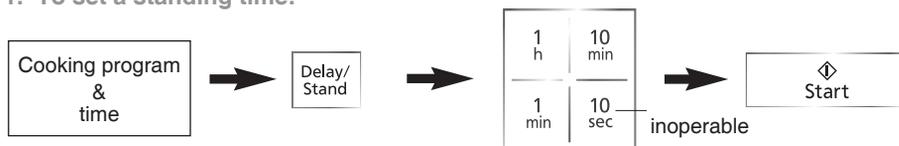

- Set the desired cooking program, by selecting cooking option and time required.
- Then press the Delay/Stand pad.
- Set desired standing time (max 9hrs 59 mins) (10 sec. pad is inoperable). An "H" will appear in the display to denote hours.
- Press Start pad. Cooking program will commence after which the standing time will count down.

2. To set a delay start:

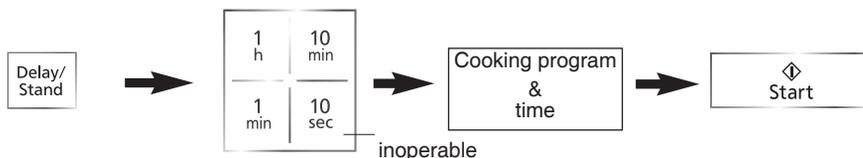

- Press the Delay/Stand pad.
- Set Delay time (max 9hrs 59 mins) (10 sec. pad is inoperable). An "H" will appear in the display to denote hours.
- Set the complete cooking program, by entering cooking option and time required.
- Press Start pad. Delayed time will count down then the cooking program will start.

NB


1. If the oven door is opened during the stand or delay time, the time in the display window will continue to count down.
2. Delay Start cannot be used before an auto program.

Grilling

The Quartz Grill system on the oven gives fast efficient cooking for a wide variety of foods e.g. chops, sausages, steak, toast, oven chips etc.

DO NOT PREHEAT THE GRILL BEFORE USE.

The Enamel tray must be on the glass turntable when using.

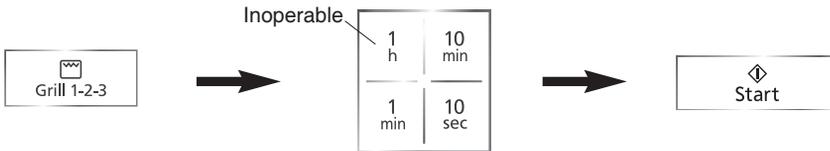

- Select Grill power.**
 Press once for Grill 1 (High), twice for Grill 2 (Medium) or three times for Grill 3 (Low). The grill symbol  will also appear.
- Press Time pads** to enter cooking time. Maximum time is 99 mins. 50 sec, 1 h pad is inoperable.
- Press Start.**
 The cooking program will start and the time in the display will count down.

NOTE: The Grill will only operate with the oven door closed, and there is no microwave power on the GRILL only program.

Grilling times

When using the grill to cook foods, the cooking times will be similar to traditional grilling. Most foods will require turning halfway through the cooking time (see section on oven accessories page 37).

The Grill has three variable settings, Grill 1 (High), Grill 2 (Medium) and Grill 3 (Low). Grill 1 will be the hottest.

Caution:

The ACCESSORIES and surrounding oven will get very hot. Use oven gloves.

Grilling

Oven accessories to use

When grilling foods the glass turntable should be in position, with the Enamel tray and the wire rack on top.



Place food on wire rack on the Enamel tray on the turntable.

The wire rack will allow fat to drip through into the Enamel tray to reduce excess splatter and smoke when grilling steaks, chops and other fatty foods.

Most foods require turning halfway during cooking. When turning food, open oven door and **CAREFULLY** remove the Enamel tray and wire rack by holding the accessories firmly. Use oven gloves when removing accessories as they will be very hot, and so will the roof and walls of the oven.



After turning, return food to the oven, close door and press **START**. The oven will continue to count down the remaining cooking time. It is quite safe to open the oven door at any time to check the progress of the food as it is grilling.

If grilling fish or small items, place the Enamel tray on top of the wire rack.


Guidelines

1. There is no microwave power on the GRILL only program.
2. Use the accessories provided, as explained above.
3. The Grill will only operate with the oven door closed.
4. Most meat items e.g. bacon, sausages, chops can be cooked on the hottest setting - GRILL 1. This setting is also suitable for toasting bread, muffins and teacakes etc.
5. GRILL 2 and GRILL 3 are used for more delicate foods or those that require a longer grill time e.g. fish or chicken portions.
6. **DO NOT PREHEAT THE GRILL.**
7. **NEVER COVER THE FOOD WHEN GRILLING.**
8. **ALWAYS USE OVEN GLOVES WHEN REMOVING THE FOOD AND ACCESSORIES AFTER GRILLING AS THE OVEN AND ACCESSORIES WILL BE VERY HOT.**
9. After grilling it is important that the grill accessories are removed for cleaning before reuse and that the oven walls and floor are wiped with a cloth squeezed in hot soapy water to remove any grease. **DO NOT PUT ACCESSORIES IN DISH WASHER.**

Convection cooking

Your combination oven can be used in convection mode which incorporates a heating element with a fan.

For best results always place food in a preheated oven. The Enamel tray must be on the glass turntable when preheating.

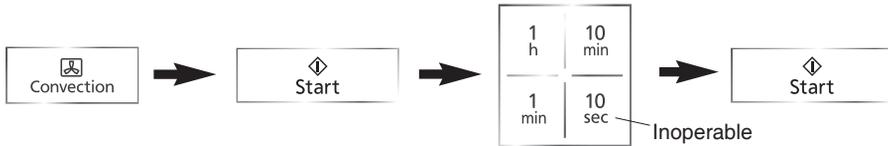

- Press \square to select oven temperature. The oven starts at 150 °C and then for each press the temperature will count up in 10 °C stages to 220 °C, then to, 100 °C, 110 °C etc. The convection symbol \square will also appear.
- Press Start to preheat. A "P" will appear in the display window. When the oven is preheated the oven will beep and the "P" will flash. Then open the door and place the food inside.*
- Press Time pads to enter cooking time. Maximum cooking time is 9 hours, 59 minutes. The 10 sec pad is inoperable.
- Press Start pad. Note: Check that only the convection symbol \square is still in the display. If the microwave symbol \square is displayed this is incorrect and the program should be cancelled. Reselect the convection setting.

* **Note:** Open the door using the Door Release pad, because if the Stop/Cancel pad is pressed the program may be cancelled. Then if the time was entered the oven would revert to cooking on microwave only.

The oven will maintain the selected temperature for approximately 30 minutes. If no food has been placed inside the oven, then it will automatically cancel the cooking program "door open" will appear in the display window. If no cooking time set, oven will revert to time of day after 6 minutes.

CAUTION:

THE ACCESSORIES AND THE SURROUNDING OVEN WILL GET VERY HOT. USE OVEN GLOVES.

Convection cooking

Oven accessories to use

When using the Convection oven the glass turntable should be in position and must have the Enamel tray placed on top.

The food is then placed onto the Enamel tray. Follow your individual recipe guidelines.



Roasting meat:
glass turntable,
Enamel tray.



Baking: glass
turntable, Enamel
tray.

When using the oven as a CONVECTION oven, there is NO MICROWAVE POWER, i.e. the oven is operating as a conventional oven and you can use all your standard metal baking tins and ovenware.

It is not recommended to cook on more than one level when using the CONVECTION oven. When cooking 2 trays of buns etc, cook in two batches.

Combination cooking

Your oven has two methods of cooking by Combination.

1. Convection and Microwave
2. Grill and Microwave

COMBINATION cooking is ideal for many foods. The microwave power cooks them quickly, whilst the oven or grill gives the traditional browning and crispness.

All this happens simultaneously resulting in most foods being cooked in $\frac{1}{2}$ - $\frac{2}{3}$ of the conventional cooking time.

There is no need to preheat on COMBINATION programs, **EXCEPT when cooking pastry.**


It is possible to use smooth seamed metal tins and foil containers on COMBINATION but they must be placed directly onto the Enamel tray on the glass turntable. They must not be placed directly onto the wire rack, or arcing will occur.

If you experience arcing, which is when you see blue sparks or hear crackling noises, the metal container is unsuitable or you have insufficient food in the oven. You should stop the program immediately and change the container or re-program to CONVECTION only.


To cook successfully by COMBINATION you should always use a minimum of 200 g (7oz) food. Small quantities should be cooked by Convection, or Grill.

Combination cooking

Preheat if necessary

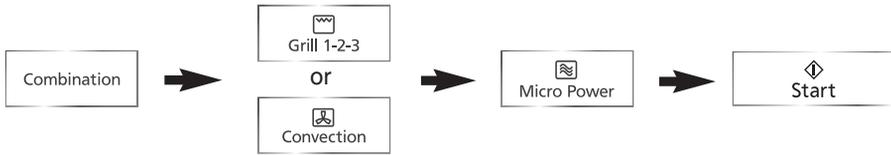

- Press Combination pad. The grill and convection symbols will appear and flash.
- Select first cooking mode. The microwave symbol will appear.
- Select microwave power. Options available depend on first cooking mode selected.
- Press if preheating.* Convection only.

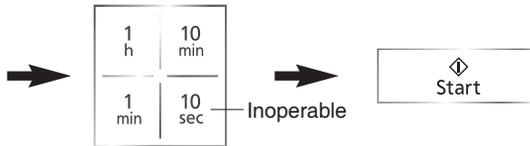

- Set cooking time. The 10 sec. pad is inoperable.
- Press Start pad.

CAUTION:

Take care to use oven gloves when removing dishes from the oven - especially when turning or stirring foods as the oven walls and roof will be very hot.

*** NOTE:**

When placing food in the oven after preheating, just open the door using the Door Release pad, because if STOP/CANCEL pad is pressed the program may be cancelled. Then, if the time was entered, the oven would revert to cooking on microwave only.

Containers to use

DO NOT use plastic MICROWAVE containers on Combination Programs (unless suitable for combination cooking). Dishes must be able to withstand the heat of the top grill. Do not put dishes on wire rack directly under the grill, place on Enamel tray on glass turntable.

Oven accessories

When using any Combination cooking program the glass turntable should be in position and must have the Enamel tray placed on top, unless otherwise stated.


Combination 1. Convection and Microwave

This is the most popular combination mode combining Convection heat with Microwave Power. Casseroles, meat joints, jacket potatoes and pastries are very successful using this combination. Unsuitable foods are those which contain whisked eggs, meringues, rich fruit cakes, biscuits and yorkshire puddings.

It is not necessary to preheat on combination except when cooking pastry dishes. For pastry dishes preheat oven to 210°C on Convection so that the oven is hot, and then select the desired Combination program or follow recipe guidelines.



- Press Combination pad. The grill and convection symbols will appear and flash.
- Press to select oven temperature. The oven starts at 150°C, and then for each press the temperature will count up in 10°C stages to 220°C, then to 100°C, 110°C etc. The grill symbol will disappear and the convection symbol will stop flashing. The microwave symbol appears and starts to flash.
- Press Micro power pad to select Microwave setting. HIGH & DEFROST are not available. The microwave symbol will stop flashing.

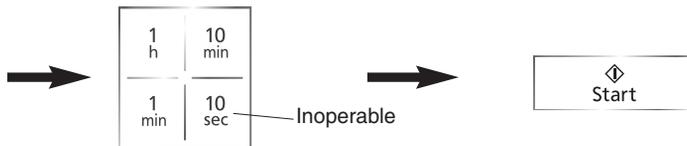

- Press to enter required cooking time. 10 sec pad is inoperable.
- Press Start pad.

Combination 1. Convection and Microwave

Oven accessories to use

When using Combination cooking the glass turntable should be in position and must have the Enamel tray on top, unless otherwise stated.



Items of food can be placed onto the wire rack on the Enamel tray on the glass turntable. Heatproof dishes of food should be placed directly onto the Enamel tray on the glass turntable.



Joints and portions of meat should be placed on an upturned saucer on the Enamel tray on the glass turntable. Alternatively they can be placed in a heatproof dish on the Enamel tray on the glass turntable.



Recipes using foil or metal containers e.g. cakes and pastries should be placed directly onto the Enamel tray on glass turntable.

Combination 1. Convection and Microwave

Guidelines

- Food is usually cooked UNCOVERED.
- After cooking it is important that the accessories are removed for cleaning before re-use and that the oven walls and floor are wiped with a cloth squeezed in hot soapy water to remove any grease. DO NOT PUT ACCESSORIES IN THE DISHWASHER.

The chart below gives suggestions for Combination programs. For cooking times refer to cooking charts or a similar recipe in the book. It is not possible to use HIGH or DEFROST Microwave Power in this mode.

Press Combination pad first, then select CONVECTION temperature. Lastly, select Microwave Power and set cooking time.		
Oven temperature	Microwave Power	Use
220°C	WARM	Nuggets, sausage rolls apple pie, bread and butter pudding.
220°C	SIMMER	Quiche, frozen garlic baguette, part baked rolls, meat pies, cottage pie, fish pie.
190°C	SIMMER	Whole chicken / turkey
180°C	SIMMER	Joints lamb - beef
170°C	LOW	Joints pork
160°C	WARM	Casseroles

Foods should always be cooked until browned and piping hot.

CAUTION:

ALWAYS USE OVEN GLOVES WHEN REMOVING DISHES FROM THE OVEN - ESPECIALLY WHEN TURNING OR STIRRING FOODS, AS THE ACCESSORIES AND SURROUNDING OVEN WILL GET VERY HOT.

Combination 2. Grill and Microwave

This Combination mode is suitable for foods which are normally grilled and for reheating small savoury items.

Do not use this program with less than 200 g (7 oz) of food.

It is NOT necessary to preheat when using this Combination mode and food should always be cooked uncovered.

The Grill will glow on and off during cooking - this is normal.

Grill 1 - HIGH

Grill 2 - MEDIUM

Grill 3 - LOW



- Press Combination pad. The grill  and convection  symbols will appear and flash.
- Select Grill Power. Press once for Grill 1 (High), twice for Grill 2 (Medium) or three times for Grill 3 (Low). The convection symbol  will disappear and the grill symbol  will stop flashing. The microwave symbol  appears and starts to flash.
- Select Microwave Power. Keep pressing this pad until the power you require appears in the display window. High and Defrost are not available. The microwave symbol  will stop flashing.



- Press to enter required cooking time. 10 sec. pad is inoperable.
- Press Start pad.

Combination 2. Grill and Microwave

Oven accessories to use

When using Combination cooking the glass turntable should be in position and must have the Enamel tray on top, unless otherwise stated.



Food should be placed directly onto the wire rack on the Enamel tray. This is then placed on the glass turntable.

When cooking fish or small items, food can be placed directly on the Enamel tray on top of the wire rack.



Guidelines

- Food is always cooked UNCOVERED.
- To turn food just press the door release pad, remove the Enamel Tray and Wire Rack, turn the food, return to the oven, close the door and press START pad. The oven will continue to countdown the remaining cooking time.
- After Grilling it is important that the Grill accessories are removed for cleaning before reuse and that the oven walls and floor are wiped with a cloth squeezed in hot soapy water to remove any grease. DO NOT PUT ACCESSORIES IN THE DISHWASHER.



Combination 2. Grill and Microwave

For advice on cooking times refer to cooking charts and recipes in this book.
Foods should always be cooked until browned and piping hot.

CAUTION:

**ALWAYS USE OVEN GLOVES WHEN REMOVING DISHES FROM THE OVEN -
ESPECIALLY WHEN TURNING OR STIRRING FOODS, AS THE ACCESSORIES AND
SURROUNDING OVEN WILL GET VERY HOT.**

*** NOTE:**

When placing food in the oven after preheating, just open the door using the Door Release pad, because if STOP/CANCEL pad is pressed the program may be cancelled. Then, if the time was entered, the oven would revert to cooking on microwave only.

Containers to use


DO NOT use plastic MICROWAVE containers on Combination programs (unless suitable for combination cooking). Dishes must be able to withstand the heat of the top grill. Do not put dishes on wire rack directly under the grill, use the Enamel tray.



Multi-stage cooking

Example:

To cook on **Medium** for 2 minutes, cook on **180°C** for 15 minutes and cook on **Grill 1** for 10 minutes.

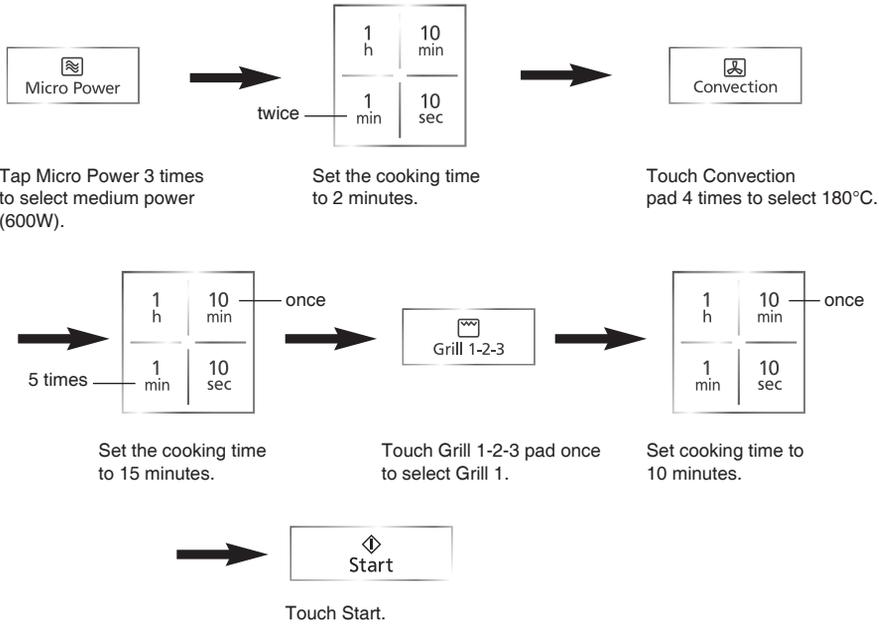

■ Note

1. For 3 stage cooking, enter another cooking program before touching Start.
2. During operation, touching Stop/Cancel once will stop the operation. Touching Start will re-start the programmed operation. Touching Stop/Cancel twice will stop and clear the programmed operation.
3. Whilst not operating, touching Stop/Cancel will clear the selected program.
4. Auto programs cannot be used with multi-stage cooking.
5. Delay/stand feature can be used with multi-stage cooking.

Auto weight cook programs

This feature allows you to cook or reheat ten foods by setting the weight only. The oven determines the Microwave power level and/or Combination setting, then the cooking time automatically. Select the category of food and then just enter the weight. The weight can be entered in grams or pounds and ounces.



- Select the desired Auto Weight program, by pressing the pad. The pad can be pressed once to 4 times to select the desired program.
- Press to select grams or pounds and ounces.



- Enter the weight by pressing the up and down pads.
- Press Start.

When you select an automatic program symbols will appear in the display to show the cooking mode that will be used and the accessories that are needed, in addition to the turntable. These are what they mean:-

-  Microwave
-  Grill
-  Convection

Enamel tray 

Wire rack 

Guidelines for use

The auto weight programs are designed to take the guesswork out of cooking or reheating your food. They must **ONLY** be used for the foods described.

1. Only cook foods within the weight ranges described (see table below).
2. Only use the accessories as indicated on pages 50-54.
3. **DO NOT** cover food unless stated, when use a Combination or Convection program, it will prevent the food browning. The heat will also melt any plastic covering.
4. Most foods benefit from a **STANDING** time after cooking on an auto program, to allow heat to continue conducting to the centre.
5. To allow for some variations that occur in food, check that food is thoroughly cooked and piping hot before serving.

Minimum/maximum weights to use on auto weight programs

Program	Minimum	Maximum
Reheat curry	300 g (11 oz)	800 g (1 lb 10 oz)
Reheat Chinese style	300 g (11 oz)	450 g (1lb)
Reheat pasta	300 g (11 oz)	1600 g (3 lb 9 oz)
Reheat casserole	300 g (11 oz)	900 g (2 lb)
Porridge with milk	50 g (2 oz)	200 g (7 oz)
Porridge with water	50 g (2 oz)	200 g (7 oz)
Fresh vegetables	100 g (4 oz)	800 g (1 lb 10 oz)
Fresh fish	200 g (7 oz)	800 g (1 lb 10 oz)
Fish & Chips	200 g (7 oz)	550 g (1 lb 3 oz)
Jacket potatoes	200 g (7 oz)	1500 g (3 lb 5 oz)
Frozen potato products	200 g (7 oz)	500 g (1 lb 2 oz)
Frozen pizza	100 g (4 oz)	450 g (1lb)
Chicken	900 g (2 lb)	2000 g (4 lb 7 oz)
Beef rare	500 g (1 lb 2 oz)	2000 g (4 lb 7 oz)
Beef medium	500 g (1 lb 2 oz)	2000 g (4 lb 7 oz)
Beef well done	500 g (1 lb 2 oz)	2000 g (4 lb 7 oz)
Lamb medium	1000 g (2 lb 3 oz)	2000 g (4 lb 7 oz)
Lamb well done	1000 g (2 lb 3 oz)	2000 g (4 lb 7 oz)

Auto weight cook programs

Auto Programs must ONLY be used for the foods described below. Programs 4-11 use Microwave power only, Programs 12-16 use a Combination power of Microwave and Convection. Programs 17-21 use Convection power only.

It is necessary to preheat the oven for programs 12, 14-16 (Fish & Chips, Frozen potato products, frozen pizza, Chicken). See below for operation.
eg.



- Select the Chicken program.
- Press the start pad to pre-heat the oven. Pre-heat with Enamel tray on glass tray.
- After pre-heating, beeps sound and 'P' will flash in the display. Place the Whole Chicken in the oven and set weight. The default weight is in grams. Press g/lb pad to select lb/oz. **Take care when handling the hot Enamel tray.**
- Press Start.

***IMPORTANT NOTE:** These programs are not suitable for foods that cannot be stirred e.g. lasagne / shepherds pie.

4 Reheat curry



This program is for reheating a chilled curry convenience meal that can be stirred.* Foods must be in a suitable microwaveable container and have the film pierced. Place on turntable, press the pad once. Enter the weight then press START. Stir halfway. Allow to stand for 1 minute. Ensure that the food is piping hot. Stir the food before serving.

5 Reheat Chinese style



This program is for reheating a chilled chinese style convenience meal.* Foods must be in a suitable microwaveable container and have the film pierced. Press the pad twice. Enter the weight. Press START. Stir halfway. Allow to stand for 1 minute. Ensure food is piping hot. Stir again before serving.

M = Microwave cooking only **C** = Combination e.g. Convection + Micro power **C*** = Convection

Auto weight cook programs

6 Reheat pasta




Chilled Meal

x 3

This program is for reheating a chilled pasta convenience meal that can be stirred.* Foods must be in a suitable microwaveable container and have the film pierced. Place on turntable, press the pad 3 times. Enter the weight then press START. Stir halfway. Allow to stand for 1 minute. Ensure that the food is piping hot. Stir the food before serving.

7 Reheat casserole

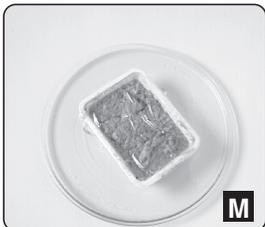

Chilled Meal

x 4

This program is for reheating a chilled casserole convenience meal.* Foods must be in a suitable microwaveable container and have the film pierced. Press the pad 4 times. Enter the weight. Press START. Stir halfway. Allow to stand for 1 minute. Ensure food is piping hot. Stir again before serving.

8 Porridge with milk

Porridge
Vegetables**x 1**

This program is suitable for cooking porridge using plain oats. Use back of pack instructions for quantity of oats to milk. Use whole or semi-skimmed milk. This program is not suitable for making porridge with water or skimmed milk. Use a large round bowl. Do not cover. Place on the glass turntable. Press the pad once. Enter the weight of oats used. Press start. Stir at beeps. Allow to stand for 2 mins. Stir before serving.

9 Porridge with water

Porridge
Vegetables**x 2**

This program is suitable for cooking porridge using plain oats. Use back of pack instructions for quantity of oats to water. This program is not suitable for making porridge with milk. Use a large round bowl. Do not cover. Place on the glass turntable. Press the pad twice. Enter the weight of oats used. Press start. Stir at beeps. Allow to stand for 2 mins. Stir before serving.

10 Fresh vegetables

Porridge
Vegetables**x 3**

To cook FRESH vegetables. Place prepared vegetables into a shallow container on turntable. Add 90 ml (6tbsp) of water. Cover with pierced cling film or lid. Press the pad 3 times. Enter the weight. Press START.

M = Microwave cooking only **C** = Combination e.g. Convection + Micro power **C*** = Convection

Auto weight cook programs

11 Fresh fish



Fresh Fish
Fish & Chips

x 1

To cook FRESH fish. Shield the thinner portions. Place in a shallow container on turntable. Add 15 ml (1tbsp) liquid. Cover with pierced cling film or lid. Press the pad once. Enter the weight. Press START.

12 Fish & Chips




Fresh Fish
Fish & Chips

x 2

This program is suitable for pre-purchased frozen battered or breaded fish and pre-purchased frozen oven chips. This program is suitable for 1 portion of fish and chips. The fish must weigh between 100-250 g and the chips must weigh between 100-300 g. "Press the pad twice. Press the start pad to pre-heat the oven. After pre-heating, beeps sound and 'P' will flash in the display." Spread the fish and chips out on the Enamel tray on wire rack on glass turntable. Enter the weight of the fish and chips. Press START. Turn chips at the beeps. For best results cook in a single layer.

13 Jacket potatoes

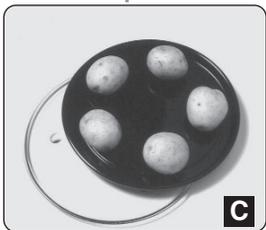


Potatoes

x 1

To cook jacket potatoes with a crisper drier skin. Choose medium sized potatoes 200-250 g (7-9oz), for best results. Wash and dry potatoes and prick with a fork several times. Place on Enamel tray on glass turntable. Press the pad once. Enter total weight of potatoes, then press START.

14 Frozen potato products

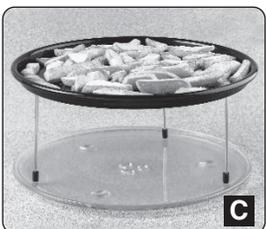

Potatoes

x 2

To cook FROZEN potato products, e.g. Hash browns, croquettes, etc., that are suitable for GRILLING. Press the pad twice. Press the start pad to pre-heat the oven. After pre-heating, beeps sound and 'P' will flash in the display. Spread potato products out on Enamel tray on wire rack on glass turntable. Enter the weight. Press START. Turn during cooking. For best results cook in a single layer.

NOTE: Potato products vary considerably. We suggest checking a few minutes before the end of cooking to assess personal browning.

M = Microwave cooking only

C = Combination e.g. Convection + Micro power

C* = Convection

Auto weight cook programs

15 Frozen pizza



x 1

For reheating and browning frozen, purchased pizza. Press Pad once. Press the start pad to pre-heat the oven. After pre-heating, beeps sound and 'P' will flash in the display. Remove all packaging and place pizza on wire rack on Enamel tray on glass turntable. Enter weight and press START.

16 Chicken



x 2

To cook WHOLE FRESH unstuffed chickens. Cook stuffing separately. Press Pad twice. Press the start pad to pre-heat the oven. After pre-heating, beeps sound and 'P' will flash in the display. Place chicken on Enamel tray and place on glass turntable. Enter in the weight of the chicken, then press START. Start cooking breast side down and turn $\frac{2}{3}$ total time, a beep will sound to turn, taking care with hot juices. Stand for 5 minutes.


17 Beef rare



x 1

For cooking rare fresh roast beef (top side, rump or silverside). Place on Enamel tray on the glass turntable. Press the pad once, enter the weight of the food and press Start. After cooking stand for 10 to 20 mins.

18 Beef medium

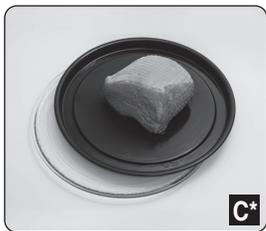

x 2

For cooking medium fresh roast beef (top side, rump or silverside). Place on Enamel tray on the glass turntable. Press the pad twice, enter the weight of the food and press Start. After cooking stand for 10 to 20 mins.

M = Microwave cooking only **C** = Combination e.g. Convection + Micro power **C*** = Convection

Auto weight cook programs

19 Beef well done



x 3

For cooking well done fresh roast beef (top side, rump or silverside). Place on Enamel tray on the glass turntable. Press the pad three times, enter the weight of the food and press Start. After cooking stand for 10 to 20 mins.

20 Lamb medium



x 1

For cooking medium fresh roast leg of lamb with bone. Place on Enamel tray on the glass turntable. Press the pad once, enter the weight of the food and press Start. After cooking stand for 10 to 20 mins.

21 Lamb well done



x 2

For cooking well done fresh roast leg of lamb with bone. Place on Enamel tray on the glass turntable. Press the pad twice, enter the weight of the food and press Start. After cooking stand for 10 to 20 mins.

M = Microwave cooking only **C** = Combination e.g. Convection + Micro power **C*** = Convection

Cooking and reheating guidelines

Most foods reheat very quickly in your oven by HIGH power. Meals can be brought back to serving temperature in just minutes and will taste freshly cooked and NOT leftover. Always check food is piping hot and return to oven if necessary.

As a general rule, always cover wet foods, e.g. soups, casseroles and plated meals.

Do not cover dry foods e.g. bread rolls, mince pies, sausage rolls etc.

The charts on pages 57-75 show you the best way to cook or reheat your favourite foods. The best method depends on the type of food.

Remember when cooking or reheating any food that it should be stirred or turned wherever possible. This ensures even cooking or reheating on the outside and in the centre.

When is food reheated?

Food that has been reheated or cooked should be served "piping hot" i.e. steam should be visibly emitted from all parts. As long as good hygiene practices have been followed during the preparation and storage of the food, then cooking or reheating presents no safety risks.

Foods that cannot be stirred should be cut with a knife to test that they are adequately heated throughout. Even if a manufacturer's instructions or the times in the cookbook have been followed, it is still important to check the food is heated thoroughly. If in doubt, always return to the oven for further reheating.

If you cannot find the equivalent food in the chart then choose a similar type and size listed and adjust the cooking time if necessary.

Plated meals

Everyone's appetite varies and reheat times depend on meal contents. Dense items e.g. mashed potato, should be spread out well. If a lot of gravy is added, extra time may be required. Place denser items to the outside of the plate. An average plated meal will take 4-7 mins on HIGH power to reheat. Do not stack meals.

Canned foods

Remove foods from can and place in a suitable dish before heating.

Soups

Use a bowl and stir before, during and after heating.

Casseroles

Stir halfway through and again at the end of heating.

Cooking and reheating guidelines

Mince pies - caution

REMEMBER even if the pastry is cold to the touch, the filling will be piping hot and will warm the pastry through. Take care not to overheat otherwise burning can occur due to the high fat and sugar content of the filling. Check the temperature of the filling before consuming to avoid burning your mouth.

Christmas puddings and liquids - caution

Take great care when reheating these items. See Page 17 and 18.

Do not leave unattended.

Do not add extra alcohol.

Babies' bottles - caution

Milk or formula **MUST** be shaken thoroughly before heating and again at the end and tested carefully before feeding a baby. See page 57.

For 7-8 fl.oz. of milk from fridge temperature, remove top and teat. Heat on HIGH power for 25-30 secs.

CHECK CAREFULLY.

For 3 fl.oz. of milk from fridge temperature, remove top and teat. Heat on HIGH power for 10-15 secs.

CHECK CAREFULLY.


N.B. Liquid at top of bottle will be much hotter than at bottom and bottle must be shaken thoroughly.

WE DO NOT RECOMMEND THAT YOU USE YOUR MICROWAVE TO STERILISE BABIES' BOTTLES. If you have a special microwave steriliser we urge extreme caution, due to the low quantity of water involved. It is vital to follow the manufacturers instructions implicitly.

The times given in the charts below are a guideline only, and will vary depending on **STARTING temperature, dish size etc.**

HEATING CATEGORY

Your oven is Heating Category E and this is displayed on the front of your oven door. The information on this label will assist you in using new instructions on food packs to enable you to program the best heating time in your oven.

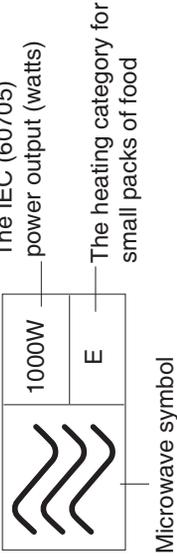

Reheating charts

Food	Weight/ Quality	Power Level	Time to Select (approx)	Instructions/Guidelines
BABIES BOTTLES – CAUTION				
For 7-8 fl.oz of milk from fridge temperature, remove top and teat. Heat on HIGH Power for 25-30 secs. CHECK CAREFULLY				
For 3 fl.oz of milk from fridge temperature, remove top and teat. Heat on HIGH Power for 10-15 secs. CHECK CAREFULLY				
N.B. Liquid at the top of the bottle will be much hotter than at the bottom of the bottle and must be shaken thoroughly before checking the temperature. Milk or formula must always be tested carefully before feeding a baby.				
BREAD – Pre-cooked – Fresh – N.B. Breads reheated by Microwave will have a soft base.				
Croissants	1	HIGH power or GRILL 1	15-20 secs. 2-3 mins.	Place on micro-safe plate on turntable. Do not cover. Place on heatproof plate on turntable. Do not cover.
	4	HIGH power or GRILL 1	30-40 secs. 3-5 mins.	Place on micro-safe plate on turntable. Do not cover. Place on heatproof plate on turntable. Do not cover.
		HIGH power or GRILL 1	15-20 secs. 3-4 mins.	Place on micro-safe plate on turntable. Do not cover. Place on heatproof plate on turntable. Do not cover.
Rolls	1	HIGH power or GRILL 1	30-40 secs. 4-5 mins.	Place on micro-safe plate on turntable. Do not cover. Place on heatproof plate on turntable. Do not cover.
	4	HIGH power or GRILL 1	4-5 mins.	Place on heatproof plate on turntable. Do not cover.

POINTS FOR CHECKING

Always check that food is piping hot after reheating in the microwave. If unsure return to oven. Foods will still require a **STAND TIME**, especially if they cannot be stirred. The denser the food the longer the stand time.

Reheating charts

Food	Weight/ Quality	Power Level	Time to Select (approx)	Instructions/Guidelines
CANNED BEANS, PASTA				
Baked beans	220 g	HIGH	2 mins.	Place in a heatproof bowl on turntable. Cover.
	415 g	HIGH	3 mins.	
Baked beans & Sausages/burgers	420 g	HIGH	3-4 mins.	Place in a heatproof bowl on turntable. Cover.
Ravioli in sauce	200 g	HIGH	2 mins. 30 secs.	Place in a heatproof bowl on turntable. Cover.
	400 g	HIGH	4 mins.	
Spaghetti in tomato sauce	200 g	HIGH	2 mins.	Place in a heatproof bowl on turntable. Cover.
CANNED MEAT				
Hot dogs (drained)	400 g	HIGH	3 mins.	Place in a heatproof bowl on turntable. Cover.
Stewed steak	405 g	HIGH	3-4 mins.	Place in a heatproof bowl on turntable. Cover.
CANNED SOUPS				
Cream of mushroom	425 g	HIGH	4 mins.	Place in a heatproof bowl on turntable. Cover
Minestrone	400 g	HIGH	2 mins. 30 secs.	Place in a heatproof bowl on turntable. Cover. Stir halfway.
CANNED PUDDINGS				
Custard	425 g	HIGH	2 mins.	Place in a heatproof bowl on turntable. Cover. Stir halfway.
Sponge pudding	300 g	HIGH	1 min. 30 secs. to 2 mins.	Place in a heatproof bowl on turntable. Cover.
POINTS FOR CHECKING				
Always check that food is piping hot after reheating in the microwave. If unsure return to oven. Foods will still require a STAND TIME , especially if they cannot be stirred. The denser the food the longer the stand time.				

Reheating charts

Food	Weight/ Quantity	Power Level	Time to Select (approx)	Instructions/Guidelines
CANNED VEGETABLES – Drain where appropriate				
Carrots, whole	410 g	HIGH	3 mins.	Place in a heatproof bowl on turntable. Cover.
Peas, mushy	300 g	HIGH	2 mins.	Place in a heatproof bowl on turntable. Cover. Stir halfway.
Peas, garden	550 g	HIGH	2 mins. 30 secs.	Place in a heatproof bowl on turntable. Cover.
Potatoes new	820 g	HIGH	5 mins.	Place in a heatproof bowl on turntable. Cover.
Sweetcorn	195 g	HIGH	1 mins. 30 secs.	Place in a heatproof bowl on turntable. Cover.
	330 g	HIGH	2 - 3 mins.	
Tomatoes, whole	400 g	HIGH	3 mins.	Place in a heatproof bowl on turntable. Cover.
CHRISTMAS PUDDINGS – Do not leave unattended as overheating can cause the food to ignite				
Slice	150 g	HIGH	30 secs.	Place in a heatproof dish on turntable. Cover.
Small	454 g	HIGH	2 mins.	Place in a heatproof dish on turntable. Cover.
Medium	900 g	HIGH	3 mins.	Place in a heatproof dish on turntable. Cover.
Large	1.1 kg	HIGH	3 mins. 30 secs.	Place in a heatproof dish on turntable. Cover.
DRINKS — COFFEE - at room temperature				
1 mug	235 ml	HIGH	1 min. 30 secs. to 2 mins.	Place in a heatproof mug on turntable.
2 mugs	470 ml	HIGH	2 mins. 30 secs.	
DRINKS — MILK - from the fridge				
1 mug	235 ml	MED	2 mins. to 2 mins. 30 secs.	Place in a heatproof mug or jug on turntable.
1 jug	600 ml	MED	4-5 mins.	
POINTS FOR CHECKING				
Always check that food is piping hot after reheating in the microwave. If unsure return to oven. Foods will still require a STAND TIME , especially if they cannot be stirred. The denser the food the longer the stand time.				

Reheating charts

Food	Weight/ Quantity	Power Level	Time to Select (approx)	Instructions/Guidelines
HOMEMADE MEAT DISHES				
Casserole for 2	700 g	HIGH	6-8 mins.	Place in a heatproof dish on turntable. Cover.
Casserole for 4	1 kg	HIGH	10-15 mins.	Place in a heatproof dish on turntable. Cover.
Bolognese sauce/	250 g	HIGH	3 mins.	Place in a heatproof dish on turntable. Cover.
	1 kg	HIGH	8 mins.	
PASTRY PRODUCTS – PRECOOKED – N.B. Pastries reheated by microwave will have a soft base. If pie comes in foil container place directly onto Enamel tray.				
Cornish pastie	180 g (1)	HIGH power or	1-2 mins.	Place in micro-safe dish on turntable. Do not cover.
		Combi: 200°C + WARM power	6-7 mins.	Place on wire rack on Enamel tray on turntable. Do not cover.
	300 g (2)	HIGH power or	3-4 mins.	Place in micro-safe dish on turntable. Do not cover.
		Combi: 200°C + WARM power	6-7 mins.	Place on wire rack on Enamel tray on turntable. Do not cover.
Meat pies	300 g (2)	Combi: 220°C + SIMMER power	5-6 mins.	Place on Enamel tray on turntable.
Steak and kidney Shortcrust pie	250 g (1)	Combi: 200°C + WARM	12 mins.	Place on Enamel tray on turntable.
		HIGH power or	4-5 mins.	Place in micro-safe dish on turntable. Do not cover.
Quiche	400 g (1)	Combi: 220°C + SIMMER power	10 -12 mins.	Place on wire rack on Enamel tray on turntable. Do not cover.
POINTS FOR CHECKING				
Always check that food is piping hot after reheating in the microwave. If unsure return to oven. Foods will still require a STAND TIME, especially if they cannot be stirred. The denser the food the longer the stand time.				

Reheating charts

Food	Weight Quantity	Power Level	Time to Select (approx)	Instructions/Guidelines
Sausage roll	270 g (2)	Combi: 220°C + WARM power	8-9 mins.	Place on wire rack on Enamel tray on turntable. Do not cover.
Xmas mince pies	90 g (2)	HIGH power	10-20 secs.	Place in micro-safe dish on turntable. Do not cover.
PLATED MEALS – HOMEMADE – CHILLED				
Child size	1	HIGH	2-3 mins.	Place on a heatproof plate on turntable. Cover.
Adult size	1	HIGH	4-5 mins.	Place on a heatproof plate on turntable. Cover.
PUDDINGS AND DESSERTS – Transfer puddings to a heatproof dish				
Apple pie		HIGH or Combi: 220°C + WARM power	3-4 mins. 10-11 mins.	Place in microwave-safe dish on turntable. Do not cover. Place on Enamel tray on turntable. Do not cover.
Apple and blackcurrant pies	x 6	Convection: 220°C	5 mins.	Place in foil cases on wire rack on Enamel tray on turntable. Do not cover.
Bread and butter pudding		HIGH or Combi: 220°C + WARM power	2-3 mins. 10-12 mins.	Place on turntable. Do not cover. Place on Enamel tray on turntable. Do not cover.
Custard	300 ml	HIGH	1 min 30 secs - 2 mins.	Place in large jug. Stir during reheating.
Fruit crumble	500 g	HIGH or Combi: 220°C + WARM power	1 min. 20 secs. 10-15 mins.	Place on turntable. Do not cover. Place on Enamel tray on turntable. Do not cover.
Jam roly poly	730 g	HIGH	4-5 mins.	Place on turntable. Do not cover.
POINTS FOR CHECKING Always check that food is piping hot after reheating in the microwave. If unsure return to oven. Foods will still require a STAND TIME , especially if they cannot be stirred. The denser the food the longer the stand time.				

Reheating charts

Food	Weight Quantity	Power Level	Time to Select (approx)	Instructions/Guidelines
PURCHASED CONVENIENCE FOODS – CHILLED N.B. Transfer food from foil container to a similar sized heat-proof dish.				
Breaded mushrooms	310 g	Convection: 220°C	15 mins.	Place on Enamel tray on wire rack on turntable.
Cottage pie	300 g	HIGH power or	3-4 mins.	Place on turntable.
		Combi: 220°C + SIMMER power	13-15 mins.	Place on Enamel tray on turntable. Do not cover.
Lasagne	340 g	MEDIUM power or	5-7 mins.	Place on turntable.
		Combi: 200°C + LOW power	13-15 mins.	Place on Enamel tray on turntable. Do not cover.
Onion bhajjis, pakora & felafel	280 g (6)	Convection: 220°C	8- 10 mins.	Place on Enamel tray on wire rack on turntable. Turn halfway.
Spring rolls or samosas	200 g	Convection: 220°C	15 mins.	Place on wire rack on Enamel tray on turntable. Turn halfway.
Potato wedges	385 g	Convection: 220°C	10 mins.	Place on Enamel tray on wire rack on turntable. Turn halfway.
		HIGH power or	6-8 mins.	Place on turntable.
Vegetable bake	454 g	Combi: 200°C + SIMMER power	12-14 mins.	Place on Enamel tray on turntable. Do not cover.

POINTS FOR CHECKING

Always check that food is piping hot after reheating in the microwave. If unsure return to oven. Foods will still require a STAND TIME, especially if they cannot be stirred. The denser the food the longer the stand time.

Reheating charts

Food	Weight Quantity	Power Level	Time to Select (approx)	Instructions/Guidelines
PURCHASED CONVENIENCE FOODS – FROZEN – N.B. Transfer food from foil container to a similar sized heat-proof dish. Plastic dishes designed for microwave and conventional ovens may be used with care.				
Golden drummers	340 g (6)	GRILL 1	18 mins.	Place on Enamel tray on wire rack on turntable. Turn halfway.
Lasagne	400 g	DEFROST power then HIGH power or	8 mins. 8-9 mins.	Place on turntable.
		Combi: 220°C + SIMMER power	22-25 mins.	Place on Enamel tray on turntable.
Breaded onion rings	250 g	GRILL 1	10-12 mins.	Place on Enamel tray on wire rack on turntable. Turn halfway.
Fish pie	360 g	HIGH power or	7-8 mins.	Place on turntable.
		Combi: 220°C + SIMMER power	18 mins.	Place on Enamel tray on turntable.
Shepherd's pie	400 g	DEFROST power then HIGH power or	10 mins. 6-8 mins.	Place on turntable.
		Combi: 220°C + SIMMER power	20-25 mins.	Place on Enamel tray on turntable.
<p>POINTS FOR CHECKING Always check that food is piping hot after reheating in the microwave. If unsure return to oven. Foods will still require a STAND TIME, especially if they cannot be stirred. The denser the food the longer the stand time.</p>				

Cooking charts

Food	Weight/ Quantity	Choice of Cooking Modes	Time (mins.)	Instructions/Guidelines
BREAD – Frozen				
Part-baked rolls	200 g (4)	Combi:220°C + SIMMER power	15-20 mins.	Place on Enamel tray on turntable.
Part-baked Garlic baguette	170 g (1)	Combi:220°C + SIMMER power	10-12 mins.	Place on Enamel tray on turntable.
BACON – from raw				
Rashers	260 g (8)	HIGH power	4-6 mins. or 45 secs. per rasher	Place on micro-safe rack or plate on turntable and cover with kitchen towel to minimise splatter.
		or GRILL 1	10-12 mins.	Place on Enamel tray on wire rack on turntable. Turn halfway.
Steaks	255 g (2)	HIGH power	4-5 mins.	Place on micro-safe rack or plate on turntable.
		or GRILL 1	15-18 mins.	Place on wire rack on Enamel tray on turntable. Turn halfway.
BEANS & PULSES – should be pre-soaked (except lentils)				
Black eyed beans	225 g	HIGH power then SIMMER	10 mins. 25-30 mins.	Use 600 ml (1pt) boiling water in a large bowl Cover.
		HIGH power then SIMMER	10 mins. 40 mins.	Use 600 ml (1pt) boiling water in a large bowl Cover.
Lentils	225 g	MEDIUM power	10-15 mins.	Use 600 ml (1pt) boiling water in a large bowl Cover.
Red kidney beans	225 g	HIGH power	15 mins.	Use 600 ml (1pt) boiling water in a large bowl Cover.
		then SIMMER	40 mins.	
POINTS FOR CHECKING				
Always check that food is piping hot after reheating in the microwave. If unsure return to oven. Foods will still require a STAND TIME , especially if they cannot be stirred. The denser the food the longer the stand time.				

Cooking charts

Food	Weight/ Quantity	Choice of Cooking Modes	Time (mins.)	Instructions/Guidelines
BEEF – Joints from raw – Caution: Hot fat! Remove dish with care. For Guidelines see Meat Chapter page 84.				
Topside, forerib, Sirloin		Combi: 180°C + SIMMER power	14-16 mins. per 450 g	Place on an upturned saucer on Enamel tray on turntable. Turn halfway.
Mince		HIGH then MEDIUM POWER	10 mins. then 15 mins. per 450 g	Place in micro safe dish with stock and seasonings on turntable. Stir halfway. Cover.
Rump/sirloin	300 g (2)	MEDIUM power or GRILL 1	6-8 mins. 12 mins.	Place on micro-safe rack or plate on turntable. Cover. Place on wire rack on Enamel tray on turntable. Turn halfway.
		HIGH then SIMMER POWER or Combi: 160°C + WARM power	10 mins. then 60 mins. 1 hr-1hr 40 mins.	Place in micro-safe dish with stock and vegetables on turntable. Stir halfway. Cover. Place in casserole dish with stock and vegetables with lid on Enamel tray on turntable. Stir halfway.
BEEFBURGERS – Fresh from raw – Caution: Hot fat! Remove grill accessory with care.				
	340 g (2)	HIGH power or GRILL 1	3-4 mins. 15-17 mins.	Place on micro-safe rack or plate on turntable. Cover. Place on wire rack on Enamel tray on turntable. Turn halfway.
BEEFBURGERS – Frozen from raw – Caution: Hot fat! Remove grill accessory with care.				
	227 g (4)	HIGH power or GRILL 1	6-8 mins. 12-16 mins.	Place on micro-safe rack or plate on turntable. Cover. Place on wire rack on Enamel tray on turntable. Turn halfway.
POINTS FOR CHECKING Always check that food is piping hot after reheating in the microwave. If unsure return to oven. Foods will still require a STAND TIME, especially if they cannot be stirred. The denser the food the longer the stand time.				

Cooking charts

Food	Weight/ Quantity	Time (mins.)	Time (mins.)	Instructions/Guidelines
CHICKEN from raw – CAUTION: Hot Fat! Remove accessory with care. For Guidelines see Meat Chapter page 84.				
Breasts, boneless	500 g (4)	MEDIUM power or	12-14 mins.	Place on micro-safe rack or plate on turntable. Cover.
		GRILL 1 or	30-35 mins.	Place on wire rack on Enamel tray on turntable. Turn halfway.
Drumsticks	900 g (8)	MEDIUM power or	12-14 mins.	Place on micro-safe rack or plate on turntable. Cover.
		Convection: 220°C	25-30 mins.	Place on wire rack on Enamel tray on turntable.
Kiev (fresh)	300 g (2) 600 g (4)	Convection: 220°C	15-17 mins.	Place on wire rack on Enamel tray on turntable.
			16-18 mins.	
Nuggets (frozen)	500 g	Combi: 220°C + WARM	15-20 mins.	Place on Enamel tray on wire rack on turntable.
		GRILL 1	15-20 mins.	Place on Enamel tray on wire rack on turntable. Turn halfway.
Nuggets (fresh)	360 g	Combi: 220°C + WARM power	15 mins.	Place on Enamel tray on wire rack on turntable.
		MEDIUM power or	18 mins.	Place on micro-safe rack or plate on turntable. Cover.
Chicken legs	900 g (4)	Combi: 220°C + SIMMER	25-35 mins.	Place on wire rack on Enamel tray on turntable.
		MEDIUM power or	8-9 mins. per 450g	Place in micro-safe dish on turntable. Cover.
Whole		Combi: 190°C + SIMMER power	13-15 mins. per 450g	Place on upturned saucer on Enamel tray on turntable. Start cooking breast side down. Turn halfway. DO NOT COVER.

Cooking charts

Food	Weight/ Quantity	Choice of Cooking Modes	Time (mins.)	Instructions/Guidelines
EGGS – Poached.				
Water	45 ml	HIGH power	40 secs.	
Egg	1	MEDIUM power	50 secs.	
Water	90 ml	HIGH power	1 min.	
Eggs	2	MEDIUM power	1 min. 10 secs.	
Water	135 ml	HIGH power	1 min. 30 secs.	
Eggs	3	MEDIUM power	1min. 30 secs.	
Water	180 ml	HIGH power	2 mins.	
Eggs	4	MEDIUM power	1min. 50 secs.	
EGGS – Scrambled.				
1 Egg		HIGH power	30 secs	
		HIGH power	20 secs	
2 Eggs		HIGH power	50 secs	
		HIGH power	30 secs	
3 Eggs		HIGH power	1min. 20 secs	
		HIGH power	30 secs	
FISH – FRESH from raw – For Guidelines see Fish Chapter page 80.				
Breaded fillets	320 g (2)	GRILL 1	10-15 mins.	Place on Enamel tray on wire rack on turntable. Turn halfway.
Cakes	180 g (2)	GRILL 1	10-12 mins.	Place on Enamel tray on wire rack on turntable. Turn halfway.
Fillets	420 g (2)	HIGH power	3-5 mins.	Place in micro-safe dish. Add 30 ml of liquid. Cover.
		or GRILL 1	12-14 mins.	Place on Enamel tray on wire rack on turntable. Turn halfway.
POINTS FOR CHECKING				
Always check that food is piping hot after reheating in the microwave. If unsure return to oven. Foods will still require a STAND TIME , especially if they cannot be stirred. The denser the food the longer the stand time.				

Cooking charts

Food	Weight/ Quantity	Choice of Cooking Modes	Time (mins.)	Instructions/Guidelines
FISH – FRESH from raw – For Guidelines see Fish Chapter page 80.				
Steaks	350 g (2)	HIGH power or GRILL 2	3-4 mins.	Place in micro-safe dish. Add 30 ml of liquid. Cover.
Whole	330 g (1)	HIGH power or GRILL 2	12-16 mins. 4-5 mins. 14 mins.	Place on Enamel tray on wire rack on turntable. Turn halfway. Place in micro-safe dish. Add 30 ml of liquid. Cover. Place on Enamel tray on wire rack on turntable. Turn halfway.
FISH - FROZEN from raw - For Guidelines see Fish Chapter page 80.				
Breaded Fillets	200 g (2)	GRILL 1 or Convection: 220°C	12-15 mins. 14-16 mins.	Place on Enamel tray on wire rack on turntable. Turn halfway.
Cakes	400 g (4)	GRILL 1	15-20 mins.	Place on Enamel tray on wire rack on turntable. Turn halfway.
Fish fingers	246 g (8)	HIGH power or GRILL 1	4-5 mins. 12-14 mins.	Place on micro-safe dish. Do not cover. Place on Enamel tray on wire rack on turntable. Turn halfway.
Haddock fillets	300 g (3)	HIGH power or GRILL 1	7 mins. 15-20 mins.	Place in micro-safe dish. Add 30 ml of liquid. Cover. Place on Enamel tray on wire rack on turntable. Turn halfway.
Scampi	300 g	GRILL 1 or Combi: 220°C + SIMMER power	15 mins. 10 mins.	Place on Enamel tray on wire rack on turntable. Turn halfway.
Whole	450 g (2)	HIGH power	10-15 mins.	Place in micro-safe dish. Add 30 ml of liquid. Cover.
Steaks	450 g (2)	HIGH power	8-9 mins.	Place in micro-safe dish. Add 30 ml of liquid. Cover.
Boil in the bag	150 g- 170 g	DEFROST then STAND then MEDIUM	4 then 2 then 6 mins.	Place bag sauce side down on a plate. Slash top.
<p>POINTS FOR CHECKING Always check that food is piping hot after reheating in the microwave. If unsure return to oven. Foods will still require a STAND TIME, especially if they cannot be stirred. The denser the food the longer the stand time.</p>				

Cooking charts

Food	Weight/ Quantity	Choice of Cooking Modes	Time (mins.)	Instructions/Guidelines
FRUIT – Peel, slice, chop into even sized pieces. Place in shallow heatproof dish on turntable.				
Apples – poached	450 g	HIGH power	5-6 mins.	Add 300 ml (½ pt) of water. Only half fill dish. Cover.
Apples – stewed	450 g	HIGH power	4-5 mins.	Only half fill dish. Cover.
Peaches – poached	450 g	HIGH power	4-5 mins.	Add 300 ml (½ pt) of water. Only half fill dish. Cover.
Pears – poached	450 g	HIGH power	5-6 mins.	Add 300 ml (½ pt) of water. Only half fill dish. Cover.
Plums – poached	450 g	HIGH power	6-8 mins.	Add 300 ml (½ pt) of water. Only half fill dish. Cover.
Plums – stewed	450 g	HIGH power	8-10 mins.	Add 30 ml (2 tbsps) of water. Only half fill dish. Cover.
Rhubarb – stewed	450 g	HIGH power	5-8 mins.	Only half fill dish. Cover.
LAMB – from raw – CAUTION: Hot Fat! Remove accessory with care. For Guidelines see Meat Chapter page 84.				
Chops, cutlets	330 g (4)	MEDIUM power	6-7 mins.	Place in micro-safe dish or rack on turntable. Cover.
		or GRILL 1	18-20 mins.	Place on wire rack on Enamel tray on turntable. Turn halfway.
Chops, loin	400 g (4)	MEDIUM power	7-8 mins.	Place in micro-safe dish or rack on turntable. Cover.
		or GRILL 1	20 mins.	Place on wire rack on Enamel tray on turntable. Turn halfway.
Joints		Combi: 180°C + SIMMER power	13-15 mins. per 450 g	Place on Enamel tray on turntable. Turn halfway.
Stewing lamb	450 g	HIGH then LOW power or	10 then 40 mins.	Place in micro-safe dish with stock and vegetables on turntable. Stir halfway. Cover
		Combi: 160°C + WARM power	1 hr	Place in casserole, add stock and vegetables, cover with lid on Enamel tray on turntable. Stir halfway.
Casseroling lamb ie. diced shoulder	450 g	HIGH then LOW power or	10 then 60 mins.	Place in micro-safe dish on turntable. Stir halfway. Cover.
		Combi: 160°C + WARM power	1 hr	Place in casserole with lid on Enamel tray on turntable.
POINTS FOR CHECKING				
Always check that food is piping hot after reheating in the microwave. If unsure return to oven. Foods will still require a STAND TIME, especially if they cannot be stirred. The denser the food the longer the stand time.				

Cooking charts

Food	Weight/ Quantity	Choice of Cooking Modes	Time (mins.)	Instructions/Guidelines
PASTA - Place in a large 3 litre (6 pint) microwave safe bowl.				
Twists	225 g	HIGH power	8-10 mins.	Use 1 litre (1 ³ / ₄ pt) boiling water. Add 15 ml oil. Cover. Stir halfway.
Macaroni	225 g	HIGH power	10-12 mins.	
Spaghetti / tagliatelle	225 g	HIGH power	8-10 mins.	Use 1 ¹ / ₂ litres (2 ¹ / ₄ pts) boiling water. Add 15 ml oil. Cover. Stir halfway.
Pasta shells - ie. conchiglie	225 g	HIGH power	10-12 mins.	
PASTRY – UNCOOKED				
Shortcrust flan	23 cm (9")	HIGH power or	3-4 mins.	Prick base of pastry and chill well. Lay piece of kitchen towel in base. Place on turntable.
		Combi: 220°C + SIMMER power	7-8 mins.	
All Butter croissants	250 g (6)	Convection: Pre heat 200°C then 200°C	10-14 mins.	Place on baking sheet on Enamel tray on turntable.
PIZZA – FRESH chilled – N.B. Remove all packaging. Pizzas will have a soft base if cooked by microwave only.				
Deep pan, ham	450 g	HIGH power or	4-6 mins.	Place on micro-safe plate on turntable. Do not cover.
		Convection: 220°C	8-12 mins.	
Thin and crispy	250 g	Combi: 220°C + WARM power or	6-8 mins.	Place directly on wire rack on Enamel tray on turntable. Do not cover.
		Convection: 220°C	8 mins.	
POINTS FOR CHECKING Always check that food is piping hot after reheating in the microwave. If unsure return to oven. Foods will still require a STAND TIME, especially if they cannot be stirred. The denser the food the longer the stand time.				

Cooking charts

Food	Weight/ Quantity	Choice of Cooking Modes	Time (mins.)	Instructions/Guidelines
PIZZA – FROZEN – N.B. Remove all packaging. Pizzas will have a soft base.				
French bread	250 g (2)	Combi: 220°C + SIMMER power	10-12 mins.	Place on wire rack on Enamel tray on turntable. Do not cover.
Pepperoni	420 g	Combi: 220°C + SIMMER power	10-12 mins.	Place on wire rack on Enamel tray on turntable. Do not cover.
PORK – from raw – CAUTION: Hot Fat! Remove accessory with care. For Guidelines see Meat Chapter page 84.				
Chops	425 g	GRILL 1	15-20 mins.	Place on wire rack on Enamel tray on turntable. Turn halfway.
Joints		MEDIUM power or	13-14 mins. per 450 g	Place on upturned saucer in heatproof dish on turntable. Turn joint over halfway during cooking. Drain off fat during cooking.
		Combi: 170°C + LOW power	17-19 mins. per 450 g	Place on Enamel tray. Turn halfway.
Gammon covered with water		HIGH then MEDIUM power	15 mins. then 15-20 mins. per 450 g	Place in large casserole with lid and cover with water.
Tenderloin, whole		Combi: 190°C + WARM power	20-25 mins. per 450g	Place on upturned saucer on Enamel tray on turntable.
Porridge – N.B: Use a large bowl.				
1 serving	½ cup of oats	MEDIUM power	2-2½ mins.	Add 1 cup of water or milk. Stir halfway.
2 servings	1 cup of oats	HIGH power	4-5 mins.	Add 2 cups of water or milk. Stir halfway.
4 servings	2 cups of oats	HIGH power	8-9 mins.	Add 4 cups of water or milk. Stir halfway.
POINTS FOR CHECKING Always check that food is piping hot after reheating in the microwave. If unsure return to oven. Foods will still require a STAND TIME, especially if they cannot be stirred. The denser the food the longer the stand time.				

Cooking charts

Food	Weight/ Quantity	Choice of Cooking Modes	Time (mins.)	Instructions/Guidelines
POTATO PRODUCTS part cooked – FROZEN				
Croquettes	300 g	GRILL 1	15-18 mins.	Place on Enamel tray on wire rack on turntable. Turn halfway.
Hash browns	300 g (7)	GRILL 1	12-15 mins.	Place on Enamel tray on wire rack on turntable. Turn halfway.
	300 g	GRILL 1 or	10-12 mins.	Place on Enamel tray on wire rack on turntable. Turn halfway.
Oven chips & Associated products	450 g	Combi: GRILL 1 + MEDIUM power	8-9 mins.	Place on Enamel tray on wire rack on turntable. Turn halfway.
RICE - Place in a large 3 litre (6 pint) microwave safe bowl				
Basmati	250 g	MEDIUM power	10-15 mins.	
Easycok white	250 g	HIGH power	12-13 mins.	
Easycok brown	250 g	HIGH power	15-20 mins.	Use 600ml (1pt) water. Cover. Stir halfway.
Long grain white	250 g	MEDIUM power	14-18 mins.	
Long grain brown	250 g	MEDIUM power	20-25 mins.	
MILK PUDDING – Use large bowl, cover. Stir halfway.				
Flaked rice	50 g	SIMMER power	20-25 mins.	Add 600 ml (1pt) milk. 30 ml sugar
Pudding rice	50 g	HIGH power then SIMMER	5 mins.	Add 450 ml (¾pt) milk. 30 ml sugar
			35 mins.	
Tapioca	50 g	SIMMER power	30-35 mins.	Add 600 ml (1pt) milk. 30 ml sugar
POINTS FOR CHECKING				
Always check that food is piping hot after reheating in the microwave. If unsure return to oven. Foods will still require a STAND TIME, especially if they cannot be stirred. The denser the food the longer the stand time.				

Cooking charts

Food	Weight/ Quantity	Choice of Cooking Modes	Time (mins.)	Instructions/Guidelines
SAUSAGES from raw – CAUTION: Hot Fat! Remove accessory with care.				
Thick	454 g (8)	GRILL 1	17-18 mins.	Place on wire rack on Enamel tray on turntable. Turn halfway.
TURKEY				
Turkey, whole		Combi: 190°C + SIMMER power	12-14 mins. per 450 g	Place on Enamel tray on turntable. Turn halfway.
FRESH VEGETABLES – Place in shallow micro-safe dish.				
Asparagus	450 g	HIGH power	5-8 mins.	
Broad beans	450 g	HIGH power	5-6 mins.	
Runner beans	450 g	HIGH power	7 mins.	
Beetroot	450 g	MEDIUM power	12-15 mins.	
Broccoli	450 g	HIGH power	8 mins.	
Brussel sprouts	450 g	HIGH power	8-9 mins.	Add 90 ml (6 tbsps) water. Cover.
Cabbage - sliced	450 g	HIGH power	7-9 mins.	
Carrots - sliced	450 g	HIGH power	7-9 mins.	
Cauliflower - florets	450 g	HIGH power	10-12 mins.	
Courgettes	450 g	HIGH power	5 mins.	
POINTS FOR CHECKING Always check that food is piping hot after reheating in the microwave. If unsure return to oven. Foods will still require a STAND TIME, especially if they cannot be stirred. The denser the food the longer the stand time.				

Cooking charts

Food	Weight/ Quantity	Choice of Cooking Modes	Time (mins.)	Instructions/Guidelines
FRESH VEGETABLES – Place in shallow micro-safe dish.				
Corn on the cob	450 g	HIGH power	6-7 mins.	
Leeks - sliced	450 g	HIGH power	7-8 mins.	
Mushrooms	450 g	HIGH power	5 mins.	Add 90 ml (6tbsp) water. Cover.
Parsnips - sliced	450 g	HIGH power	6-7 mins.	
Peas	450 g	HIGH power	4-6 mins.	
Potatoes - boiled	450 g	HIGH power	7-9 mins.	
Potatoes - par-boiled	450 g	HIGH power	5-6 mins.	
Potatoes - jacket (225 g)	1	HIGH power or	5 mins.	Wash and prick skins several times. Place directly on glass turntable if cooking by microwave. If cooked by combination place directly on Enamel tray on turntable. Allow to stand for 5 mins. Or use Auto Program Jacket Potato.
		Combi: 220°C + SIMMER power	15 mins.	
	2	HIGH power or	8 mins.	
		Combi: 220°C + SIMMER power	20 mins.	
	4	HIGH power or	13 mins.	
		Combi: 220°C + SIMMER power	25 mins.	
6	HIGH power	18-20 mins.		
	Combi: 220°C +SIMMER power	30 mins.		
Spinach	450 g	HIGH power	7 mins.	Add 90 ml (6tbsp) water. Cover.
Swede - cubed	450 g	HIGH power	8-12 mins.	
POINTS FOR CHECKING				
Always check that food is piping hot after reheating in the microwave. If unsure return to oven. Foods will still require a STAND TIME , especially if they cannot be stirred. The denser the food the longer the stand time.				

Cooking charts

Food	Weight/ Quantity	Choice of Cooking Modes	Time (mins.)	Instructions/Guidelines
FROZEN VEGETABLES – Place in shallow micro-safe dish.				
Beans - broad	450 g	HIGH power	8 mins.	
Beans - green	450 g	HIGH power	8-9 mins.	
Broccoli	450 g	HIGH power	9 mins.	
Brussels sprouts	450 g	HIGH power	9-10 mins.	
Cabbage - shredded	450 g	HIGH power	5-6 mins.	
Carrots - sliced	450 g	HIGH power	8 mins.	Add 30 ml (2tbsp) water. Cover.
Cauliflower	450 g	HIGH power	10 mins.	
Peas	450 g	HIGH power	6-7 mins.	
Spinach - nuggets	450 g	HIGH power	8-9 mins.	
Sweetcorn	450 g	HIGH power	7 mins.	
MISCELLANEOUS				
Frozen yorkshire puddings	450 g	220°C	15-20 mins.	Place directly onto Enamel tray.
<p>POINTS FOR CHECKING Always check that food is piping hot after reheating in the microwave. If unsure return to oven. Foods will still require a STAND TIME, especially if they cannot be stirred. The denser the food the longer the stand time.</p>				

Increasing and decreasing recipes

Increasing recipes

- To increase a recipe from 4 to 6 servings, increase each ingredient listed by half. To double the quantity, simply double every ingredient listed.
- Do not forget that large quantities will require a larger dish. Make sure that it is deep enough to prevent the recipe from boiling over during cooking.
- Cover as directed in the recipe. Stir or rearrange foods as recommended.
- Increase the stand times by 5 mins. per lb.
- Always check the recipe during cooking.
- When increasing the ingredients to 6 servings, add an extra one third of the original cooking time, i.e. 30 mins. on MEDIUM power for 4 servings will become 40 mins. on MEDIUM power for 6 servings.
- When doubling a recipe from 4 to 8 add on half the original cooking time, i.e. 30 mins. on MEDIUM power for 4 servings will become 45 mins. on MEDIUM power for 8 servings.

Decreasing recipes

- To decrease a recipe from 4 servings to 2 servings, halve the ingredients listed.
- Choose a dish that is proportionally smaller than the one recommended in the recipe, however make sure it is deep enough to stop food boiling over.
- Allow half to two-thirds of the original cooking time, i.e. 30 mins. on MEDIUM power for 4 servings will become 15-20 mins. on MEDIUM power for 2 servings.

Using recipes from other books

The best way to convert a family favourite dish is to find a similar recipe in a cookery book to give you a guide to the correct method and timings to use.

Many cookbooks refer to 650W ovens, however since 1990 oven output powers have been set by a new standard (IEC). When using other cookbooks, the 1000 W output power of your oven must be allowed for. Use the same power level suggested e.g. HIGH or MEDIUM and select the same cooking time suggested, however CHECK the progress of the food during cooking and adjust the time if necessary.

Cooking for one

- For one serving quarter ALL ingredients listed.
- Choose a dish that is proportionally smaller than the one recommended in the recipe.
- Use the same cooking power recommended in the original recipe.
- Start by cooking for one quarter of the recommended cooking time, although extra time in most cases will be required.
- Always check the food during cooking.
- There is not a great saving for reduced quantities of soups, casseroles, stews and rice, as a minimum time is required to tenderise meats and blend flavours.
- When cooking for one it often makes sense to cook for two and plate up both meals. Freeze one meal for a later date.

Soups and starters

Ingredients

25 g (1 oz) butter
 1 medium onion coarsely
 chopped
 700 g (1 1/2 lb) carrots
 thickly sliced
 1 litre (1 3/4 pints) vegetable
 stock
 Grated zest of 1/2 orange
 90 ml (6 tbsp) orange juice
 60 ml (4 tbsp) crème fraîche
 salt and black pepper
 15 ml (1 tbsp) fresh chives,
 cut into pieces

Carrot & orange soup

Serves 4

Dish 3 litre (6pt) bowl Oven Accessory: glass turntable

1. Place the butter and onion in a large bowl. cook on **HIGH** power for 3-4 mins. or until soft.
2. Add the carrots. Cover and cook on **HIGH** power for 8-10 mins. or until the vegetables are softened. Stir halfway.
3. Add stock and orange zest. Cover and cook on **HIGH** power for 5 mins. the **LOW** power for 15 mins. or until the carrots are soft.
4. Place the liquidiser and puree until smooth.
5. Return puree to the bowl and add orange juice. Stir in the crème fraîche and season to taste. Cover and cook on **MEDIUM** power for 3-4 mins. or until piping hot.
6. Garnish with fresh chives.

Ingredients

15 ml (1 tbsp) olive oil
 1 medium onion, coarsely
 chopped
 2 cloves garlic, crushed
 700 g (1 1/2 lb) sweet
 potatoes, peeled and
 chopped
 1 large red pepper,
 deseeded and chopped
 725 ml (1 1/4 pints) vegetable
 stock
 150 ml (1/4 pt) coconut milk
 salt and pepper

Sweet potato soup

Serves 4

Dish: 3 litre (6pt) bowl Oven accessory: glass turntable

1. Place the oil, onion and garlic in a large bowl. Place on base of oven and cook on **MEDIUM** power for 3 minutes, on until soft.
2. Add the potato and pepper and cook on **MEDIUM** power for 5 mins. Add stock, cover and cook **MEDIUM** power for 15 mins, or until the potatoes are soft, stirring halfway.
3. Cool. Place in liquidiser and puree until smooth. Stir in the coconut milk and season to taste.
4. Cover and cook on **MEDIUM** power for 3 mins. or until piping hot.



Ingredients

4 beef tomatoes
seasoning
3 ml (½ tsp) dried basil
4 eggs
200 g (7 oz) mozzarella
cheese

Baked stuffed tomatoes

Serves 4

Dish: Shallow heatproof dish

Oven accessory: glass turntable + Enamel tray

1. Slice the tops off the tomatoes. Deseed, scoop out the centre and discard.
2. Drain tomatoes upside down on kitchen paper then place tomatoes right way up in heatproof dish.
3. Sprinkle inside with salt and pepper and dried basil.
4. Break in whole egg, and cover the top with slices of mozzarella cheese.
5. Cook in preheated oven on **CONVECTION 190°C + SIMMER** for 20-25 mins. or until browned on top.

Ingredients

250 g (9 oz) ready made puff
pastry
30 ml (2 tbsp) olive oil
300 g (11 oz) onions peeled
and sliced
25 g (1oz) pine nuts
100 g (4 oz) feta cheese
crumbled
50 g (2 oz) pitted black olives
roughly chopped
50 g (2 oz) sun-dried
tomatoes (in oil or
rehydrated, roughly chopped
15 g (½ oz) capers
salt and freshly ground black
pepper
fresh oregano sprigs to
garnish

Onion and feta cheese tartlets

Serves 6

Dish: 3 litre (6 pint) bowl and baking sheet 32x23cm
(12 ½ x 9 inches)

Oven accessory: Enamel tray

1. Roll out the puff pastry and cut into 6 circles each 7.5cm (3 inches) in diameter. Chill pastry for 30 mins.
2. Put oil and onions into large bowl and cook on **HIGH** power for 10-12 mins. or until slightly browned. Cool for 5 minutes.
3. Preheat oven on **CONVECTION 200°C** with Enamel tray and baking sheet.
4. Stir nuts, cheese, olives, sun-dried tomatoes and capers into onion mixture. Season well.
5. Place pastry circles on the baking sheet and prick with a fork.
6. Divide the onion mixture among the pastry circles.
7. Cook on **CONVECTION 220°C** for 10 mins.



Ingredients

250 g (9 oz) streaky
unsmoked bacon, derinded
225 g (8 oz) pork fillet
225 g (8 oz) chicken breast
1 onion, finely chopped
2 cloves garlic
100 g (4 oz) pistachio nuts,
shelled
15 ml (1 tbsp) green
peppercorns
30 ml (2 tbsp) brandy
5 ml (1 tsp) dried basil
15 ml (1 tbsp) parsley,
chopped
salt and pepper
1 egg, beaten
225 g (8 oz) thick slice of
ham, cut into thin strips

Pork and chicken terrine

Serves 4-6

Dish: 900 g (2 lb) Pyrex® loaf dish**Oven accessory: glass turntable + Enamel tray**

1. Line base and sides of loaf dish with bacon rashers, stretching each rasher slightly with a knife. Reserve 3-4 rashers for top.
2. Chop pork and chicken coarsely in a food processor. Place in bowl. Process onions and garlic coarsely.
3. Mix together meat, onions, garlic, nuts, peppercorns, brandy, basil, parsley, salt and pepper. Bind together with the egg.
4. Spread half the mixture in the dish. Layer ham on top of the mixture and then spread remaining meat mixture on top. Lay reserved bacon on top. Cover with a piece of greaseproof paper.
5. Cook on **Combination: CONVECTION 160°C + WARM** power for 40 mins. or until firm.

Ingredients

2 ciabatta rolls
1 clove garlic, halved
1 beef tomato
100 g (4 oz) goats cheese
8 stoned black olives
15 ml (1 tbsp) olive oil
fresh basil, chopped
pepper

Goats cheese & basil ciabatta

Serves 4

Oven accessory: glass turntable, Enamel tray + wire rack

1. Halve the rolls, rub each half with garlic and place on the wire rack on Enamel tray. Cook on **GRILL 1** for 3-4 minutes or until lightly toasted.
2. Slice the tomato and goats cheese. Quarter the olives.
3. Top each half with the sliced tomato, crumble the goats cheese and olives. Drizzle with olive oil and place on the wire rack on the Enamel tray. Cook on **GRILL 1** for 5-7 minutes or until the cheese is golden and bubbling.
4. Sprinkle with basil and season with pepper. Serve immediately.

Fish

Fish cooks very well by microwave as it stays moist and the lingering fish smells left in conventional ovens are avoided.

When is fish cooked?

Fish is cooked when it flakes easily and becomes opaque.

For fish with a strong odour, eliminate the smell after cooking by placing 600 ml (1 pt) of boiling water and 1 sliced lemon in a large bowl, cook on SIMMER for 20 mins. Wipe out oven with a dry cloth.



Whole fish

If cooking 2 whole fish together, they should be arranged head to tail for even cooking.

Large whole fish must have the tail and head shielded halfway through cooking with smooth pieces of tin foil secured with cocktail sticks.



Arranging

Thin fillets of fish i.e. plaice, should be rolled up prior to cooking to avoid overcooking on the thinner outside edge and tail.

Fish steaks should be arranged in a circle, thicker part to the outside. Cover with cling film or lid.



Liquid

Fresh fish should always be sprinkled with 30 ml (2 tbsp) of lemon juice, white wine or water.

When cooking **frozen** fish, add liquid as above for even cooking.

Do not sprinkle salt onto fish before cooking as this may make the fish dry.

Noise

During cooking, popping sounds may be heard. This is due to moisture trapped between the flesh, particularly with oily fish such as salmon and mackerel. This can be minimised when cooking if the skin and flesh is pierced several times with a cocktail stick.



Ingredients

350 g (12 oz) peeled potatoes
 25 g (1 oz) butter
 1 small onion, finely chopped
 200 g (7 oz) can tuna, drained
 1 egg, hardboiled, chopped
 30 ml (2 tbsp) fresh parsley, chopped
 10 ml (2 tsp) lemon juice
 salt and pepper
 1 egg, beaten
 100 g (4 oz) breadcrumbs

Tuna fish cakes

Serves 4

Oven accessory: glass turntable + Enamel tray + wire rack

1. Cook potatoes with 45 ml (3 tbsp) water, covered on **HIGH** power for 6-8 mins. or until cooked. Drain.
2. Place butter and onion in a bowl, cover and cook on **HIGH** power for 4 mins. or until soft. Add potatoes and mash.
3. Stir in tuna, hard boiled egg, parsley and lemon juice, season well.
4. Shape into 8 cakes and coat in beaten egg and breadcrumbs.
5. Place on Enamel tray on wire rack and cook on **Combination: CONVECTION 220°C + WARM** power for 12-15 mins. or until brown, turning halfway.

Ingredients

450 g (1 lb) white fish
 50 g (2 oz) butter
 50 g (2 oz) flour
 450 ml (³/₄ pt) milk
 300 ml (¹/₂ pt) white wine
 450 g (1 lb) mixed seafood
 6 gherkins, diced
 15 ml (1 tbsp) fresh parsley
 10 ml (2 tsp) dill
 salt and pepper

Rosti topping:

450 g (1 lb) peeled potatoes
 15 ml (1 tbsp) capers
 50 g (2 oz) butter, melted
 50 g (2 oz) cheddar cheese, grated

Special occasion fish pie

Serves 4

Dish: gratin dish

Oven accessory: glass turntable + Enamel tray

1. Place the white fish with 2 tbsp water in a shallow dish. Cover and cook on **HIGH** power for 4-5 mins or on **AUTO FISH** program. Drain, skin, bone and flake.
2. Make the sauce by melting the butter in a large jug on **HIGH** power for 1 min. Add the flour and stir well. Mix in the milk and wine and cook on **HIGH** power for 4-5 mins. Stir halfway. Mix in the fish, mixed seafood, gherkins and herbs. Season and pour into the dish.
3. Grate the potatoes and mix in the capers, melted butter and grated cheese. Place lightly on the fish sauce without pressing firmly to keep the grated form. Cook on **Combination: CONVECTION 220°C + SIMMER** power for 35-40 mins. or until piping hot and golden.





Ingredients

4 trouts, 350 g (12 oz) each

Stuffing:

1 bunch spring onions, finely chopped

100 g (4 oz) button

mushrooms, finely sliced
grated rind and juice of 1
orange

2½ cm (1") cube fresh
ginger, peeled and grated
dash of Soy sauce

juice of 1 orange

juice of 1 lime

black pepper

25 g (1 oz) butter

Stuffed citrus trout

Serves 4

Oven accessory: glass turntable, Enamel tray and wire rack

1. Wash the fish and pat dry. Fill the fish cavities with the combined stuffing ingredients and arrange the fish in a shallow dish.
2. Pour over the orange and lime juice. Season and marinade for one hour.
3. Dot with butter, place the fish two at a time on the Enamel tray on the wire rack.
4. Cook on **GRILL 1** and **LOW** for 10-12 mins. or until crisp and brown. Turn halfway. Repeat with remaining fish.

Ingredients

100 g (4 oz) broccoli

100 g (4 oz) cauliflower

1 medium red pepper, diced

198 g (7 oz) can salmon,
drained

25 g (1 oz) butter

30 ml (2 tbsp) plain flour

300 ml (½ pt) milk

50 g (2oz) grated tasty
cheese

150 ml (¼ pt) cream
(optional)

salt and pepper to taste

15 g (½ oz) butter

75 g (3 oz) fresh white
breadcrumbs

15 ml (1 tbsp) chopped fresh
parsley

pinch paprika

Salmon & vegetable mornay

Serves 4

Dish: 20 x 25 cm (8" x 10") dish

Oven accessory: glass turntable + Enamel tray

1. Break broccoli and cauliflower into florets, add red pepper and 2 tbsp water. Cover and cook on **HIGH** power for 5-6 mins. or until soft. Drain.
2. Flake salmon and mix with vegetables.
3. Melt butter in jug on **HIGH** power for approx. 20-30 secs. Stir in flour then milk. Cook on **HIGH** power for 2 mins. or until mixture boils and thickens; stir halfway. Stir in cheese, cream and seasoning. Pour cheese sauce over vegetables and salmon.
4. Melt extra butter in a small bowl on **HIGH** power for approx. 15-20 secs. Stir in breadcrumbs, parsley and paprika. Sprinkle over vegetable mixture.
5. Cook on **Combination: 220°C + LOW** power for 10-12 mins. or until golden brown.



Ingredients

225 g (8 oz) tomatoes
 125 ml (4 fl.oz) olive oil
 30 ml (2 tbsp) tomato puree
 2 onions, chopped
 1 large leek, sliced
 4 garlic cloves, crushed
 1.2 ltr (2 pt) fish stock
 salt and black pepper
 150 ml (1/4 pt) dry white wine
 4 sprigs thyme
 small piece of orange peel
 4 strands saffron
 5 ml (1 tsp) chilli sauce
 450 g (1 lb) cod, haddock or coley
 450 g (1 lb) mixed seafood
 4 large fresh prawns
 bunch of dill to garnish

Bouillabaisse

Serves 6

Dish: 3 litre (6 pt) casserole**Oven accessory: glass turntable**

1. Skin the tomatoes and cut into four pieces, removing the cores. Place the oil and tomato puree in a large bowl, heat on **HIGH** power for 1 min. and mix well. Add the onions and leek, cook on **HIGH** power for 3-4 mins. or until soft.
2. Add the garlic, tomatoes, stock, seasoning, wine, thyme, orange peel, saffron and chilli sauce. Heat on **HIGH** power for 3-4 mins. Skin the fish, cut into chunks and add to the tomato liquid. Cook on **HIGH** power for 3-4 mins. or until the fish is cooked. Add the mixed seafood and prawns and heat again for 2-3 mins. on **HIGH** power or until hot, taking care not to overcook the fish.
3. Serve garnished with dill.

Ingredients

50 g (2 oz) butter
 50 g (2 oz) flour
 450 ml (3/4 pt) milk
 100 g (4 oz) Cheddar cheese, grated
 salt and pepper
 pinch grated nutmeg
 450 g (1 lb) frozen spinach
 450 g (1 lb) smoked haddock fillet, skinned
 50 g (2 oz) breadcrumbs
 pinch paprika

Haddock and spinach florentine

Serves 4

Dish: 20 cm (8") square dish**Oven accessory: glass turntable + Enamel tray**

1. Mix together the butter, flour and milk in a large jug and cook uncovered on **HIGH** power for 4-5 mins. or until the sauce has thickened, whisking every minute. Stir in half of the cheese and season well with salt, pepper and nutmeg.
2. Place spinach in the dish and cook covered on **HIGH** power for 6-7 mins. or until cooked. Place in a sieve and drain thoroughly, then place back into the dish.
3. Place the fish in a single layer on top of the spinach. Cover and Cook on **HIGH** power for 4-5 mins. or until tender.
4. Pour the cheese sauce over the fish to cover it completely. Cook uncovered on **HIGH** power for 3 mins. then sprinkle the remaining cheese, breadcrumbs and paprika on top. Cook on **GRILL 1** for 5-6 mins. or until brown and crisp.

Meat and poultry

Guidelines

Defrosted joints

If the meat has previously been frozen, ensure it is properly thawed before cooking by microwave. Defrosted joints of meat must be allowed to **STAND** for a **minimum of 1 hour**, before cooking to ensure the centre is fully defrosted.

Fat

Large amounts of fat absorb microwave energy and can cause the meat next to it to overcook. Always choose joints that aren't excessively fatty.



Standing time

Meat and poultry require a **minimum of 15 mins. STANDING TIME** wrapped in aluminium foil after cooking by microwave. Roast meat is always easier to carve after **STANDING** and the meat will continue to cook during the **STAND TIME**.

Bone

Bone tips on legs of lamb and crown roasts may need shielding when cooked by microwave, to prevent overcooking.

Turning

Joints and poultry **should be turned over** halfway through cooking.

Shielding

Large joints may need shielding with pieces of smooth aluminium foil after half the cooking time to avoid overcooking on the outside edges. Turkeys and large chickens should have their breast meat, legs and wings protected. Secure foil with cocktail sticks and **do not** allow foil to touch the walls of the oven.


How to roast a joint by Combination

Place the joint on Enamel tray and place on glass turntable.

Meat and poultry

How to roast a joint by microwave

To roast basic joints of meat place the joint onto the rack of a microwave roasting set and cover with a dome lid. Alternatively use a large, shallow dish and place the joint on an upturned saucer and cover with cling film.

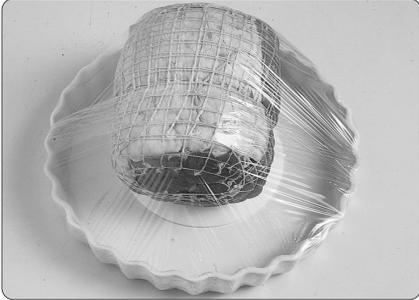

Roasting bags

Roasting bags are useful when split up one side to tent a joint for roasting by power and time.

Do not use the metal twists supplied.

Tips

Braised and stewed meat cooked in a microwave has a slightly firm texture and therefore it is essential to purchase good quality meats.

When cooking a casserole, place a saucer or small upturned plate over the meat to keep it submerged in the juices.

How to cook small cuts of meat by microwave

Some cuts of meat can be cooked successfully by microwave although due to their short cooking times and no heat source, they will not crisp and brown.

They should always be cooked on a microwave rack to lift them out of their juices.



Crispy bacon - place on a microwave safe rack (optional extra obtainable from cookware shops). Cover with a plain piece of kitchen towel to minimise splatter. Cook on **HIGH** power for approx. 45 secs. per rasher, or until desired crispness is achieved.



Ingredients

4 chicken portions approx.
 1.2 kg (2½ lb) in weight
 5 ml (1 tsp) mixed herbs
 salt and pepper
 100 g (4 oz) streaky bacon
 100 g (4 oz) button
 mushrooms
 1 clove garlic, crushed
 450 g (1 lb) whole shallots
 30 ml (2 tbsp) brandy
 300 ml (½ pt) red wine
 300 ml (½ pt) chicken stock
 15 ml (1 tbsp) cornflour

Coq au vin

Serves 4

Dish: large casserole with lid

Oven accessory: glass turntable + Enamel tray

1. Place all ingredients in casserole dish.
2. Cover and cook on **Combination: CONVECTION 160°C + WARM** power for 1hr 10 mins. or until cooked through. Stir halfway during cooking.
3. Remove skin from chicken pieces and skim off any excess fat. Thicken using a little cornflour mixed with water. Serve sprinkled with chopped parsley.

Ingredients

4 chicken breast fillets,
 skinned
 100 g (4 oz) creamed
 coconut
 45 ml (3 tbsp) lemon juice
 30 ml (2 tbsp) soy sauce
 30 ml (2 tbsp) vegetable oil
 2 garlic cloves, crushed
 5 ml (1 tsp) ground turmeric
 5 ml (1 tsp) five-spice powder
 5 ml (1 tsp) coriander seeds
 5 ml (1 tsp) cumin seeds
 90 ml (6 tbsp) peanut butter
 large pinch of chilli powder

Chicken satay

Serves 4-6

Dish: 8 wooden skewers

Oven accessory: glass turntable + Enamel tray + wire rack

1. Cut the chicken into small chunks and place in a bowl. Place 50 g (2 oz) creamed coconut, 30 ml (2 tbsp) lemon juice and 15 ml (1 tbsp) soy sauce into a blender or food processor. Add the oil, garlic, turmeric, five spice, coriander and cumin and blend until smooth.
2. Pour over the chicken. Cover and marinate in the fridge for 2-3 hours or overnight.
3. For the serving sauce: Pour 50 g (2 oz) of creamed coconut into a large jug. Add the peanut butter, 15 ml (1tbsp) of the lemon juice, 15ml (1tbsp) of the soy sauce, the chilli powder and 80 ml water. Cook on **HIGH** power for 3-4 mins. or until the sauce boils and thickens, stirring frequently. Turn into a serving bowl.
4. Thread the chicken onto wooden skewers. Place on wire rack on Enamel tray and cook on **Combination: Convection 220°C + WARM** power for 22 mins. or until cooked through, turning occasionally. Serve hot with sauce for dipping.





Ingredients

675 g (1 1/2 lb) pork ribs
30 ml (2 tbsp) vinegar

Sauce:

45 ml (3 tbsp) tomato sauce
45 ml (3 tbsp) soy sauce
45 ml (3 tbsp) honey
5 ml (1 tsp) dry mustard powder
45 ml (3 tbsp) plum jam

Barbeque spare ribs

Serves 4

Dish: shallow flat based dish

Oven accessory: glass tray then Enamel tray on glass tray

1. Prepare riblets from breast by cutting down between rib bones with a sharp knife. Cut flap end into 2.5 cm (1") wide strips.
2. Place riblets into a large bowl, cover with water and add the vinegar.
3. Cover and cook on **HIGH** power for 8-10 mins. then **SIMMER** power for 25 mins. Drain.
4. Combine all sauce ingredients together and heat on **MEDIUM** for 2 mins. Mix thoroughly.
5. Toss riblets in sauce. Arrange over the base of a shallow dish and cook on Combination: **CONVECTION 190°C + SIMMER** for 30-40 mins. or until riblets are dark brown and crispy. During this final cooking a lot of the fat bakes out of the riblets, making a delicious finger snack.

Ingredients

30 ml (2 tbsp) oil
1 medium onion, chopped
1 green pepper, deseeded and chopped
225 g (8 oz) carrots, sliced
450 g (1 lb) lean pork, cubed
30 ml (2 tbsp) seasoned flour
5 ml (1 tsp) ground bay leaves
5 ml (1 tsp) dried sage salt and pepper
300 ml (1/2 pt) dry cider

Dumplings:

175 g (6 oz) self raising flour
75 g (3 oz) suet
pinch of salt
5 ml (1 tsp) mustard powder
15 ml (1 tbsp) fresh parsley, chopped
150 ml (1/4 pt) cold water

Casserole pork with herby dumplings

Serves 4

Dish: large casserole and lid

Oven accessory: glass turntable + Enamel tray

1. Place oil, onion, green pepper and carrots in dish, cover and cook on **HIGH** power for 5 mins. or until soft.
2. Toss pork in seasoned flour and add to onion mixture. Stir in all other ingredients, cover and cook on **Combination: CONVECTION 160°C + WARM** power for 1 hr or until pork is tender.
3. Whilst cooking make the dumplings by combining the flour, suet, salt, mustard and parsley. Add the water to make a stiff dough. Shape dough into 8 round dumplings.
4. When pork is cooked uncover and place dumplings around the edge of dish. Cook uncovered on **Combination: CONVECTION 160°C + WARM** power for 15 mins. or until dumplings are cooked through.





Ingredients

150 g (6 oz) plain flour
3 ml (½ tsp) salt
2 eggs
300 ml (½ pt) milk and water
25 g (1 oz) oil
450 g (1 lb) sausages

Toad in the hole

Serves 4

Dish: 25 x 18 cm (10" x 7") oblong tin

Oven accessory: glass turntable + Enamel tray

1. Preheat oven on **CONVECTION 220°C**.
2. Sift flour and salt in a bowl. Add egg and half the liquid. Beat until smooth. Gradually stir in remaining liquid.
3. Put oil in tin with sausages on Enamel tray. Cook on **CONVECTION 220°C** for 15 mins.
4. Pour in the batter and cook for 30-35 mins. on **CONVECTION 220°C** or until the batter is well risen and golden brown.

Ingredients

350 g (12 oz) leeks, trimmed
25 g (1 oz) butter
30 ml (2 tbsp) plain flour
300 ml (½ pt) milk
225 g (8 oz) cooked chicken, chopped
100 g (4 oz) ham, chopped
175 g (6 oz) Gruyere cheese, grated
4 frozen individual garlic bread slices

Creamy chicken gratin

Serves 4

Dish: 24 cm (9") round gratin dish

Oven accessory: glass turntable + Enamel tray

1. Slice the leeks and place in a large bowl with the butter. Cover and soften on **HIGH** power for 3-4 mins. or until softened.
2. Add the flour and mix well. Stir in the milk and heat on **HIGH** power for 4-5 mins. or until thickened. Stir halfway. Add the chicken, ham and cheese then season and mix well.
3. Pour into the dish and top with the garlic bread slices. Cook on **Combination: CONVECTION 220°C + LOW** power for 10-15 mins or until piping hot and golden.

Ingredients

700 g (1½ lb) boneless leg of pork, cubed
225 g (8 oz) onion, chopped
450 g (1 lb) parsnips, sliced
1 garlic clove, crushed
15 ml (1 tbsp) ground coriander
5 ml (1 tsp) cumin seeds or ground cumin
30 ml (2 tbsp) flour
300 ml (½ pt) beef stock
300 ml (½ pt) apple juice
salt and pepper

Harvest pork casserole

Serves 4-6

Dish: large casserole and lid

Oven accessory: glass turntable + Enamel tray

1. Place the cubed pork, chopped onion, sliced parsnips, crushed garlic, coriander and cumin in a large casserole dish.
2. Stir in the flour.
3. Gradually add the stock, apple juice and seasoning.
4. Cover and cook on **HIGH** power for 15 mins. Stir then cover and cook on **Combination: CONVECTION 160°C + WARM** power for 1 - 1½ hours or until the meat is tender.





Ingredients

675 g (1½ lb) braising steak, cubed
 3 large onions, sliced thinly
 1 clove garlic, crushed
 30 ml (2 tbsp) seasoned flour
 15 ml (1 tbsp) brown sugar
 300 ml (½ pt) hot beef stock
 300 ml (½ pt) light ale
 15 ml (1 tbsp) wine vinegar
 5 ml (1 tsp) mixed herbs
 2 bay leaves

Topping:

8 x 2.5 cm (1") slices of French bread
 15 ml (1 tbsp) French mustard
 60 ml (4 tbsp) butter, softened
 1 clove garlic, crushed

Belgian beef casserole

Serves 4

Dish: large casserole with lid

Oven accessory: glass turntable + Enamel tray

1. Combine all the casserole ingredients in dish. Cover with lid and cook on **Combination: CONVECTION 160°C + WARM** power for 1 hr, or until meat is tender. Remove bay leaves.
2. Blend mustard, butter and garlic. Spread over one side of each bread slice.
3. Uncover casserole and arrange bread on top. Return to oven and cook uncovered on **Combination: CONVECTION 160°C + WARM** power for a further 10 mins. The casserole is ready when the bread slices are crisp and golden.

Ingredients

1 onion, diced
 1 clove garlic, crushed
 15 ml (1 tbsp) oil
 397 g (14 oz) can chopped tomatoes
 15 ml (1 tbsp) tomato puree
 5 ml (1 tsp) mixed herbs
 450 g (1 lb) mince
 salt and pepper

Savoury mince

Serves 4

Dish: 1.5 litre (3 pt) casserole dish

Oven accessory: glass turntable

1. Place onion, garlic and oil in casserole, cover and cook on **HIGH** power for 2 mins. or until soft.
2. Place all other ingredients in casserole. Stir well.
3. Cover and cook on **HIGH** power for 10 mins. then **MEDIUM** power for 15-20 mins. or until cooked.

Variation: Chilli con carne

Add 396 g (14 oz) can red kidney beans drained, 5-10 ml (1-2 tsp) chilli powder, 1 diced green pepper to the ingredients above.





Ingredients

1 medium onion, chopped
 2 carrots, chopped
 25 g (1 oz) butter
 350 g (12 oz) cold cooked
 beef or lamb, minced
 300 ml (1½ pt) hot beef stock
 3 ml (½ tsp) Worcestershire
 sauce
 15 ml (1 tbsp) gravy
 thickening
 5 ml (1 tsp) tomato puree
 salt and pepper
 675 g (1½ lb) potatoes,
 cubed
 135 ml (9 tbsp) water
 30 ml (2 tbsp) milk
 25 g (1 oz) cheese

Shepherd's pie

Serves 4

Dish: medium casserole

Oven accessory: glass turntable + Enamel tray

1. Place onion, carrots and butter in casserole. Cover and cook on **HIGH** power for 3-5 mins. or until soft.
2. Add minced meat to vegetables and mix well. Mix together stock, Worcestershire sauce, gravy thickening and tomato puree, pour over meat and season to taste.
3. Cook potatoes with water, covered on **HIGH** power for 7-8 mins. Drain and mash well with the milk and spread on top of the meat, using a fork to make a pattern on top.
4. Sprinkle with cheese and cook on **Combination: CONVECTION 190°C + WARM** power for approximately 15-20 mins. or until top is crisp and golden.

Ingredients

1 quantity of savoury mince
 (see page 89)
 double quantity of White
 Pouring sauce (see page 105)
 100 g (4 oz) grated cheese
 5 ml (1 tsp) mustard
 salt and pepper
 12 sheets pre-cooked
 lasagne
 (or sufficient for 3 layers)
 60 ml (4 tbsp) Parmesan
 cheese

Lasagne

Serves 4

Dish: large rectangular dish approx. 27 x 23 cm (11" x 9")

Oven accessory: glass turntable + Enamel tray

1. Add cheese and seasoning to the hot white sauce.
2. Cover the base of the dish with a layer of cheese sauce, then a layer of lasagne, followed by a layer of hot meat mixture. Continue with a layer of lasagne then meat, ending with a layer of cheese sauce.
3. Sprinkle Parmesan cheese over the top and cook on **Combination: CONVECTION 190°C + SIMMER** power for 15-20 mins. or until the pasta is tender and brown and crisp on top.



Ingredients

600 g (1¹/₄ lb) braising steak, cubed
 45 ml (3 tbsp) seasoned flour
 600 ml (1 pt) hot beef stock
 45 ml (3 tbsp) tomato puree
 30 ml (2 tbsp) paprika
 5 ml (1 tsp) sugar
 60 ml (4 tbsp) soured cream

Hungarian goulash

Serves 4

Dish: large casserole + lid**Oven accessory: glass turntable + Enamel tray**

1. Toss meat in the flour. Combine all ingredients except the soured cream in casserole dish.
2. Cook on **Combination: CONVECTION 160°C + WARM power** for 1hr 15 mins, or until the meat is tender.
3. Remove from oven and immediately stir in the soured cream. Serve with ribbon noodles.

Ingredients

15 ml (1 tbsp) oil
 1 large onion, sliced
 3 cloves garlic, crushed
Spices and Flavourings:
 10 ml (2 tsp) ground coriander
 3 ml (½ tsp) chilli powder, ground cardamom, ground cloves
 15 ml (1 tbsp) garam marsala
 15 ml (1 tbsp) ground turmeric
 5 ml (1 tsp) ground cumin
 30 ml (2 tbsp) flour
 15 ml (1 tbsp) tomato puree
 450 g (1 lb) shoulder of lamb, cubed
 juice of 1 lemon
 5 ml (1 tsp) sugar
 25 g (1 oz) sultanas
 pinch of salt
 450 ml (¾ pt) hot stock

Madras curry

Serves 4

Dish: large casserole dish with lid**Oven accessory: glass turntable + Enamel tray**

1. Place the oil, onion and garlic in casserole dish. Cover and cook on **HIGH** power for 3 mins.
2. Blend in all the spices and cook on **HIGH** power for 2 mins.
3. Stir in the flour and tomato puree. Add all other ingredients including meat. Blend in hot stock.
4. Cover and cook on **Combination: CONVECTION 160°C + WARM** power for 1 hr-1 hr 30 mins. or until meat is tender. Serve with boiled rice and lemon or lime wedges and poppadoms.



Ingredients

1 aubergine, sliced
salt
30 ml (2 tbsp) oil
2 cloves garlic, crushed
1 medium onion, chopped
396 g (14 oz) can tomatoes
30 ml (2 tbsp) tomato puree
350 g (12 oz) lamb, cooked
and finely diced
salt and pepper

Topping:

2 eggs
150 ml (1/4 pt) single cream
100 g (4 oz) cheese, grated
25 g (1 oz) Parmesan
cheese, grated

Moussaka

Serves 4

Dish: 20 cm (8") soufflé dish

Oven accessory: glass turntable + Enamel tray

1. Place aubergines in a large colander and sprinkle liberally with salt. Stand for 20 mins. or until bitter juices run out. Rinse well under cold water and drain.
2. Place oil, garlic, onion and aubergine in dish. Cover and cook on **HIGH** power for 2 mins. or until softened.
3. Add tomatoes and puree and cook re-covered on **HIGH** power for 7 mins. Add lamb and season, mix well.
4. Whisk eggs, cream and cheese together and pour over lamb. Sprinkle with Parmesan cheese and cook on **Combination: CONVECTION 190°C + SIMMER** power for 15-20 mins. or until topping is puffed and golden.

Ingredients

4 chicken joints, skinned

Marinade:

2 cloves garlic, crushed
25 g (1 oz) fresh root ginger,
grated
10 ml (2 tbsp) ground
coriander
5 ml (1 tbsp) ground cumin
5 ml (1 tbsp) ground
cinnamon
5 ml (1 tbsp) tumeric
3 ml (1/2 tsp) salt
2 ml (1/4 tsp) black pepper
150 ml (1/4 pt) natural yoghurt
juice of 1 lemon

Tandoori chicken

Serves 4

Oven accessory: wire rack and Enamel tray on glass tray

1. Cut three slits in each piece of chicken then place in a bowl. Mix all the remaining marinade ingredients and pour over the chicken. Cover and refrigerate for 24 hours.
2. Place chicken joints on wire rack on Enamel tray. Cook on **Combination: CONVECTION 220°C + SIMMER** for 27-30 mins. or until the chicken is cooked and baste with remaining marinade. Serve with boiled rice.



Pasta, rice and beans

Ingredients

175 g (6 oz) easycook brown rice
 450 ml (³/₄ pt) hot chicken stock
 450 g (1 lb) smoked haddock
 30 ml (2 tbsp) lemon juice
 1 medium onion, chopped
 15 ml (1 tbsp) oil
 150 ml (¹/₄ pt) soured cream
 15 ml (1 tbsp) curry paste
 100 g (4 oz) frozen peas
 30 ml (2 tbsp) parsley, chopped
 2 hardboiled eggs, chopped

Kedgeree

Serves 4

Dish: large casserole

Oven accessory: glass turntable

1. Place the rice and chicken stock in casserole, cover and cook on **HIGH** power for 15-20 mins. or until tender.
2. Place the fish in a shallow dish, sprinkle with lemon juice, cover and cook on **HIGH** power for 5-6 mins. or until cooked. Skin and flake.
3. Place onion and oil in a small dish, cover and cook on **HIGH** power for 3-4 mins. or until softened.
4. Combine the soured cream with curry paste. Mix into rice then stir in flaked fish, onion, peas, parsley, eggs and seasoning. Cover and cook on **HIGH** power for 5 mins. or until piping hot.

Ingredients

100 g (4 oz) green lentils
 15 ml (1 tbsp) oil
 1 large onion, sliced
 5 ml (1 tsp) grated root ginger
 1 garlic clove, crushed
 3 ml (¹/₂ tsp) turmeric
 5 ml (1 tsp) chilli powder
 10 ml (2 tsp) curry powder
 150 ml (¹/₄ pt) natural yoghurt
 100 g (4 oz) mushrooms, sliced
 2 tomatoes, peeled and chopped
 300 ml (¹/₂ pt) hot water
 50 g (2 oz) cashew nuts
 450 g (1 lb) cooked basmati rice

Lentil biryani

Serves 4-6

Dish: large casserole

Oven accessory: glass turntable

1. Soak the lentils in cold water for 1 hour then drain them.
2. Place the oil and onion in a large bowl. Cover and cook on **HIGH** power for 3 mins. or until softened.
3. Add the ginger, garlic, turmeric, chilli and curry powder. Cover and cook on **HIGH** power for 2 mins.
4. Add the yoghurt, mushrooms, tomatoes, water and lentils. Cover and cook on **HIGH** power for 25-30 mins. or until the lentils are tender and the liquid has evaporated.
5. Add the lentil mixture and cashew nuts to the cooked rice and mix thoroughly. Reheat on **HIGH** power if necessary. Garnish and serve.

Garnish:

hard boiled egg slices and coriander leaves



Ingredients

1 large aubergine, cubed
salt
350 g (12 oz) tagliatelle,
fresh
1 onion
1 clove garlic, crushed
15 ml (1 tbsp) olive oil
397 g (14 oz) tin of chopped
tomatoes
5 ml (1 tsp) basil
15 ml (1 tbsp) tomato puree
15 g (½ oz) butter
salt and pepper
8-10 black olives, stoned
100 g (4 oz) mozzarella,
diced
30 ml (2 tbsp) parmesan
cheese, grated

Tagliatelle toscana

Serves 4

Dish: deep casserole dish

Oven accessory: glass turntable + Enamel tray

1. Sprinkle the aubergine with salt and leave for 20 mins, then rinse and dry.
2. Cook the pasta in 600 ml (1 pt) boiling water, covered, on **HIGH** power for 4 mins. or until tender. Drain.
3. Place onion, garlic and oil in a bowl, cover and cook on **HIGH** power for 2 mins. or until soft. Add the remaining ingredients except the mozzarella, tagliatelle and parmesan cheese, cover and cook on **HIGH** power for 6-8 mins.
4. Mix the drained pasta with the mozzarella. Place in a casserole dish. Pour the sauce over the top. Sprinkle with parmesan and cook on **Combination: CONVECTION 220°C + WARM** power for 6-8 mins. or until golden brown and piping hot.

Ingredients

1 aubergine
2 leeks
1 red, 1 green pepper
1 onion
1 clove of garlic
45 ml (3 tbsp) olive oil
225 g (8 oz) pasta shapes
225 g (8 oz) fresh spinach
White Sauce
40 g (1½ oz) butter
40 g (1½ oz) flour
1 pt (600 ml) milk
15 ml (1 tbsp) mustard
50 g (2 oz) Cheddar cheese,
grated
150 g (5 oz) Boursin cheese
50 g (2 oz) Cheddar cheese,
grated for topping

Roast vegetable and pasta gratin

Serves 4

Dish: 25 cm (10") round shallow Pyrex® dish

Oven accessory: glass turntable + Enamel tray

1. Pre heat oven **CONVECTION 220°C**. Chop all the vegetables except spinach into bite sized pieces and put in a roasting dish with the oil. Cook on **CONVECTION 220°C** 25-30 mins.
2. Cook the pasta shapes in 450 ml (¾ pt) boiling water on **HIGH** power for 5-6 mins or until soft. Drain. Wash the spinach and tear into small pieces.
3. Make the white sauce as per instructions on page 99, add the mustard, cheddar and Boursin cheese and stir thoroughly until smooth. Season well.
4. Mix the pasta, spinach and roast vegetables with the sauce and place in a large shallow dish. Sprinkle the top with cheese.
5. Cook on **Combination: CONVECTION 220°C + LOW** power for 10-15 mins or until golden brown.





Ingredients

40 g (1½ oz) dried Cep mushrooms
 50 g (2 oz) butter
 1 clove garlic, finely chopped
 1 small onion, finely chopped
 freshly ground black pepper
 250 g (9 oz) Arborio rice
 300 ml (½ pt) hot vegetable stock
 12 basil leaves, torn

Wild mushroom and basil risotto

Serves 4

Dish: 3 litre (6 pt) casserole dish

Oven accessory: glass turntable

1. Soak mushrooms in 300 ml (½ pt) warm water.
2. Place the butter, garlic and onion in a large bowl, cover with cling film and cook on **HIGH** power for 3 mins, or until softened. Season with freshly ground black pepper.
3. Stir the rice into the butter mixture and add the hot stock and soaking liquid from the mushrooms. Cover and cook for a further 5 mins on **HIGH** power.
4. Stir the mushrooms into the rice mixture. Cover and cook for a further 5 mins. on **HIGH** power.
5. Stir and add the basil. Continue to cook for the final 5 mins. on **HIGH** power. Leave to stand for approx. 10 mins and then stir with a fork.

Ingredients

1 medium onion, chopped
 10 ml (2 tsp) vegetable oil
 2 medium courgettes, sliced thickly
 1 red pepper, seeded & chopped
 2 medium carrots, peeled & thinly sliced
 1 small cauliflower, cut into florets
 100 g (4 oz) dried apricots, halved
 2 cloves garlic, crushed
 425 g (15 oz) can chick peas, drained
 3 ml (½ tsp) each: ground turmeric, ground coriander, ground cumin
 5 ml (1 tsp) paprika
 2.5 cm (1") fresh root ginger, peeled and finely chopped
 salt and pepper
 450 ml (¾ pt) hot vegetable stock
 chopped parsley to garnish

Vegetable and chick pea casserole

Serves 4

Dish: large casserole dish

Oven accessory: glass turntable

1. Place the onion and oil in a large casserole dish. Cover and cook on **HIGH** power for 3 mins. or until starting to soften.
2. Add the prepared vegetables, apricots, garlic, chick peas and stir in the spices, salt, pepper and stock.
3. Cover and cook on **HIGH** power for 15-20 mins, or until vegetables are soft. Stir two or three times during cooking. Serve with couscous or rice and garnish with parsley.

Tip

To prepare couscous: Place 300 ml (½ pt) vegetable stock in a bowl and 1.2 ml (¼ tsp) turmeric. Cook on **HIGH** power for 4 mins. or until boiling. Add 175 g (6 oz) couscous and allow to stand for 5 mins. Fluff up with a fork before serving.



Cheese and egg dishes

Ingredients

100 g (4 oz) tasty grated cheese
 100 g (4 oz) smoked ham, diced
 1 tomato, deseeded and chopped
 60 ml (4 tbsp) sour cream
 15 ml (1tbsp) mayonnaise
 10 ml (2 tbsp) wholegrain mustard
 8 croissants
 pepper

Stuffed croissants

Serves 4

Oven accessory: enamel tray + glass turntable

1. Combine all the filling ingredients in a bowl.
2. Slit in back of each croissant and fill with mixture.
3. Place 4 croissants on enamel tray and cook on Combination: **GRILL 1 + SIMMER** Micro for 5-6 mins. Repeat with the remaining 4 croissants.

Ingredients

150 ml ($\frac{1}{4}$ pt) Dolmio® sauce or Passata
 100 g (4 oz) garlic sausage, cubed
 1 clove garlic, crushed
 1 small onion, diced
 4 large muffins, halved
 100 g (4 oz) cheese, grated
 56 g can anchovy fillets
 black olives to garnish

Muffin pizzas

Serves 4

Oven accessory: glass turntable + wire rack + Enamel tray

1. Place Dolmio® sauce, sausage, garlic and onion in a bowl and mix well.
2. Arrange muffin halves, 4 at a time on wire rack and toast on **GRILL 1** for 3-4 mins. or until browned.
3. Spread muffins with the mixture. Top with cheese, anchovies and olives.
4. Cook on **Combination: GRILL 1 + WARM power** for 4-6 mins. or until cheese has melted and is beginning to brown.



Ingredients

1 medium onion, finely diced
 15 ml (1 tbsp) olive oil
 175 g (6 oz) self-raising flour
 3 ml (½ tsp) salt
 3 ml (½ tsp) mustard powder
 3 ml (½ tsp) cayenne pepper seasoning
 25 g (1 oz) butter
 40 g (1½ oz) strong cheddar cheese, grated
 40 g (1½ oz) Parmesan cheese
 25 g (1 oz) black olives, stoned and chopped
 1 egg, beaten
 45 ml (3 tbsp) milk
 1 beaten egg for glazing

Cheese, onion & olive scones

Dish: round baking sheet

Oven accessory: glass turntable + Enamel tray

1. Place onion and oil in a bowl. Cover and cook on **HIGH** power for 2 mins. or until softened. Drain.
2. Preheat oven on **CONVECTION 200°C**.
3. Sift together the flour, salt, mustard and cayenne with seasoning. Rub in the butter.
4. Mix in onion, cheeses and olives. Beat egg and milk together. Pour into flour mixture and bring to a soft dough.
5. On a floured surface roll out dough to approx. 2 cm thick. Cut out rounds using a 5 cm pastry cutter and brush with beaten egg.
6. Place the dough rounds on a lightly greased baking sheet. Place on the Enamel tray and cook on **CONVECTION 200°C** for 12-18 mins. or until cooked and golden brown.

Ingredients

1 small French baguette, cut into 8 slices
 60 ml (4 tbsp) cranberry sauce
 175 g (6 oz) brie, sliced
 sesame seeds

Brie and cranberry crostini

Serves 4

Oven accessory: glass turntable + Enamel tray + high wire rack

1. Pre-heat grill on **GRILL 1**.
2. Place the slices of baguette on the high wire rack and cook on **GRILL 1** for 2-3 mins. or until lightly toasted.
3. Turn the slices over and spread each slice with cranberry sauce.
4. Top with a slice of brie and sprinkle with sesame seeds.
5. Cook on **Combination: GRILL 1 + SIMMER** power for 3-4 mins. or until cheese has started to melt and sesame seeds turn golden.





Ingredients

4 slices bread, buttered
5 ml (1 tsp) Dijon mustard
2 slices smoked ham
100 g (4 oz) sliced cheese

Croque monsieur

Serves 2

Oven accessory: glass turntable + Enamel tray + wire rack

1. Place the bread, buttered side up on wire rack and cook on **GRILL 1** for approximately 3-4 mins. or until browning.
2. On 2 slices of the bread, spread the untoasted sides with mustard and top with ham and cheese. Cover with the other slices, browned side uppermost.
3. Place back on the wire rack and cook on **Combination: GRILL 1 + SIMMER power** for 1-2 mins. or until the cheese has melted.

Ingredients

175 g (6 oz) quick cooking macaroni
40 g (1½ oz) butter
1 small onion, finely chopped
100 g (4 oz) bacon, chopped
40 g (1½ oz) flour
600 ml (1 pt) milk
salt and pepper
5 ml (1 tsp) french mustard
150 g (5 oz) red cheese, grated
30 ml (2 tbsp) fresh brown breadcrumbs

Macaroni cheese

Serves 4

Dish: large dish and jug

Oven accessory: glass turntable + Enamel tray


1. Cook macaroni in 450 ml (¾ pt) boiling water. Cover and cook on **HIGH** power for 5-6 mins. or until soft. Drain.
2. Place butter, onion and bacon in a jug. Cover. Cook on **HIGH** power for 5 mins. or until onion is soft. Stir halfway through cooking.
3. Stir in flour and cook for 30 secs. on **HIGH** power.
4. Gradually add milk, stir well and season. Cook on **HIGH** power for 5-6 mins. or until sauce is thick and bubbling. Stir twice during cooking.
5. Add mustard and 100 g (4 oz) grated cheese. Add macaroni. Place the macaroni mixture in a large dish. Sprinkle with breadcrumbs and remaining cheese.
6. Cook on **Combination: CONVECTION 220°C + LOW power** for 10-12 mins. or until cheese starts to melt.



Vegetables and vegetarian




- Root vegetables. i.e. carrots, swede, should be cut into slices, strips or cubes.
- Do not mix fresh and frozen vegetables as the cooking times may be different.

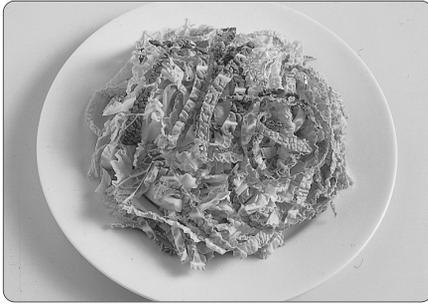

- Cabbage should be shredded and cooked by power and time.
- Fresh vegetables require 90 ml (6 tbsp) of water. For each extra 450 g (1 lb) add an extra 90 ml (6 tbsp) of water and stir halfway.



- If cooking potatoes with other vegetables, only cook with other ROOT vegetables.
- Never add salt to vegetables before microwaving. Remember the flavour of microwaved vegetables is much better than boiled.

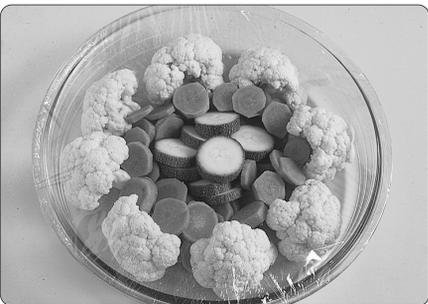

- Always cook vegetables in a dish that is a suitable size. Use flat dishes not basins. Always cover with microwave cling film or a lid.



- Certain vegetables i.e. broccoli and asparagus, should be arranged so that the tips are in the centre of the dish, as these require less cooking.




- Whole cauliflower should be cooked upside down on MEDIUM power for 10 mins. approx. with 90 ml (6 tbsp) water.

Jacket potatoes

Varieties of potatoes vary in their suitability for cooking by microwave. We recommend Maris Piper for consistently good results. The cooking times given may need adjustment for other varieties. The ideal size of potato to be cooked by microwave is 200 g - 250 g (7-9 oz).


Before cooking

Wash potatoes and prick skins several times. Spread around edge of turntable.

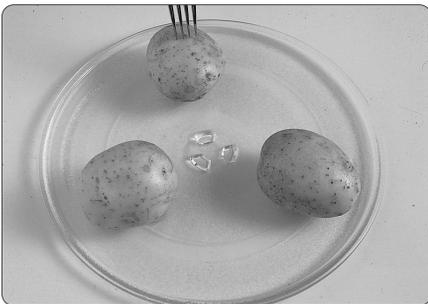

After cooking

Remove from oven and wrap in aluminium foil to retain the heat. Leave to stand for 5 mins.

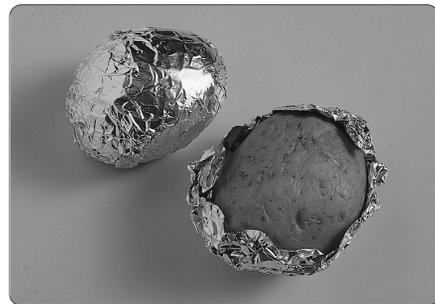

Ingredients

15 ml (1 tbsp) oil
 1 onion, finely chopped
 1 green pepper, chopped
 1 chilli, chopped
 2 carrots, diced
 5 ml (1 tsp) chilli powder
 3 ml ($\frac{1}{2}$ tsp) cumin
 175 g (6 oz) bulgar wheat
 396 g (14 oz) can chopped tomatoes
 30 ml (2 tbsp) tomato puree
 450 ml ($\frac{3}{4}$ pt) water
 396 g (14 oz) can red kidney beans, drained

Ingredients

1 large onion, chopped
 25 g (1 oz) butter
 1 clove of garlic, crushed
 225 g (8 oz) each of diced carrots,
 diced leeks, diced courgettes
 1 green pepper, chopped
 150 ml ($\frac{1}{4}$ pt) hot vegetable stock
 salt and pepper to taste
 300 ml ($\frac{1}{2}$ pt) prepared tomato sauce
 175 g (6 oz) pre-cooked lasagne
 225 g (8 oz) Mozzarella cheese

Vegetarian chilli

Serves 4

Dish: large casserole + lid**Oven accessory: glass turntable**

1. Place oil, onion, pepper, chilli and carrots in a large casserole, cover and cook on **HIGH** power for 4-5 mins. or until softened.
2. Add chilli and cumin. Stir in bulgar wheat, chopped tomatoes, tomato puree and water. Cover and cook on **HIGH** power for 10 mins. Stir in red kidney beans, cover and cook on **HIGH** power for 2-3 mins.

Vegetable lasagne

Serves 4-6

Dish: large deep rectangular dish**Oven accessory: glass turntable + Enamel tray**

1. Place onion and butter in a casserole dish, cover and cook on **HIGH** power for 3 mins. Add vegetables and stock, re-cover and cook on **HIGH** power for 8-10 mins. or until vegetables are soft. Season to taste.
2. Cover base of dish with a thin layer of tomato sauce, then a layer of lasagne on top followed by a layer of vegetable mixture. Thinly slice 175 g (6 oz) of the cheese and layer on top of vegetables. Continue layering until ingredients are all used ending with a tomato sauce layer.
3. Grate remaining cheese and arrange over top in 3 diagonal bands. Cook on **Combination: CONVECTION 190°C + SIMMER** power for 20-30 mins. or until the pasta is cooked.

Ingredients

450 g (1 lb) leeks, sliced
thinly
450 g (1 lb) potatoes, sliced
thinly
150 g (5 oz) blue cheese
225 g (8 oz) Greek yoghurt
75 ml (5 tbsp) double cream
50 g (2 oz) brown
breadcrumbs
salt and pepper

Ingredients

450 g (1 lb) mixed
vegetables eg. sweet potato,
red pepper, leeks,
aubergine, courgettes, onion
1 clove garlic, crushed
30 ml (2 tbsp) olive oil
200 g (7 oz) can chopped
tomatoes
10 ml (2 tsp) tomato puree
25 g (1 oz) pinenuts
50 g (2 oz) gruyère cheese,
grated
100 g (4 oz) Boursin® cheese
15 ml (1 tbsp) single cream
225 g (8 oz) ready made puff
pastry
1 egg to glaze

Leek & potato gratin

Serves 4

Dish: 25 cm (10") flan dish**Oven accessory: glass turntable + Enamel tray**

1. Place the vegetables in a large bowl. Add 90 ml (6 tbsp) of water, cover and cook on **HIGH** power for 10-12 mins. or until the vegetables are softened.
2. Crumble or finely chop the cheese into a bowl and gradually blend in the yoghurt and the double cream.
3. Drain the vegetables and arrange in a flan dish. Season and pour over the blue cheese cream mixture.
Sprinkle with breadcrumbs, cook on **Combination: CONVECTION 220°C + LOW power** for 10-12 mins. or until golden brown.

Roast vegetable parcels

Serves 4

Dish: round baking sheet**Oven accessory: glass turntable + Enamel tray**

1. Pre-heat oven **CONVECTION 220°C**. Chop vegetables into 2.5 cm (1") chunks.
2. Add garlic and oil, mix thoroughly with mixed vegetables. Place onto Enamel tray.
3. Cook on: **CONVECTION 220°C** for 20-25 mins until vegetables are browned and al dente.
4. Place the chopped tomatoes and puree in a heatproof bowl uncovered and cook on **HIGH** power for 5 mins then **MEDIUM** power for 10 mins or until mixture is reduced in volume and thickened.
5. Mix the tomato sauce with the cooked vegetables and pinenuts.
6. Mix together the gruyère cheese, Boursin® and single cream.
7. Roll out pastry until it measures approx 16" square. Divide into 4 equal squares.
8. Place $\frac{1}{4}$ of the vegetable mixture in the centre of the square and top with $\frac{1}{4}$ of the cheese mixture.
9. Bring the corners of the pastry to the centre, pressing the edges together. Seal with water. Glaze with beaten egg.
10. Cook in a preheated oven on **CONVECTION 220°C** for 15-20 mins or until golden and cooked through.

Ingredients

450 g (1 lb) potatoes
25 g (1 oz) butter
30 ml (2 tbsp) oil

Roast potatoes

Serves 4

Oven accessory: glass turntable + Enamel tray

1. Peel and cut potatoes into quarters. Par boil and drain (see page 74).
2. Place potatoes, oil and butter on Enamel tray. Cook on **Combination: CONVECTION 220°C + WARM** power for 25 mins. turning and basting potatoes during cooking, or until crisp and brown.

Ingredients

1 cauliflower, trimmed
90 ml (6 tbsp) water
25 g (1 oz) butter
25 g (1 oz) flour
3 ml (½ tsp) French mustard
300 ml (½ pt) milk
seasoning to taste

Topping:

75 g (3 oz) grated red cheese
15 ml (1 tbsp) brown breadcrumbs

Cauliflower cheese

Serves 4

Dish: shallow casserole**Oven accessory: glass turntable + Enamel tray**

1. Place cauliflower upside down in a bowl. Add water. Cover and cook on **MEDIUM** power for 10 mins. or until tender. Drain.
2. Melt butter on **HIGH** power for 15-30 secs. Stir in flour and mustard. Cook for a further 20 secs. Add milk gradually. Stir well and season. Cook on **HIGH** power for 2-3 mins. or until sauce is thick and bubbling. Stir once halfway during cooking.
3. Stir in 60 g (4 tbsp) grated cheese. Pour the sauce over the cauliflower. Top with remaining cheese and breadcrumbs.
4. Cook on **Combination: CONVECTION 220°C + WARM** power for 15-17 mins. or until golden brown.

Ingredients

350 g (12 oz) potatoes
45 ml (3 tbsp) natural yoghurt
10 ml (2 tsp) mango chutney
3 ml (½ tsp) cumin, coriander, turmeric and garam masala
10 ml (2 tsp) fresh coriander
pinch chilli powder
15 g (½ oz) sultanas
salt and pepper

Spicy potatoes

Serves 4

Dish: 1 litre (2 pt) dish**Oven accessory: glass turntable**

1. Cut the potatoes into large cubes and place in a large bowl with 6 tbsp water. Cover and cook on **HIGH** power for 6-8 mins. or until soft. Drain and set aside.
2. Mix the remaining ingredients together. Add the potatoes and mix well. Serve either hot or cold.



Ingredients

100 g (4 oz) butter
 225 g (8 oz) plain flour
 50 g (2 oz) finely grated
 Parmesan
 1 red and 1 yellow pepper,
 diced into 4 cm pieces
 2 medium courgettes, sliced
 100 g (4 oz) aubergine,
 diced into 4 cm pieces
 15 ml (1 tbsp) olive oil
 100 g (4 oz) soft goat's
 cheese
 3 eggs, beaten
 75 ml (5 tbsp) creme fraiche
 or double cream
 15 ml (1 tbsp) chopped fresh
 parsley
 salt and pepper

Goat's cheese tart with roasted vegetables

Serves 4

Dish: 23 cm (9") flan tin

Oven accessory: glass turntable + Enamel tray

1. Preheat the oven on **CONVECTION 200°C**.
2. Rub the butter into the flour until the mixture resembles fine breadcrumbs. Stir in the parmesan, add 2-3 tbsps cold water and mix to a firm dough.
3. Roll out and line the flan ring. Prick the base with a fork and allow to rest for 15 mins.
4. Cover the pastry with greaseproof, add baking beans and cook on **CONVECTION 200°C** for 10 mins. Remove the paper and beans and cook for a further 5 minutes or until cooked. Allow to cool.
5. Place the prepared vegetables on Enamel tray and drizzle with olive oil. Cook on **Combination: GRILL 1 + SIMMER power** for 10-12 mins or until lightly browned. Turn halfway during cooking.
6. Place the vegetables in the flan case and dot teaspoons of the goat's cheese around the vegetables.
7. Beat together the eggs and creme fraiche until smooth, add the parsley and seasoning. Pour carefully over the filling.
8. Cook on **Combination: CONVECTION 190°C + WARM power** for 20-25 mins. or until set and lightly browned.

Ingredients

3 red and 3 yellow peppers
 50 ml (2 tbsp) olive oil
 50 g (2 oz) pine nuts
 2 garlic cloves, crushed
 100 g (4 oz) long grain rice
 300 ml (½ pt) hot vegetable
 stock
 1 bunch spring onions, sliced
 thinly
 100 g (4 oz) cherry
 tomatoes, halved
 100 g (4 oz) mozzarella,
 diced
 100 g (4 oz) gorgonzola or
 any blue cheese, diced
 handful each of parsley and
 basil, finely shredded

Stuffed peppers

Serves 6

Dish: 1.7 litre ovenproof dish

Oven Accessory: glass turntable + Enamel tray

1. Slice the tops off the peppers and put to one side. Remove the seeds and rinse out.
2. Place the oil, garlic and pine nuts into in a large ovenproof dish and stir together. Cook on **HIGH** power for 2 mins.
3. Add rice and hot stock. Cover and cook on **HIGH** power for 10 mins.
4. Allow to cool slightly and then stir in the spring onions, cherry tomatoes, mozzarella, gorgonzola, parsley and basil. Season well.
5. Spoon the stuffing into the peppers and arrange them closely together in the ovenproof dish.
6. Cook on **Combination: CONVECTION 220°C + SIMMER** microwave power for 10 mins.
7. Place tops back on peppers and cook on **Combination: GRILL 1 + SIMMER** power for a further 5-7 mins.



Sauces

Container size

Always use a container or jug at least twice the capacity of the sauce, to avoid boiling over.

Covering

DO NOT cover sauces when cooking.

STIRRING – IMPORTANT

Sauces/gravy should be thoroughly stirred before, during and after cooking, to avoid any eruptions and to result in a smooth sauce.

Reheating

Sauces can be made in advance and reheated by microwave. Reheat on HIGH power and stir halfway.

Power level

Most sauces require HIGH Power for cooking. Sauces containing eggs should be cooked on SIMMER power.

Wooden spoons

Do not leave wooden spoons in the sauce when cooking. The wood may dry out and burn. NEVER LEAVE metal spoons in the sauce.

Ingredients

30 g (1 oz) butter
30 g (1 oz) flour
600 ml (1 pt) milk

White pouring sauce

Dish: 1 litre (2 pt) jug

Oven accessory: glass turntable

1. Melt butter in jug on **HIGH** power for 20-40 secs.
2. Stir in the flour to make a roux.
3. Add the milk gradually stirring continuously until well combined.
4. Cook for 2 mins. on **HIGH** power. Stir and cook for a further 3 mins. Sauce should be smooth and glossy and coat the back of a spoon.

Variations of White Sauce

Parsley

Stir 60 ml (4 tbsp) chopped parsley and 15 ml (1 tbsp) lemon juice into sauce halfway through cooking time.

Onion

Cook 1 small onion in the butter for 30 secs. on **HIGH** power before adding the flour and milk.

Cheese

Stir in 75 g (3 oz) grated cheese at the end of cooking time.

Ingredients

30 ml (2 tbsp) custard powder
15 ml (1 tbsp) sugar
600 ml (1 pt) cold milk

Ingredients

3 egg yolks
30 ml (2 tbsp) white wine vinegar
100 g (4 oz) chilled, unsalted butter, cut into cubes
pepper

Ingredients

25 g (1oz) butter
75 g (3 oz) caster sugar
75 g (3 oz) soft brown sugar
50 g (2 oz) cocoa powder
3 ml (1/2 tsp) vanilla essence
300 ml (1/2 pt) milk

Custard**Dish: 1 litre (2 pt) jug****Oven accessory: glass turntable**

1. Mix together the custard powder, sugar and a little milk to form a smooth paste.
2. Blend in the remaining milk, whisking well.
3. Cook on **HIGH** power for 4-6 mins. Whisk well halfway through cooking time and again at the end.

Hollandaise sauce**Dish: 1 litre (2 pt) jug****Oven accessory: glass turntable**

1. Place egg yolks and vinegar in a jug. Beat well.
2. Drop cubes of butter on top. Cook on **HIGH** power for 15 secs.
3. Whisk. Cook on **HIGH** power for 10 secs.
4. Whisk again and cook on **HIGH** power for 10 secs. Repeat 10 secs. stages until sauce is thick and creamy.
5. Season and serve immediately with salmon steaks or asparagus spears.

N.B. This sauce must not boil or eggs will curdle.**Chocolate sauce****Dish: 1 litre (2 pt) jug****Oven accessory: glass turntable**

1. Melt butter in a large bowl on **HIGH** power for 20-30 secs.
2. Stir in sugars, cocoa powder and vanilla essence.
3. Gradually add milk, stirring well.
4. Cook on **HIGH** power for 2 mins. Stir well. Repeat this again three more times or until you achieve a smooth and glossy consistency that coats the back of a spoon.

Pastry

Ingredients

1 small potato, thinly sliced
 200 g (7 oz) puff pastry
 1 small onion, sliced
 small apple, peeled, cored
 and sliced
 salt and pepper to taste
 75 g (3 oz) cheese, grated or
 crumbled, eg. Stilton, Roule
 etc.

Glaze:

1 egg, beaten

Savoury potato plait

Serves 4-6

Dish: baking sheet (round)

Oven accessory: glass turntable + Enamel tray

1. Cook potato and onion in a shallow dish with 60 ml (4 tbsp) water, covered for 3 mins. on **HIGH** power. Drain.
2. Preheat oven on **CONVECTION 200°C**.
3. Roll out the pastry to an oblong 25 x 27 cm (10 x 11"). Lift onto baking sheet. With a knife, cut each side of the long edges diagonally at 2.5 cm (1") intervals, to give strips which will become plaits.
4. Arrange layers of potato, onion and apple down the centre of the pastry. Season. Sprinkle over the cheese.
5. Brush the pastry strips with beaten egg and fold alternately over the mixture to form a plait.
6. Glaze the complete plait with beaten egg. Cook on **Combination: CONVECTION 200°C + SIMMER** power for 11-13 mins. or until crisp and golden.

Ingredients

1 quantity of suet pastry
 (see page 102)
 75 ml (5 tbsp) seedless
 raspberry jam
 milk to glaze

Baked jam roly poly pudding

Serves 4

Dish: 1 kg (2 lb) loaf dish

Oven accessory: glass turntable + Enamel tray

1. Roll out pastry to approx. 23 x 32 cm (9 x 13").
2. Spread the jam over the pastry leaving 1cm ($\frac{1}{2}$ ") border all round. Brush the edges with milk and roll the pastry up evenly, starting at one short side and sealing the edges well.
3. Brush top with milk and place in loaf dish. Preheat oven on **CONVECTION 210°C**. Cook on **Combination: CONVECTION 220°C + SIMMER** power for 15-20 mins. or until golden.

Ingredients

225 g (8 oz) self-raising flour
 3 ml ($\frac{1}{2}$ tsp) salt
 100 g (4 oz) shredded suet
 105 ml (7 tbsp) cold water

Suetcrust pastry

1. Mix together flour, salt and suet.
2. Add water and mix to a soft dough. Knead lightly until smooth.

Ingredients

600 g (1 lb 5 oz) dessert apples such as Granny Smith's, cored, peeled and roughly chopped
 juice of $\frac{1}{2}$ lemon
 50 g (2 oz) golden caster sugar
 50 g (2 oz) walnuts, roughly chopped
 50 g (2 oz) sultanas
 5 ml (1 tsp) ground cinnamon
 50 g (2 oz) ground almonds
 6 sheets filo pastry
 50 g (2 oz) butter, melted
 icing sugar to serve

Apple strudel

Serves 4

Dish: baking sheet (round)**Oven accessory: glass turntable + Enamel tray**

1. Preheat the oven on **CONVECTION 180°C**.
2. Put the apples and juice into a bowl and toss together.
3. Add the sugar, walnuts, sultanas, cinnamon and almonds and mix together.
4. Take three sheets of filo pastry and brush with melted butter. Place each one with the shortest edge towards you. Overlap the 2nd sheet onto the 1st sheet by 5-6 cms along the long edge and repeat with the 3rd sheet overlapping the second.
5. Place three more sheets of filo on top, in the same way as in step 4.
6. Spread the apple filling along the front edge of the filo pastry just 2.5cms from the edge and 2.5cms from each side.
7. Fold the sides in over the filling and brush with butter. Roll up from the long front edge buttering the final long edge to seal the strudel.
8. Place on baking sheet, seam-side down. Brush with melted butter.
9. Cook on **CONVECTION 180°C** for 30-35 mins.
10. Dust with icing sugar to serve.

Baking

Ingredients

Ingredients

2 eggs beaten
150 ml veg oil
150 g self raising wholemeal flour
100 g soft light brown sugar
2 tsp cinnamon
75 g raisins
100 g grated carrots

Icing (enough for a thin top and a thin layer in the middle or a thick topping)

50 g cream cheese
50 g butter
100 g icing sugar
2 tsp lemon juice
50 g chopped walnuts

Carrot cake

Dish: 7" soufflé dish lined with greaseproof

1. Mix eggs and oil together
2. Combine flour, sugar cinnamon raisins and carrots in a mixing bowl and pour egg mix into flour and stir well.
3. Pour into dish and cook on Combination: **GRILL 3 + LOW** micro power for 8 mins.
4. Beat cream cheese and butter together and gradually add icing sugar and lemon juice. Sprinkle with walnuts.

Ingredients

100 g (4 oz) butter
100 g (4 oz) golden syrup
100 g (4 oz) black treacle
75 g (3 oz) soft brown sugar
100 g (4 oz) self raising flour
100 g (4 oz) plain flour
1 tsp mixed spice
2 tsp ground ginger
1 tsp bicarbonate of soda
pinch salt
150 ml (¼ pint) milk
2 eggs beaten

Ginger cake

Dish: Dish 8" Square pyrex

1. Place butter, syrup, treacle and sugar in a bowl and heat on **HIGH** power for 1-2 mins or until fat has melted
2. Place flour, spices, bicarb and salt in a large bowl. Stir in treacle mixture and mix well. Stir in milk and eggs and beat until smooth.
3. Pour into cake dish and cook on **MEDIUM** power for 8-9 mins or until set around the edges. The cake will appear slightly wet in the centre, but will continue cooking as it cools.

Ingredients

100 g butter
 100 g caster sugar
 2 eggs lightly beaten
 100 g self raising flour
 50 g cocoa powder
 50 g ground almond
 100 ml milk
 4 tbsp golden syrup

Topping

50 g butter
 25 g cocoa powder sifted
 200 g icing sugar
 1 tbsp milk

Ingredients

175 g butter
 175 g dark brown sugar
 Grated rind 1 lemon
 3 eggs beaten
 225 g plain flour
 2 tsp ground spice
 225 g raisins
 225 g sultanas
 50 g glace cherries
 50 g chopped mixed nuts
 1 tbsp treacle
 3 tbsp brandy

Ingredients**Pudding:**

75 g (3 oz) plain chocolate
 30 ml (2 tbsp) milk
 175 g (6 oz) margarine
 175 g (6 oz) light muscovado sugar
 2 eggs
 175 g (6 oz) fresh white breadcrumbs
 30 ml (2 tbsp) cocoa powder

Sauce:

225 g (8 oz) vanilla flavoured toffees
 150 ml (1/4 pt) milk
 15 g (1/2 oz) butter

Chocolate and almond cake**Dish: lined 20cm 8" shallow dish**

1. Cream together butter and sugar. Gradually add egg. Add flour, cocoa powder, ground almond, milk then syrup.
2. Pour into a lined 20 cm 8" shallow pyrex dish.
Cook on **MEDIUM** power for 6 mins.
3. Cream butter until soft and gradually add cocoa powder and icing sugar. Lastly adding milk as required.

Fruit cake**Dish: 7" soufflé dish greased and lined**

1. Cream butter and sugar until light and fluffy. Mix in the lemon rind. Beat in the eggs
2. Fold in the flour, spice and the rest of the ingredients.
3. Cook on **LOW** power for 20 mins.

Desserts**Chocolate saucy pudding with toffee sauce****Dish: 1.2 litre (2 pt) pudding basin****Oven accessory: glass turntable**

1. Line the base of a 1.2 litre (2 pt) pudding basin with a circle of greaseproof paper.
2. Melt the chocolate with the milk on **HIGH** power for 1 min. and mix until smooth.
3. Mix the margarine and sugar together, add the cooled chocolate and eggs.
4. Add the breadcrumbs and cocoa powder and mix well. Fill the basin with the mixture and cook on **HIGH** power for 6-7 mins. or until cooked. Leave to stand for 5 mins. before turning out.
5. Meanwhile, prepare the sauce by combining all ingredients in a large jug and cook on **HIGH** power for 2-3 mins. or until smooth. Stir vigorously and pour over the pudding.

Ingredients

100 g (4 oz) butter or
margarine
50 g (2 oz) light brown sugar
30 ml (2 tbsp) golden syrup
225 g (8 oz) rolled oats
450 g (1 lb) plums, stoned
and thinly sliced
5 ml (1 tsp) ground cinnamon

Plum & oat layer

Makes 8 slices

Dish: 20 cm (8") ceramic flan dish**Oven accessory: glass turntable + Enamel tray**

1. Place the butter, sugar and syrup in a bowl. Cook on **HIGH** power for 1-2 mins. or until melted. Stir in the rolled oats.
2. Spread half the oat mixture into the dish. Arrange the plums over the top in overlapping rows and sprinkle with cinnamon.
3. Sprinkle the remaining oat mixture over the plums and gently press down.
4. Cook on **Combination: CONVECTION 220°C + LOW** power for 8-10 mins. or until the mixture is firm and golden brown.
5. Cut into slices while hot, then allow to cool in the dish.

Ingredients

150 g (5 oz) self-raising flour
pinch of salt
50 g (2 oz) caster sugar
50 g (2 oz) suet
1 egg
150 ml ($\frac{1}{4}$ pt) milk
30 ml (2 tbsp) jam or golden
syrup
Optional: Add 1 tbsp of
sultanas.

Steamed suet sponge pudding

Serves 4

Dish: 1 litre (2 pt) pudding basin**Oven accessory: glass turntable**

1. In a mixing bowl, sift together the flour and salt. Stir in sugar and suet.
2. Make a well in the centre and add beaten egg and milk. Mix to a soft dropping consistency.
3. Put the jam in the base of the greased pudding basin and pour pudding mixture over. Cook on **HIGH** power for 5-5 $\frac{1}{2}$ mins. until firm.

Ingredients

6 slices of bread, buttered
and cut in half diagonally
75 g (3 oz) mixed dried fruit
450 ml ($\frac{3}{4}$ pt) milk
3 eggs
25 g (1 oz) caster sugar
3 ml ($\frac{1}{2}$ tsp) nutmeg

Bread and butter pudding

Serves 4

Dish: 20 x 25 cm (8 x 10") oblong, greased dish**Oven accessory: glass turntable + Enamel tray**

1. Arrange the bread and fruit in the prepared dish.
2. Warm the milk for 3 mins. on **MEDIUM** power but do not allow to boil.
3. Beat together the eggs and sugar, add the milk, stirring well.
4. Pour the mixture over the bread, sprinkle with nutmeg and leave to stand for 15 mins. Cook on **Combination: CONVECTION 190°C + SIMMER** power for 20-25 mins. or until set and browned.



Ingredients

1 cooking apple, peeled and grated
 1 carrot, peeled and grated
 1 orange, juice and grated rind of
 400 g (14 oz) mixed dried fruit
 45 ml (3 tbsp) brandy
 15 ml (1 tbsp) black treacle
 50 g (2 oz) self-raising flour
 pinch of salt
 15 ml (1 tbsp) cocoa
 5 ml (1 tsp) mixed spice
 3 ml ($\frac{1}{2}$ tsp) nutmeg
 100 g (4 oz) shredded suet
 150 g (5 oz) fresh breadcrumbs
 50 g (2 oz) mixed peel
 50 g (2 oz) flaked almonds
 2 eggs, beaten

Christmas pudding

Serves 6-8

Dish: 1.3 litre (2 $\frac{1}{2}$ pt) pudding basin lightly greased

Oven accessory: glass turntable

1. Place apple and carrot in a large bowl. Cover and cook on **HIGH** power for 5 mins. Beat well to make a thick puree.
2. Stir in juice, rind and mixed fruit. Cook on **HIGH** power for 2 mins. Stir in brandy and treacle. Stand for 5 mins. Beat in rest of ingredients.
3. Press into the pudding basin. Cover with greaseproof paper and cook on **HIGH** power for 4 mins. Stand for 5 mins. Cook on **HIGH** power for another 2 mins. or until just firm.

N.B. One of the advantages of using your microwave to make this traditional pudding is that it can be made the week before Christmas and stored in a cool dry place. Do not attempt to make the pudding earlier than this, since the flavour will not improve with keeping, unlike a traditionally steamed pudding.

Ingredients

4 medium sized apples
 30 ml (2 tbsp) sugar
 25-50 g (1-2 oz) mixed dried fruit
 25 g (1 oz) butter

Baked apples

Serves 4

Dish: 20 cm (8") shallow dish

Oven accessory: glass turntable

1. Core the apples and score the skin around the middle.
2. Mix together the sugar and fruit and fill the centres of the apples.
3. Dot the top with butter. Stand the apples in a suitable dish and cook on **HIGH** power for 5 $\frac{1}{2}$ -7 mins. Stand for 5 mins. before serving.

N.B. The apples will look quite green when removed from the oven, but they should feel slightly soft when tested with a sharp knife. During the standing time, the colour will become dull and the apples will be tender. The apples will overcook very easily, so take care to undercook slightly. For 1 baked apple cook for 2-3 mins. For 2 baked apples cook for 3-5 mins.



Baking guidelines

Covering

For traditional cakes, with long cooking times, baked on convection mode only, it is necessary to cover the top of the tin with foil 10-15 mins. after the start of baking. This is not applicable to any of the recipes in this section.

Dish size/shape

Always use the exact dish size stated in the following recipes, otherwise cooking times and results will be affected.

Mixing/beating

Cakes cooked by microwave need to be well

mixed, but not over beaten. Generally it is unnecessary to cream butter and sugar or beat eggs in an electric mixer or food processor. Do not attempt to cook whisked/fatless sponges, or any cakes containing whisked egg white.

Eggs

The following recipes have been tested using medium eggs. Using a different size of egg may affect cooking times.

Combination cooking.

DO NOT use spring form tins, use smooth, and preferably seamless metal cake tins.

Ingredients

125 g (4 oz) butter
200 g (7 oz) dark chocolate
(72% cocoa solids)
175 g (6 oz) soft brown
muscovado sugar
2 eggs, beaten
Few drops of vanilla essence
50 g (2 oz) plain flour
5 ml (1 tsp) baking powder

Luscious chocolate brownies

Dish: 18 cm (7") square dish, lined

Oven accessory: glass turntable + Enamel tray

1. Melt the butter with 50 g of the chocolate in a bowl on **MEDIUM** power for 1 minute 30 seconds.
2. Put the eggs, sugar and vanilla essence in a bowl, then sift in the flour and baking powder.
3. Stir in the melted chocolate and butter mixture and mix well.
4. Chop the remaining chocolate into rough chunks and stir into the brownie mixture.
5. Spoon into the dish, spread evenly and cook on Enamel tray, **Combination: CONVECTION 220°C + SIMMER** power for 9-12 minutes until firm.

Ingredients

225 g (8 oz) self-raising flour
pinch salt
5 ml (1 tsp) baking powder
50 g (2 oz) butter
25 g (1 oz) caster sugar
50 g (2 oz) sultanas
100 ml (3½ fl oz) milk
beaten egg to glaze

Fruit scones

Makes 12

Dish: baking sheet (round)

Oven accessory: glass turntable + Enamel tray

1. Preheat oven on **CONVECTION 210°C**.
2. Sift the flour, salt and baking powder together. Rub in fat until the mixture resembles fine breadcrumbs. Add sugar and sultanas.
3. Make a well in the centre and stir in enough milk to form a soft dough.
4. Knead lightly. Pat out to 2cm ($\frac{3}{4}$ " thick and cut into 10 rounds with a 5 cm (2") cutter. Place on baking sheet, brush with beaten egg and cook on **CONVECTION 210°C** for 10 - 15 mins. or until well risen and golden brown.



Ingredients

75 g (3 oz) self-raising flour
 75 g (3 oz) porridge oats
 50 g (2 oz) dark muscovado sugar
 75 g (3 oz) butter

For the Topping:

25 g (1 oz) butter
 3 eggs, beaten
 175 g (6 oz) light muscovado sugar
 150 g (5 oz) raisins
 75 g (3 oz) dessicated coconut
 1 lemon, grated rind plus
 30 ml juice

Lemon and raisin flapjacks

Dish: 21 cm x 23 cm (8" x 9") Pyrex® dish, greased

Oven accessory: glass turntable + Enamel tray

1. Place the flour, oats and sugar in a bowl and rub in the butter. Press the mixture into the greased dish and press until smooth.
2. Cook on **HIGH** power for 3 mins. or until firm. Allow to cool.
3. Place the butter in a small bowl and cook on **HIGH** power for 30 - 60 seconds or until melted.
4. Mix all the topping ingredients together.
5. Pour over the base and cook on **Combination: CONVECTION 220°C + SIMMER power** for 8 - 9 minutes or until firm and golden brown. Divide into equal pieces and allow to cool.

Ingredients

Streusel Topping

50 g (2 oz) butter
 75 g (3 oz) plain flour
 30 ml (2 tbsp) granulated sugar
 15 ml (1 tbsp) ground mixed spice

Muffins

225 g (8 oz) plain flour
 10 ml (2 tsp) baking powder
 150 g (6 oz) caster sugar
 2.5 ml (½ tsp) salt
 finely grated rind of ½ lemon
 175 g (6 oz) fresh or frozen berries, raspberries or blueberries are ideal
 75 g (3oz) butter
 110 ml (6 fl oz) buttermilk
 1 egg, lightly beaten
 2.5 ml (½ tsp) vanilla essence

Streusel topped fruit muffins

Makes 12

Dish: 2 x 6 hole muffin tin + 12 paper muffin cases

Oven accessory: glass turntable + Enamel tray

1. Melt the butter on **HIGH** power for 10-20 seconds. Combine the streusel topping ingredients to make a soft dough and reserve. Chill.
2. Sift together the flour, baking powder, sugar and salt. Add the lemon rind and the fruit.
3. Melt the butter on **HIGH** power for 30 seconds - 1 minute, mix in the buttermilk, egg and vanilla essence. Lightly stir in the flour mixture and divide between 12 muffin cases.
4. Crumble small amounts of streusel topping over each muffin and cook in two batches in preheated oven on **CONVECTION 180°C** for 22 minutes, until browned and well risen.



Preserves

Sterilizing jars

Jam jars can be sterilized by microwave ready for your jams. Half fill with water and heat them on HIGH power until water boils (approx. 3 mins. for 2 jars). Empty and drain upside down on kitchen paper. The jars should be warm when filled with jam.

If you wish to cook larger quantities than given in the recipes below, revert to the traditional hob method, using a traditional recipe.

Dish size

Always use a very large pyrex bowl. DO NOT attempt to use jam pans or saucepans in your microwave.

DO NOT LEAVE JAMS UNATTENDED DURING COOKING BECAUSE OF THE HIGH SUGAR CONTENT.

Covering

Do not cover preserves whilst cooking, apart from if recommended in the recipe.

WE DO NOT RECOMMEND THAT YOU USE YOUR MICROWAVE TO STERILISE BABIES' BOTTLES.

(See details on page 56)

DO NOT SEAL PRESERVING JARS IN YOUR MICROWAVE.

Setting point

To determine whether setting point is reached, place a couple of drops of jam or marmalade on a cold saucer (put one in the fridge whilst making the jam). Leave to cool. The jam should wrinkle on the surface when your finger pushes across the top.

Ingredients

450 g (1 lb) soft fruit, washed
450 g (1 lb) caster sugar
30 ml (2 tbsp) lemon juice
5 ml (1 tsp) butter

Soft fruit jam

Makes approx. 1½ lbs jam

Dish: large bowl

Oven accessory: glass turntable

1. Place all ingredients in a large bowl and stir. Cook on **HIGH** power for 5 mins. (10-15 mins. if using frozen fruit), stirring frequently. Continue to cook in one minute intervals until sugar has dissolved.
2. Wash down any sugar crystals from around the bowl.
3. Bring mixture to the boil and continue to cook until setting point is reached – approx. 15-25 mins. Test regularly for setting point.



Ingredients

450 g (1 lb) seville oranges
1 lemon
900 ml (1½ pts) water
450 g (1 lb) sugar
knob of butter

Orange marmalade

Makes 1½-2 lbs

Dish: 6pt pyrex ® bowl

Oven accessory: glass turntable

1. Grate oranges and lemon ensuring all the pith is left on the fruit. Set the rind aside.
2. Peel the fruit and put it in a food processor and chop until the pips are broken.
3. Place the chopped mixture in a large bowl and pour over boiling water. Cover with pierced clingfilm and cook on **HIGH** power for 10 mins.
4. Strain the mixture through a sieve into another large bowl pressing the pulp well until all the juice is extracted. Discard the pulp.
5. Stir the shredded rind into the hot juice and cook uncovered on **HIGH** power for 10 mins. until rind is tender, stirring occasionally. Stir in the sugar until dissolved.
7. Cook on **HIGH** for 8 mins covered with pierced clingfilm. Stir in the butter and cook uncovered to setting point 18-20 mins.
8. Leave to stand for 10 mins then pour into warmed sterilized jars.

N.B Do not double this recipe as it will boil over.

Ingredients

4 lemons, grated rind and juice of
450 g (1 lb) caster sugar
4 eggs, beaten
100 g (4 oz) butter

Lemon curd

Makes 2 lbs

Dish: large bowl

Oven accessory: glass turntable

1. Place all ingredients in bowl. Mix well.
2. Cook on **HIGH** power for 1 min. Stir. Continue to cook in 1 minute stages until mixture starts to thicken, then cook for 30 secs. at a time until mixture coats back of spoon. (The eggs will curdle if overcooked).
3. The mixture will thicken on cooling. Pot into warm jars. Cover with a circle of waxed paper and a jam pot cover.



Questions and answers

- Q** My microwave oven causes interference with my TV, is this normal?
- A** Some radio, TV, Wi-Fi, cordless telephone, baby monitor, blue tooth or other wireless equipment interference might occur when you cook with the microwave oven. This interference is similar to the interference caused by small appliances such as mixers, vacuums, hair dryers, etc. It does not indicate a problem with your oven.
- Q** My oven has an odour and generates smoke when using the CONVECTION, COMBINATION and GRILL function. Why?
- A** It is essential that your oven is wiped out regularly particularly after cooking by CONVECTION, COMBINATION or GRILL. Any fat and grease that builds up will begin to smoke if not cleaned.
- Q** Sometimes warm air comes from the oven vents. Why?
- A** The heat given off from the cooking food warms the air in the oven cavity. This warmed air is carried out of the oven by the air flow pattern in the oven. There isn't an airtight seal to the air therefore steam can escape. There are no microwaves in the air, or steam. The oven vents should never be blocked during cooking.
- Q** My oven stops cooking by microwave and "H97" and "H98" appears in the display window.
- A** The display indicates a problem with the microwave generation system. Please contact an authorised Service Center or ring the Customer Communications Centre on 0344 844 3899 who can recommend a service agent.
- Q** "DEMO MODE PRESS ANY KEY" appears in the display and the oven does not cook. Why?
- A** The oven has been programmed in DEMO MODE. This mode is designed for retail store display. Deactivate this mode by touch Micro Power once and Stop/Cancel 4 times.

Technical specifications

Rated voltage:	230-240 V 50 Hz
Operating frequency:	2450 MHz
Input power:	Max 2325 W
Microwave	1135 W
Grill	1305 W
Convection	1320 W
Output power:	1000 W (IEC-60705)
Grill	1300 W
Convection	1300 W
Outer dimensions:	520 mm (W) x 395 mm (D) x 310 mm (H)
Oven Cavity dimensions:	359 mm (W) x 352 mm (D) x 217 mm (H)
Weight:	with internal accessories 15 kg
Noise:	50 dB
	Weight and dimensions are approximate.

This product is an equipment that fulfills the European standard for EMC disturbances (EMC = Electromagnetic Compatibility) EN 55011. According to this standard this product is an equipment of group 2, class B and is within required limits. Group 2 means that radio-frequency energy is intentionally generated in the form of electromagnetic radiation for warming up of foods. Class B means that this product may be used in normal household areas.

Information on Disposal for Users of Waste Electrical & Electronic Equipment (private households)



This symbol on the products and/or accompanying documents means that used electrical and electronic products should not be mixed with general household waste.

For proper treatment, recovery and recycling, please take these products to designated collection points, where they will be accepted on a free of charge basis. Alternatively, in some countries you may be able to return your products to your local retailer upon the purchase of an equivalent new product.

Disposing of this product correctly will help to save valuable resources and prevent any potential negative effects on human health and the environment

which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest designated collection point.

Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

For business users in the European Union

If you wish to discard electrical and electronic equipment, please contact your dealer or supplier for further information.

Information on Disposal in other Countries outside the European Union

This symbol is only valid in the European Union.

If you wish to discard this product, please contact your local authorities or dealer and ask for the correct method of disposal.

Manufactured by: Panasonic Appliances Microwave Oven (Shanghai) Co.,Ltd,
888, 898 Longdong Road, Pudong,
Shanghai, 201203, China.

Imported by: Panasonic Marketing
Europe GmbH

Contact: Panasonic Testing Centre
Winsbergring 15, 22525 Hamburg, Germany.

Cookery Advice Line

For **COOKERY ADVICE** call: **01344 862108**

Open Monday to Wednesday 9am–12pm

Home Economists will provide friendly guidance on queries relating to recipes and cooking in your microwave.



— THE —
ideas
KITCHEN

Visit Panasonic's **The Ideas Kitchen** website for Microwave advice, recipes, cooking tips and offers:
www.theideaskitchen.co.uk



learn



cook



share

**PHONE OUR
CUSTOMER COMMUNICATIONS CENTRE**

0344 844 3899

For service or spares.

Or order spares direct on line at

www.panasonic.co.uk

© Panasonic Corporation 2015

Web Site:<http://www.panasonic.co.uk>

F0003BS2FBP

PA0315-F6F1

Printed in P.R.C.