LIVEIT.COM


Built in Media Wall

SKU: AGL113

INSTRUCTIONS


Product Size: Width 178cm x Depth 44cm x Height 225cm

Estimated Assembly Time: 2 people 1 hour



Version Date: 2026.07.10


EXPLODED DIAGRAM


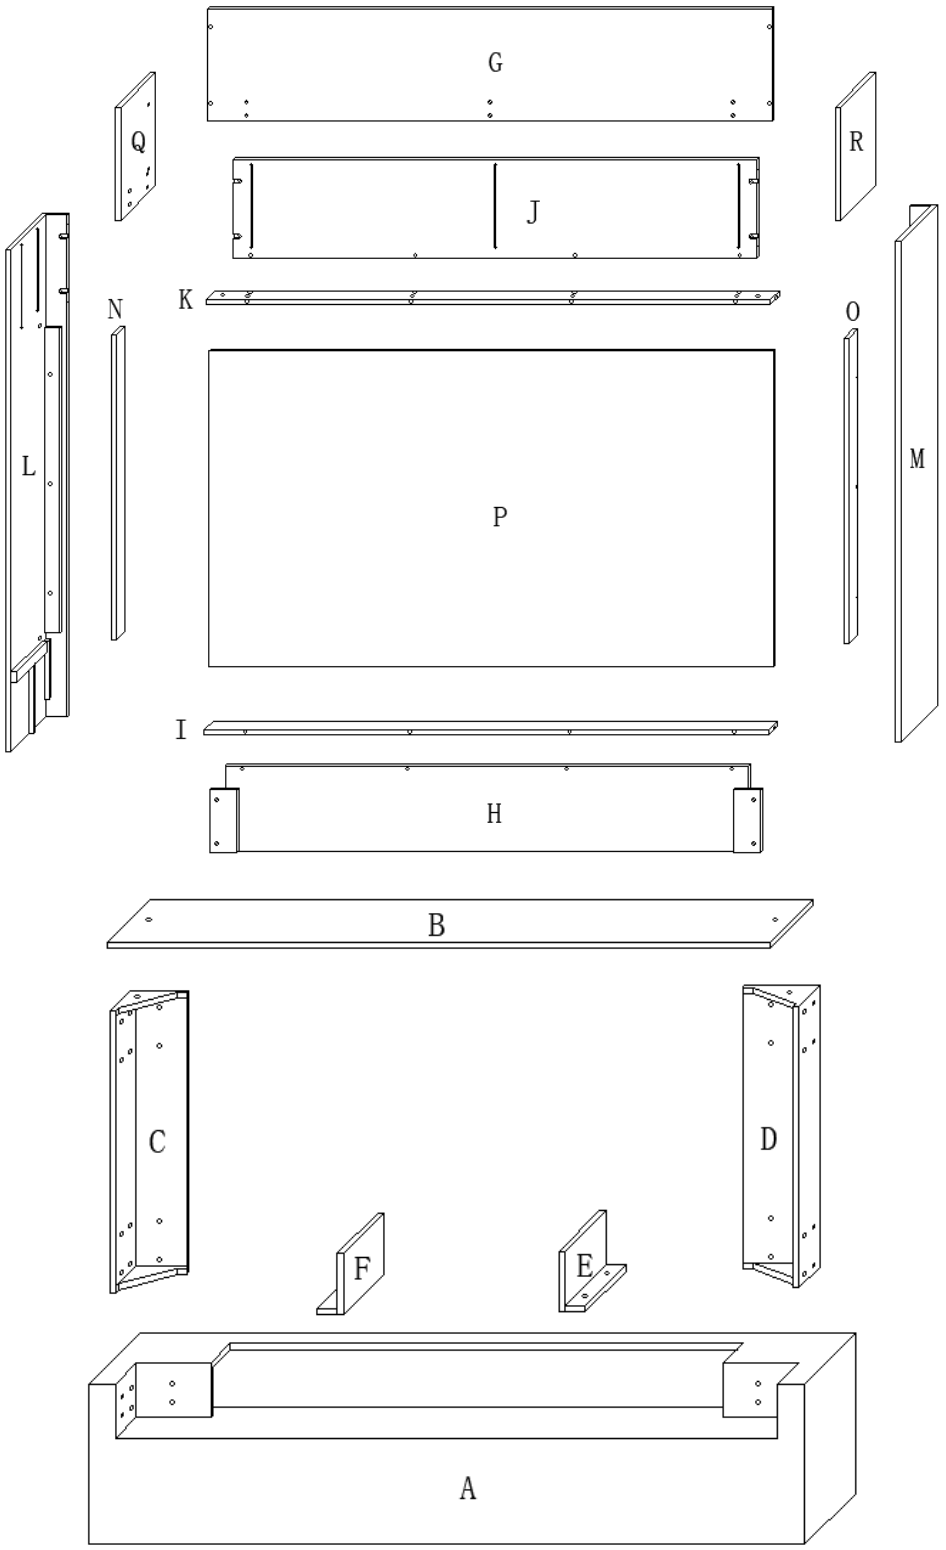


Box 1				Box 2		
Part	Description	Qty		Part	Description	Qty
A	Base Panel	1		B	Middle Panel	1
C	Right Lower Panel	1		G	Front Adjustment Panel	1
D	Left Lower Panel	1		H	Lower Front Panel	1
E	Left Lower Support Panel	1		I	Lower Front Support Panel	1
F	Right Lower Support Panel	1		J	Upper Front Panel	1
N	Right Side Support Panel	1		K	Upper Front Support Panel	1
O	Left Side Support Panel	1		L	Right Side Panel	1
Q	Right Adjustment Panel	1		M	Left Side Panel	1
R	Left Adjustment Panel	1		P	Back Panel	1

PARTS SUPPLIED（LOCATED IN BOX 2）


NOTE: Pictures and contents in this manual may differ from the product due to continuous product improvement.

PART	DIAGRAM	DESCRIPTION	QTY
U1		M4X25 screw	52 PCS
U2		Pin	30 PCS
U3		Cam	30 PCS
U4		Dowel	4 PCS
U5		2-hole bracket	4 PCS
U6		L-shaped bracket	2 PCS

U7		M5x10 screw	2 PCS
U8		Shakeproof washer	6 PCS
U9		M4x14 screw	20 PCS
U10		Wall plug	6 PCS
U11		M5x60 screw	6 PCS
U12		mounting bracket	2 PCS
U13		M4X30 screw	4 PCS
U14		4-hole bracket	4 PCS

IMPORTANT: Please read the instructions in full before assembly and keep for future reference.

ASSEMBLY

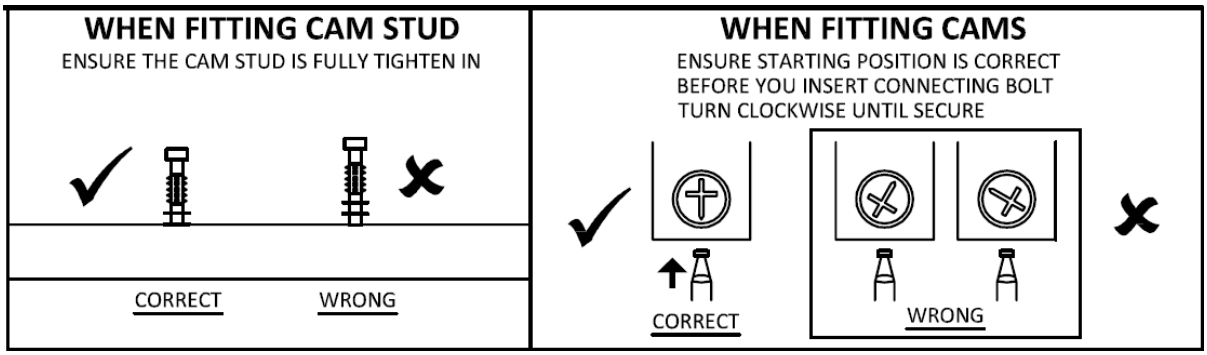

While installing the fire and television and until it is secure to a wall, this unit will be unstable. Ensure that someone of sufficient strength is holding the unit to prevent it from falling.

Product Warnings, Do's and Don'ts.

This unit is coated with a white water-based primer. Finish with your colour of choice. Always check paint supplier's instructions for compatibility, safety and application.

Warnings

- Keep fittings out of children's reach and keep children well away from construction area.
- This product should only be used on firm level ground.
- Please periodically check all fittings and re-tighten as necessary.
- Please do not sit or stand on your furniture.
- Avoid exposing the furniture to excessive heat or direct sunlight as this can cause deterioration of the colour.
- Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to protect it from damage.


Do's

- We suggest you retain these instructions for future reference.
- We suggest you spend a short time reading through this leaflet before you start.
- When you are ready to start, make sure that you have the right tools and plenty of space.
- Unwrap all packaging materials and place the components on a clean surface to protect it from damage. We recommend that the packaging is used to protect the surfaces during assembly.
- Carefully check that you have all the parts before beginning assembly.
- Due to the size of the product, we recommend that it is assembled in the room intended for use.
- Ensure the product is fully assembled as illustrated and all fixings fully tightened before use. Check fixings regularly to ensure they remain tight.


Don'ts

- Do not drag or pull your furniture.
- Do not use silicone furniture polish as it can break down the lacquer finish.


Step 1:

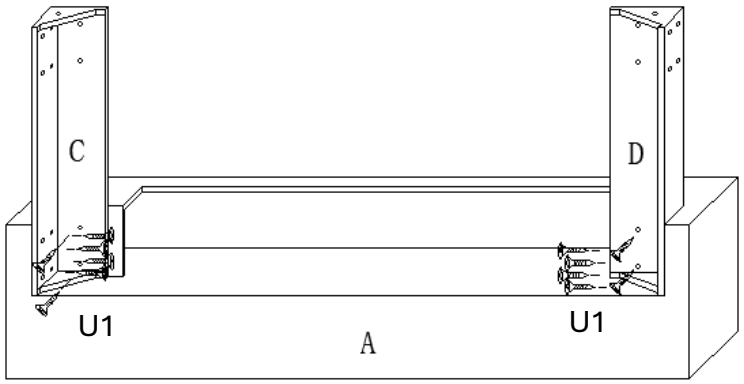


Step 2:

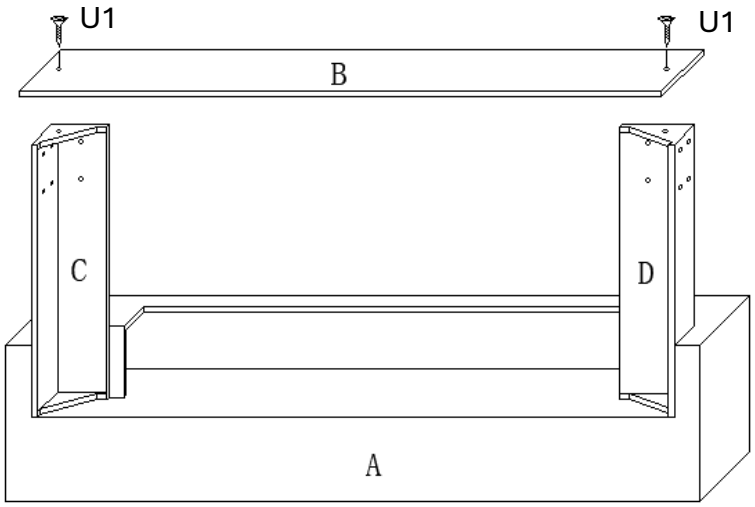


Step 3:

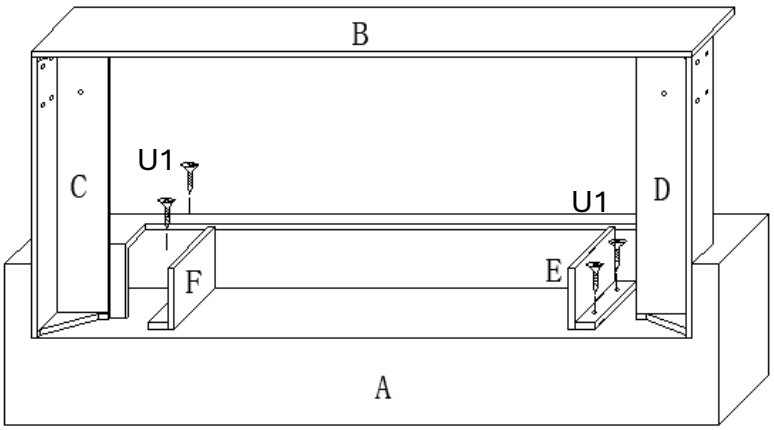


Step 4:

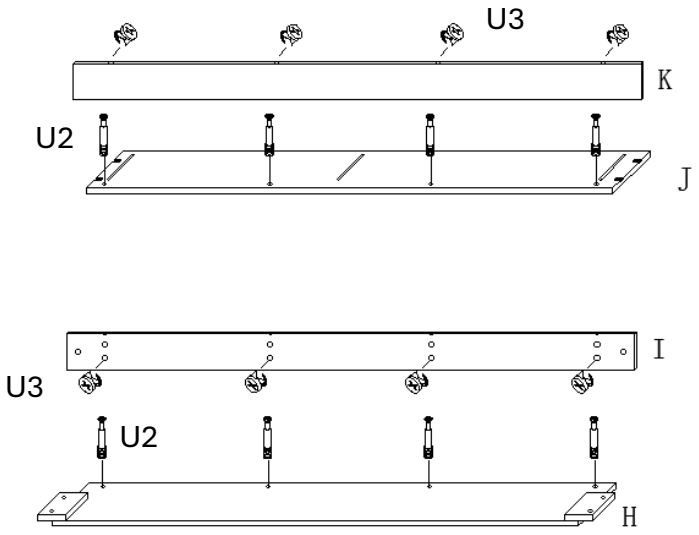


Step 5:

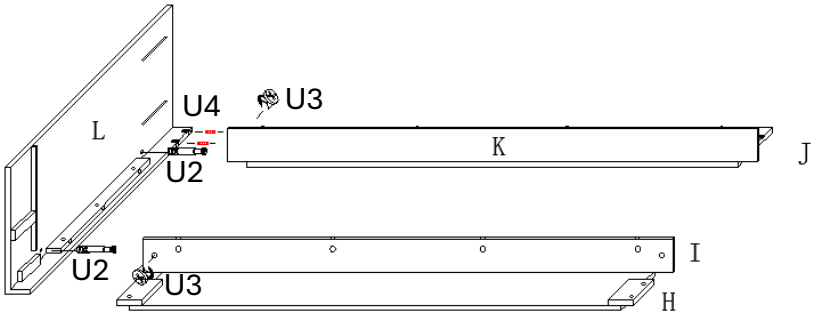


Step 6:

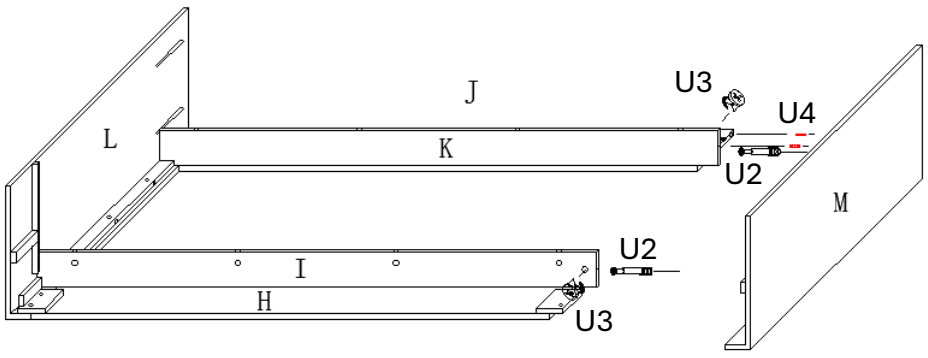


Step 7:

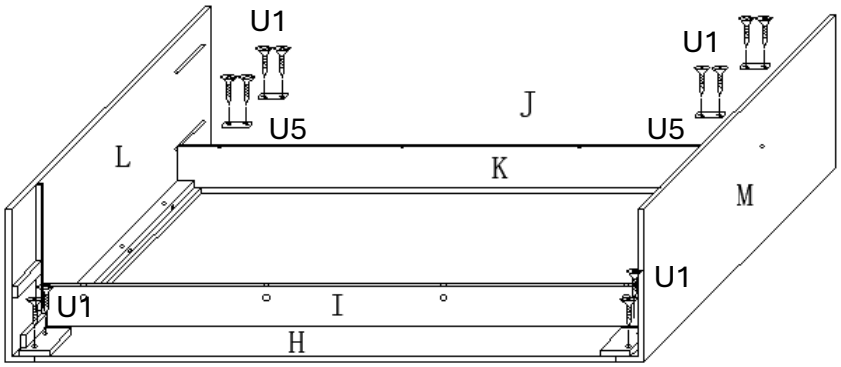


Step 8:

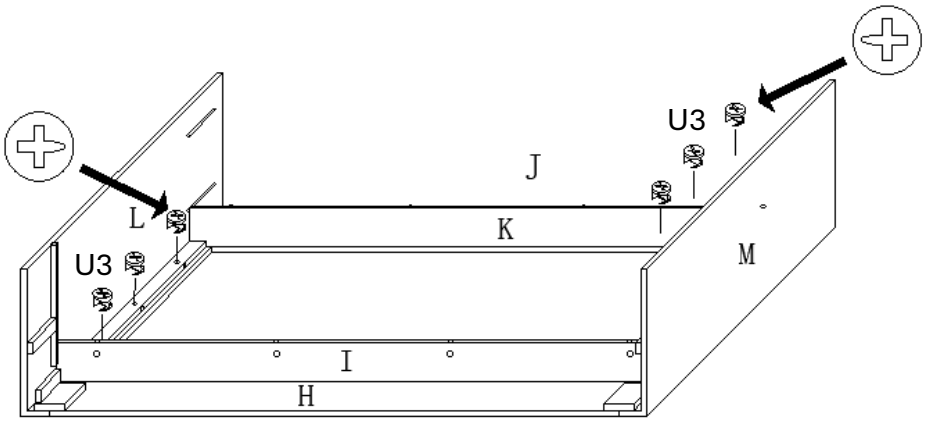


Step 9:

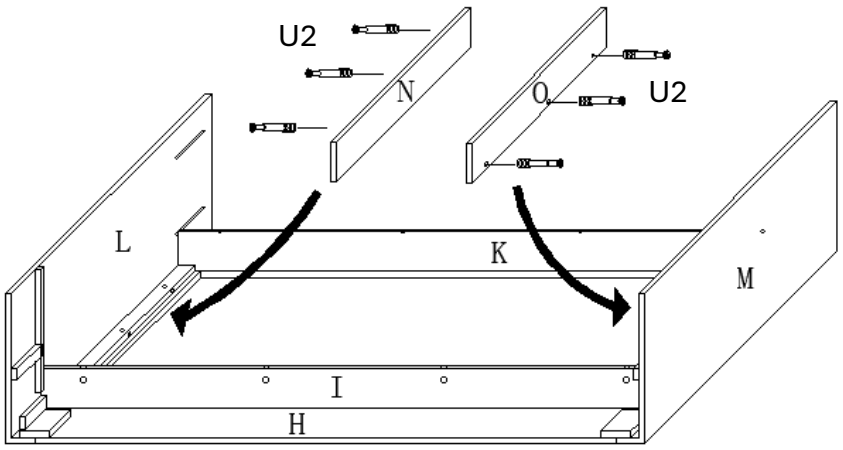


Step 10:

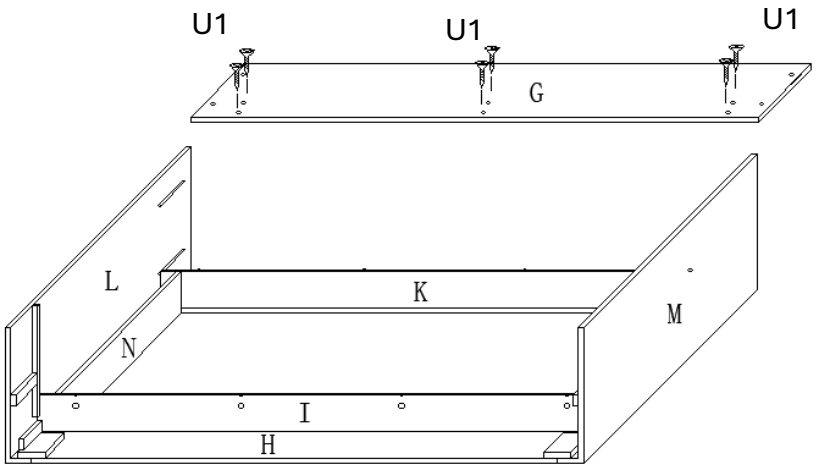


Step 11:

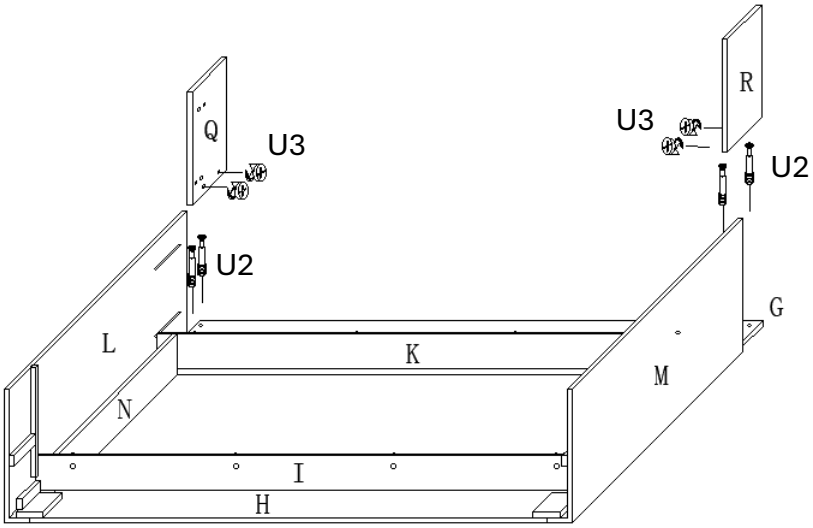


Step 12:

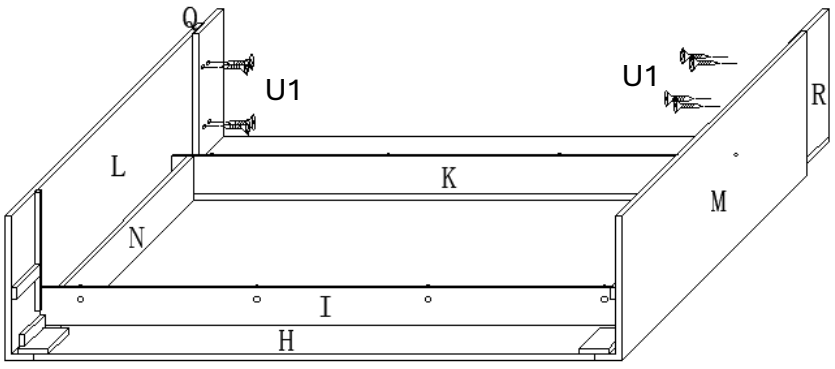


Step 13:

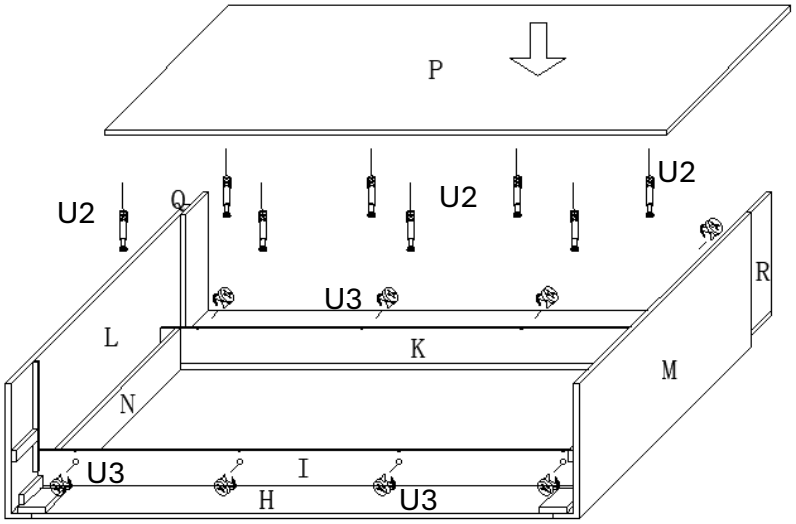


Step 14:

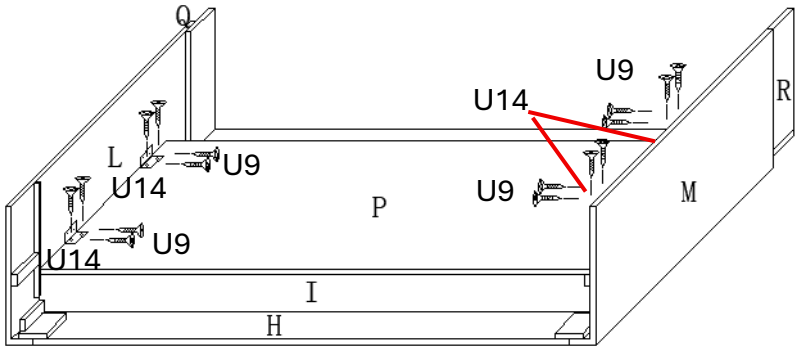

Step 15:

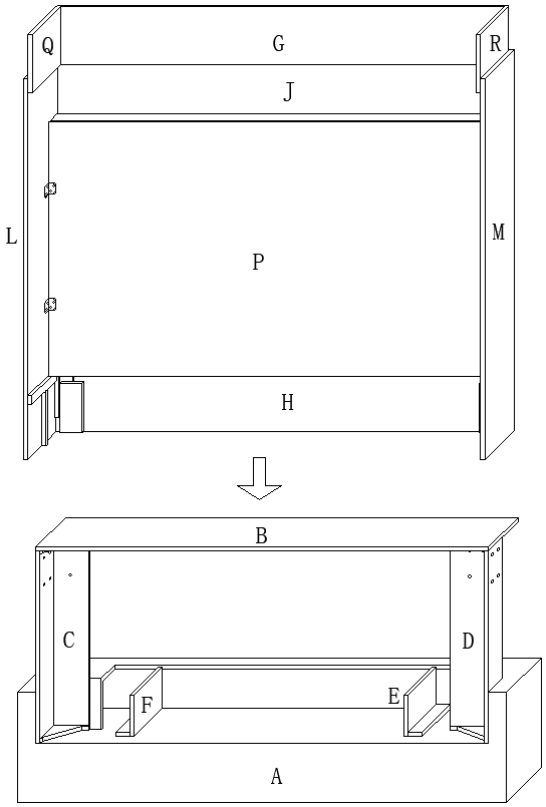

Step 16:

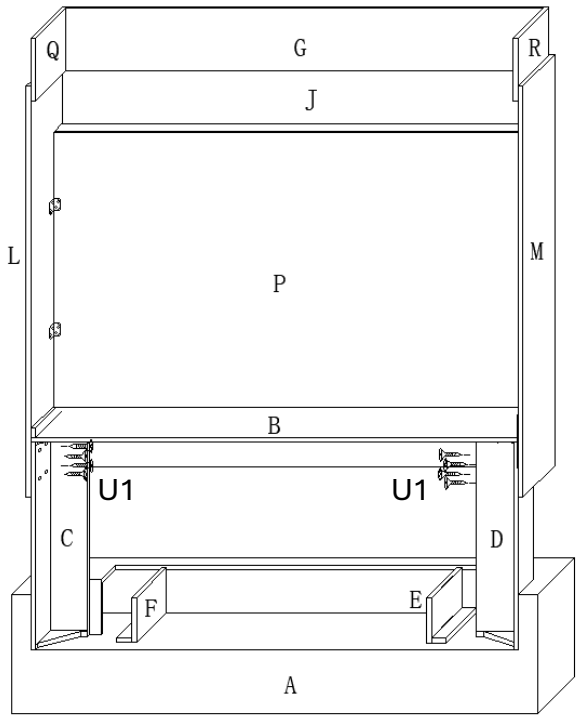


Installation of Fire


Note: This unit has been designed for AGL067W. Other fires will not fit correctly.

Brackets and the screws to attach them to the fire are supplied with the fire.


Step 1: Fix 2 L-shaped brackets [U6] with 2 screws [U7] and 2 shakeproof washers [U8] on top of the heater.

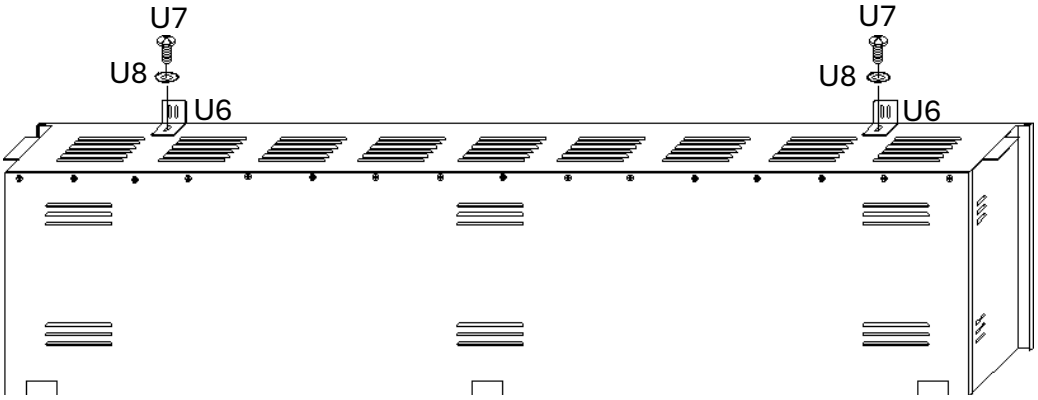

Step 2: Place the heater into the TV cabinet.

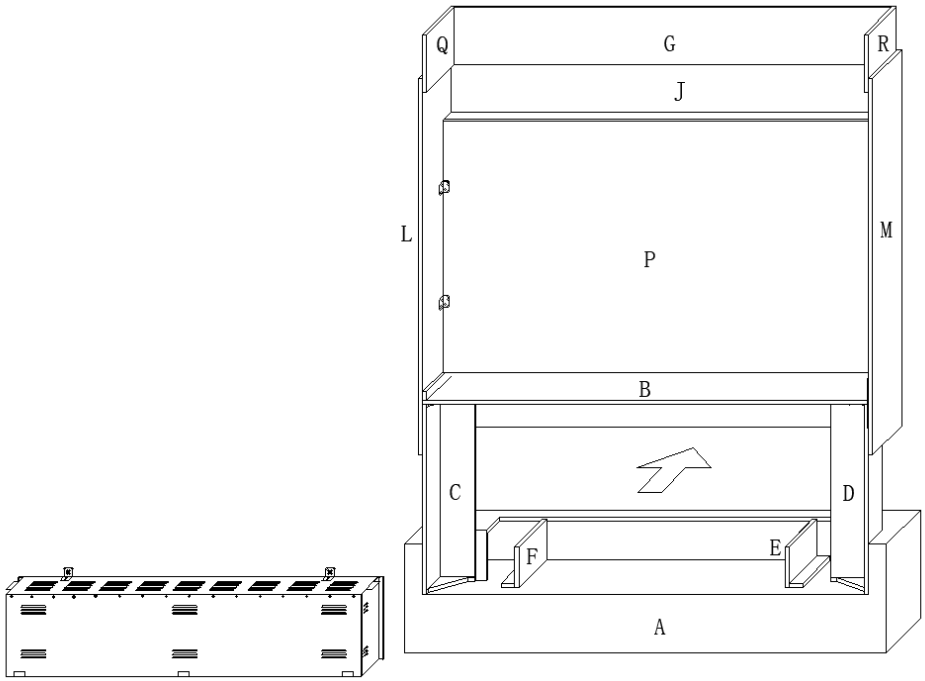

Step 3: Attach 2 L-shaped brackets [U6] to panel H with 4 screws [U9] and 4 shakeproof washers [U8].

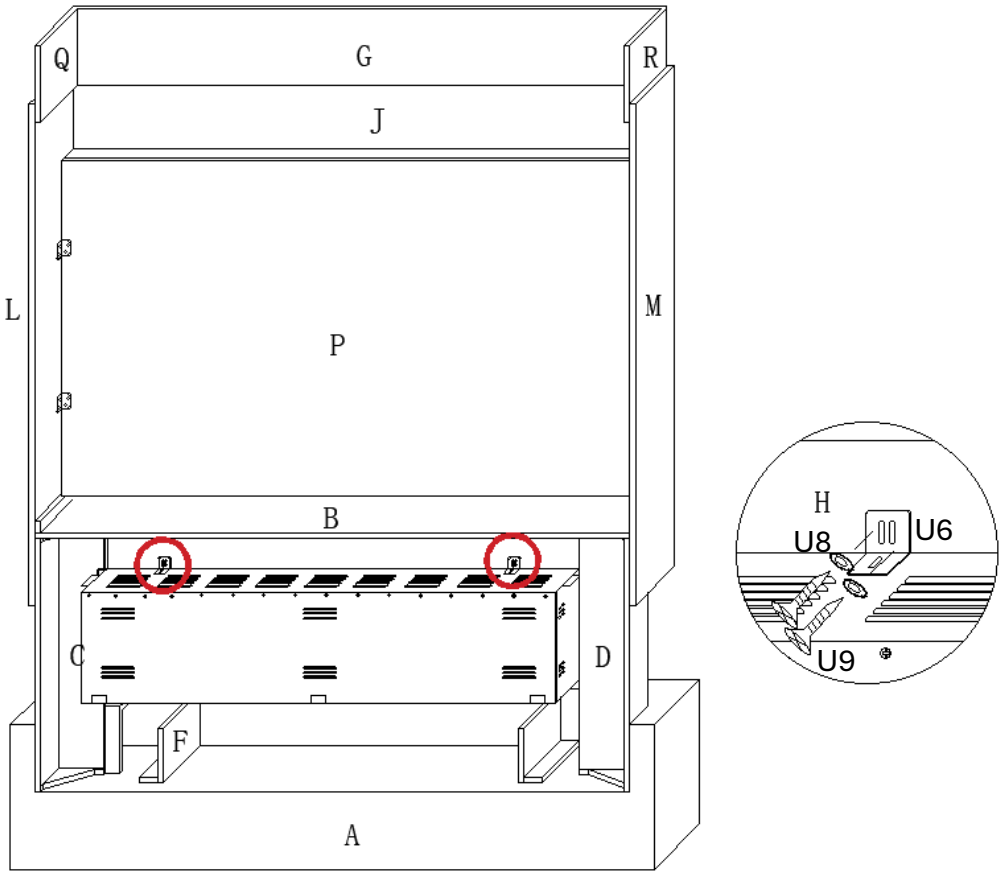

Refer to the instructions supplied with the fire to ensure correct installation and ventilation.


Wall Fixing

Note: The fixing supplied are suitable for a masonry wall. Check the construction of your wall and use appropriate fixings. Beware of cables and pipework that maybe in the wall.


Use a spirit level to ensure wall battens fully vertical and level with each other.

Use a pencil to mark the location of the holes accurately.


Step 1: Select the wall location where you want to install your TV cabinet. Draw two vertical lines using a vertical instrument and mark 6 drill holes for the 6 anchor screws.

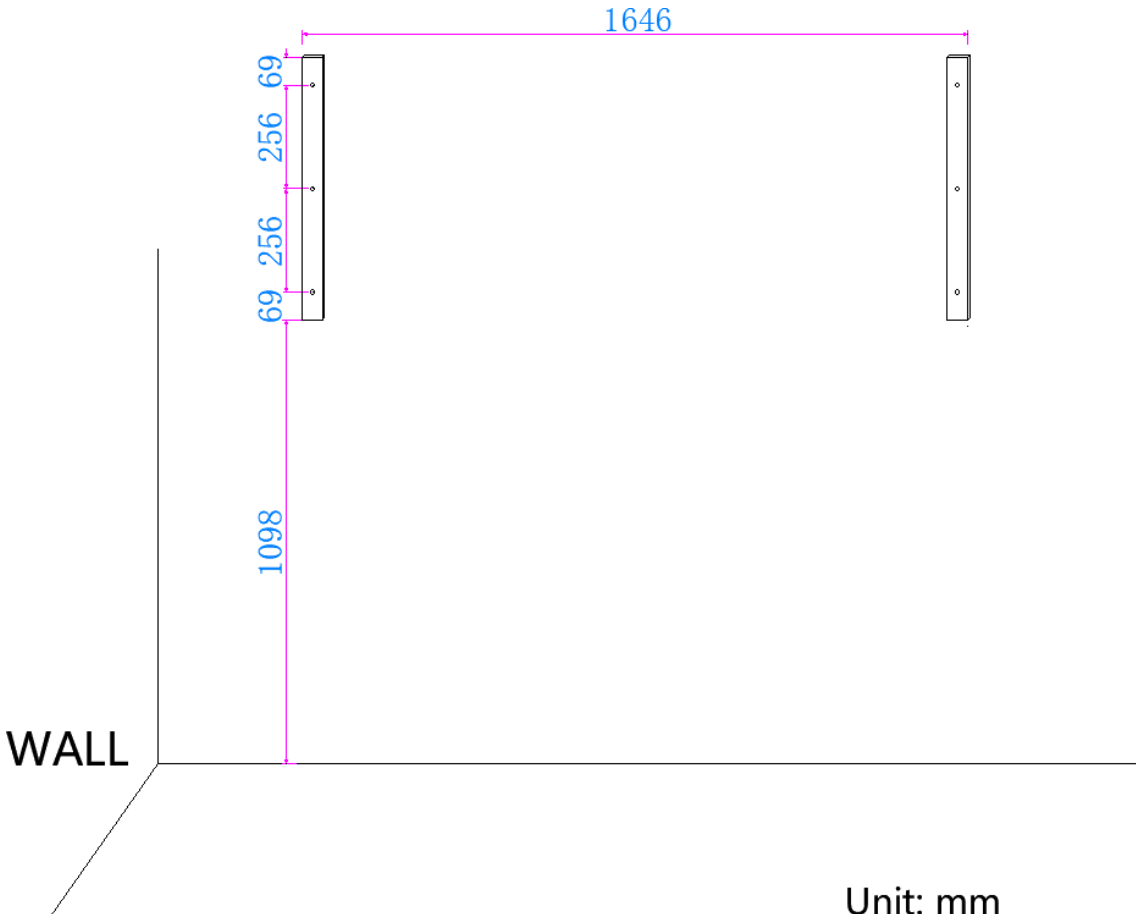


Step 2: Drill 6 holes 8 mm (5/16in) in diameter and 43 mm (1.7in) deep on the marked locations. Insert 6 wall plugs [U10] into the holes and gently tap until the flange on the anchors are against the wall surface.

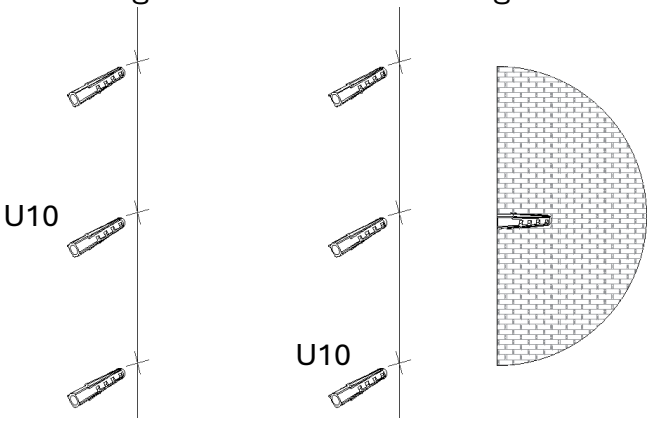

Step 3: Secure the mounting brackets [U12] to the wall anchors using the 6 anchor screws [U11].

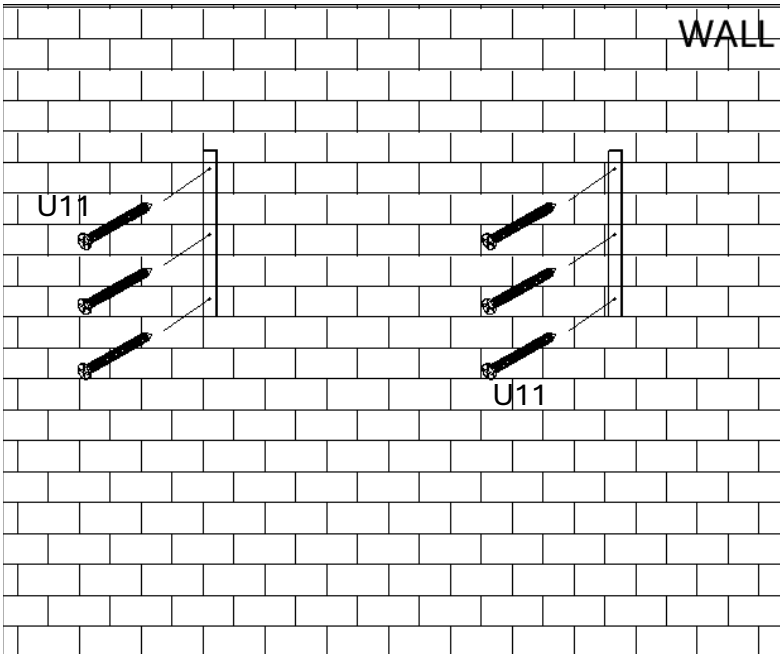

Step 4: Place the TV cabinet. Secure the TV cabinet to the mounting brackets [U12] using the 4 screws [U13].

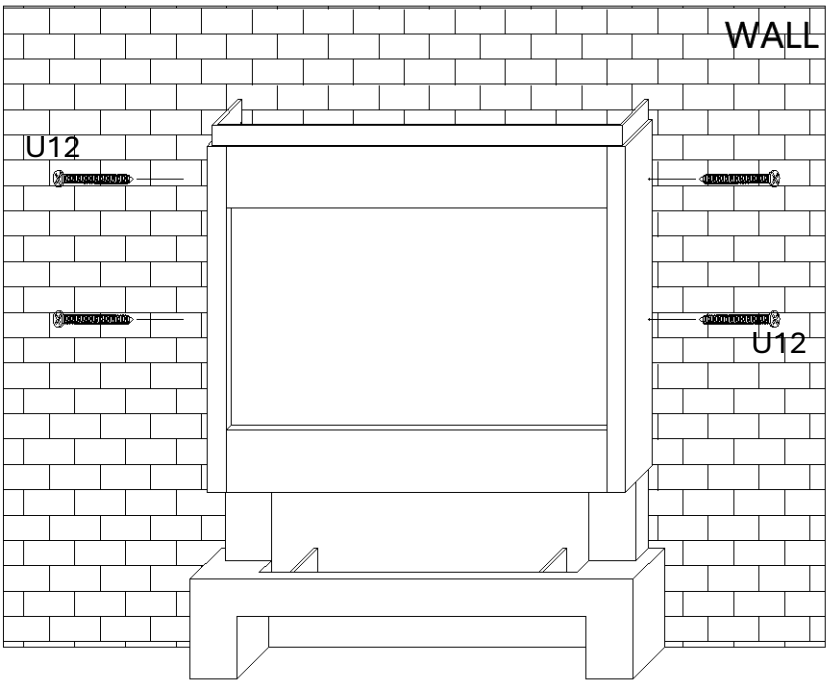


Televisions installation


Note: This unit is designed for televisions with up to 65 inch screens, with a maximum overall size of 152 x 89 cm and a maximum weight of 45 KG.

CAUTION: The accessories supplied with your Television may differ from those shown here, and the following details are for reference only.

1. Plan the position of the TV and bracket before drilling any holes.
2. Follow the bracket supplier's instructions, remembering that you are fitting to a wooden panel.
3. For neat installation you may want to cut cable holes in the panel to feed mains and data aerial cables from your TV.

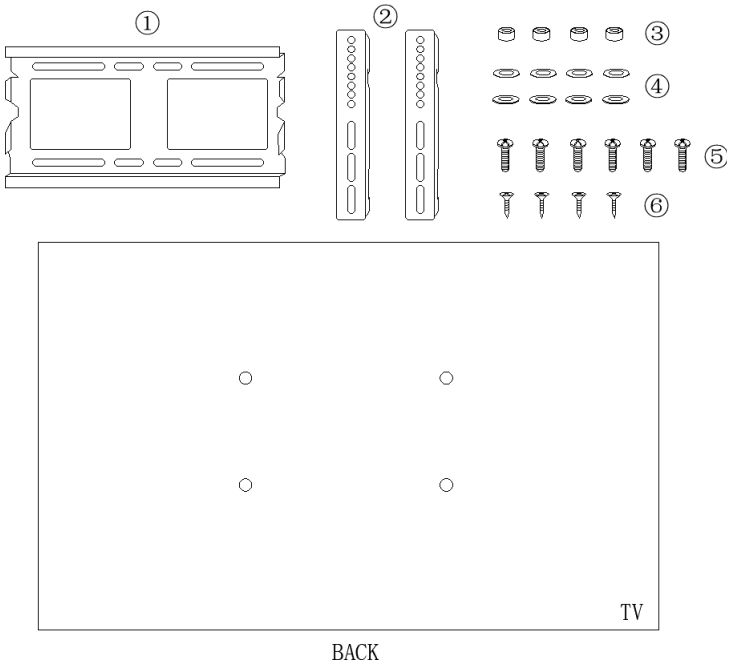


Step 1: Fix 2 wall mounting brackets [2] to the back of the TV with 4 plastic washers [3], 4 screws [5]
and 4 washers [4].

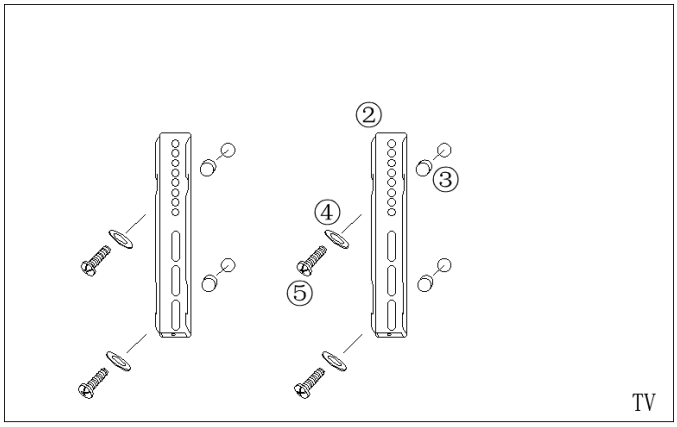


BACK

Step 2: Fix the wall bracket [1] to the TV cabinet with 4 screws [6] and 4 washers [4].

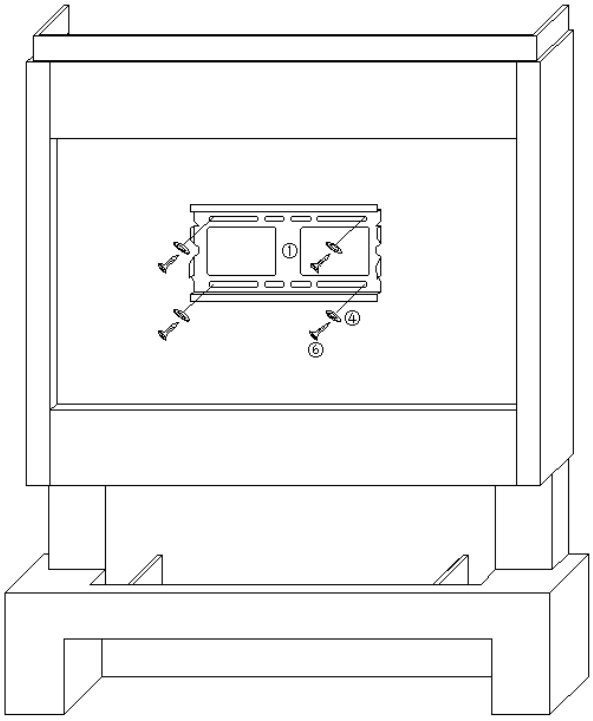

Step 3: Connect the wall mounting bracket [2] on the back of the TV to the wall bracket [1].

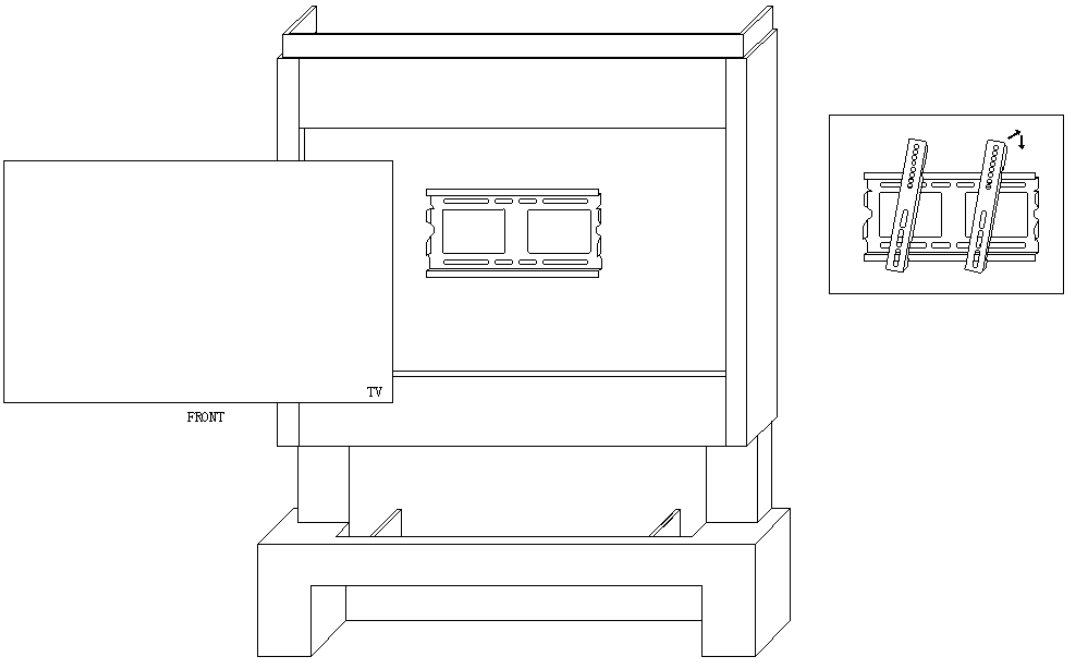

Step 4: After fixing the two brackets [1,2], use 2 screws [5] to secure the TV in place.

