
210.00 mm

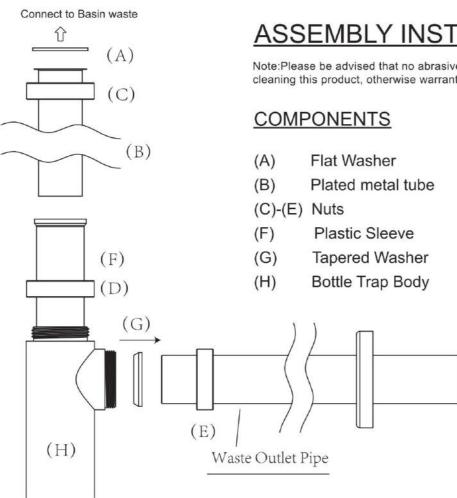

ASSEMBLY INSTRUCTIONS

Note:Please be advised that no abrasive agents or materials can be used for cleaning this product, otherwise warranty will be invalid!

- 1. Assemble nut (C) onto the plated metal tube (B) under the top flange with the wide end facing upwards to receive the waste assembly. Slide the nut (D) over the plated tube, with the wide end facing down.
- 2. Push the plastic sleeve (F) into the top of the bottle trap main body (H) ensuring the lip seats on the neck of the trap. Insert the metal tube into the centre of the plastic sleeve and lock the nut (D) into position
- 3. This trap is designed to connect to standard 11/4" metal waste pipe. slide the nut (E) and tapered washer (G) over the waste pipe as shown. Insert pipe into the trap outlet and tighten the nut.
- 4. When fitted onto a basin waste outlet the washer (A) must be placed inside the nut(C) to form a seal between the trap and waste.