

### **Specification**

Minimum Pressure 2.0 bar

Maximum Pressure 3.0 bar

G3/4" female inlets

For optimum performance pressures should be balanced.

### **Cleaning**

The product should be cleaned using a soft damp cloth, no abrasive agents or materials must be used, or this will invalidate your guarantee.



Telephone  
0333 777 4777

## Cube Freestanding Bath Shower Mixer 15032



Please retain this manual after installation for future reference and maintenance.


**Product must be installed in compliance with relevant Water Bylaws**

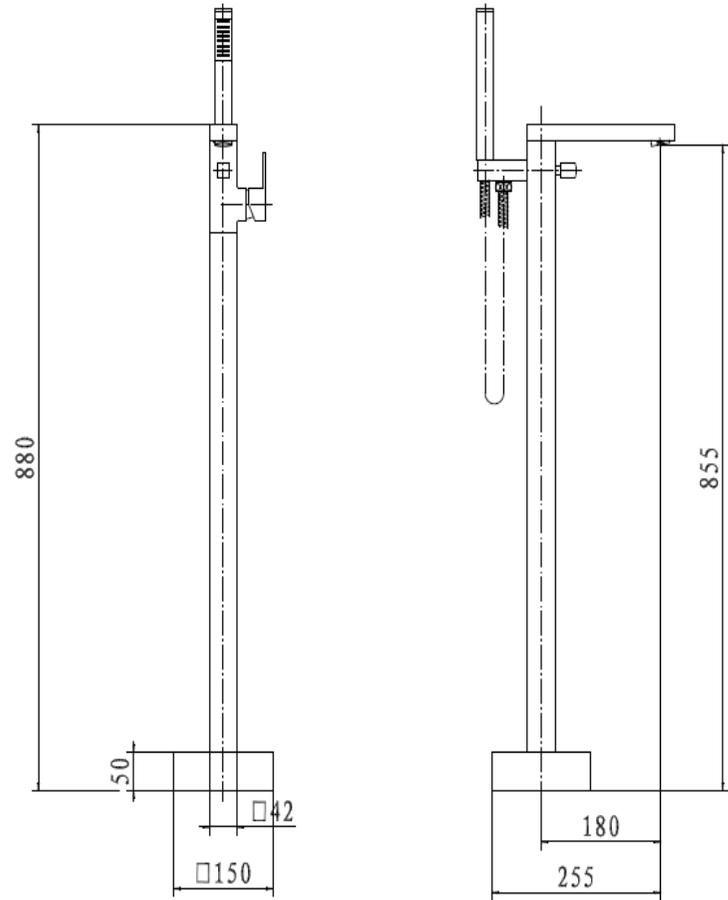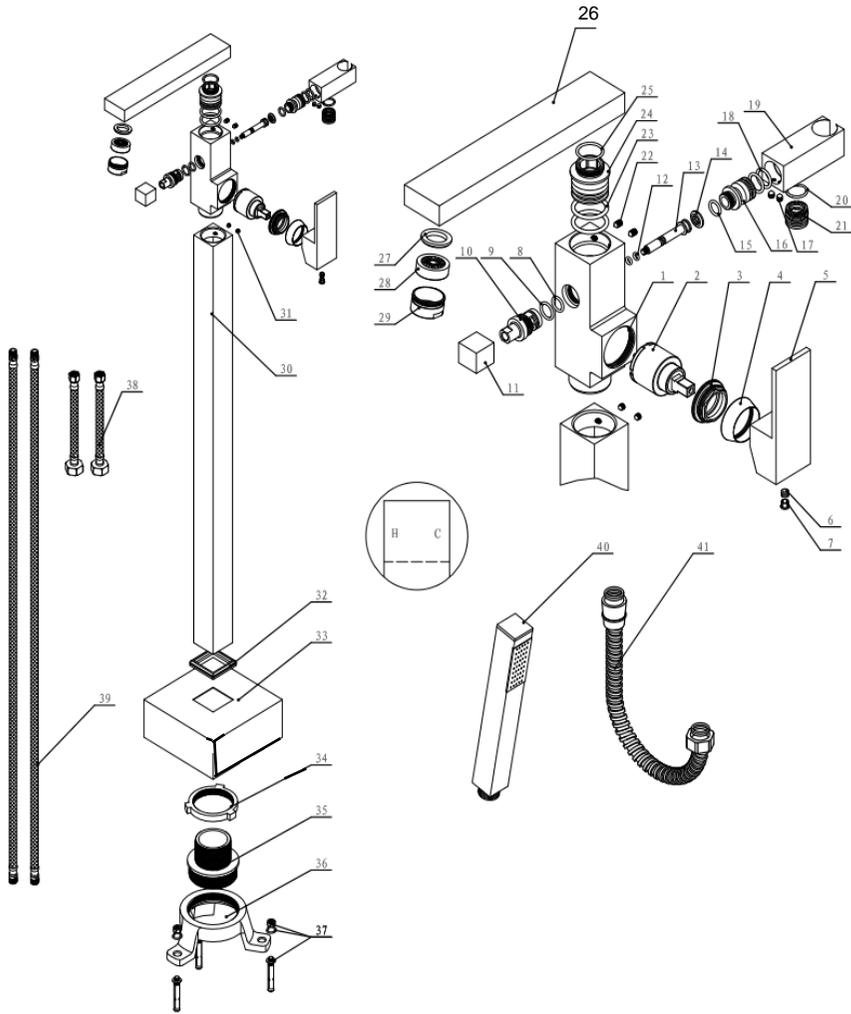

		QTY
1	BODY	1
2	35CATRIDGE	1
3	CARTRIDGE NUT	1
4	CARTRIDGE NUT COVER	1
5	HANDLE	1
6	HANDLE SCREW	1
7	HANDLE SCREW COVER	1
8	O RING	1
9	O RING	1
10	DIVERTER SLEEVE	1
11	DIVERTER CAP	1
12	O RING	2
13	DIVERTER SPINDLE	1
14	WASHER	1
15	O RING	1
16	CONNECTOR	1
17	BOLT	2
18	O RING	1
19	BRACKET	1
20	O RING	1
21	HOSE OUTLET	1
22	BOLT	2
23	O RING	2
24	CONNECTOR	1
25	O RING	1
26	SPOUT	1
27	WASHER	1
28	AERATOR	1
29	AERATOR HOLDER	1
30	UPSTAND	1
31	BOLT	1
32	RUBBER	1
33	COVER	1
34	NUT	1
35	CONNECTOR	1
36	BASE FOOT	1
37	METAL PLUG AND SCREW	3
38	KNITTED HOSE F3/4*M14*1*200MM	2
39	KNITTED HOSE M12*1*M14*1*1100MM	2
40	HANDSHOWER	1
41	SS HOSE	1

## Installation

Put the base down.

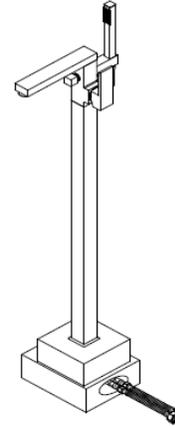


\*\*\* A recess is required with size 35(L)x35(W)x53(D)mm to fit the base foot.

\*\*\* The block shown in the picture is not supplied.

## **Installation**

Make sure water supply is turned off before installation.


Fit the base (33) and rubber (32) over upstand (30).

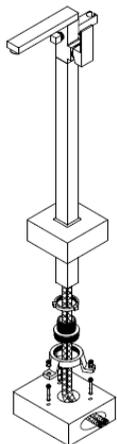

\*\*\* Always check for leaks from all connections before completing the installation.


\*\*\* Wall plug may not be required, this will depend on the material

Place the base foot (36) into the recess, marking the three holes on the floor. Remove the base foot and drill holes with 10mm drill bit and insert metal plugs(37). Position the base foot (36) to the marked place and secure it with screws. Fit the upstand(30) into the nut(34). Part 34 and 35 have been pre-attached to 36.

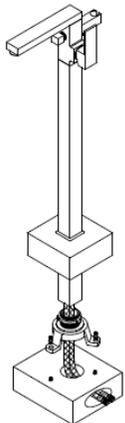

## **Installation**

Connect hose (38) and hose (39) and tighten.

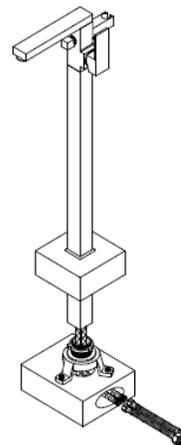

Fix the shower hose into the handset and fit the handset into the handset holder.

