

USER MANUAL




Thank you for choosing Better Bathrooms.
Please read this manual before installing your product
and keep for future reference.

Better
Bathrooms.com

Round and Square Slide Rail Kit with Adjustable Brackets

BeBa_26363, BeBa_26364,
BeBa_26365, BeBa_26366

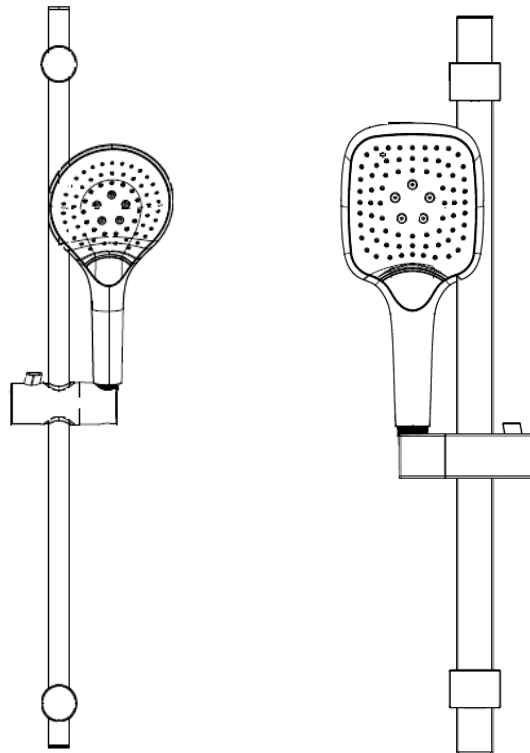

Please note: Image is for illustrative purposes only and may differ slightly to the actual product

- **Single-person assembly**
- **Tools required**
- **We always recommend using professional tradespeople to install your product**

V2_1.7.20

Congratulations on your purchase

And welcome to our growing gang of savvy shoppers

We're on a mission to bring you extraordinary bathroom products, for less. From modern to traditional style ceramics, plus the gorgeous fixtures, fittings and furniture to match. So, you can fall in love with your space every single day.

As one of the UK's largest independent bathroom stores, we've received countless awards; including the National Business Awards UK, the Digital Entrepreneur Awards and being placed on The Sunday Times Fast Track 100.

We hope your new product exceeds your highest expectations. However, if you experience any problems, please:

- call our friendly UK call centre on **0871 244 0935** (9am-7pm Monday to Friday, or 10am-4pm Saturday and Sunday), or
- send us a message via **customerservices@buyitdirect.co.uk**

Important information

- Please read these instructions thoroughly and retain for future reference.

Parts

Rail

End brackets (Inc. cap, rail retaining screw and 2 x rubber pads)

Shower hose (Inc. 2 x seals)

Hand shower

Slider bracket

2 x wall plugs

2 x wall screw

Tools required

Drill and bit

Hammer

Screwdriver


Spirit level

Installation


IMPORTANT: Before drilling, always check for pipes and cables

This product has adjustable end brackets, this means they can be set at your preferred distance apart and can also assist in covering existing screw holes. These will be fixed once secured to the wall.

1. Remove the caps from the front of each end bracket before installing, taking care not to damage the surface.

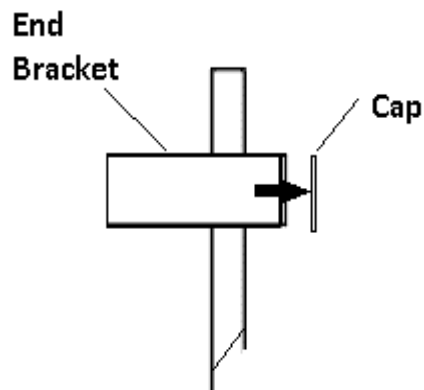


2. Position the end brackets against the wall in the desired location and mark the drill holes through the end brackets. Check that the holes are aligned using a spirit level.

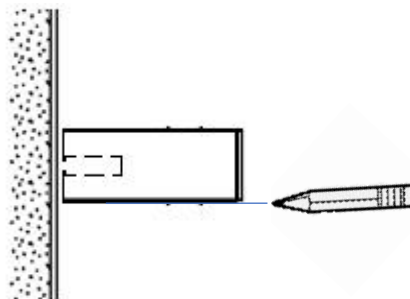

Please note: Ensure that the brackets are not positioned at the very ends of the rail as the retaining screw must have sufficient rail surface to be secured against


Please note: Ensure that the location of the slider when at its highest point will not put the hose under tension

3. Remove the brackets and drill the wall in the marked positions, then Insert the wall plugs and tap flat to finish the wall surface.

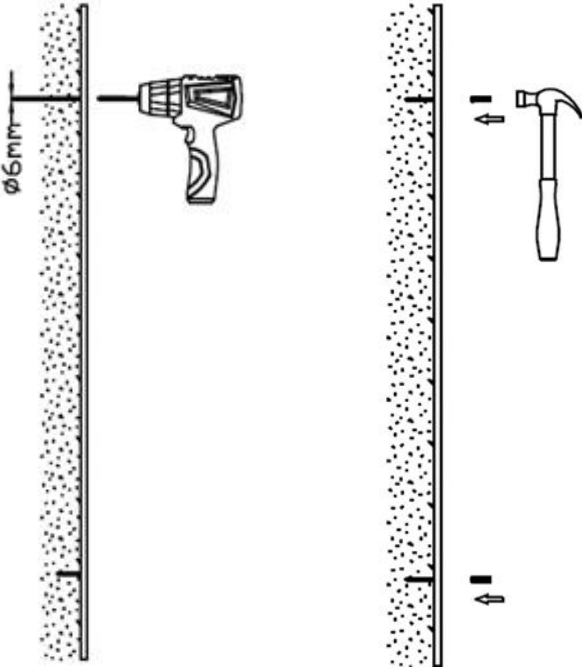


Please note: When drilling, it is recommended to place masking tape over the mark to prevent the drill from slipping

4. Hold the bottom end bracket to the wall and secure into position, using the screw provided. Repeat for the top end bracket.

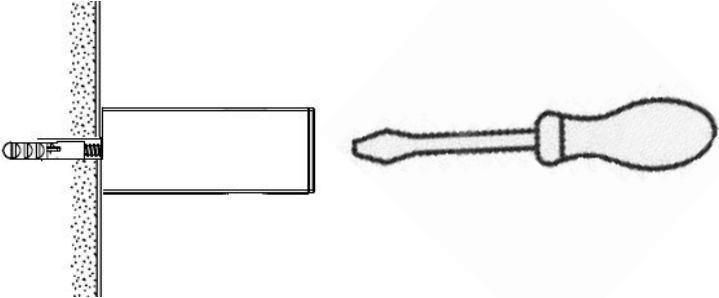


5. Push the rail through the bottom end bracket from underneath, so that the end sits between the two end brackets, then place the slider bracket onto the rail. Once the slider is fitted, push the end of the rail through the top end bracket and centralize the rail.

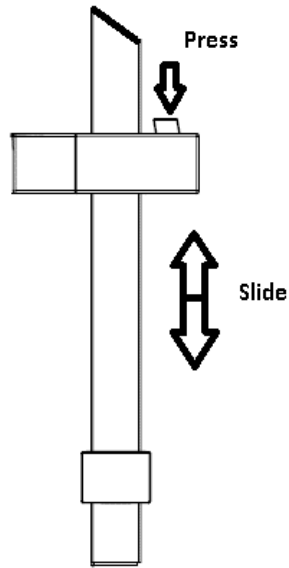


Please note: Ensure that the larger of the openings for the hand shower is facing upwards and that you can press the button to move the slider on the rail

6. Once the rail location is set, from the front of the end bracket, insert the plastic retaining screw with the rubber pad into the bracket, with the pad facing the rail. Tighten the screw onto the rail so that it grips and holds the rail in location. Carry out the same process for the other end bracket.

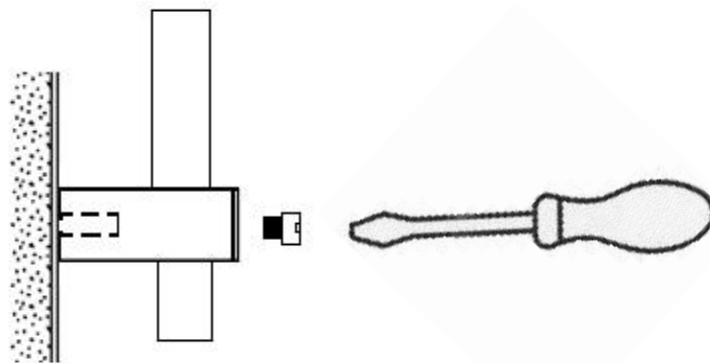

7. Finally, fit the caps back onto both ends of the brackets.

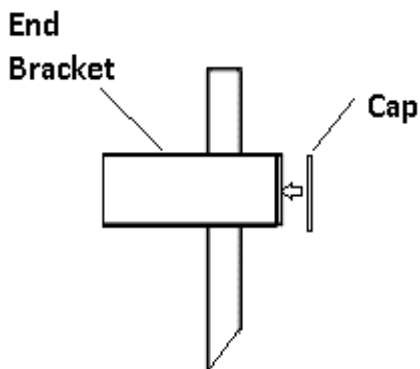

IMPORTANT: During use, do not move the slider on the rail without pressing the button or turning the lever to loosen as this will damage the slider bracket over time

Cleaning

To maintain the surface finish of your product, wipe clean after every use, using a clean damp cloth, a mild detergent mixture can be used. Do not use abrasive cleaning agents or materials on the product surface.

If any harsh chemicals come into contact with the surface of the product during bathroom cleaning, rinse off immediately, wipe clean and dry.

If the hand shower should become blocked over a period of time, simply rub your finger over the rubber nozzles to break any build up. Do not shower immediately, run the shower for approximately 20 seconds to flush through any debris.

For more information

- visit betterbathrooms.com
- email customerservices@buyitdirect.co.uk
- call 0871 244 0935
- write to Trident Business Park, Neptune Way, Huddersfield, HD2 1UA

Better
bathrooms.com

Part of the BuyItDirect Group